


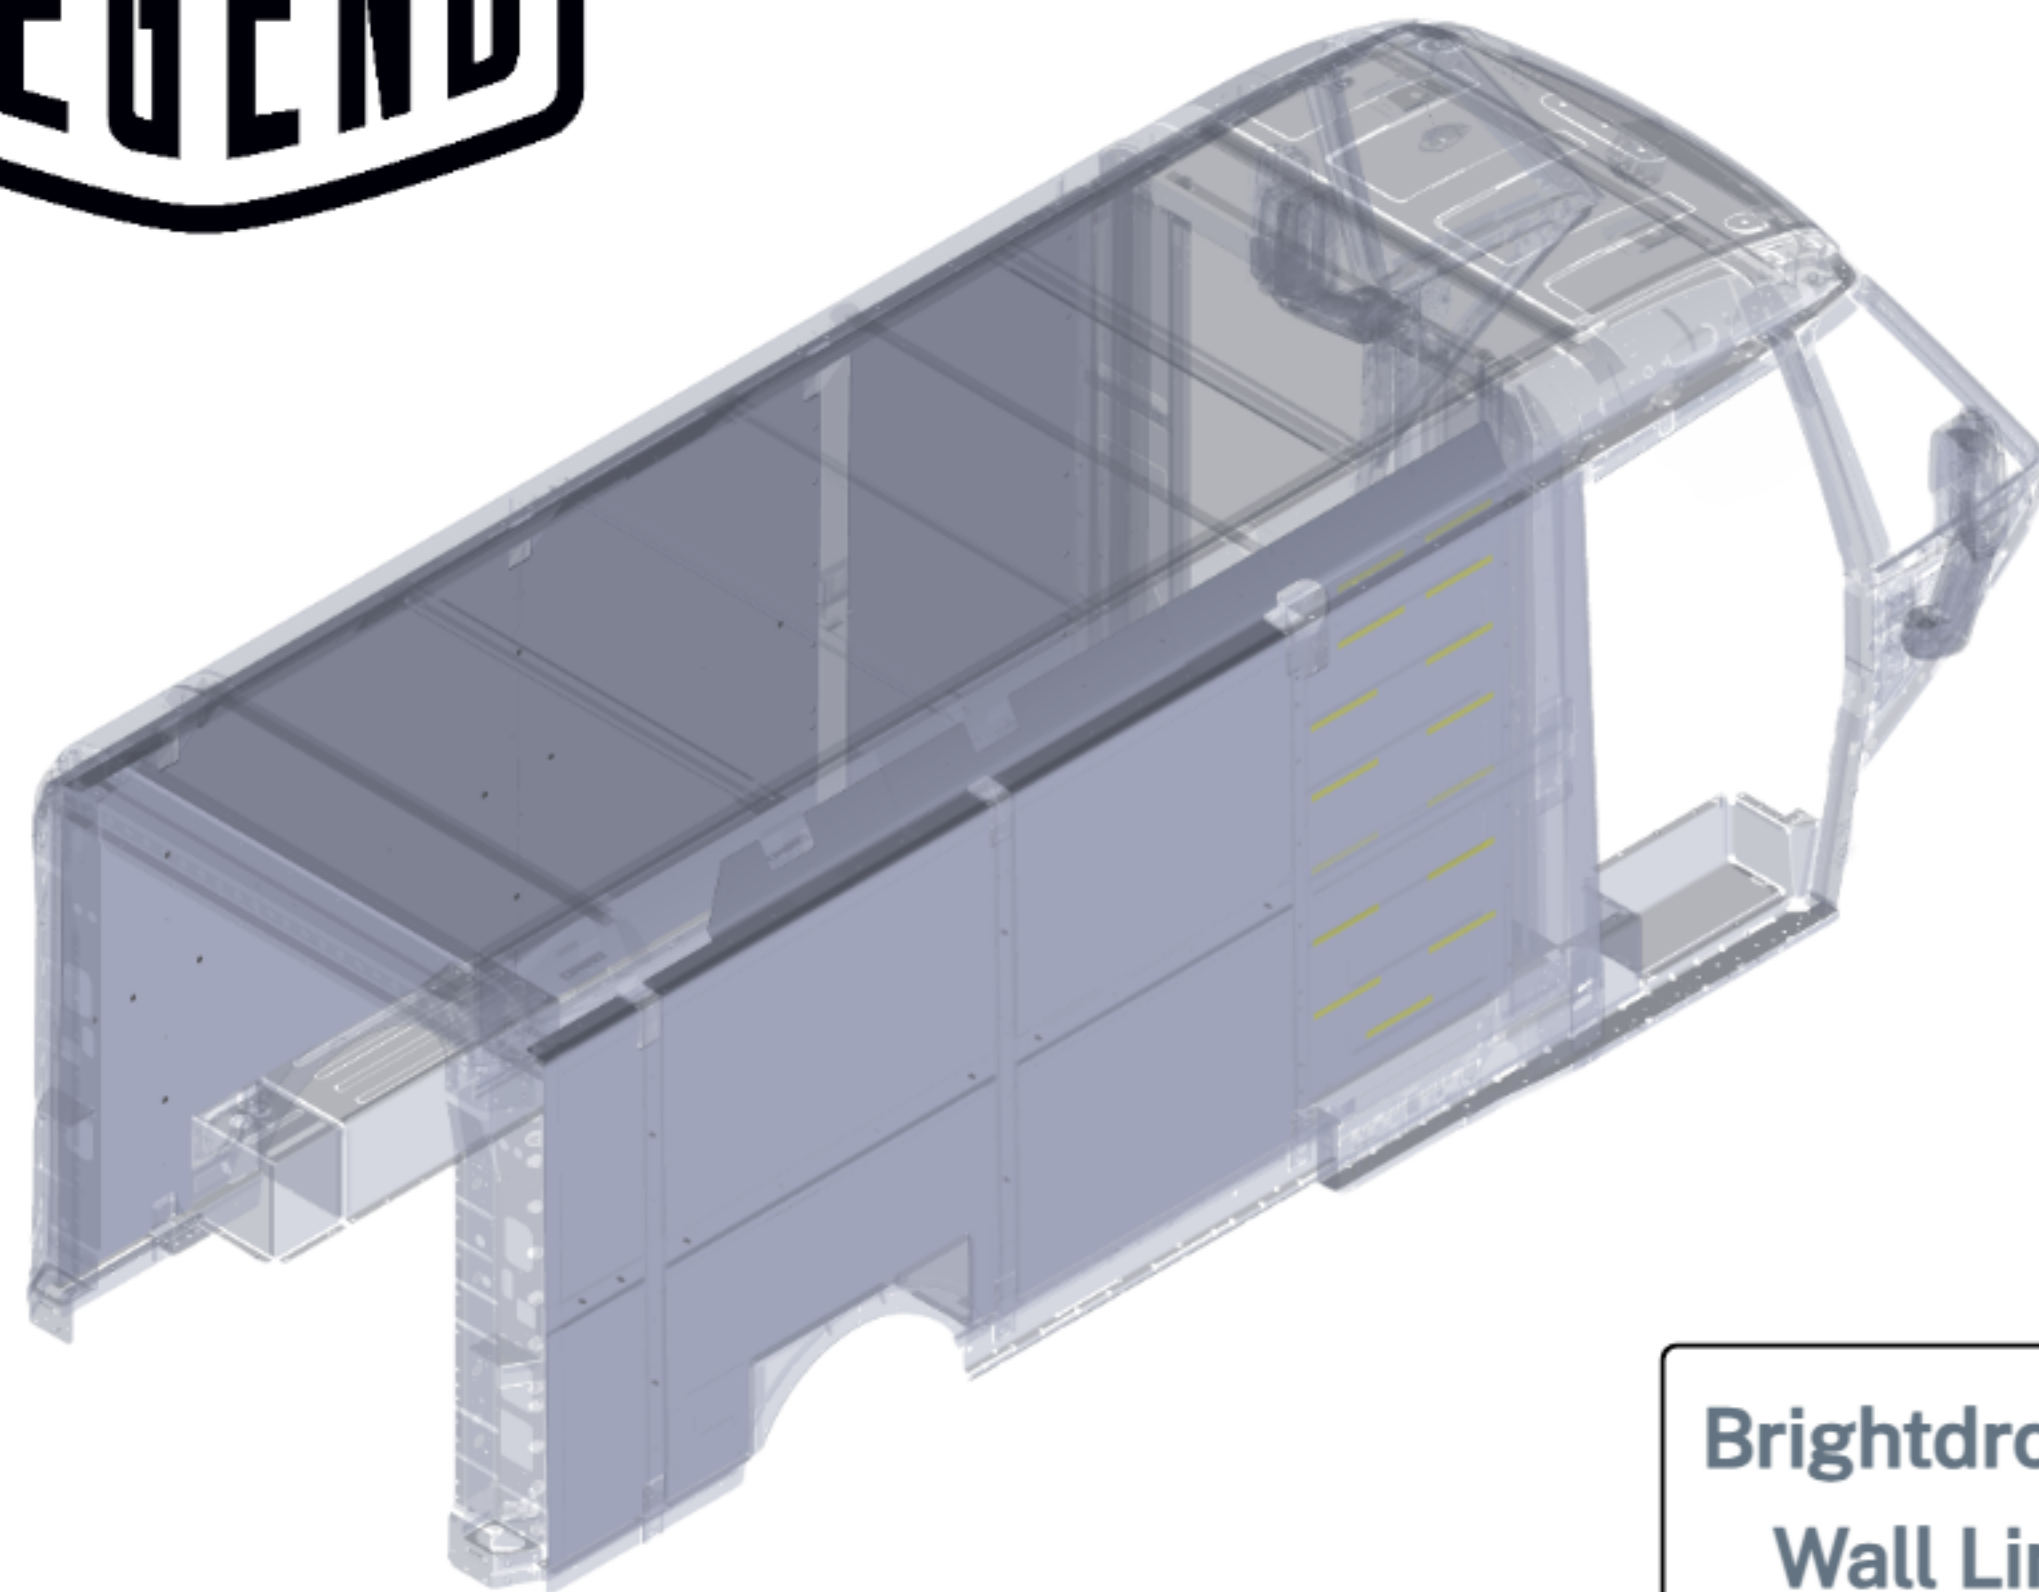

**Brightdrop EV600
Wall Liner KIT**

DISCLAIMER/DESCARGO DE RESPONSABILIDAD/CLAUSE DE NON-RESPONSABILITÉ



DISCLAIMER

Legend Fleet Solutions will not accept responsibility for damages resulting from improper installation. Please follow these instructions carefully. If you have any questions please contact Legend Fleet Solutions using the details below. By proceeding with the installation, you acknowledge and accept this disclaimer.



DESCARGO DE RESPONSABILIDAD

Legend Fleet Solutions no aceptará responsabilidad por los daños resultantes de una instalación incorrecta. Por favor, siga estas instrucciones cuidadosamente. Si tiene alguna pregunta, comuníquese con Legend Fleet Solutions utilizando los detalles a continuación. Al continuar con la instalación, usted reconoce y acepta este descargo de responsabilidad.



CLAUSE DE NON-RESPONSABILITÉ

Legend Fleet Solutions n'acceptera aucune responsabilité pour les dommages résultant d'une mauvaise installation. Veuillez suivre attentivement ces instructions. Si vous avez des questions, veuillez contacter Legend Fleet Solutions en utilisant les détails ci-dessous. En procédant à l'installation, vous reconnaissez et acceptez cette clause de non-responsabilité.

Legend Fleet Solutions

Email: customercare@legendfleet.com

Phone: 1-519-688-1043

WARNING/ADVERTENCIA/AVERTISSEMENT




- Edges of material may be sharp. Wear gloves.
- Some materials may contain fiberglass. Wear appropriate PPE while handling.
- Take care when using power tools.



- Los bordes del material pueden estar afilados. Usar guantes.
- Algunos materiales pueden contener fibra de vidrio. Utilice EPP adecuado durante la manipulación.
- Tenga cuidado al utilizar herramientas eléctricas.



- Les bords du matériau peuvent être coupants. Porter des gants.
- Certains matériaux peuvent contenir de la fibre de verre. Portez un EPI approprié lors de la manipulation.
- Soyez prudent lorsque vous utilisez des outils électriques.

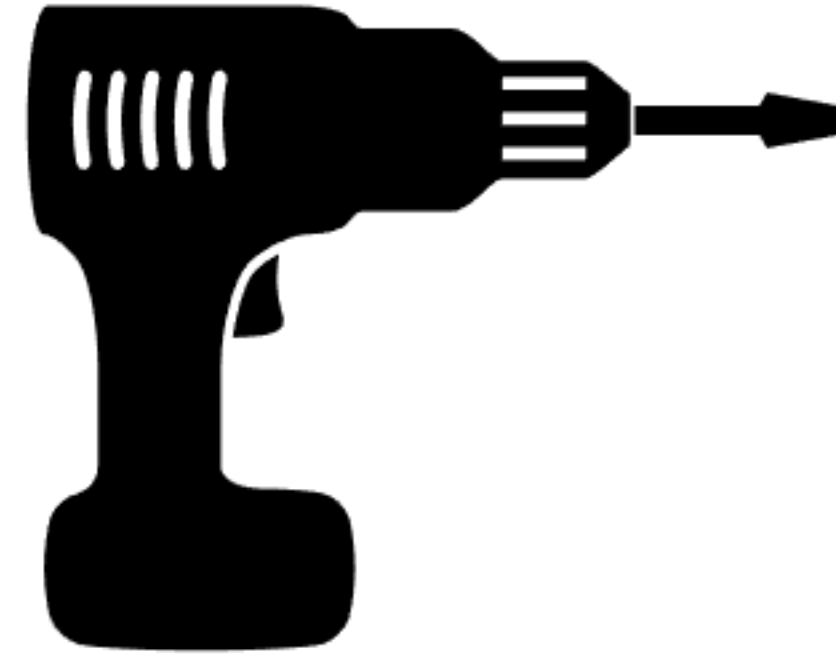



#3 Square Drive



Phillips



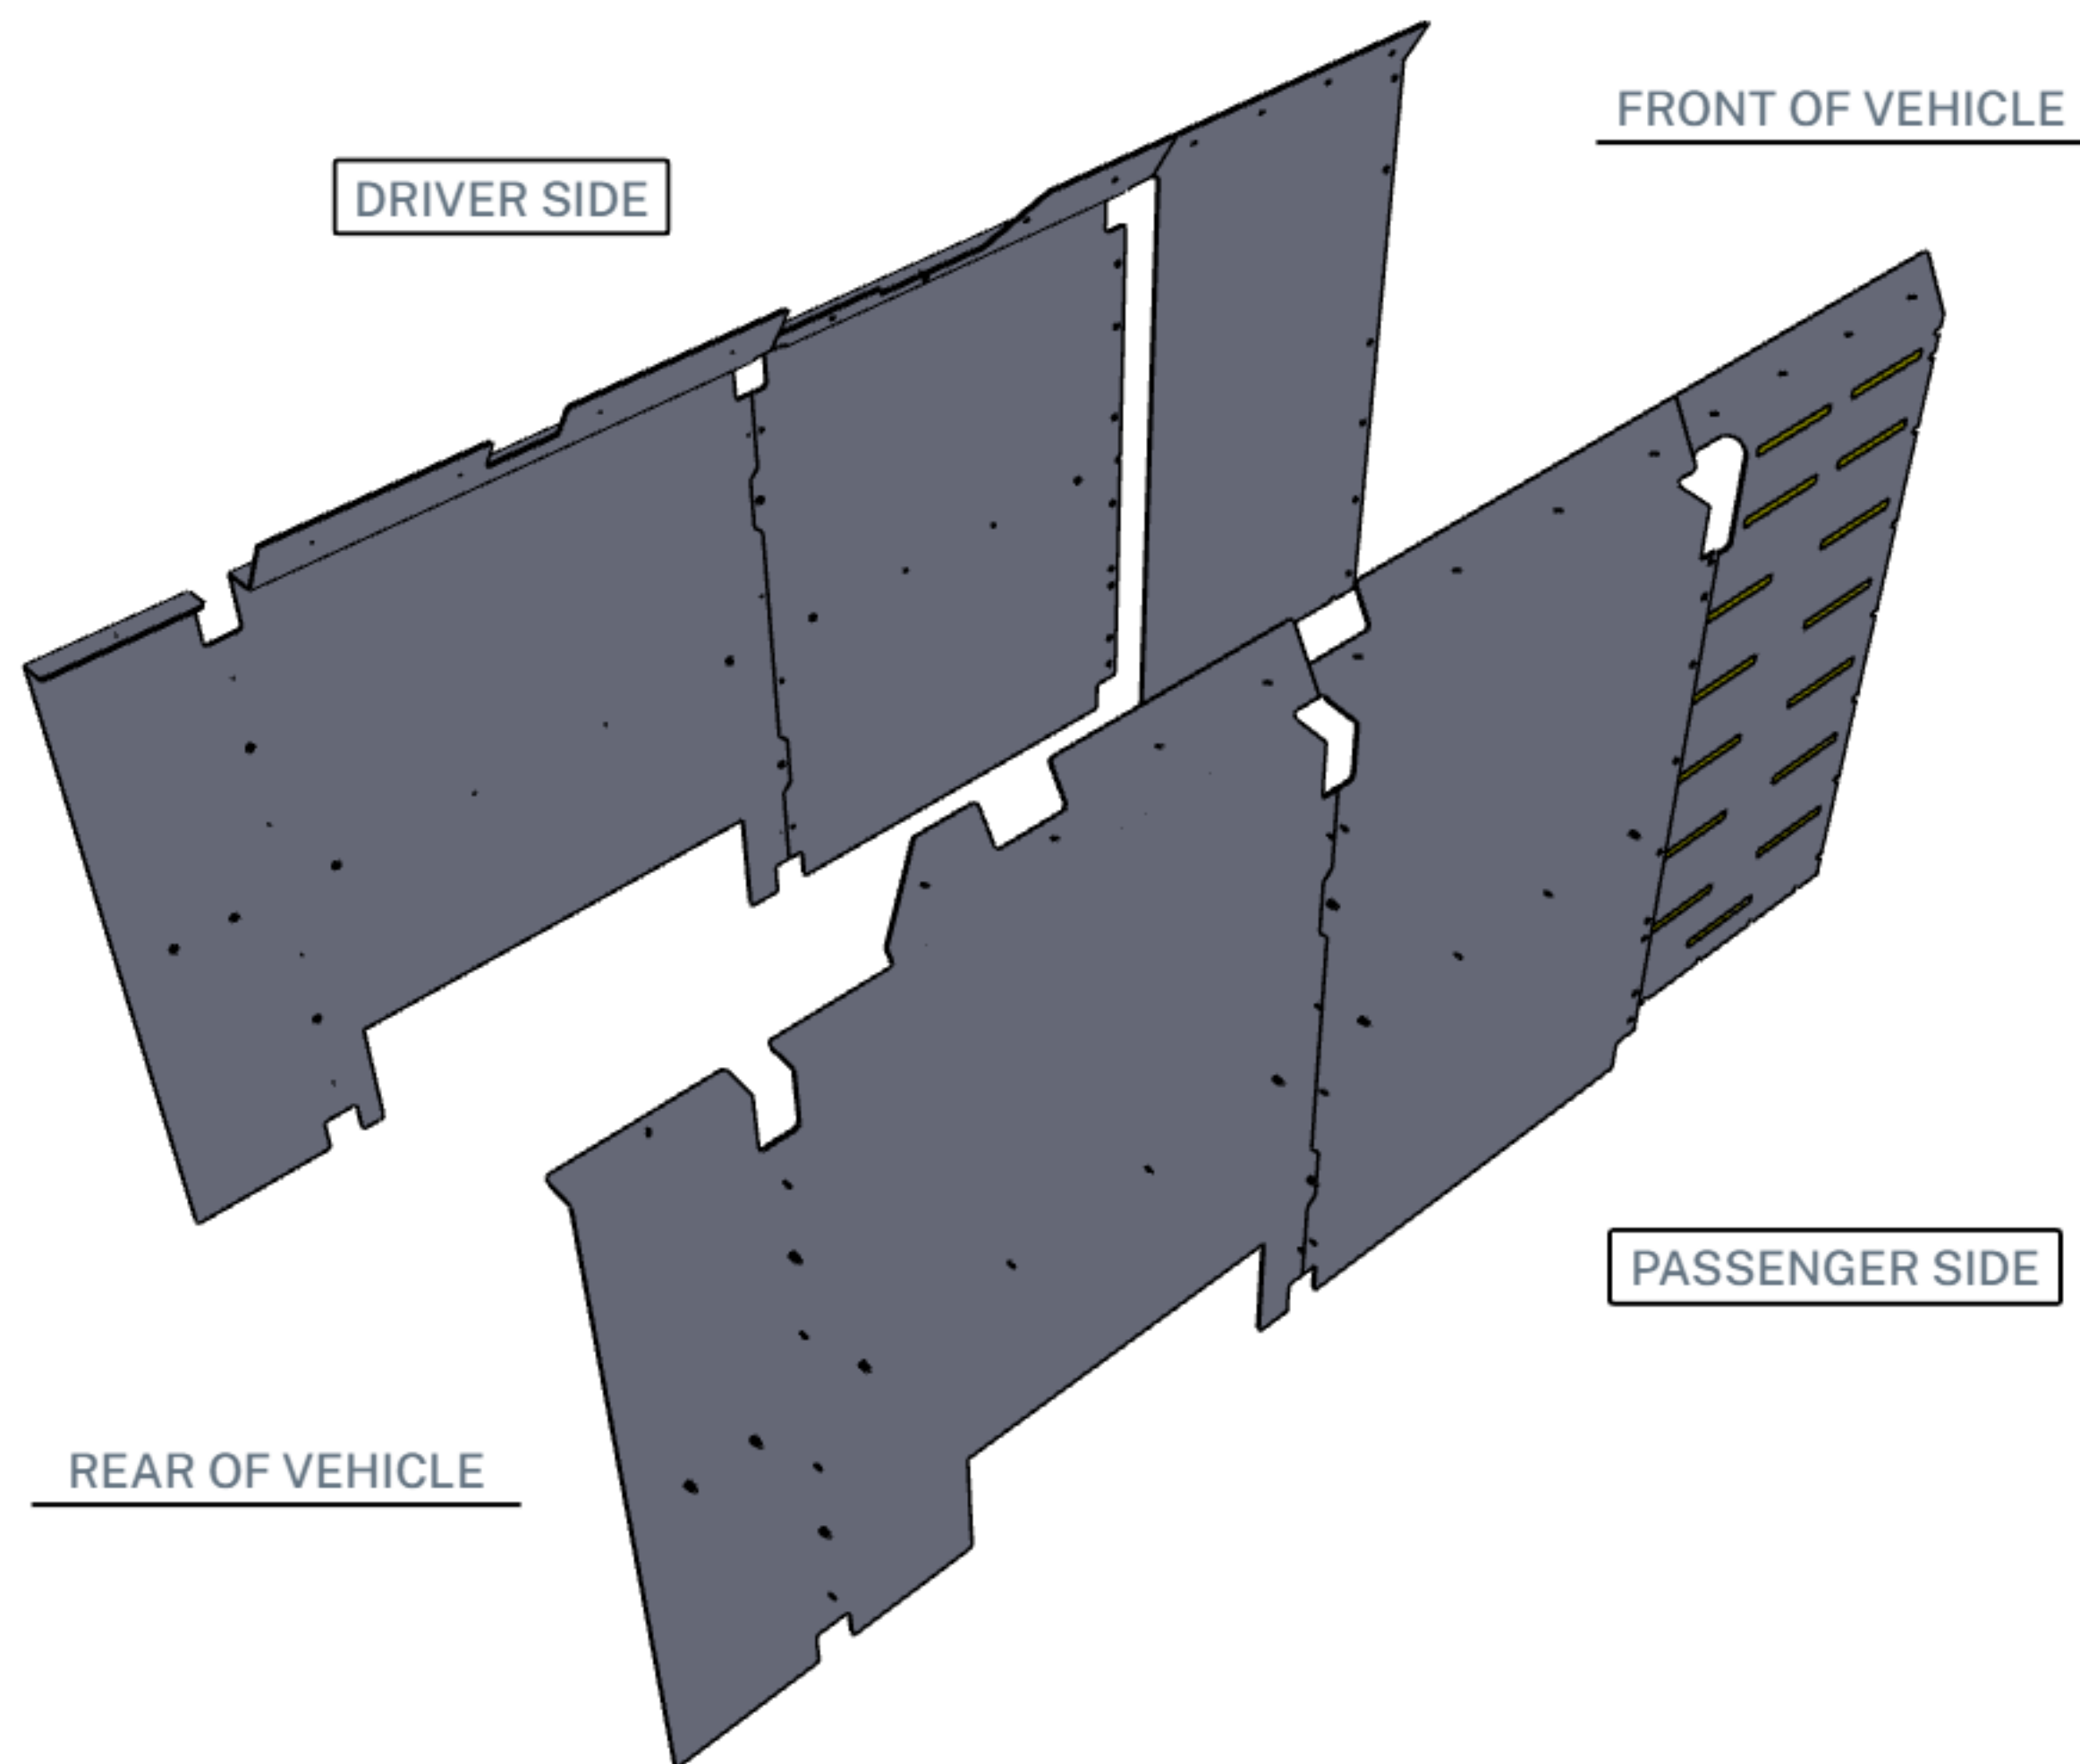

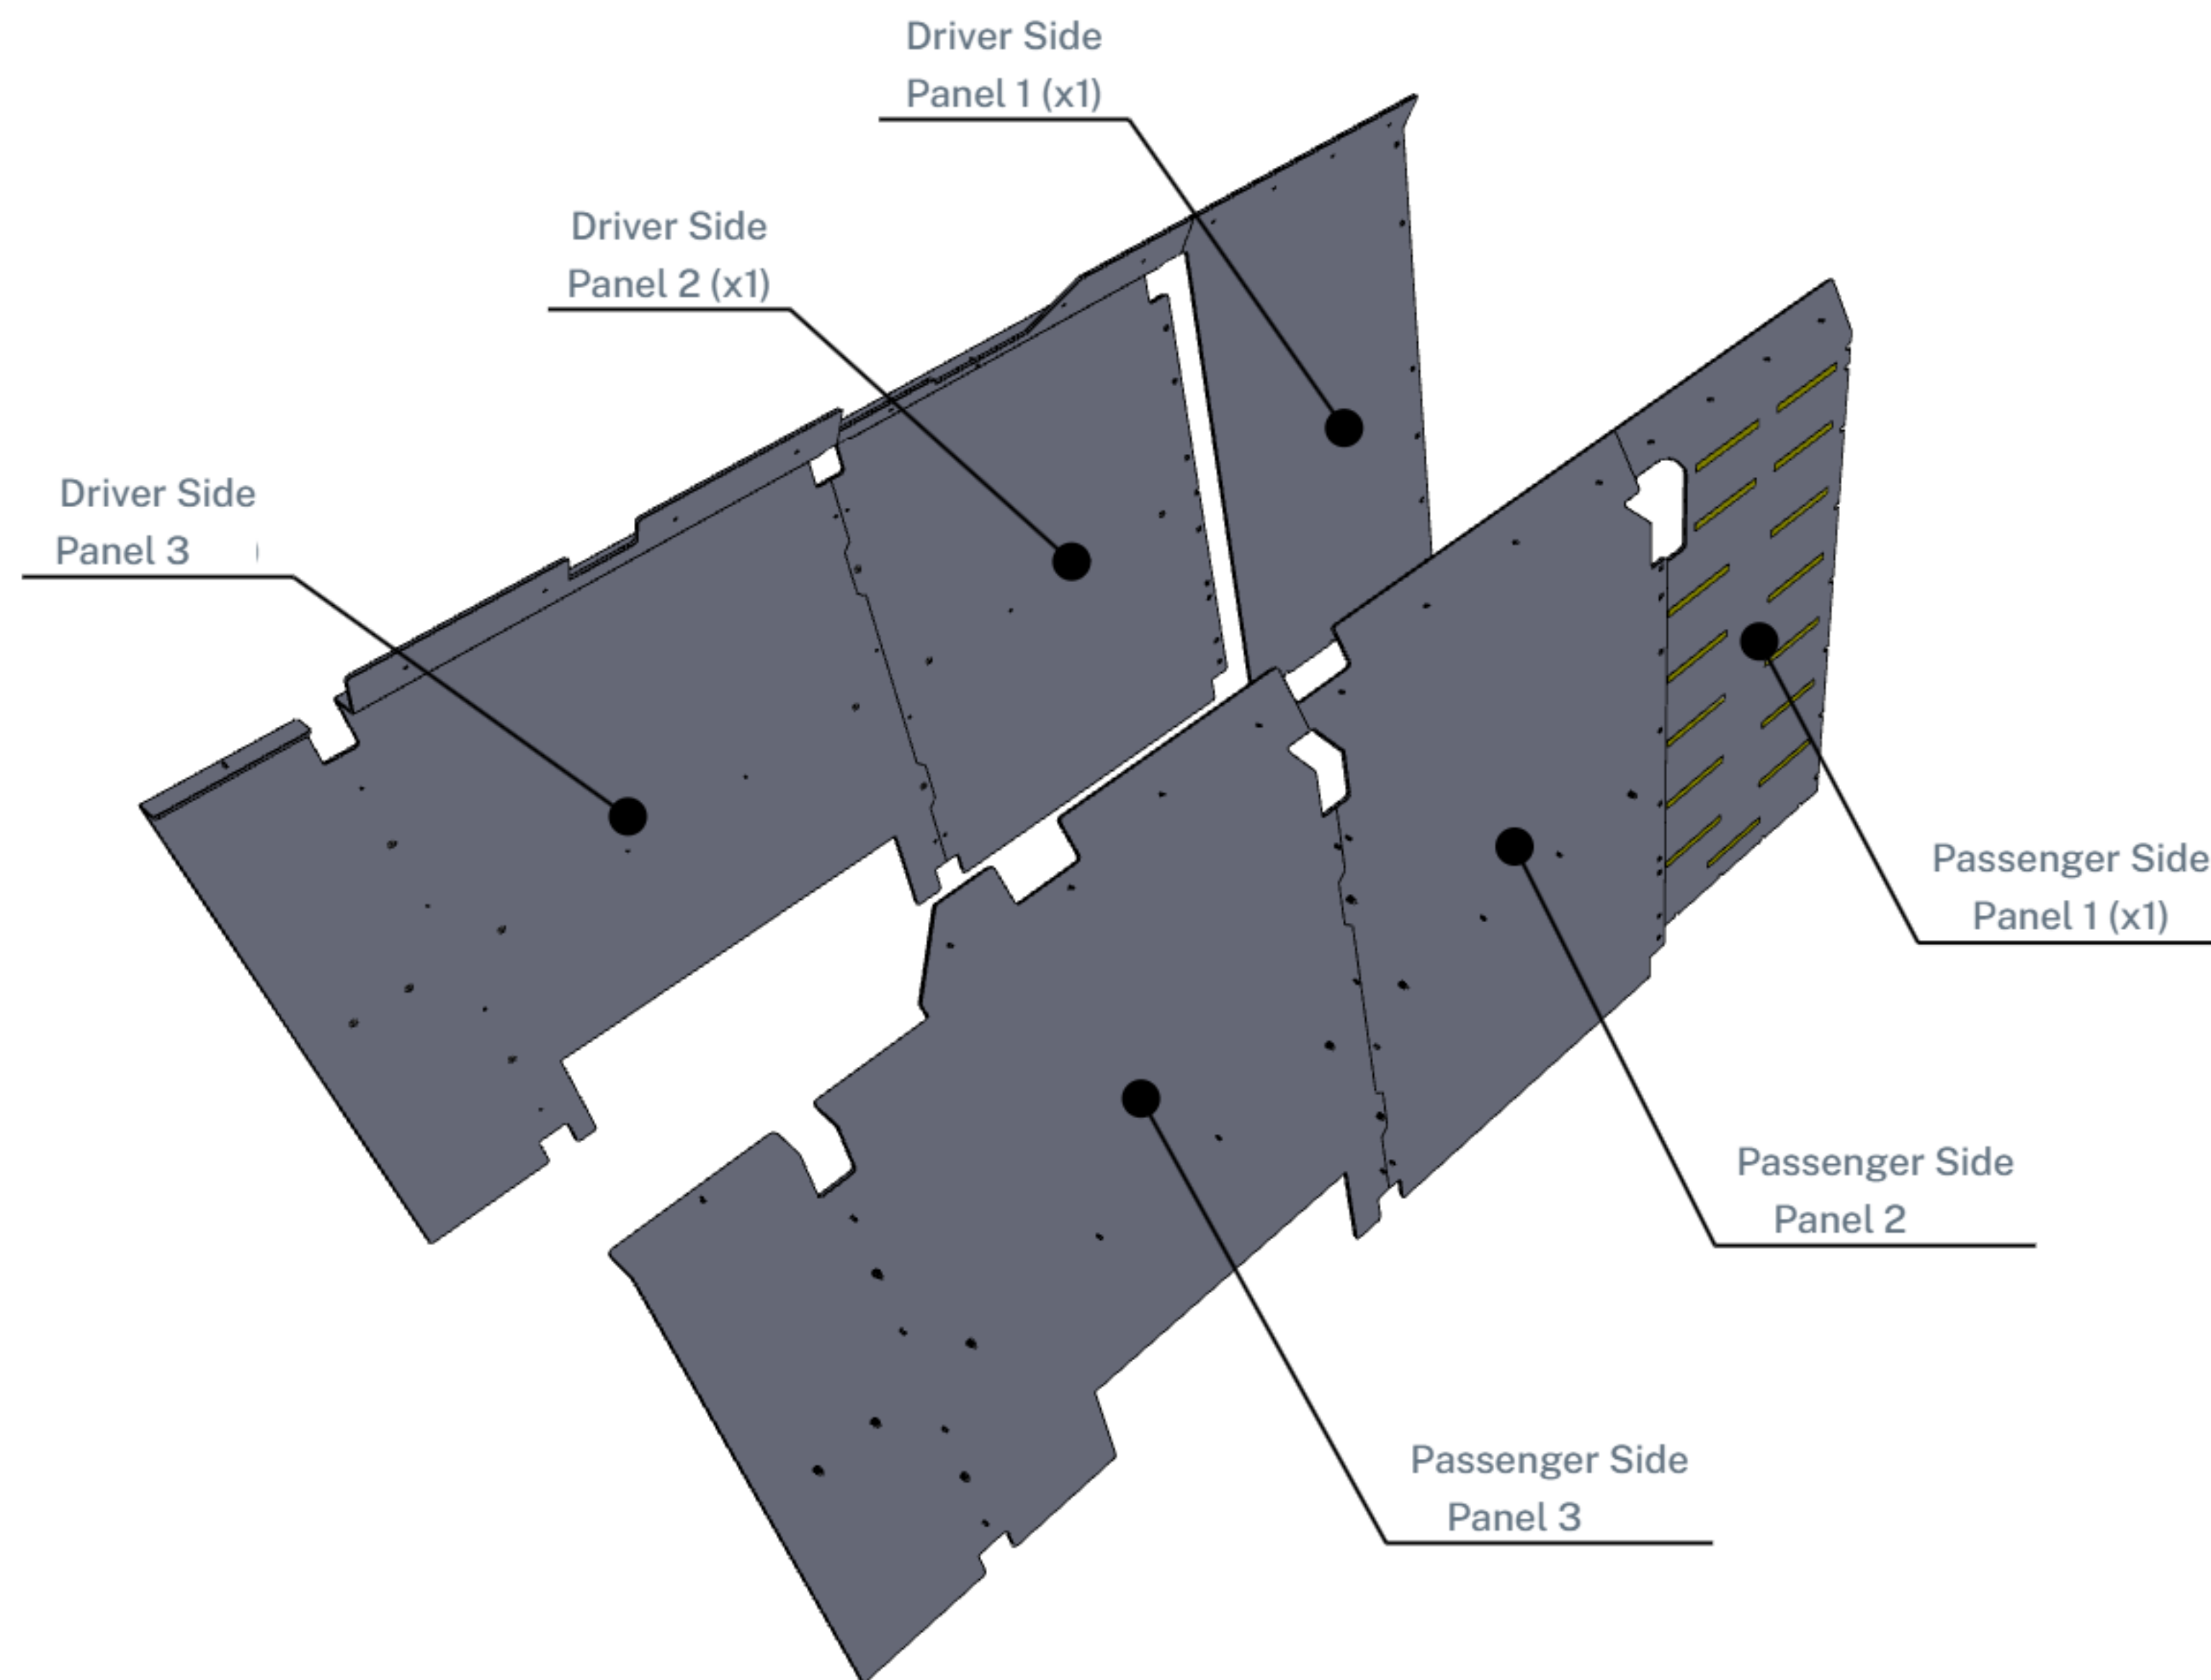

BD0122-41CP3

EconoLite Wall Liner Kit - Grey

BD0122-41CR4

EconoLite Wall Liner Kit - White


BD0122-41DR3


EconoLite Wall Liner Kit - Grey

BD0122-41DR4


EconoLite Wall Liner Kit - White

Hardware Required

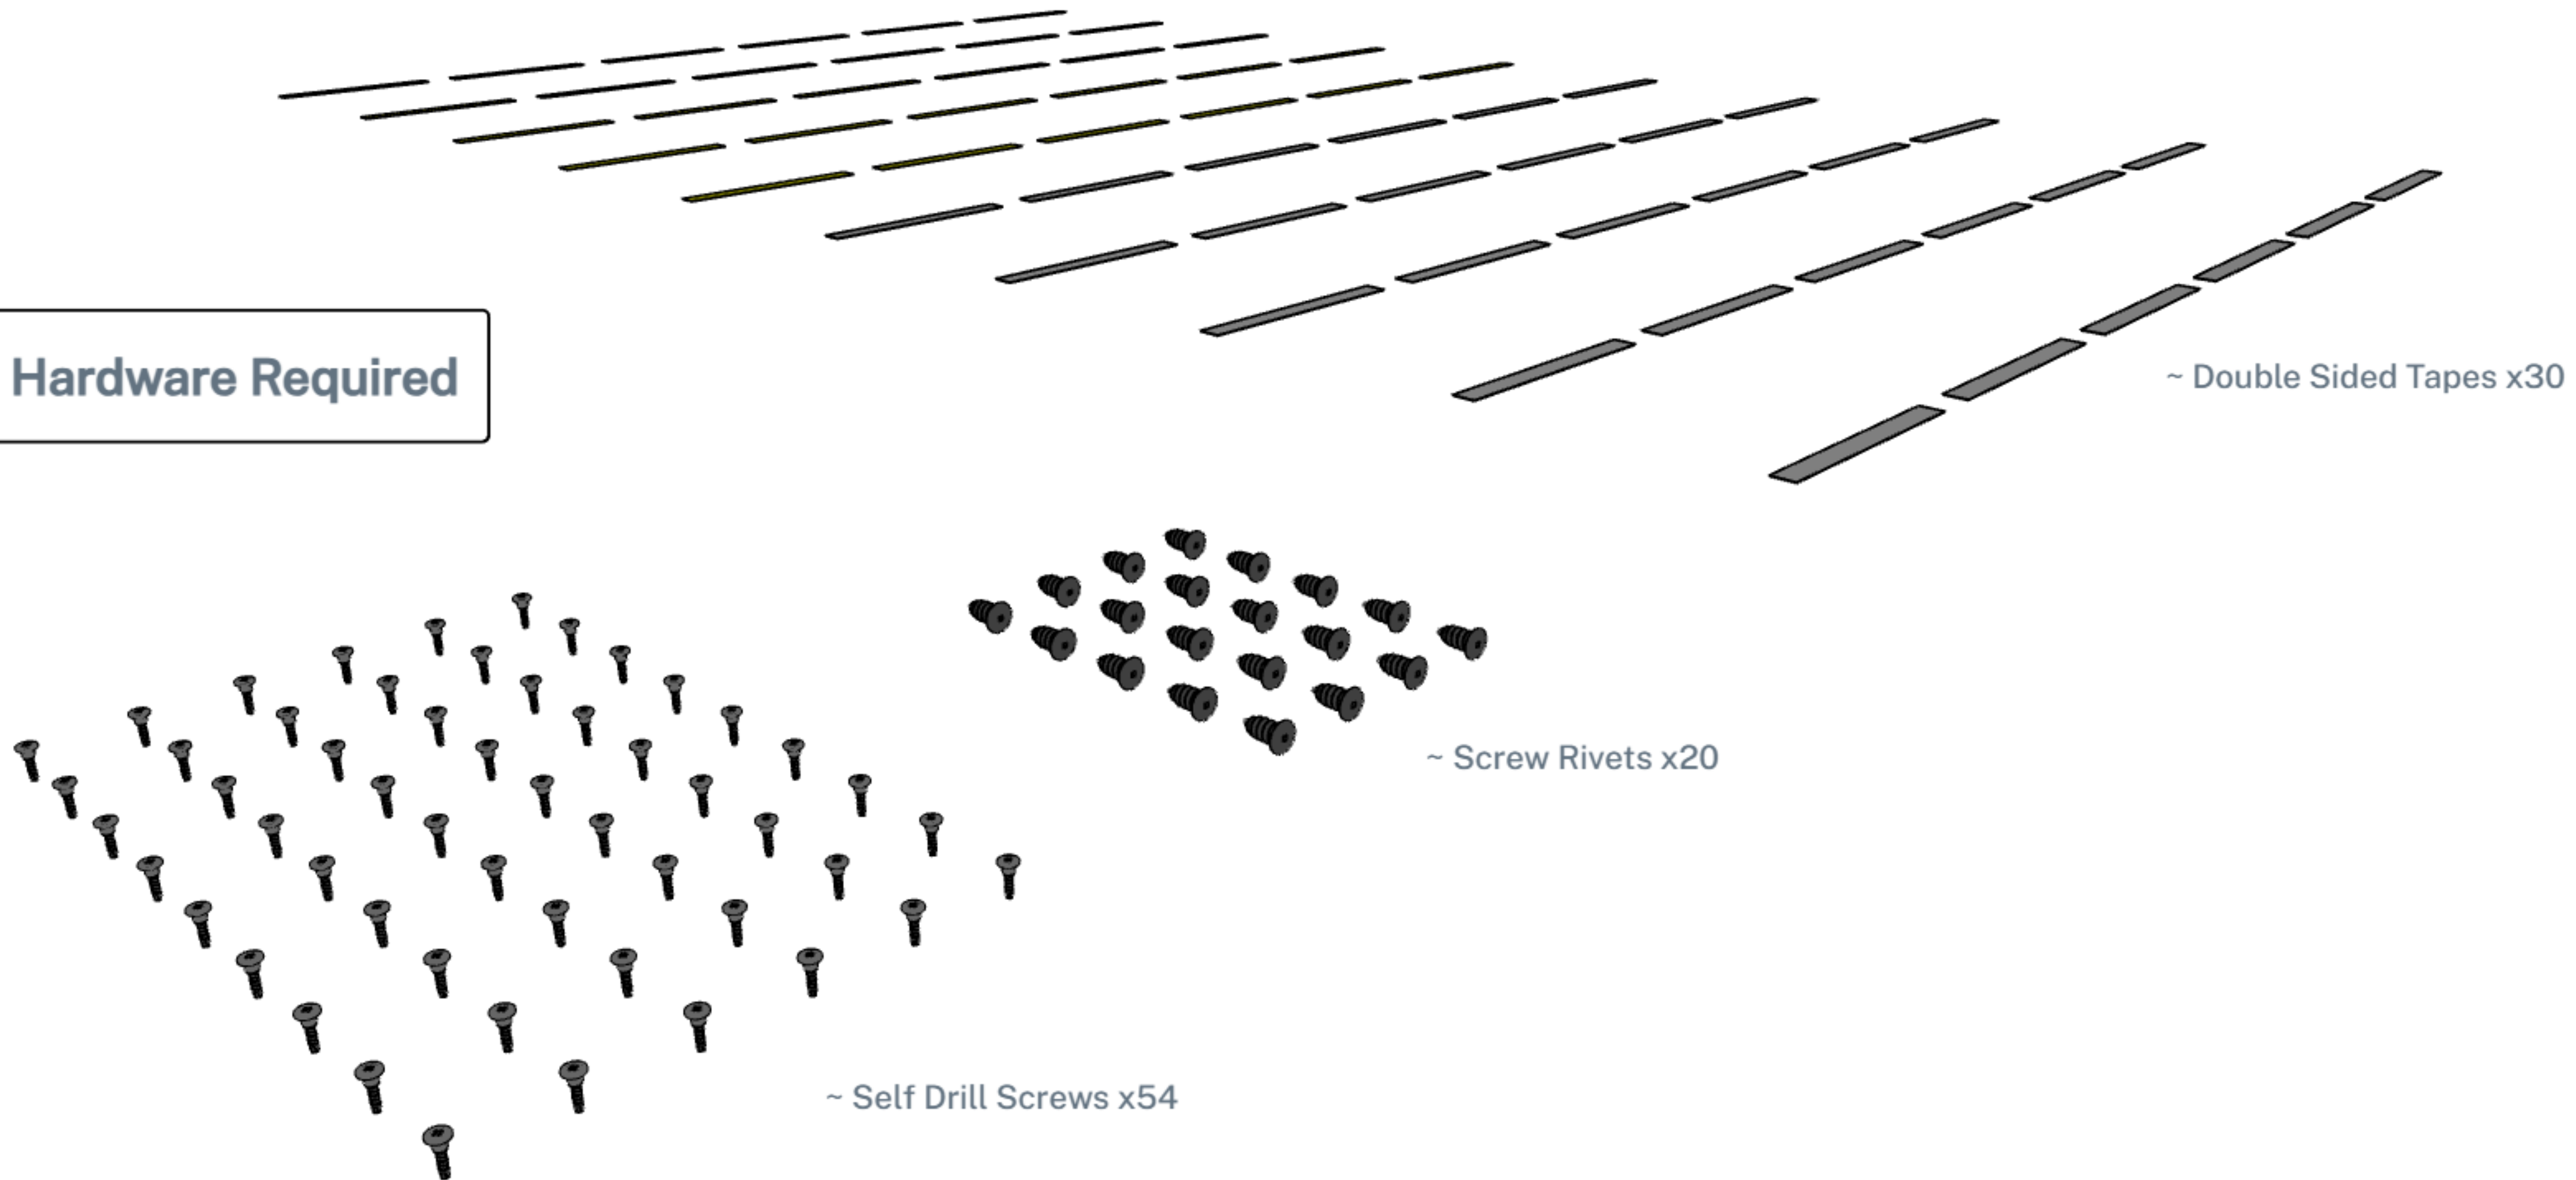

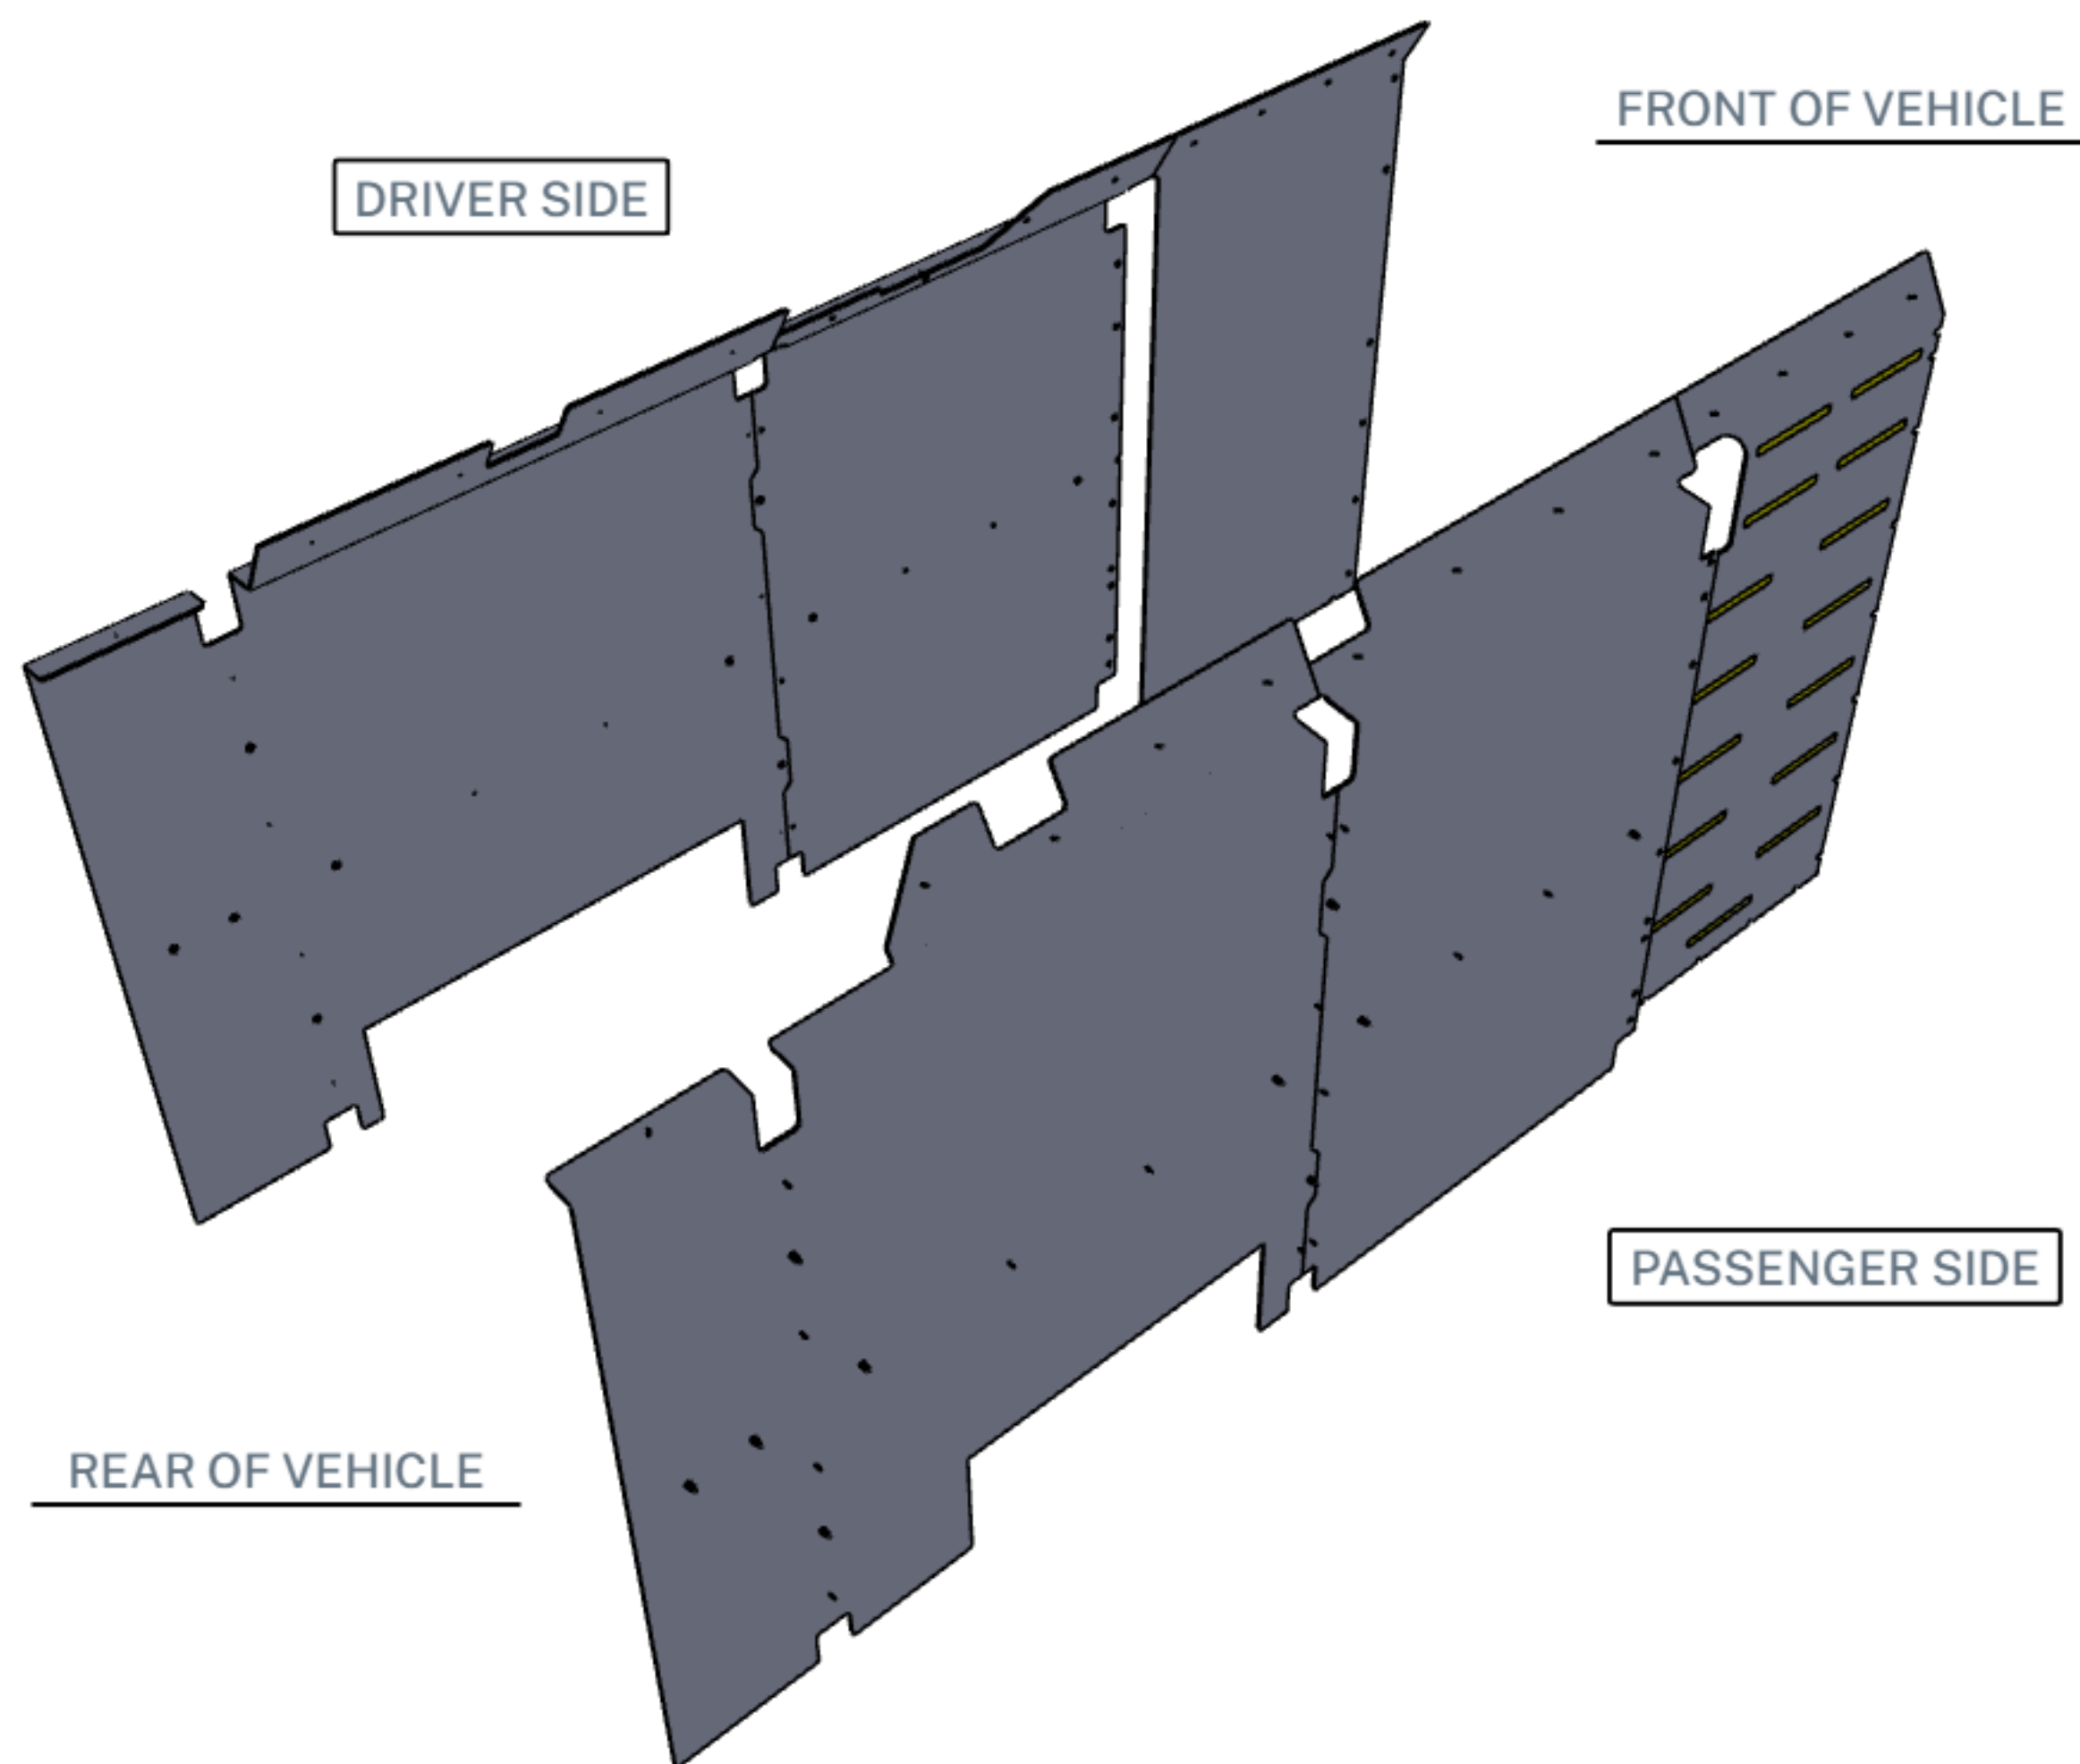


DRIVER SIDE WALL

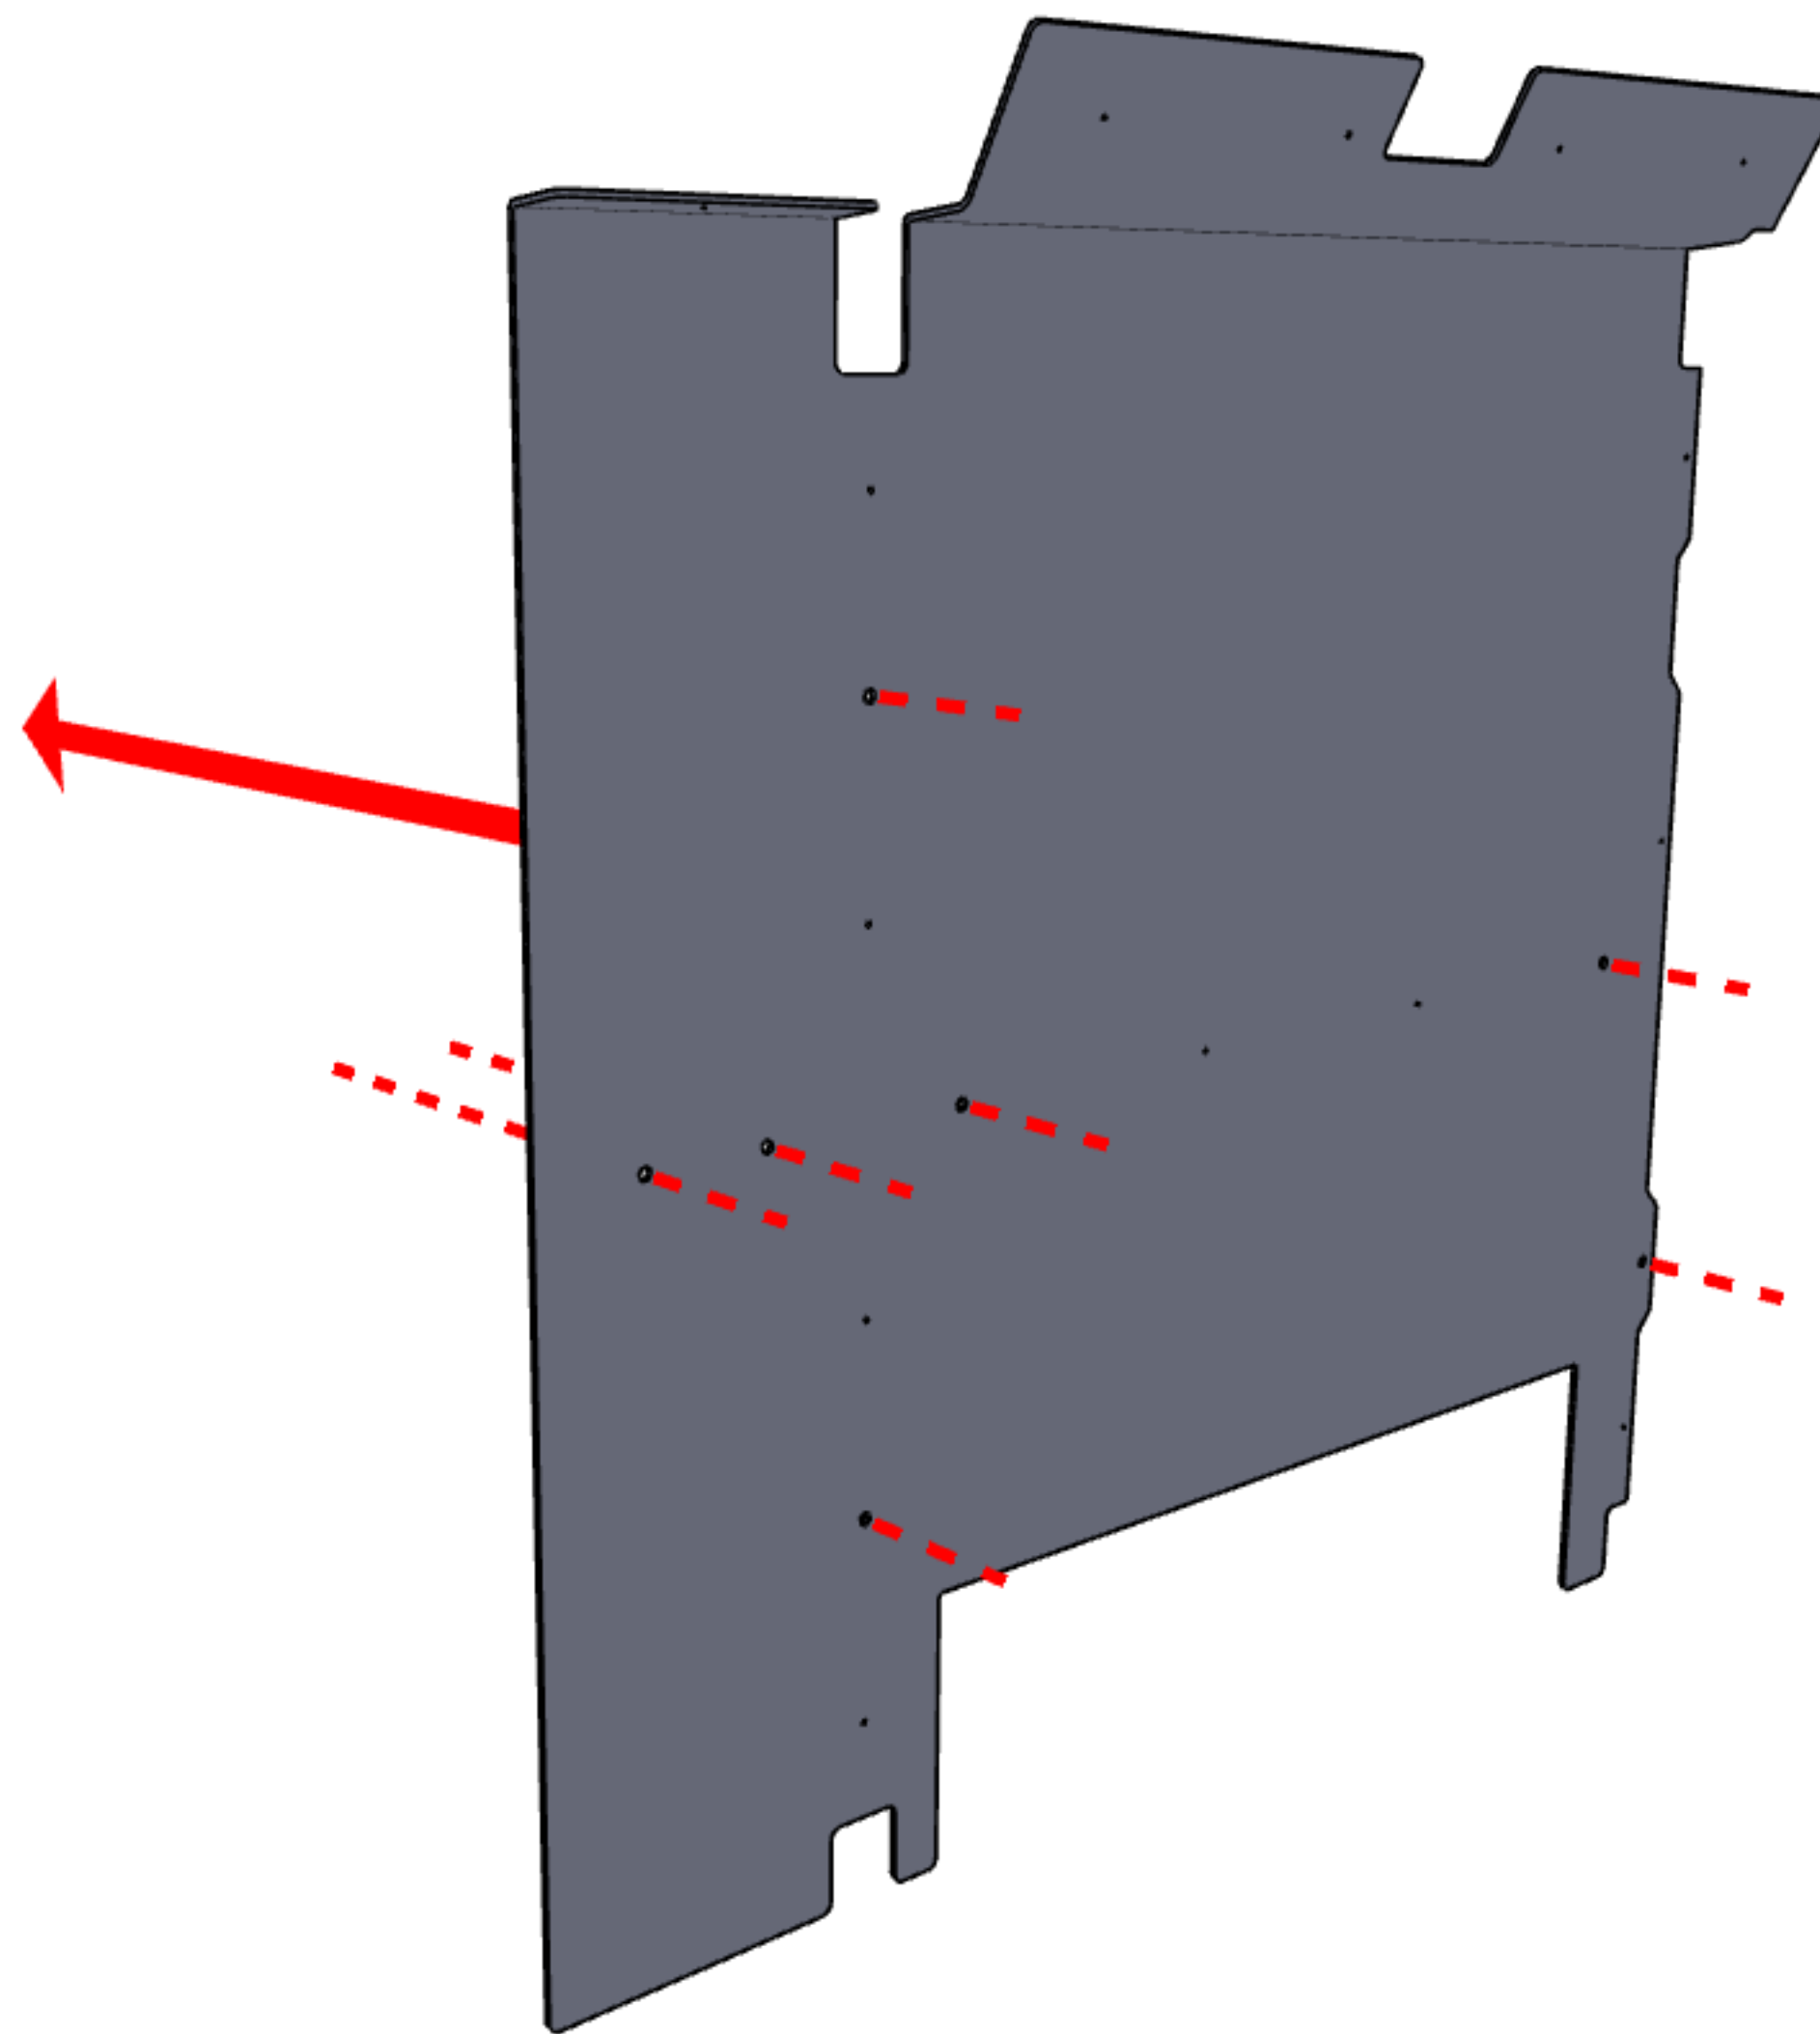


Align Driver Side Panel 3 rivet holes with vehicle factory holes.

DRIVER SIDE WALL

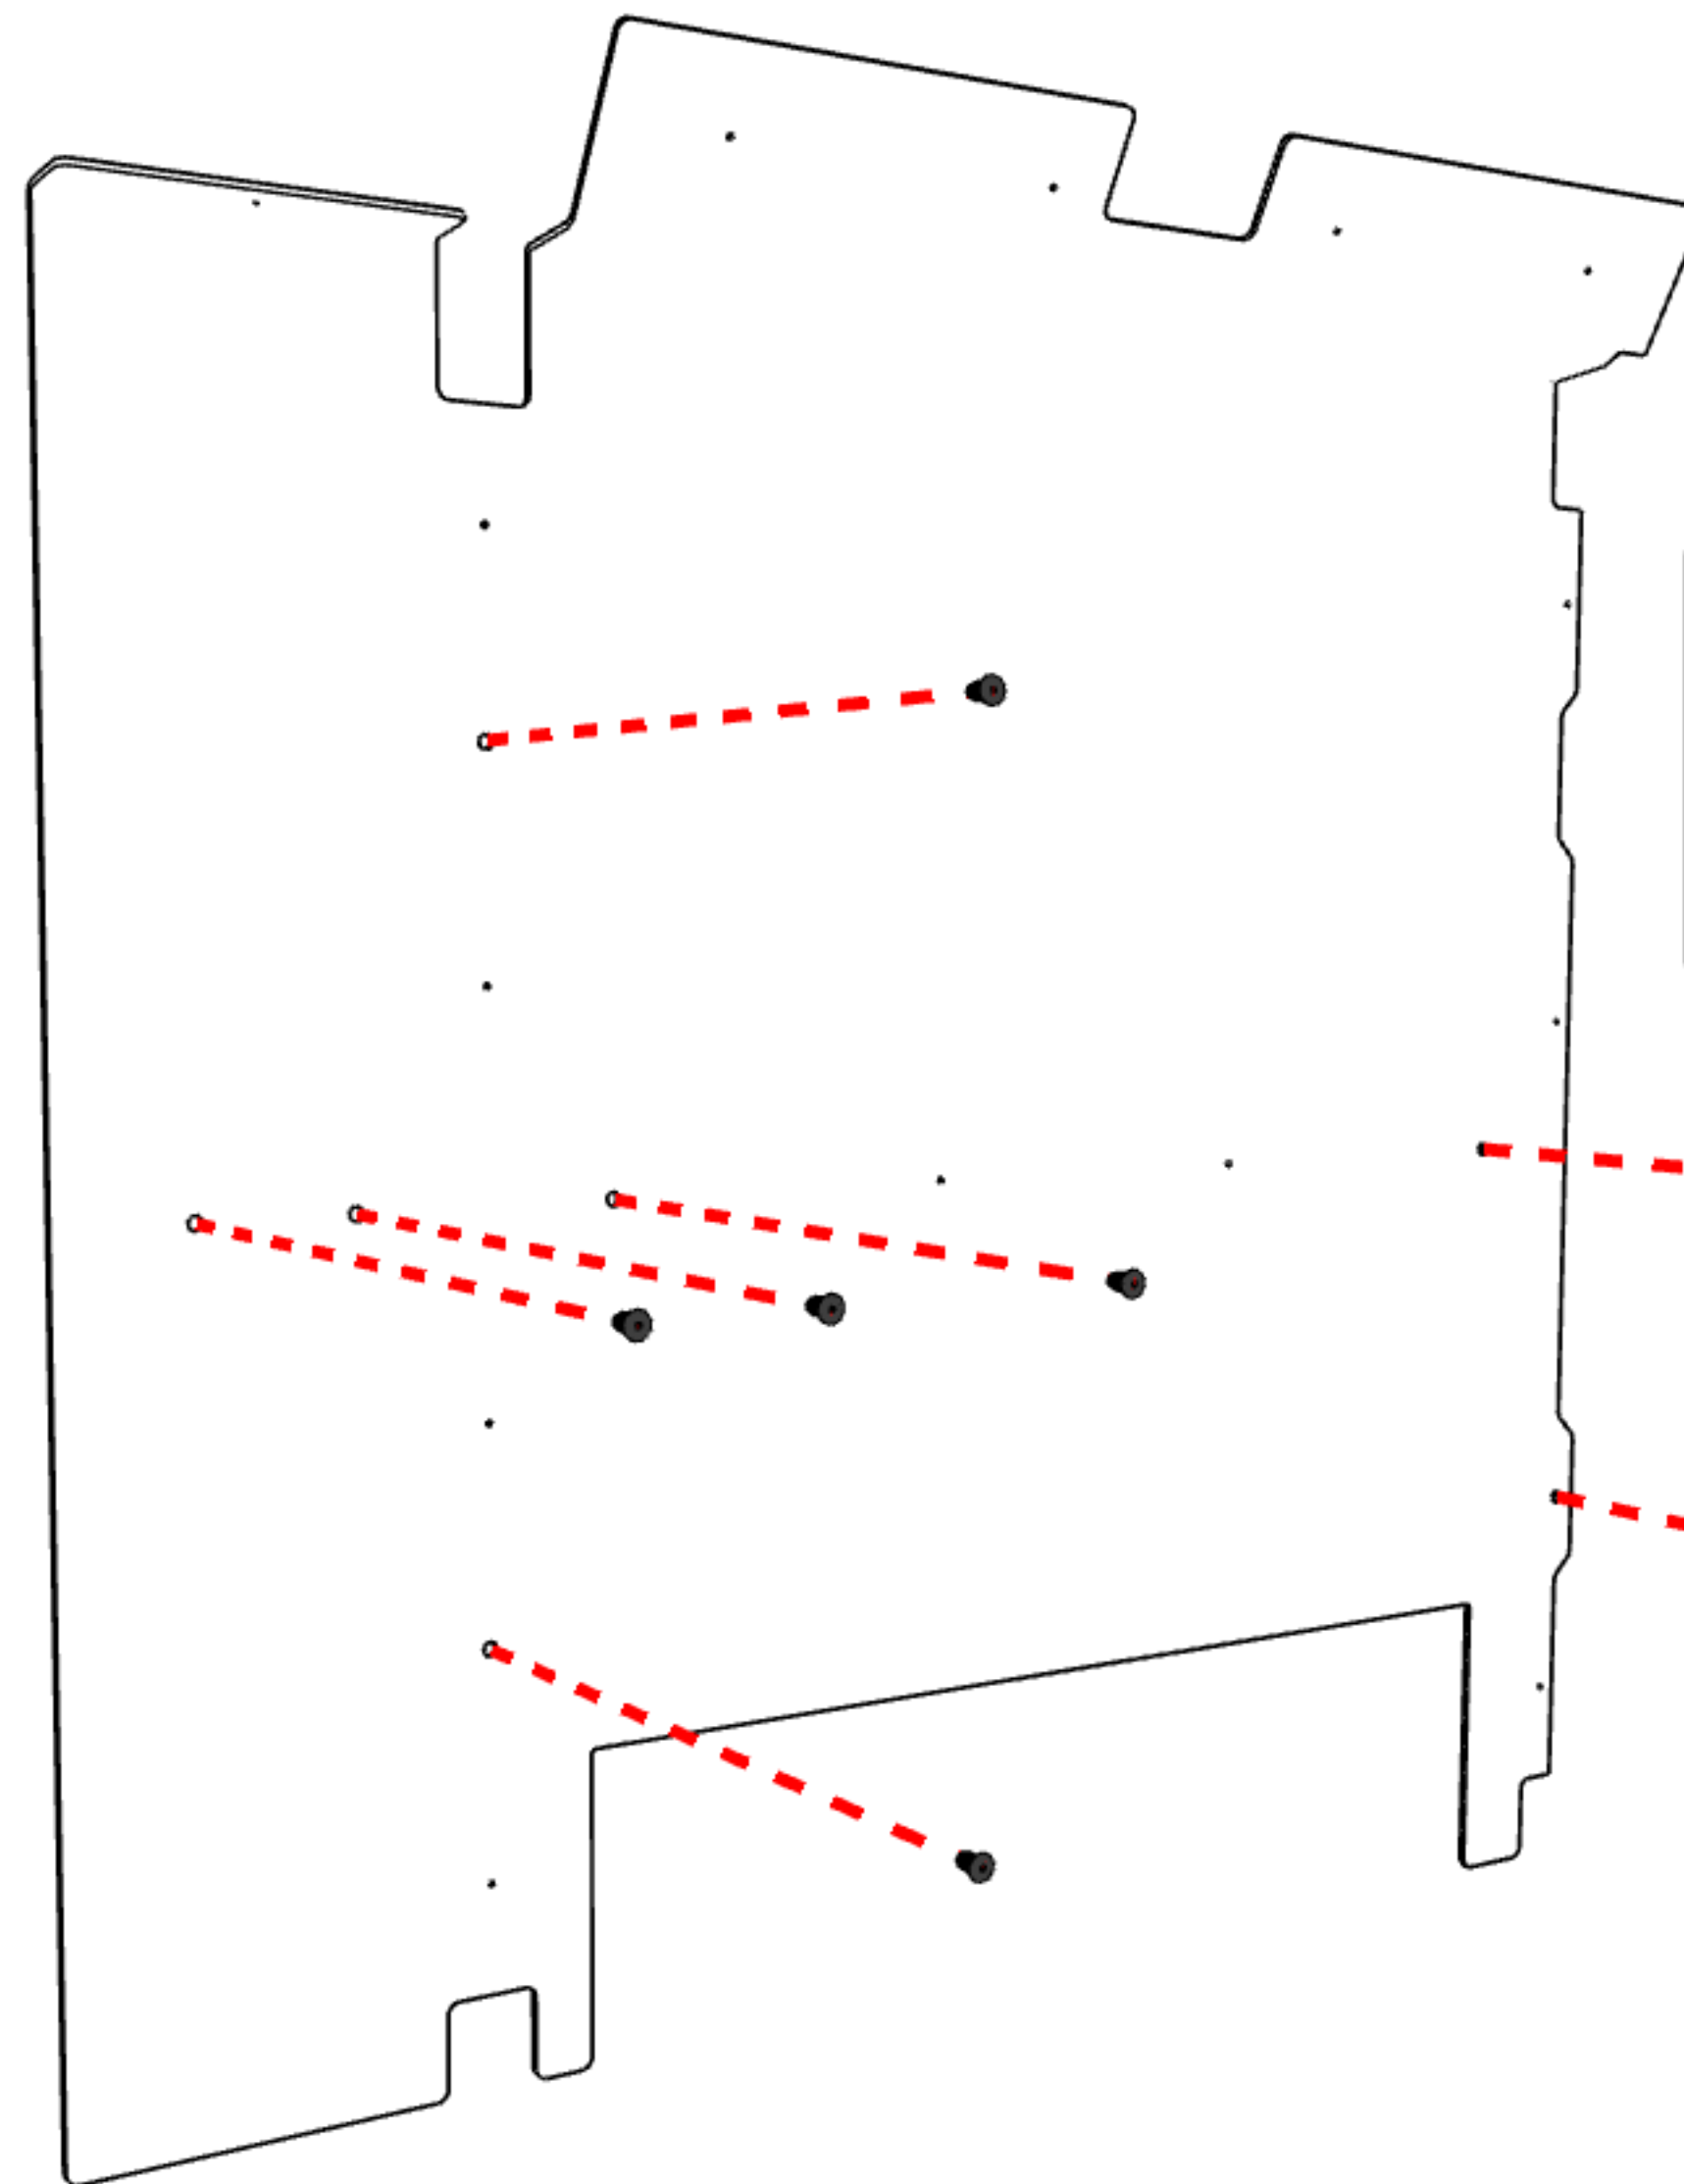


Screw in Legend rivets.

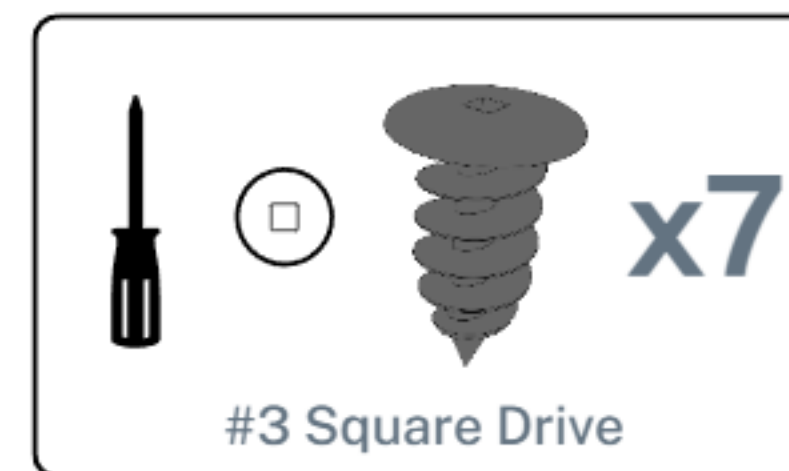


DRIVER SIDE WALL




DRIVER SIDE WALL

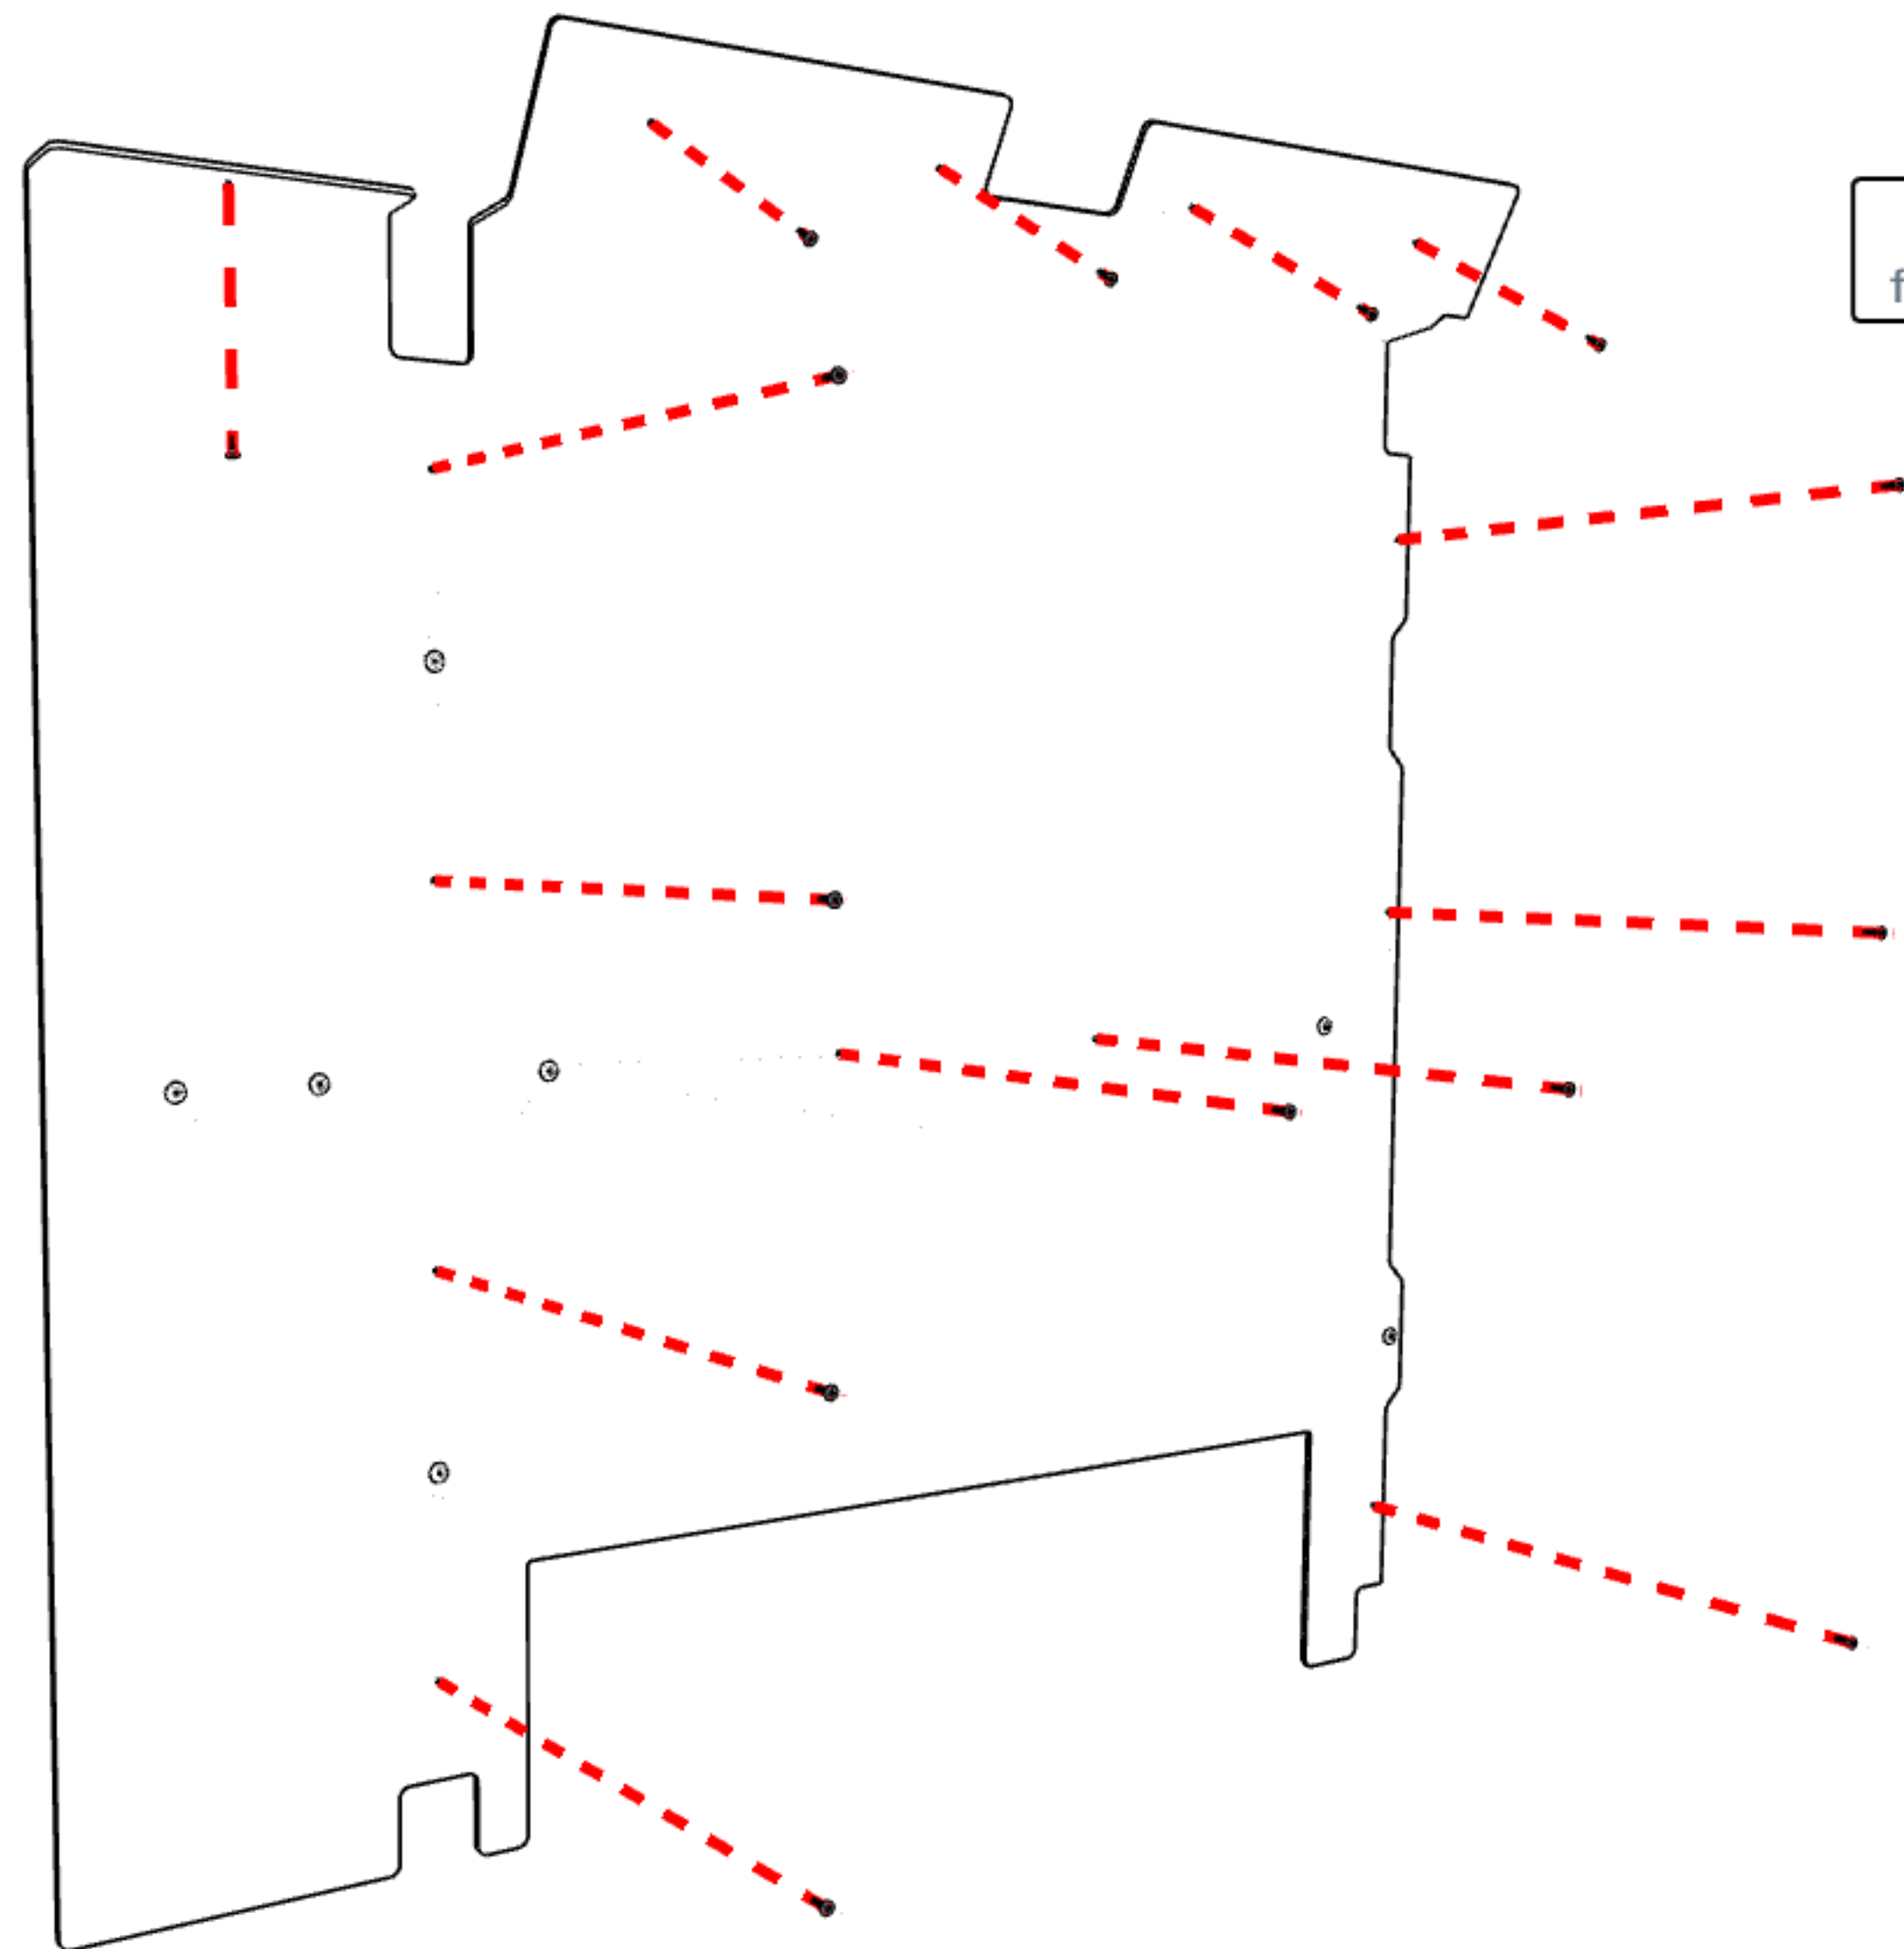

Drill Self Drill Screws in the following pilot hole locations.

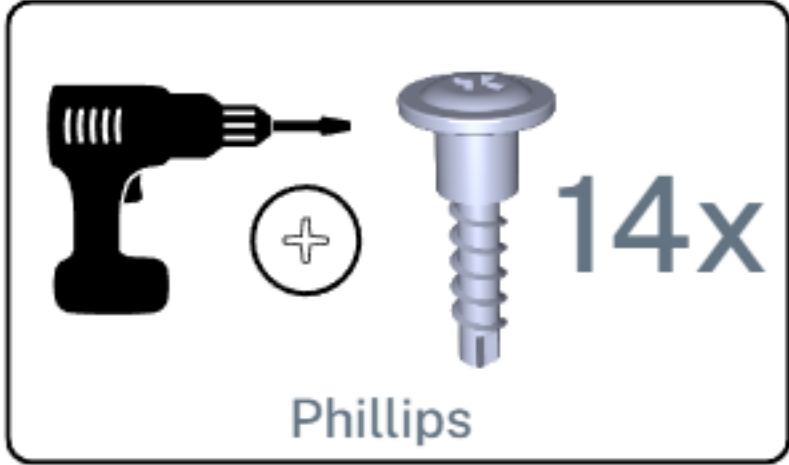


DRIVER SIDE WALL

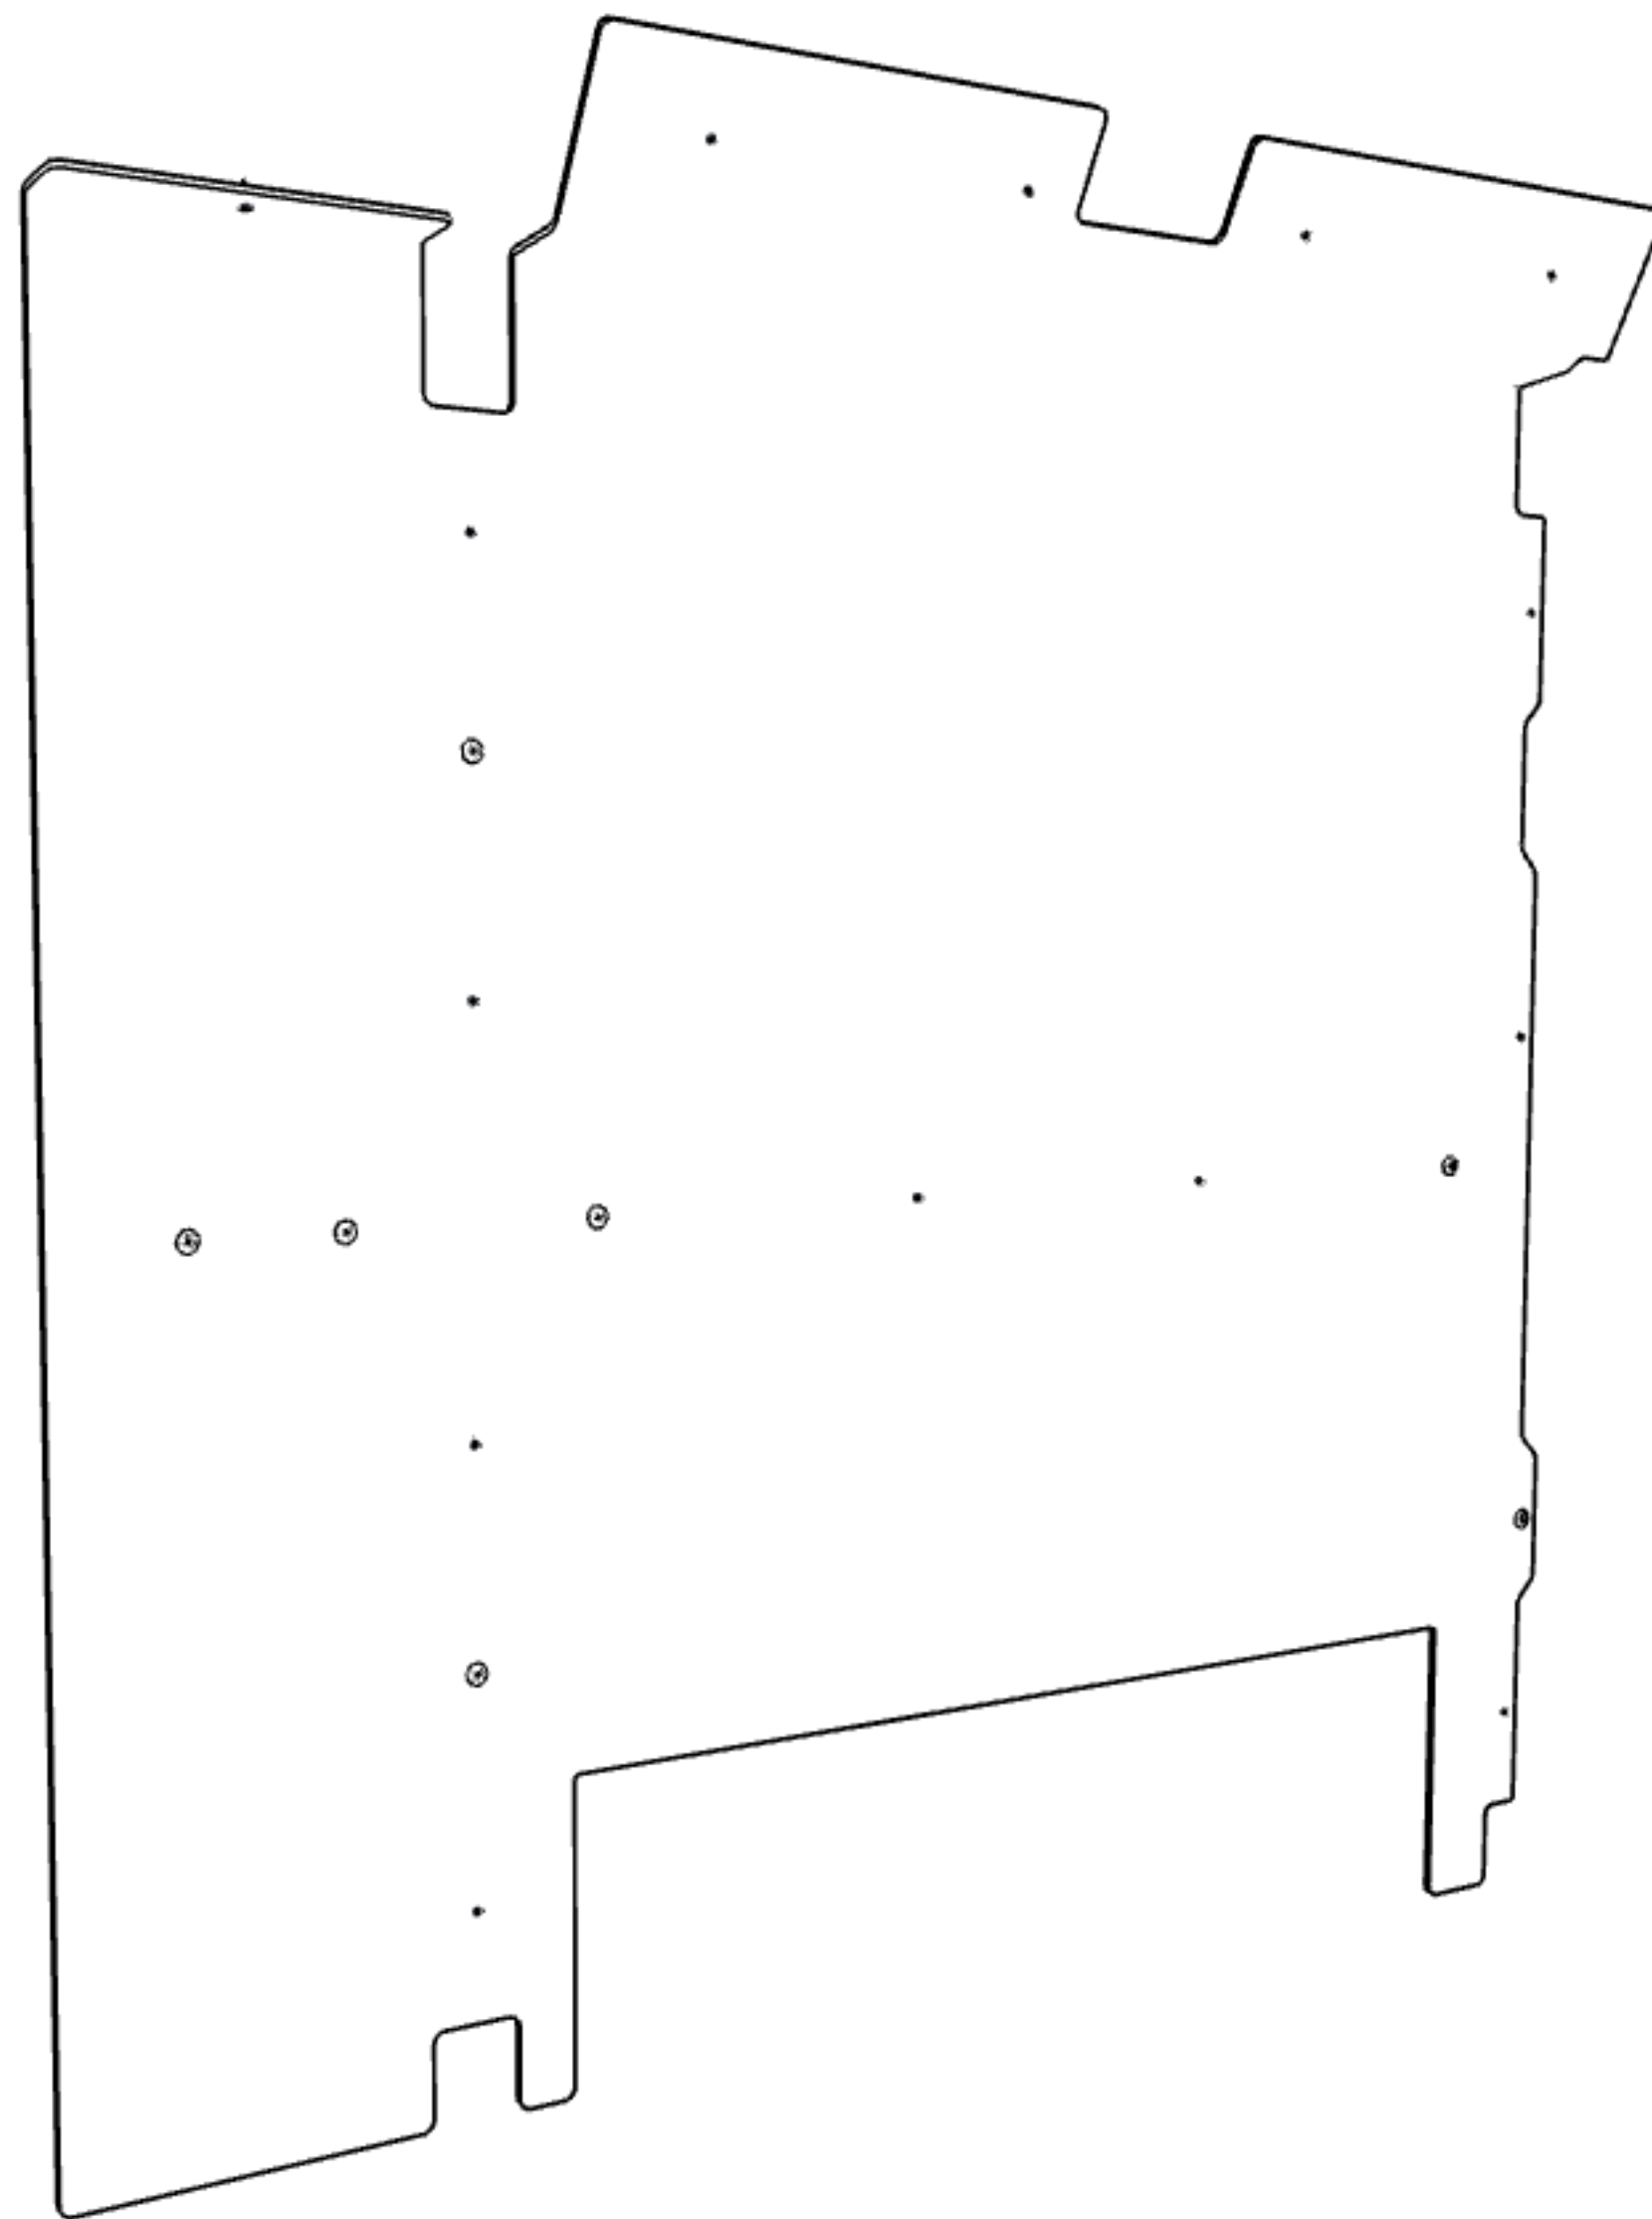


DRIVER SIDE WALL


Align Driver Side Panel 2 rivet
holes with vehicle factory holes.

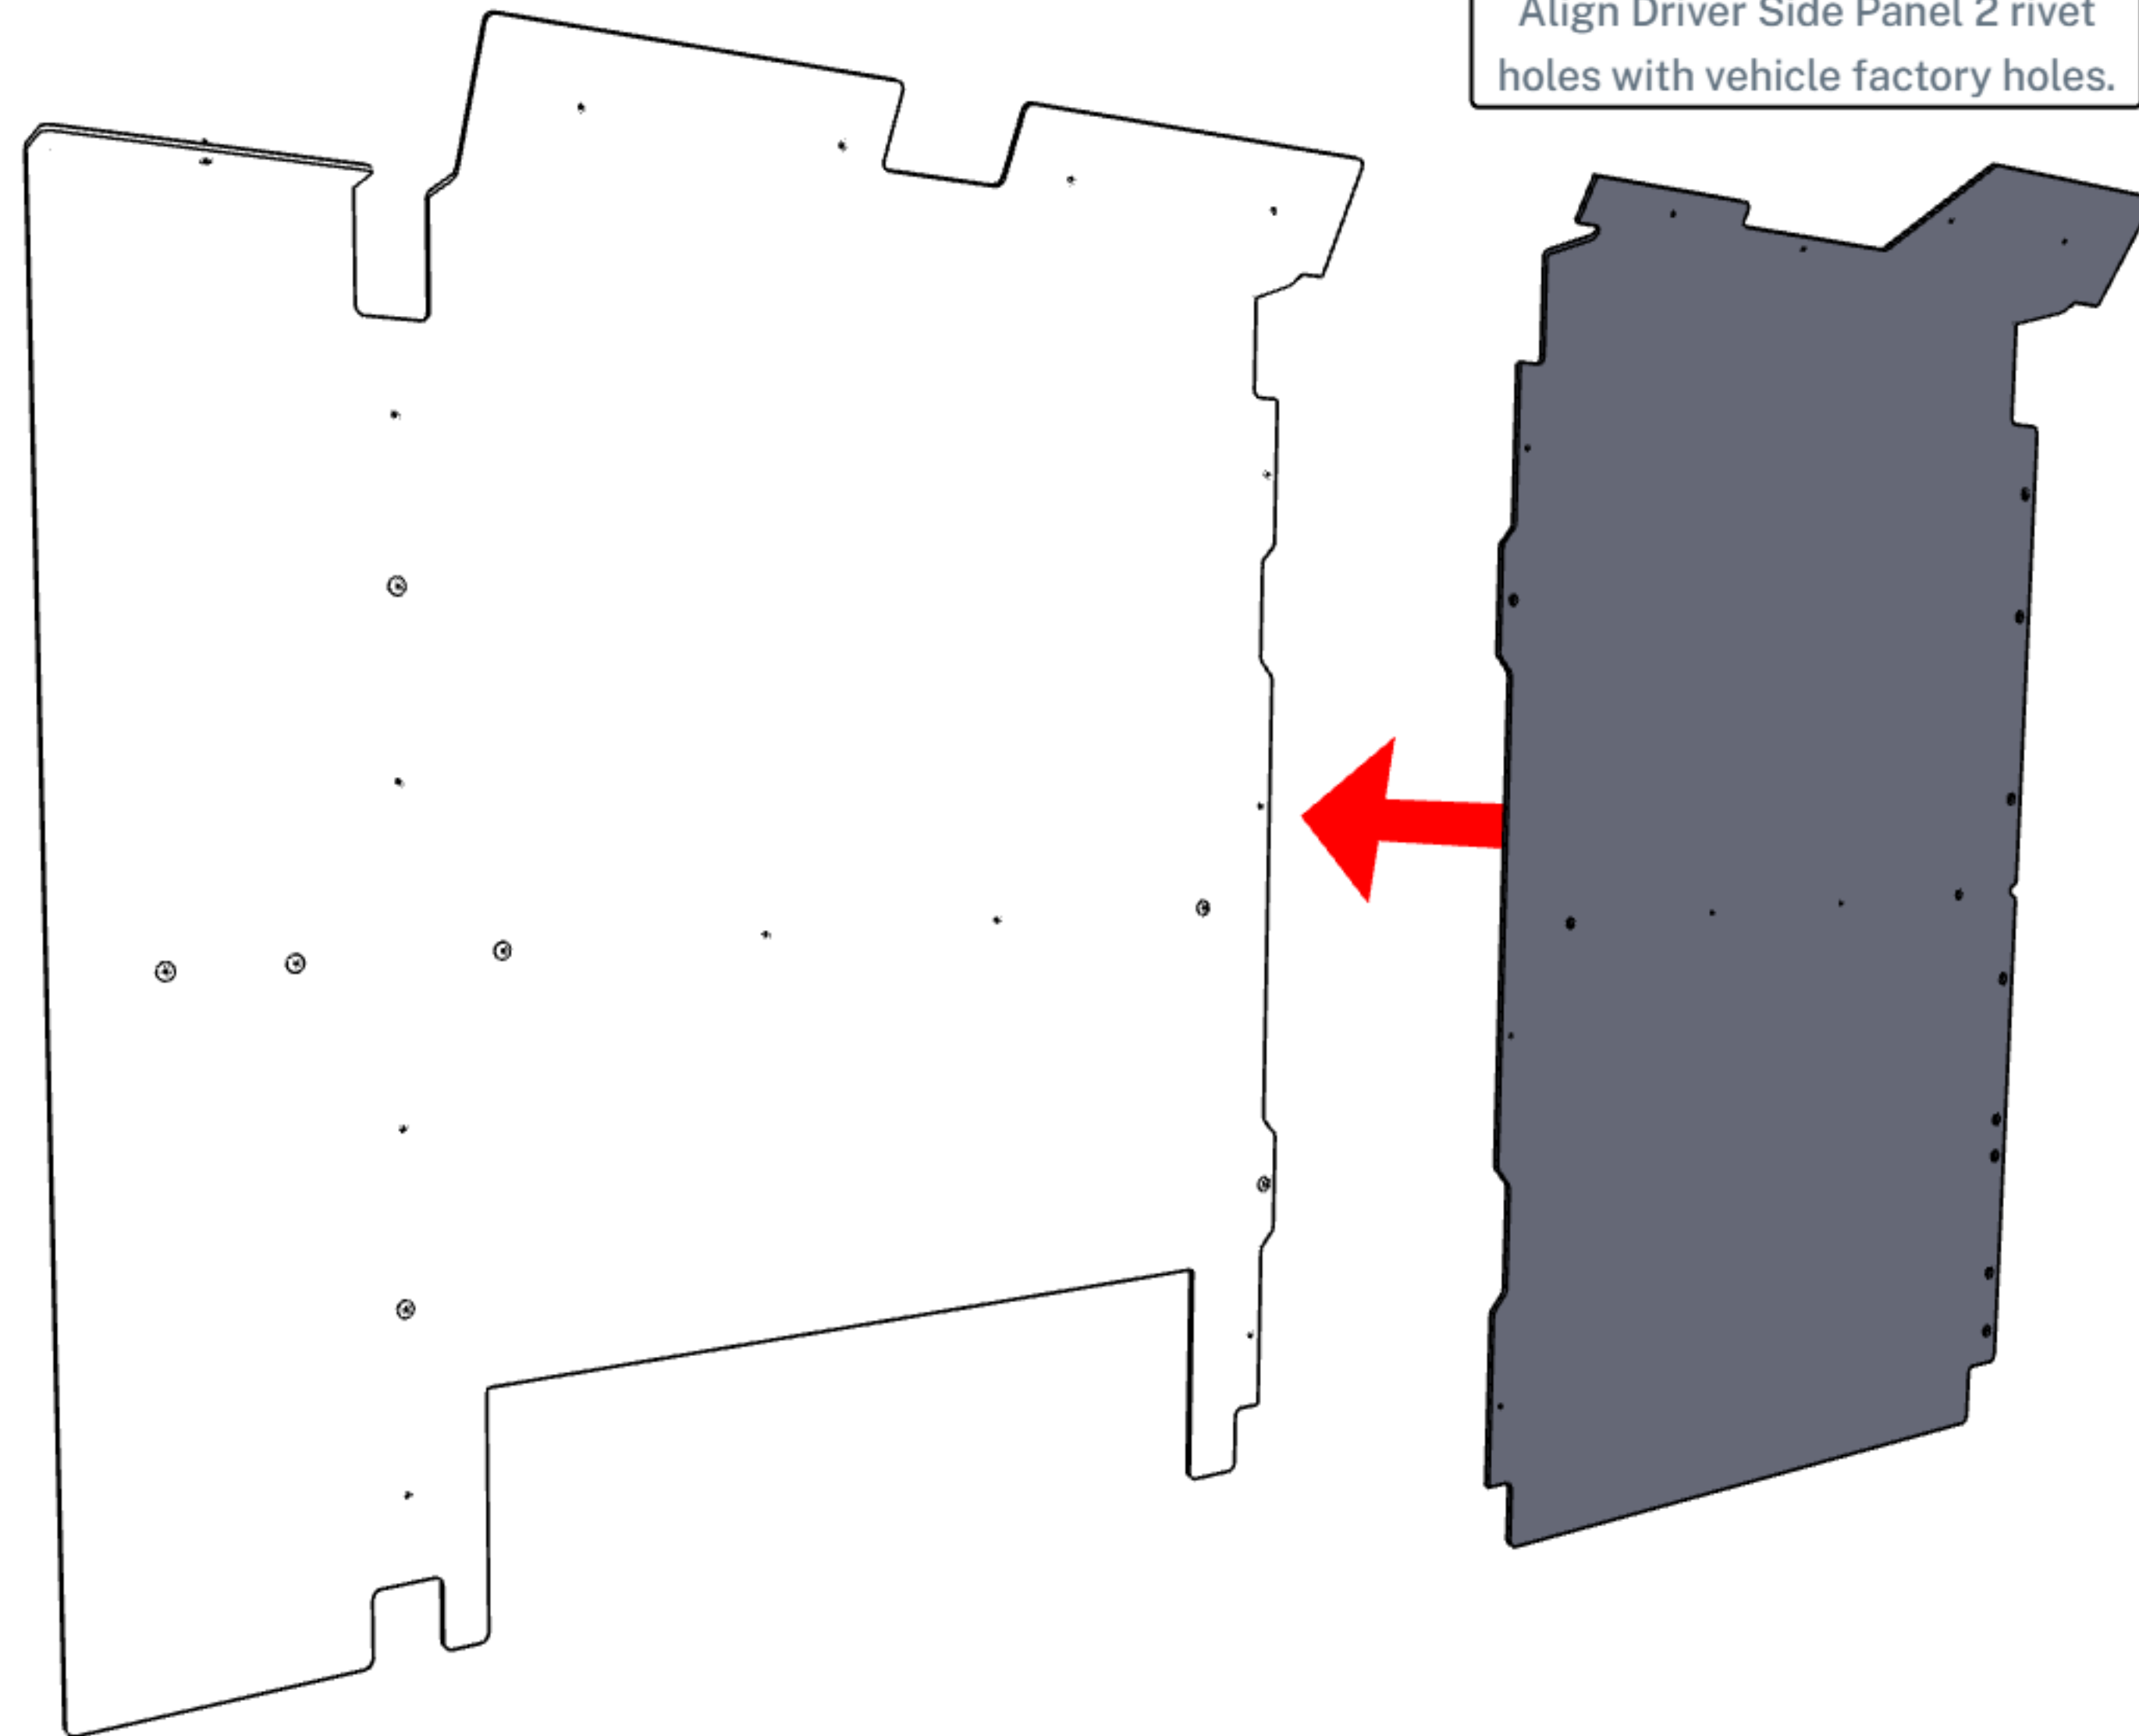


DRIVER SIDE WALL

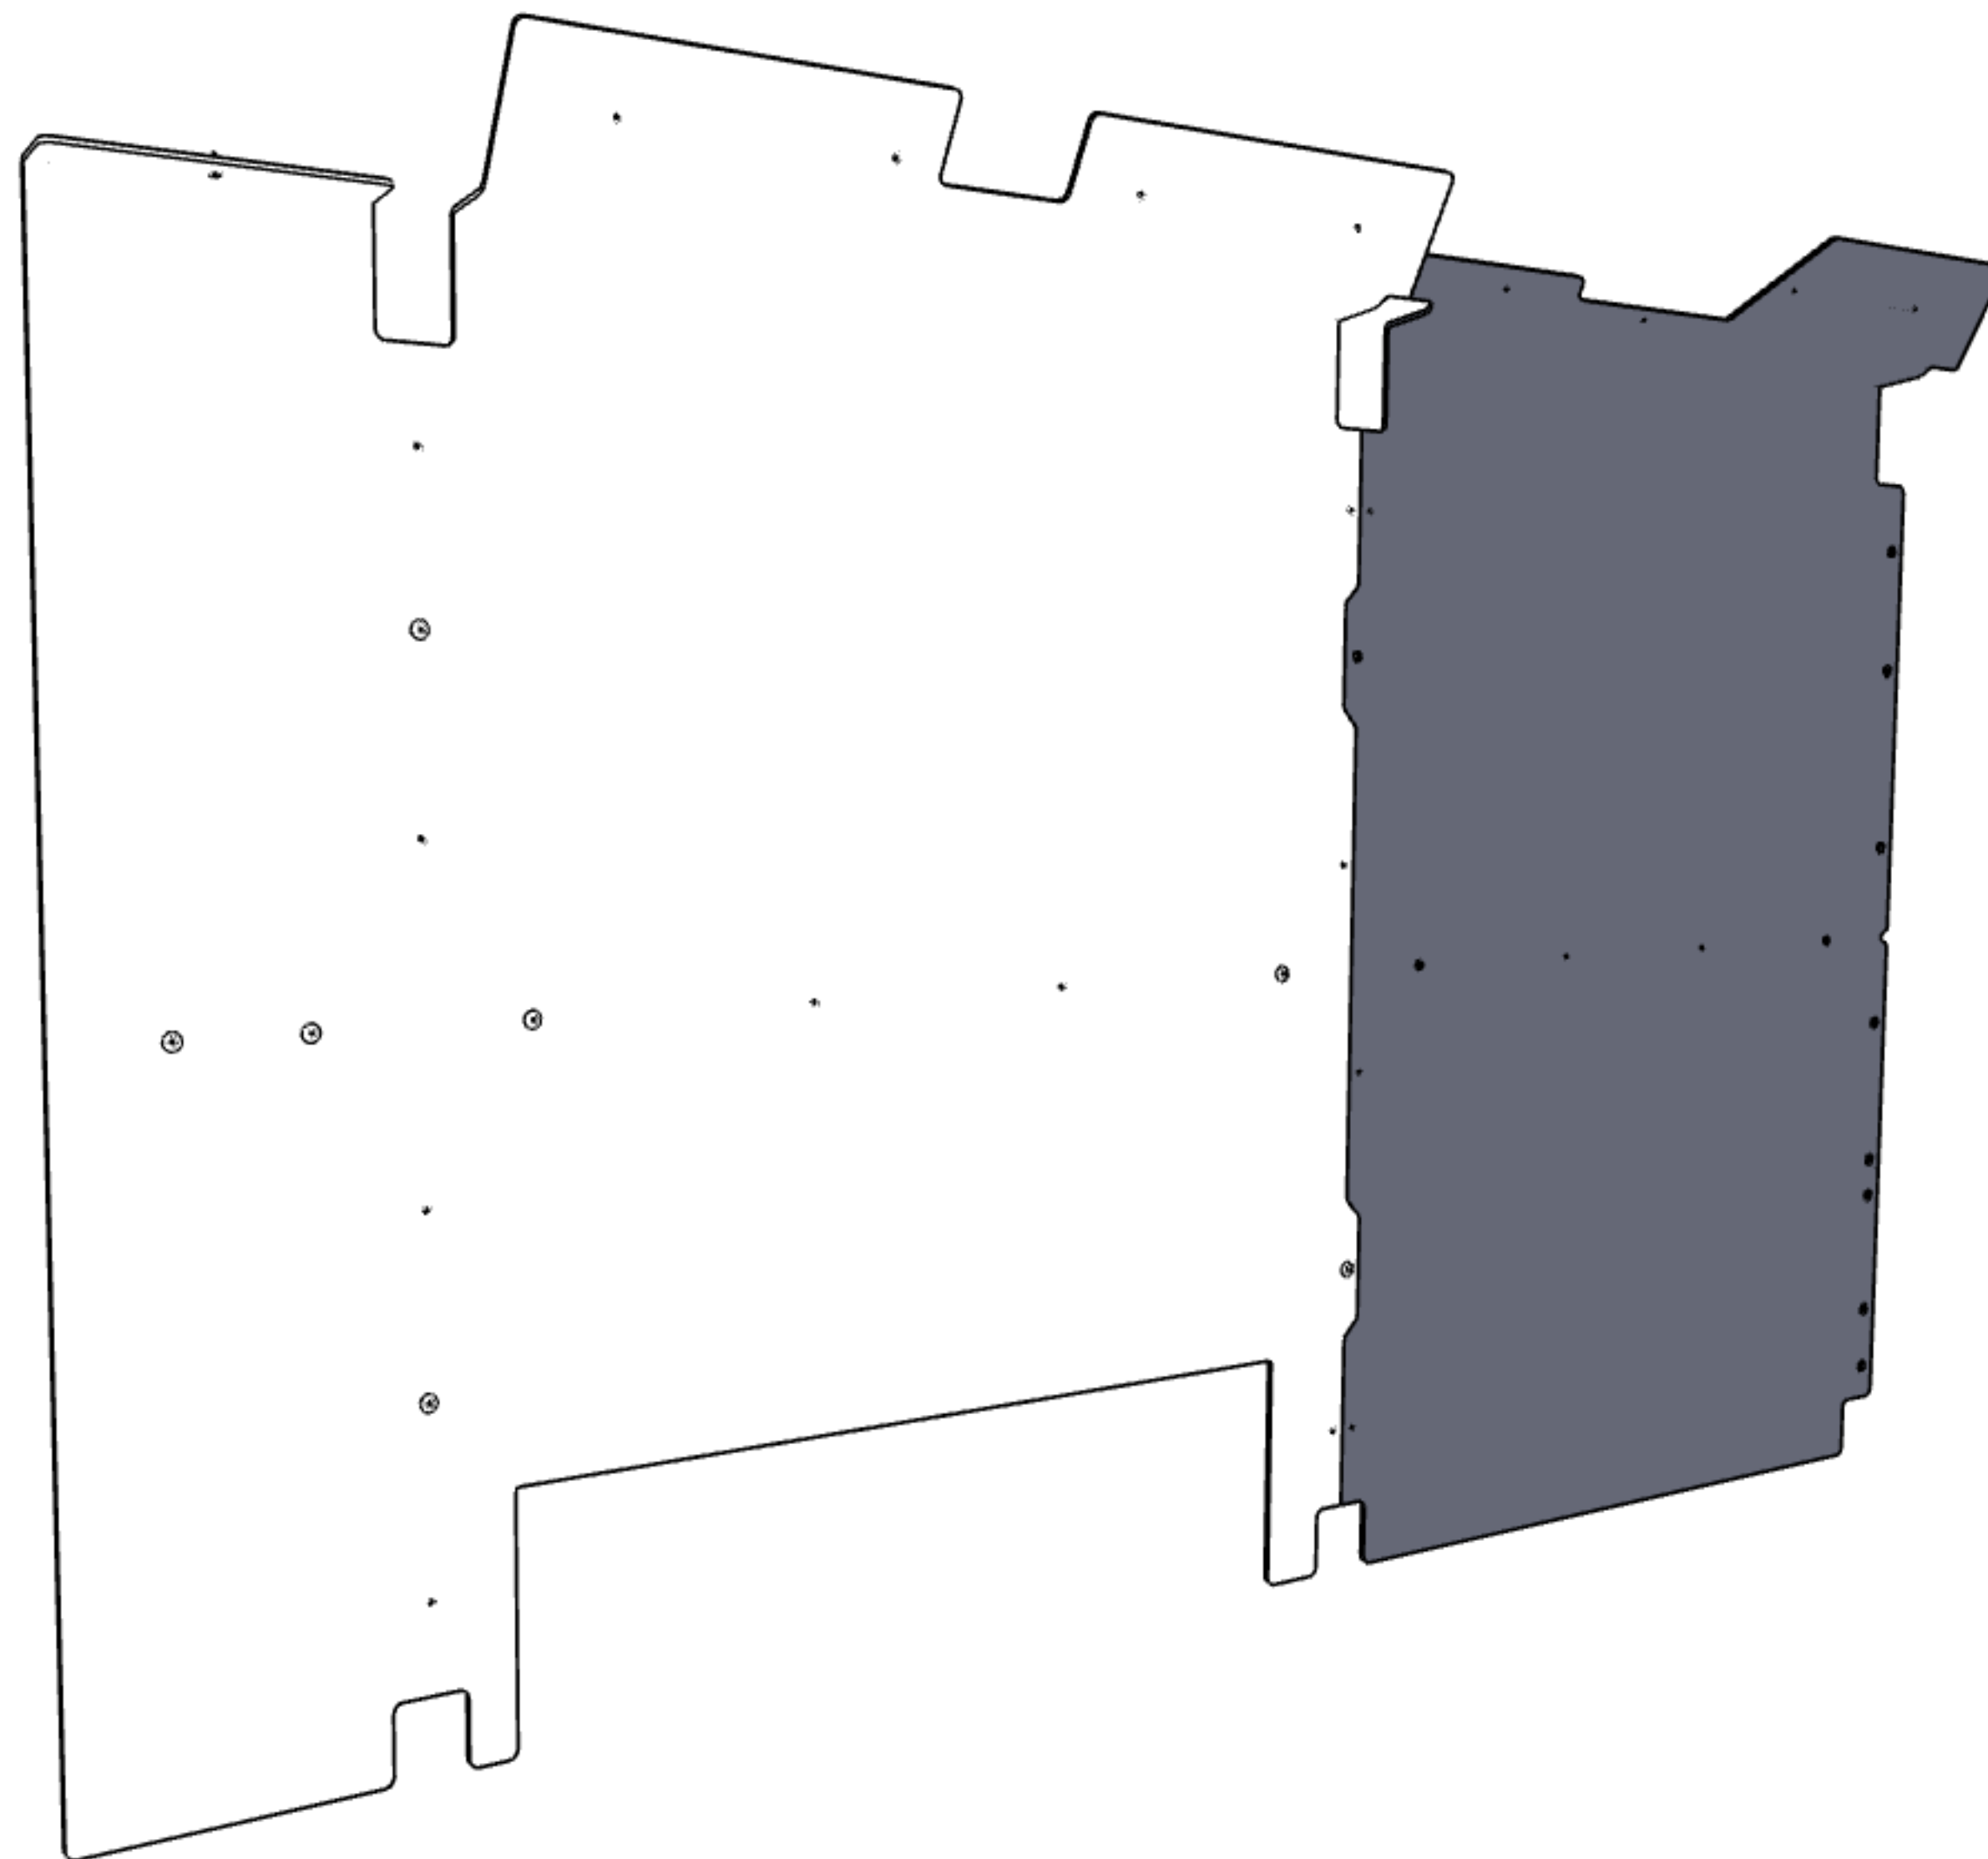

DRIVER SIDE WALL

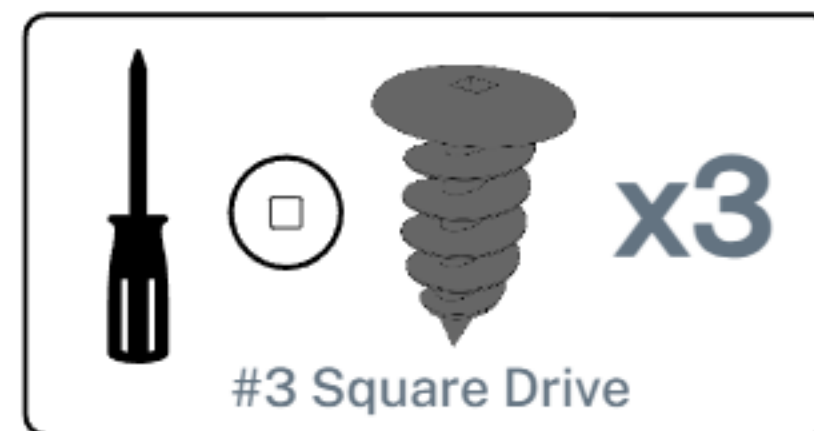


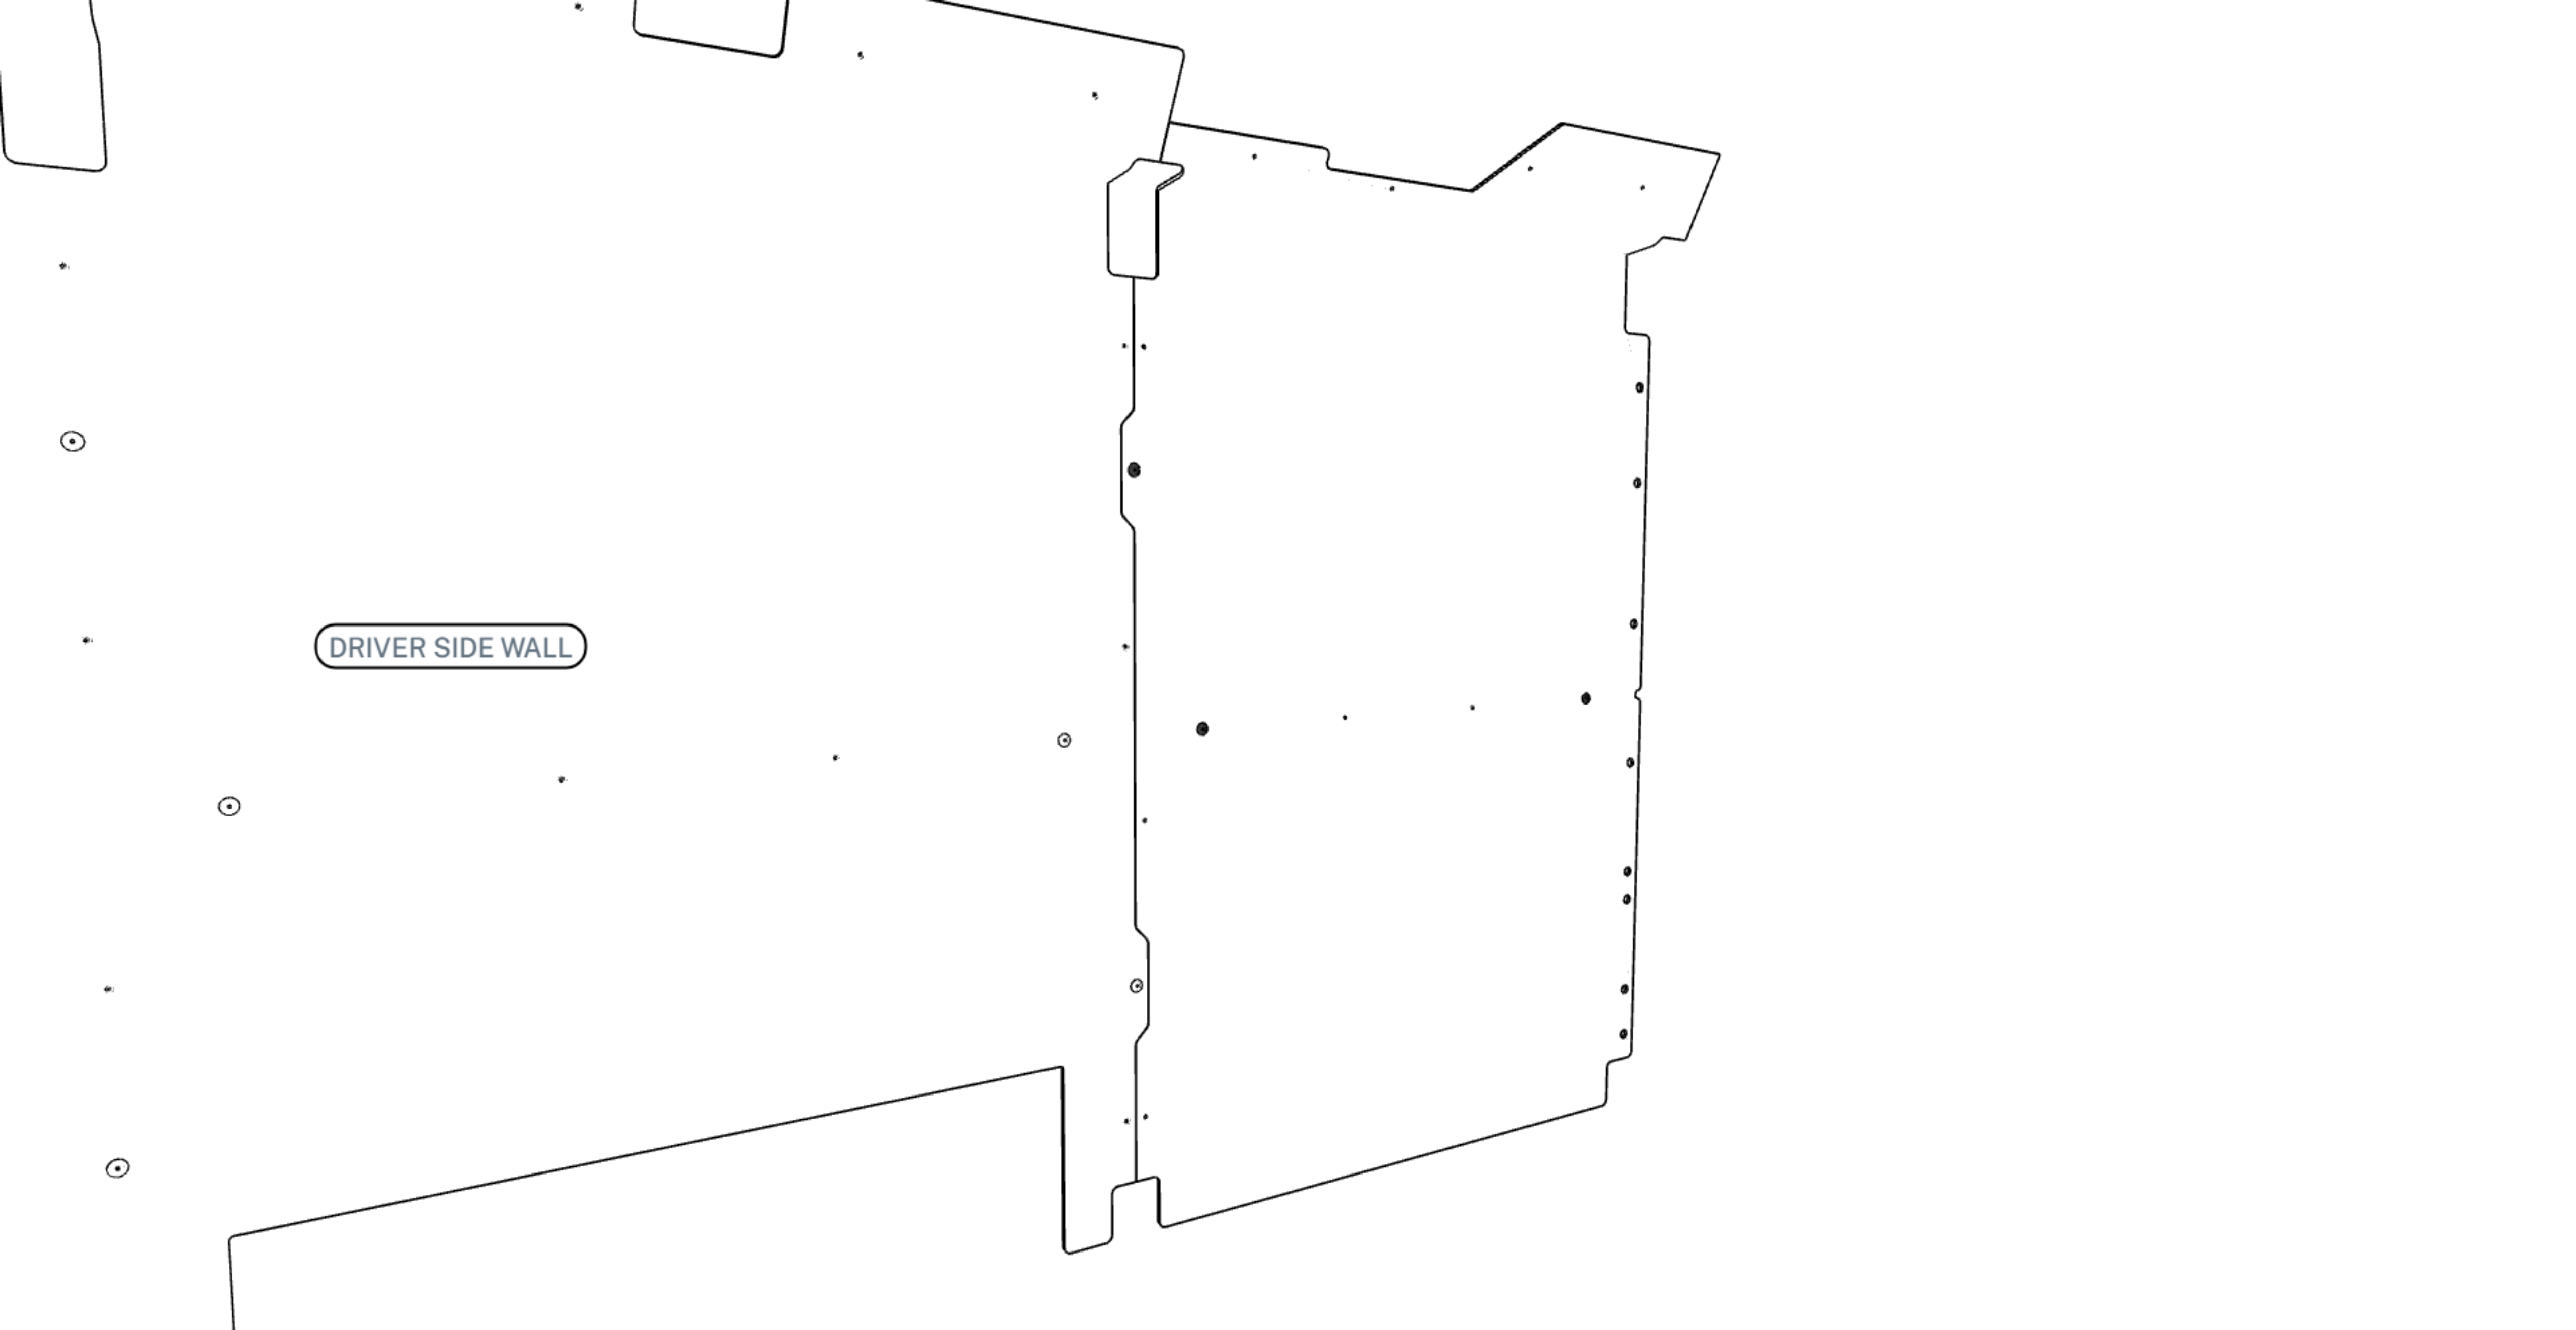


DRIVER SIDE WALL


This technical drawing shows a side profile of a vehicle's interior, specifically the driver's side wall. The wall is represented by a series of connected line segments, with a small rectangular protrusion at the top center. Various points are marked along the wall and in the surrounding space. Some points are solid black dots, while others are circles with a dot inside. A horizontal line segment is drawn across the middle of the wall, with several points marked along it. The overall shape of the wall is irregular, with a sloped bottom section on the left and a more vertical section on the right.

DRIVER SIDE WALL


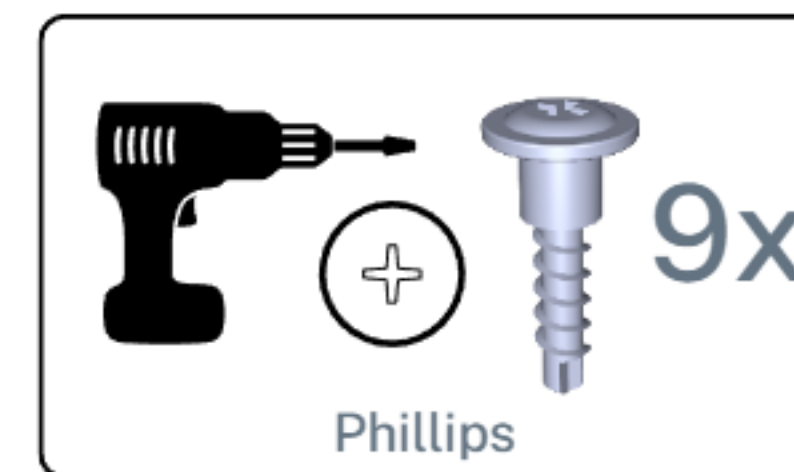


DRIVER SIDE WALL


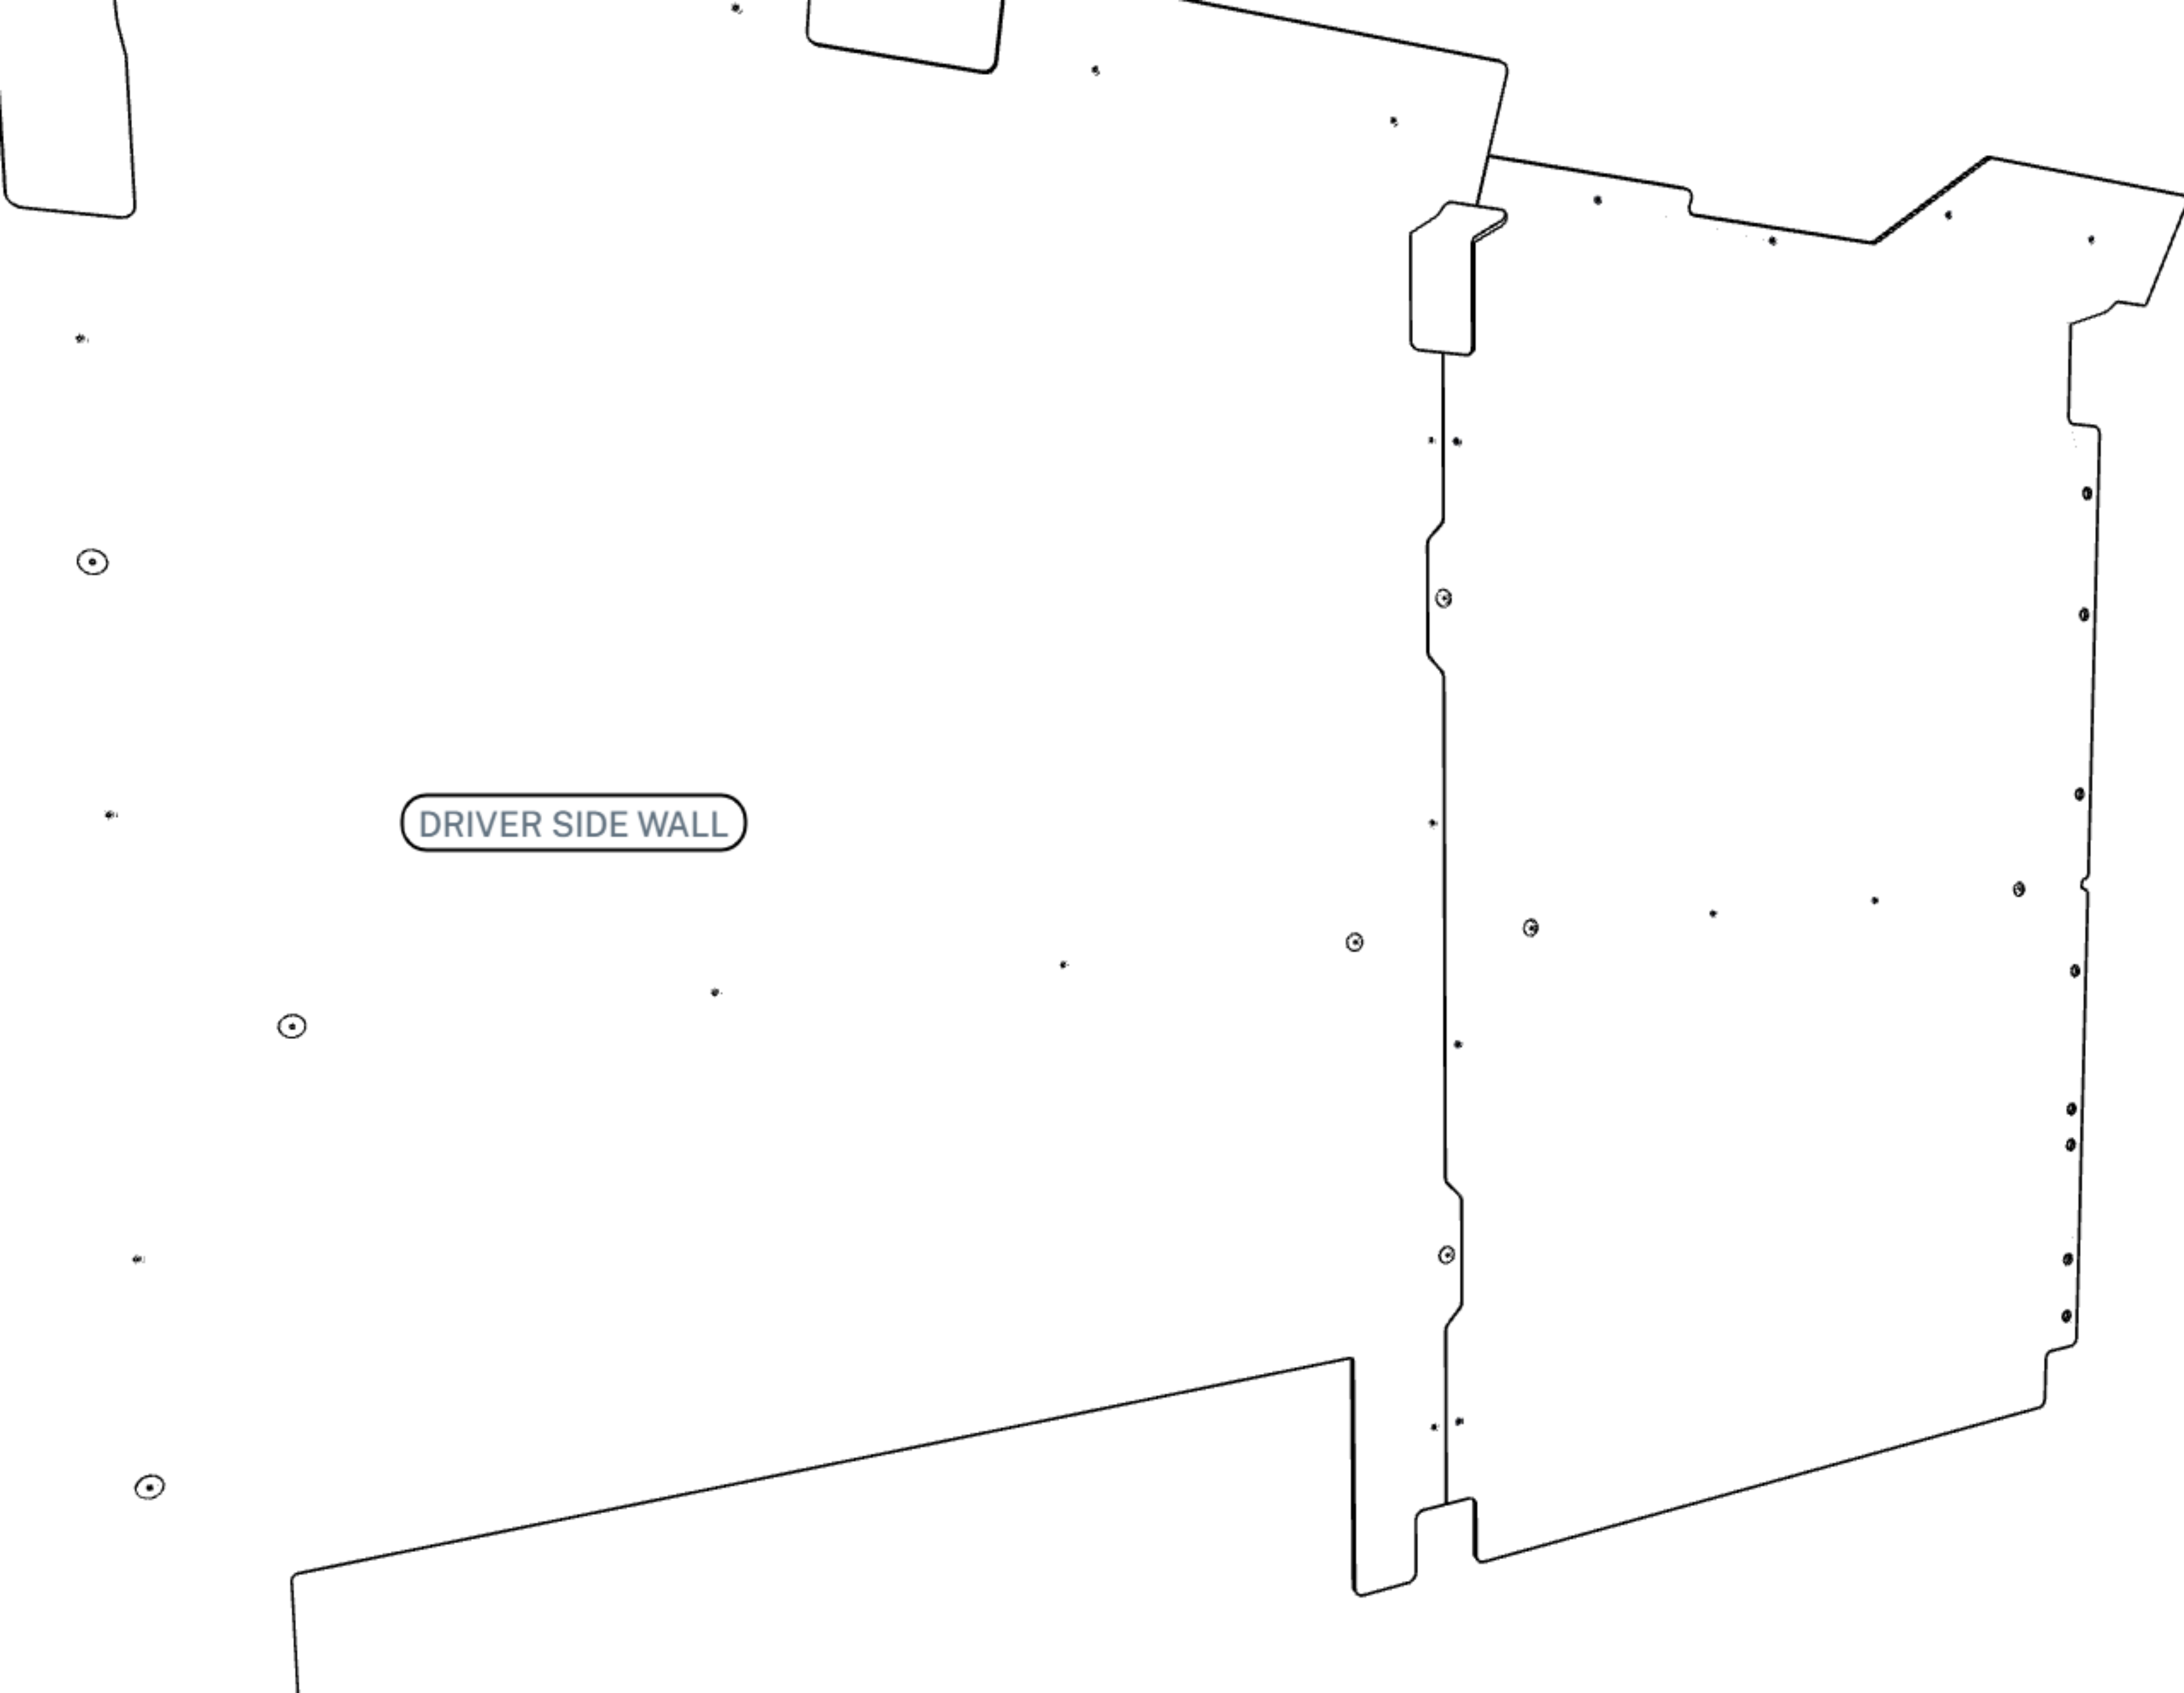


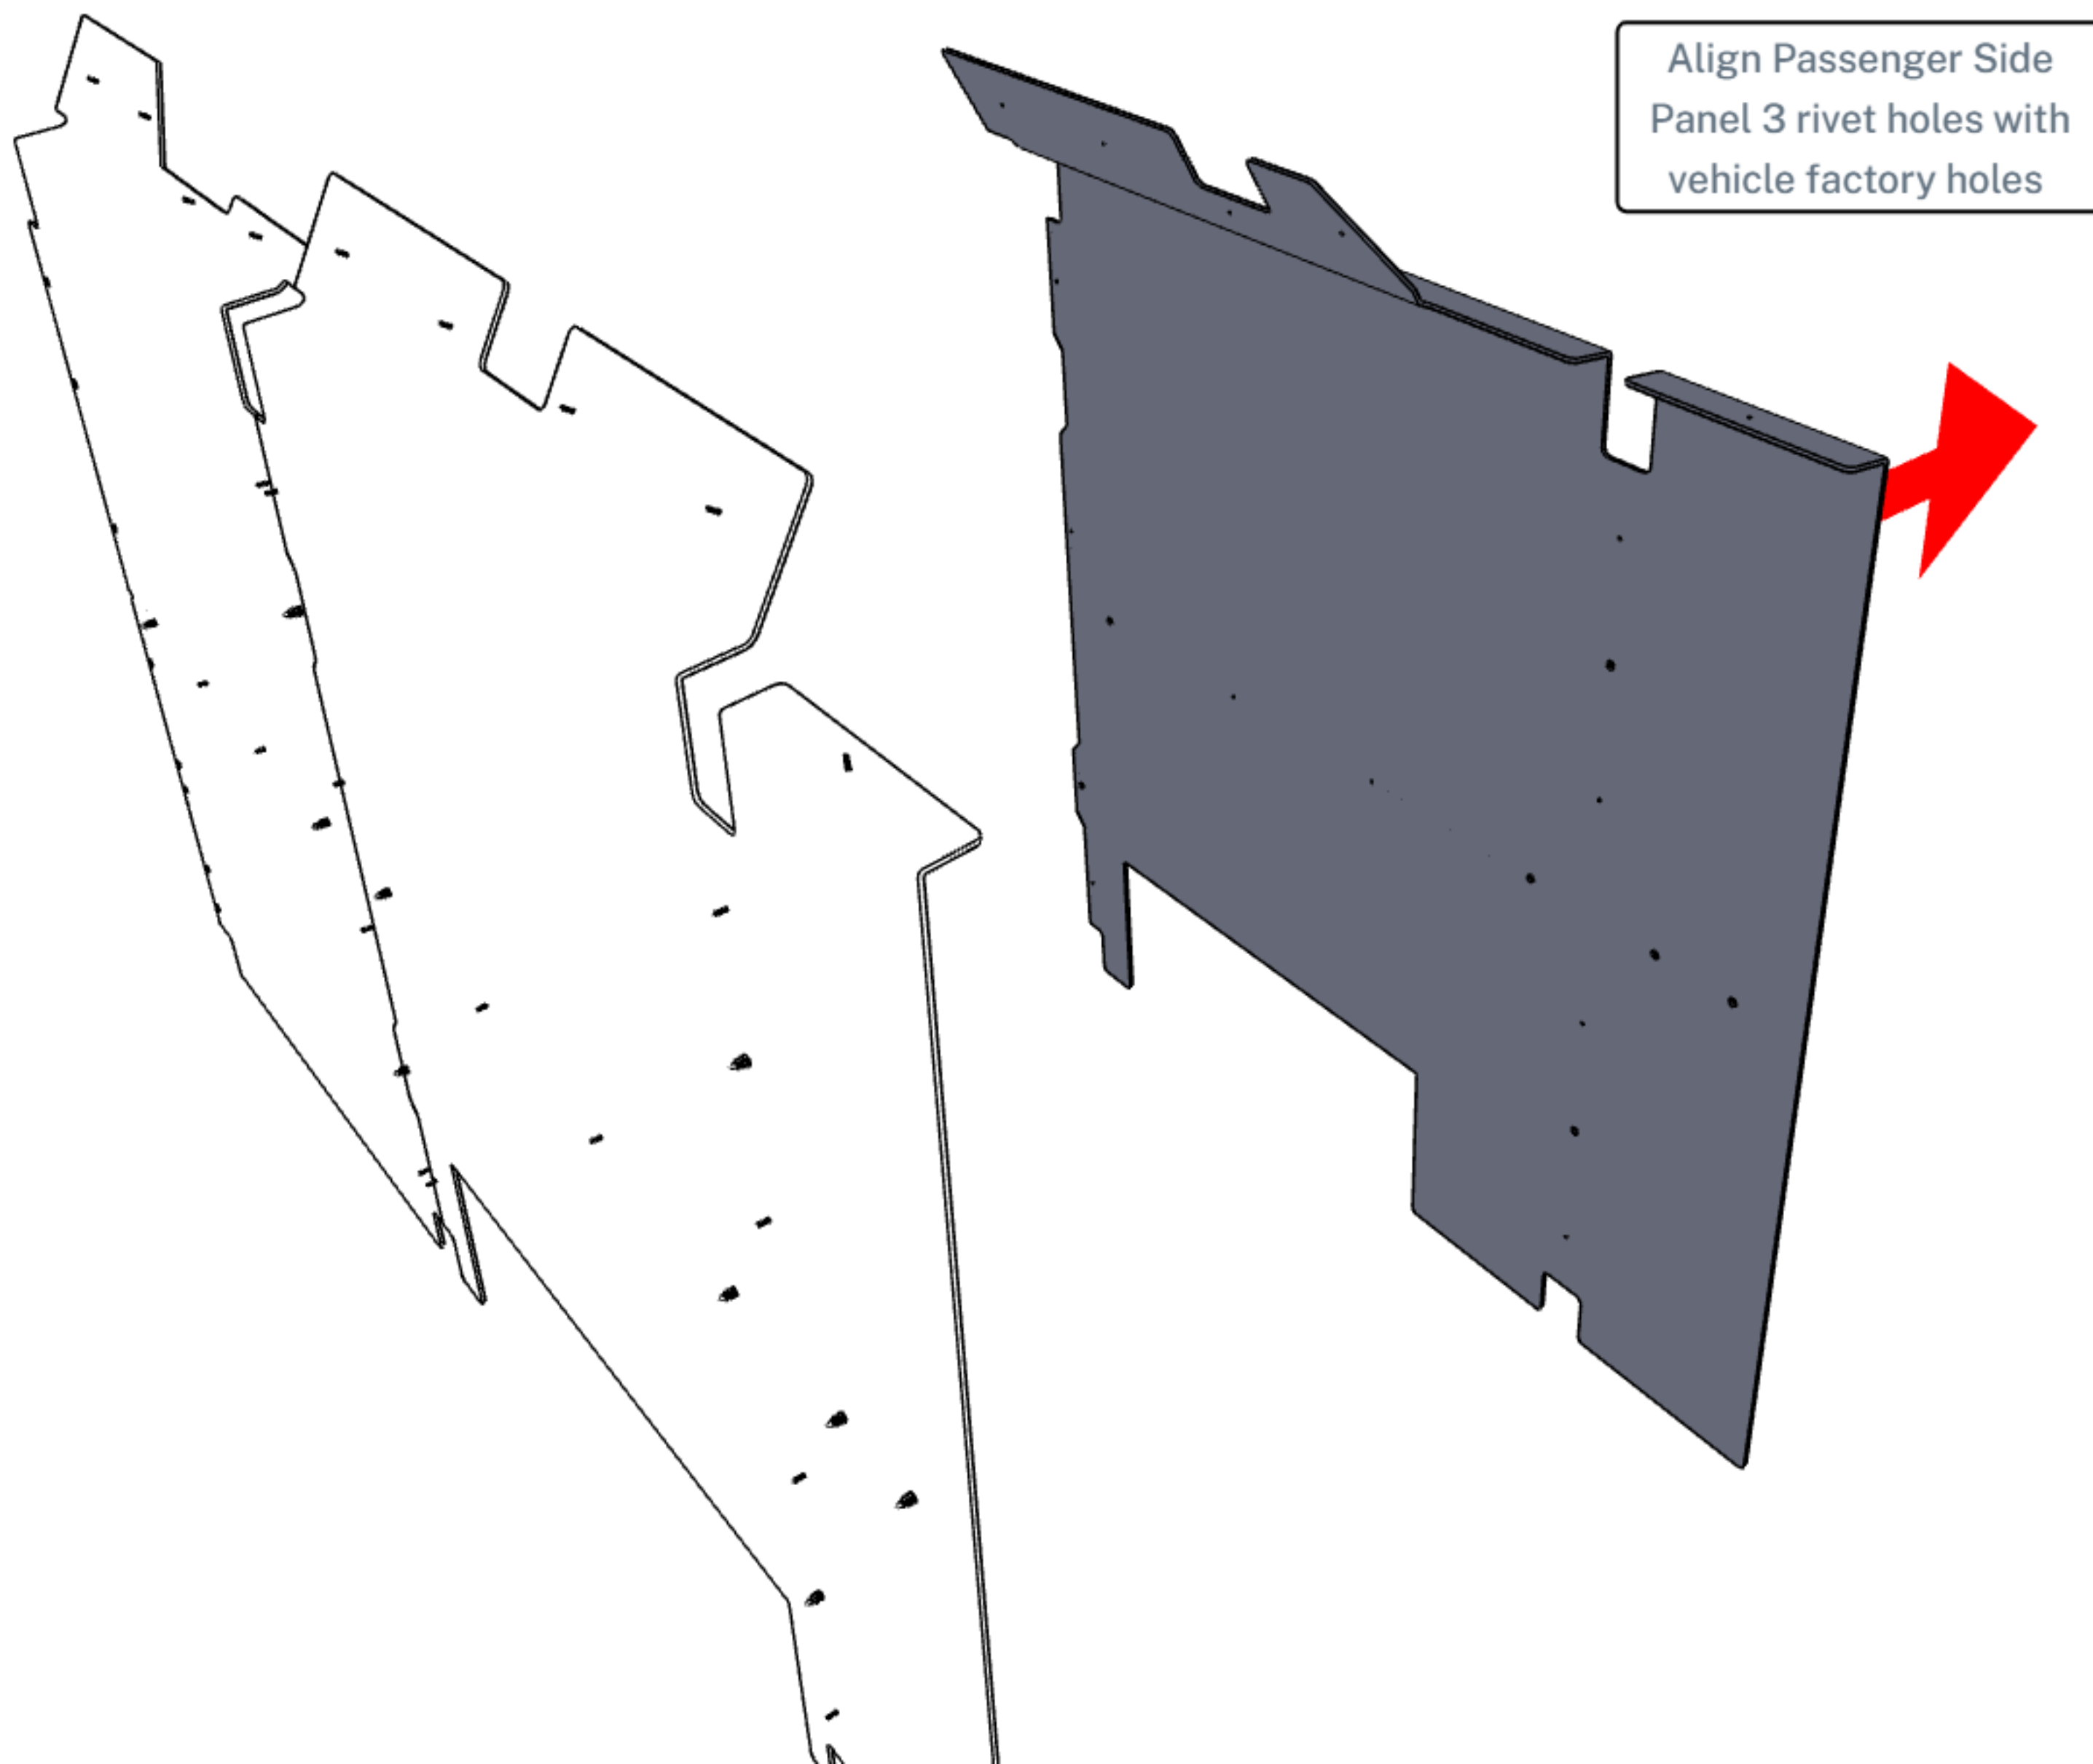


PASSENGER SIDE WALL

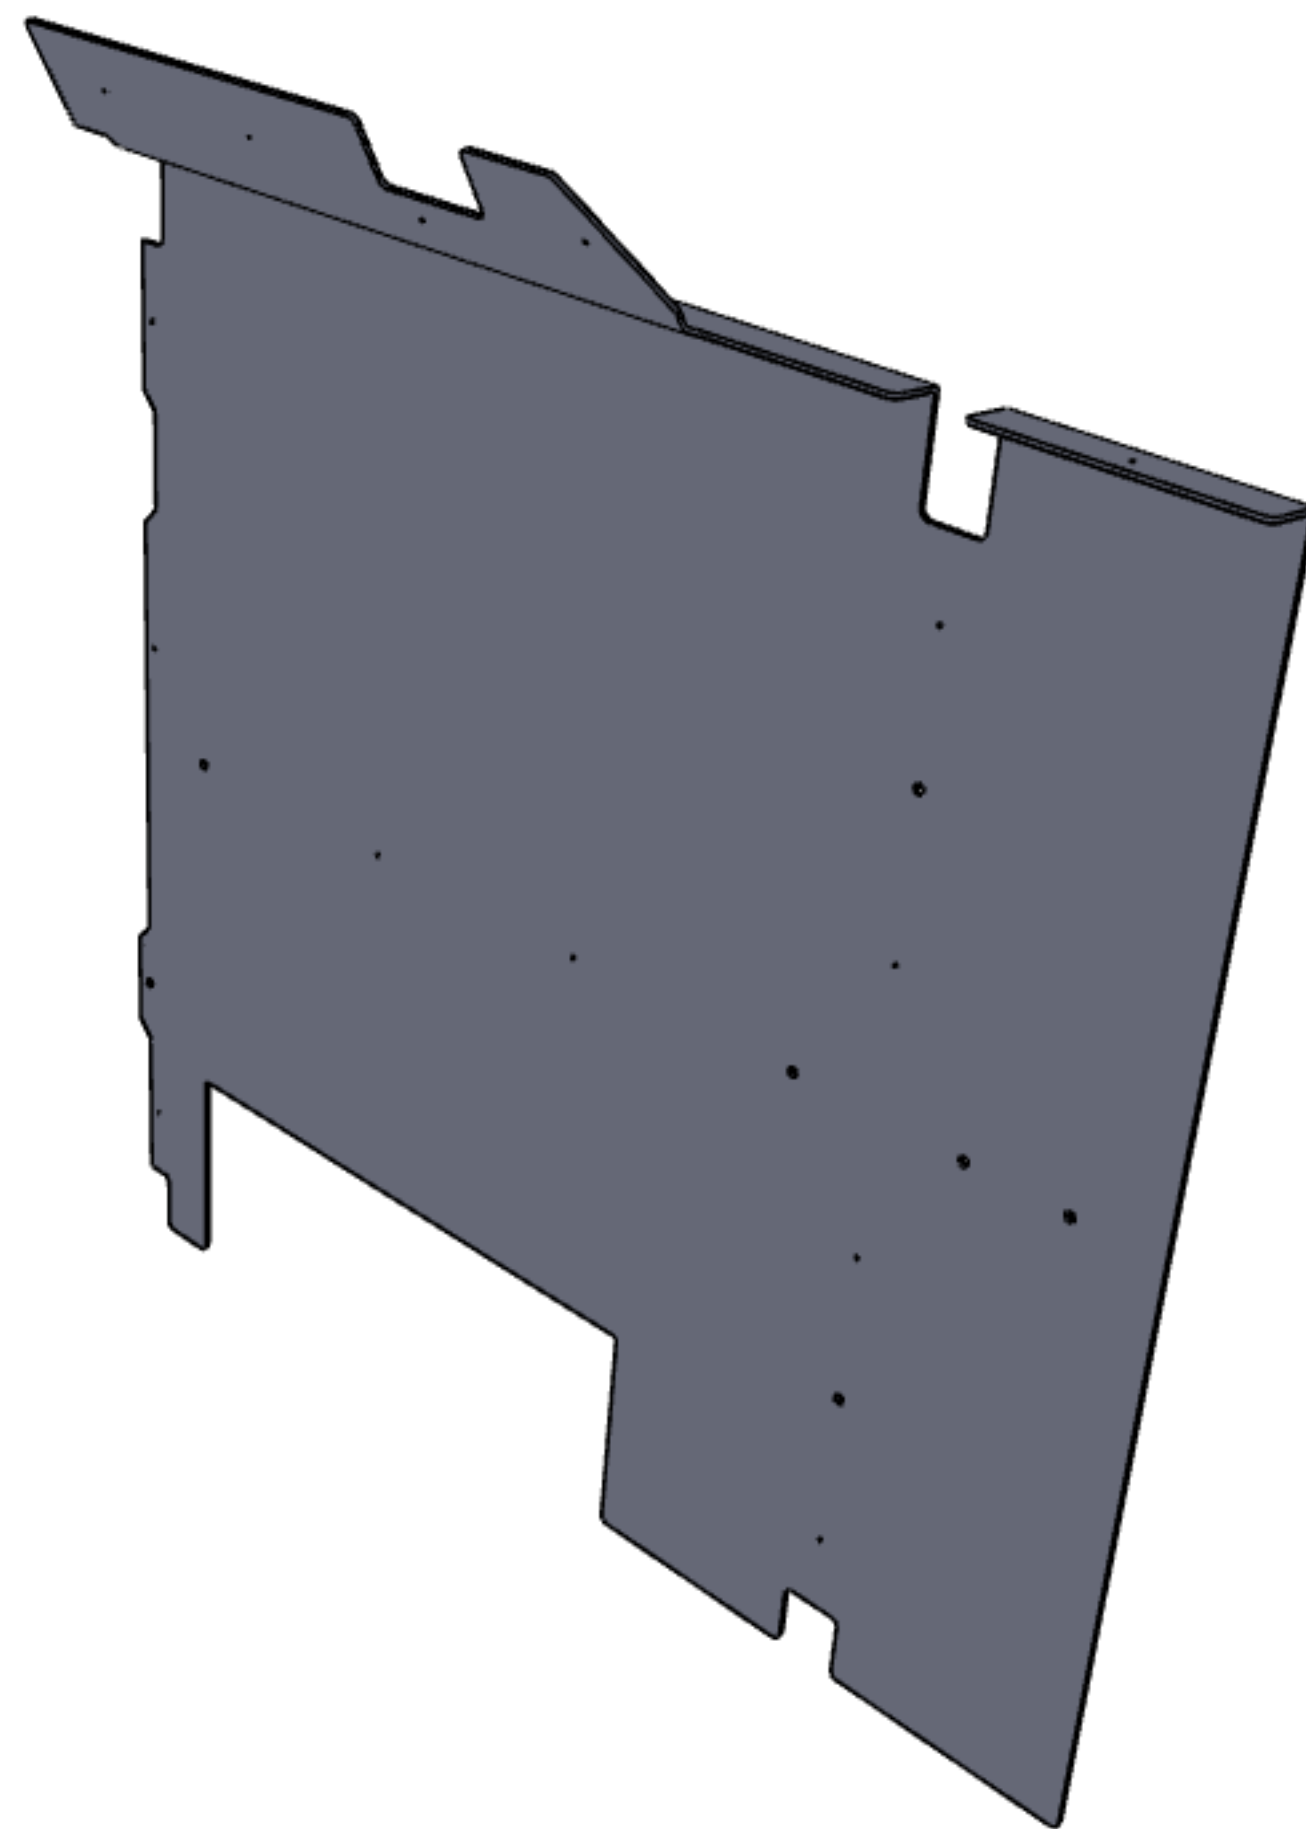
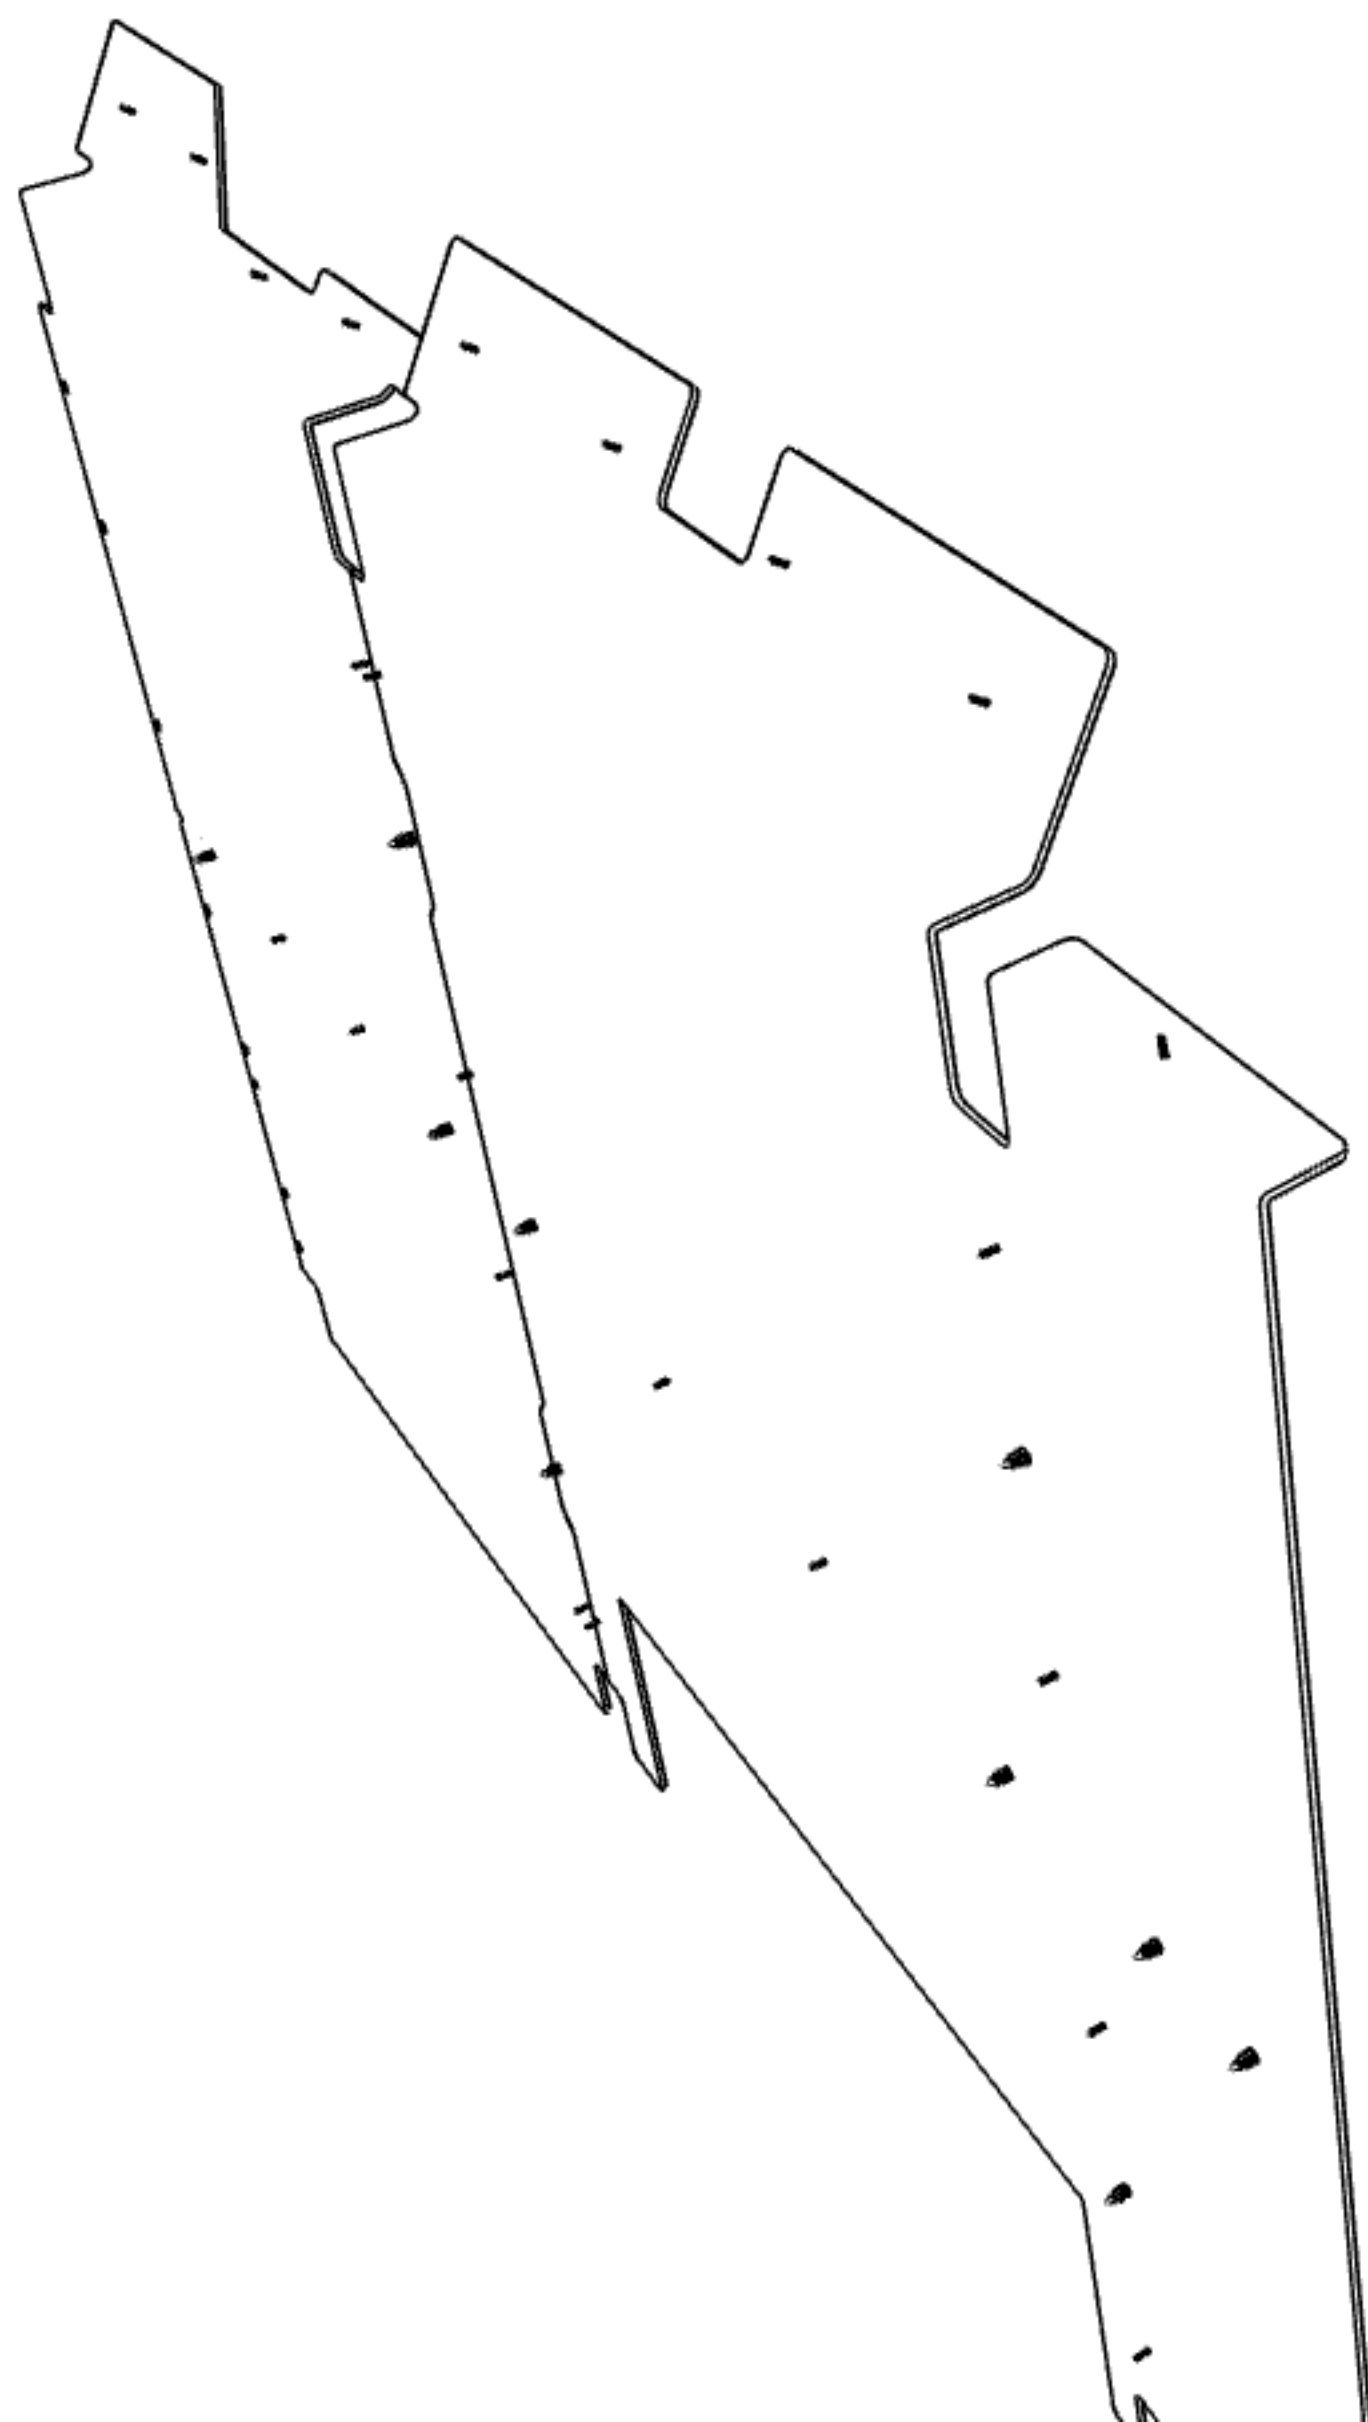


PASSENGER SIDE WALL

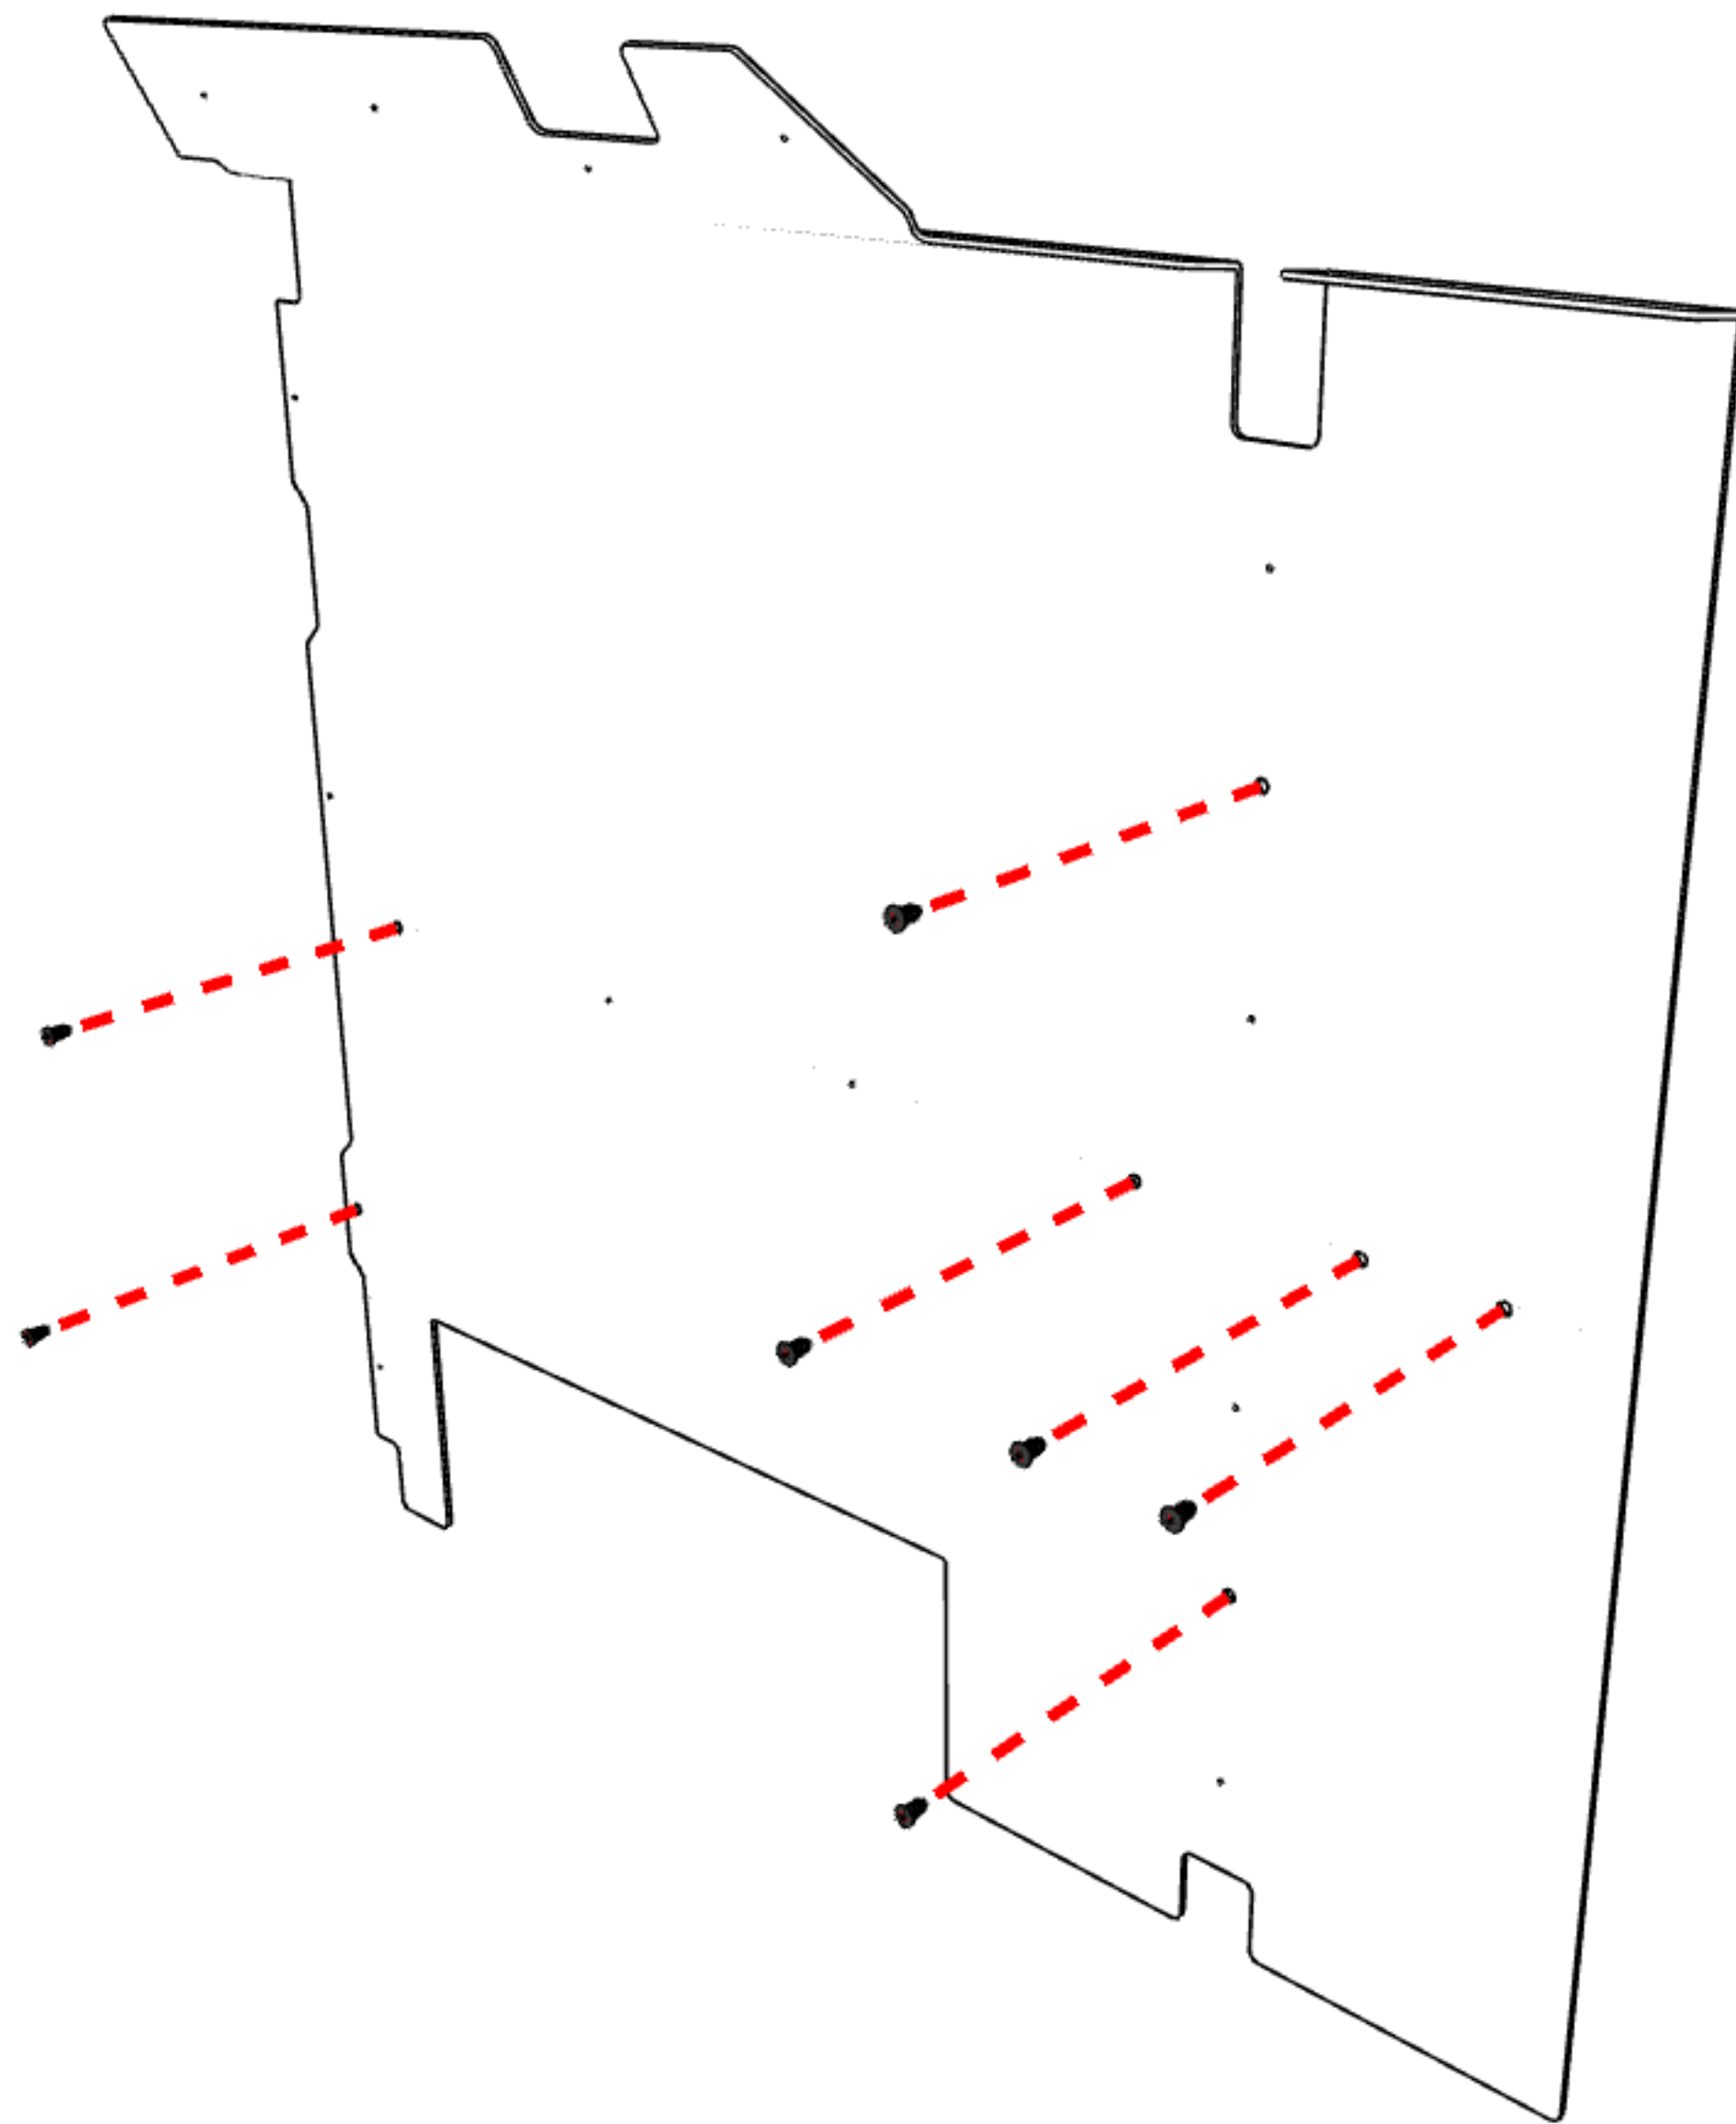
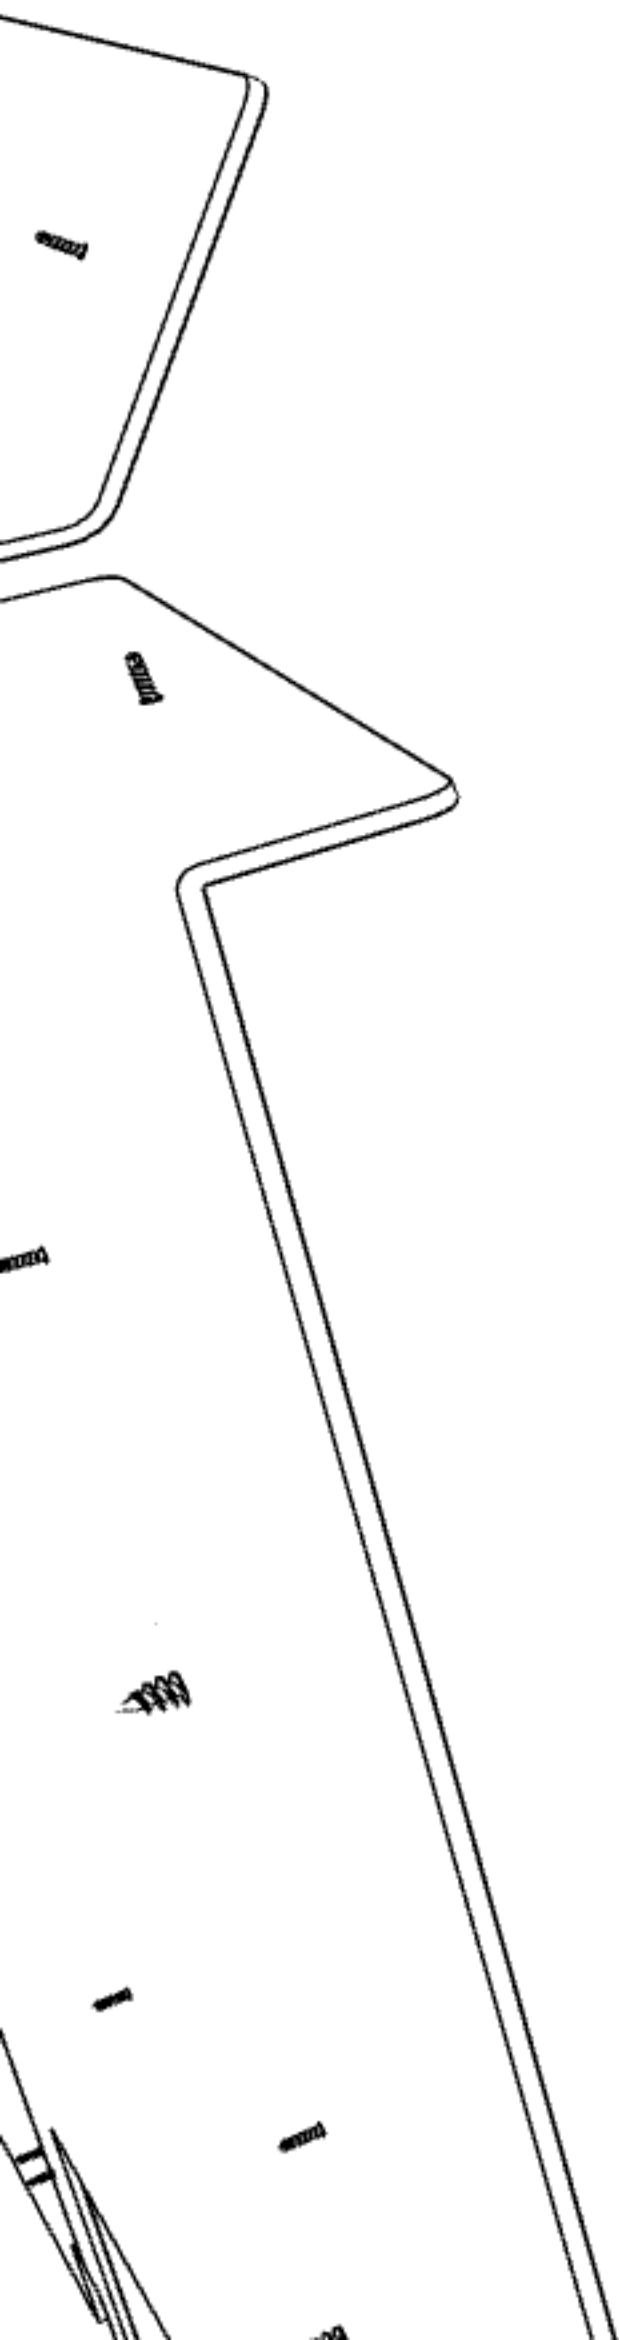


PASSENGER SIDE WALL

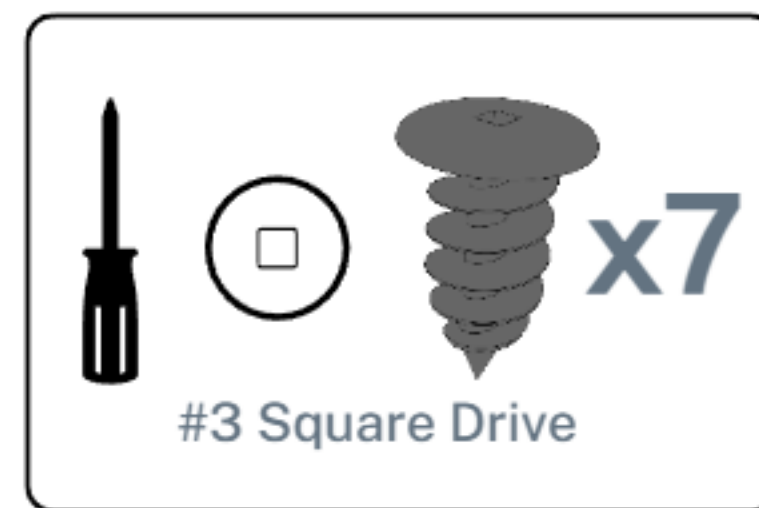

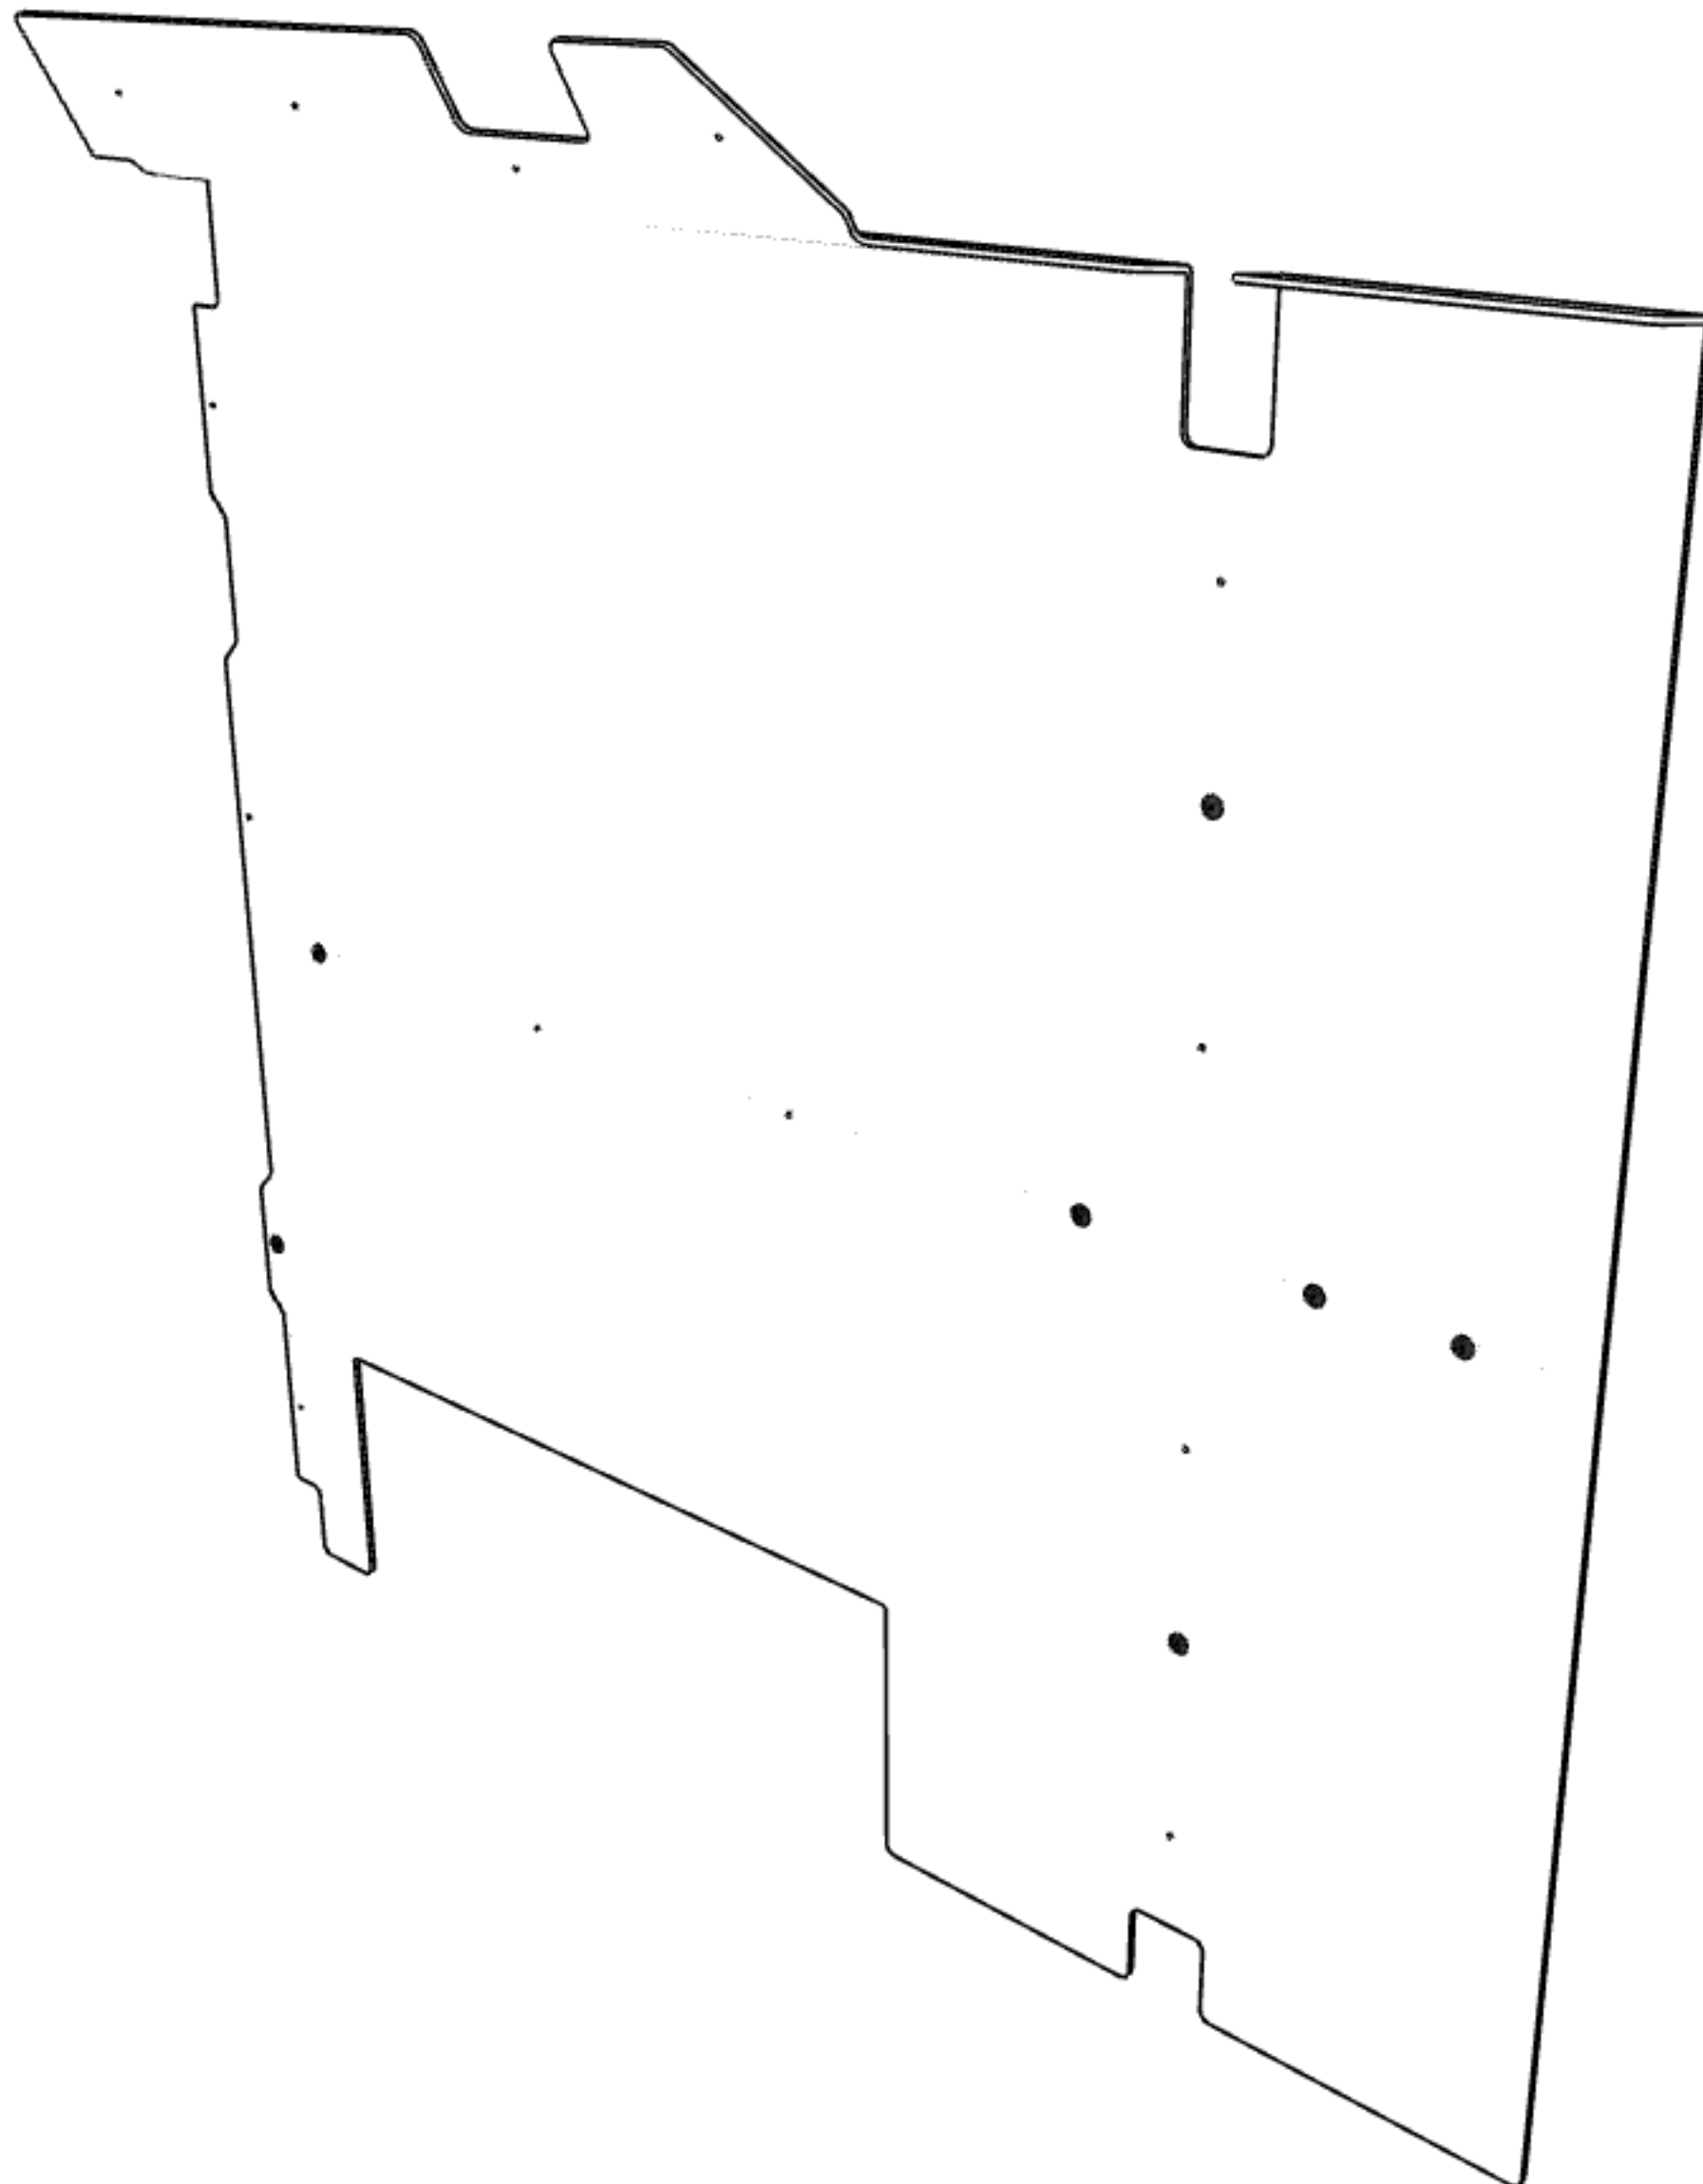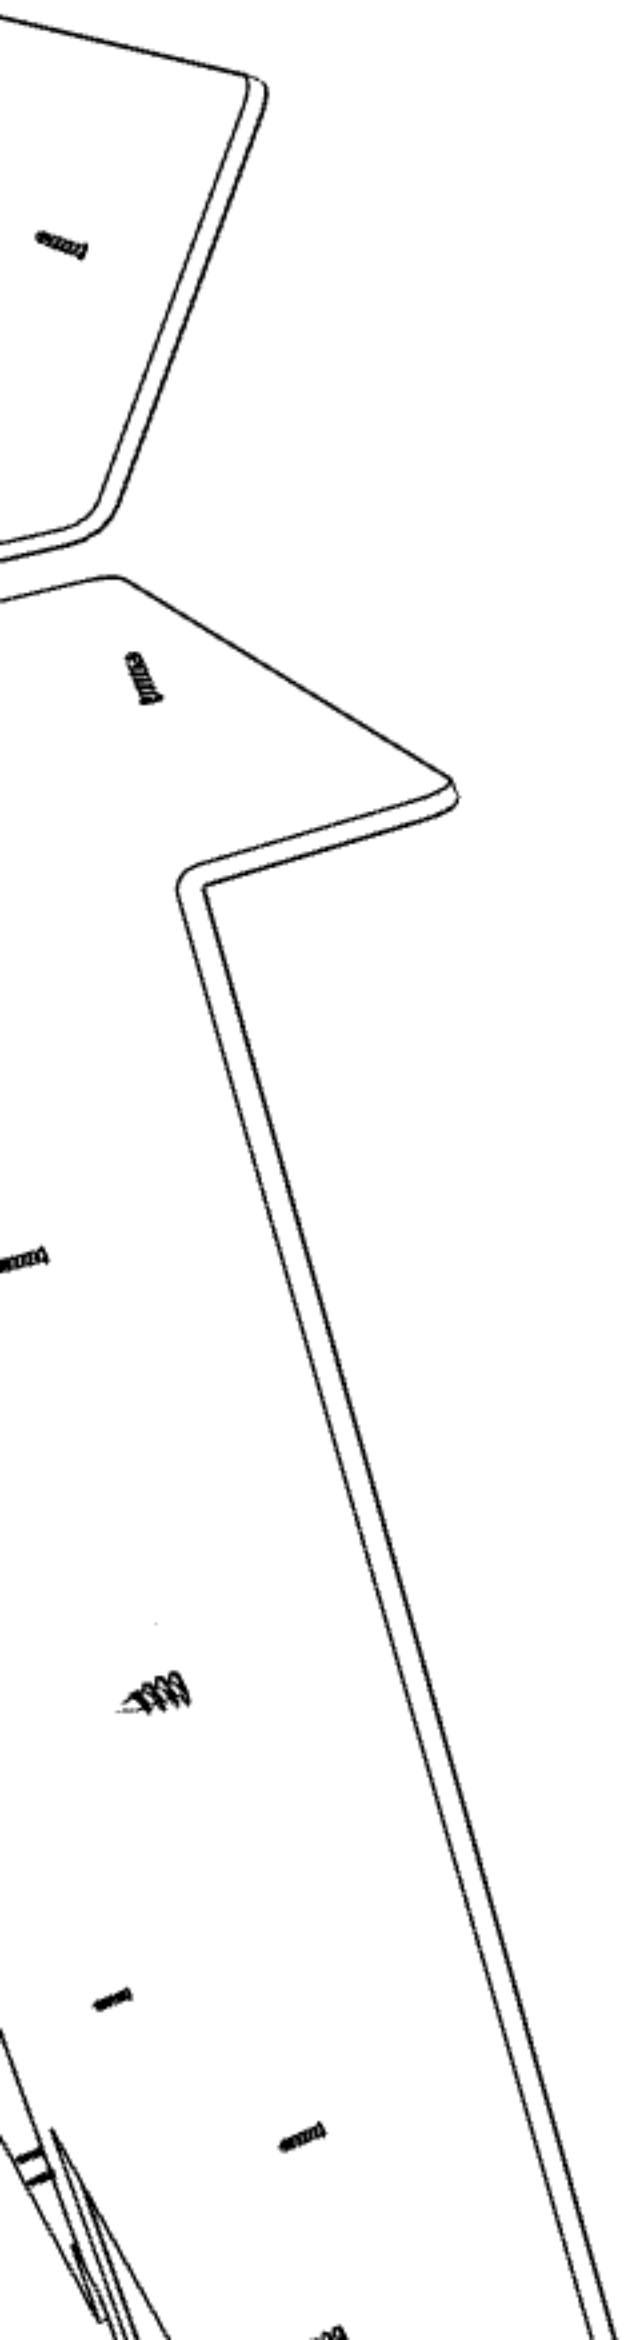




PASSENGER SIDE WALL

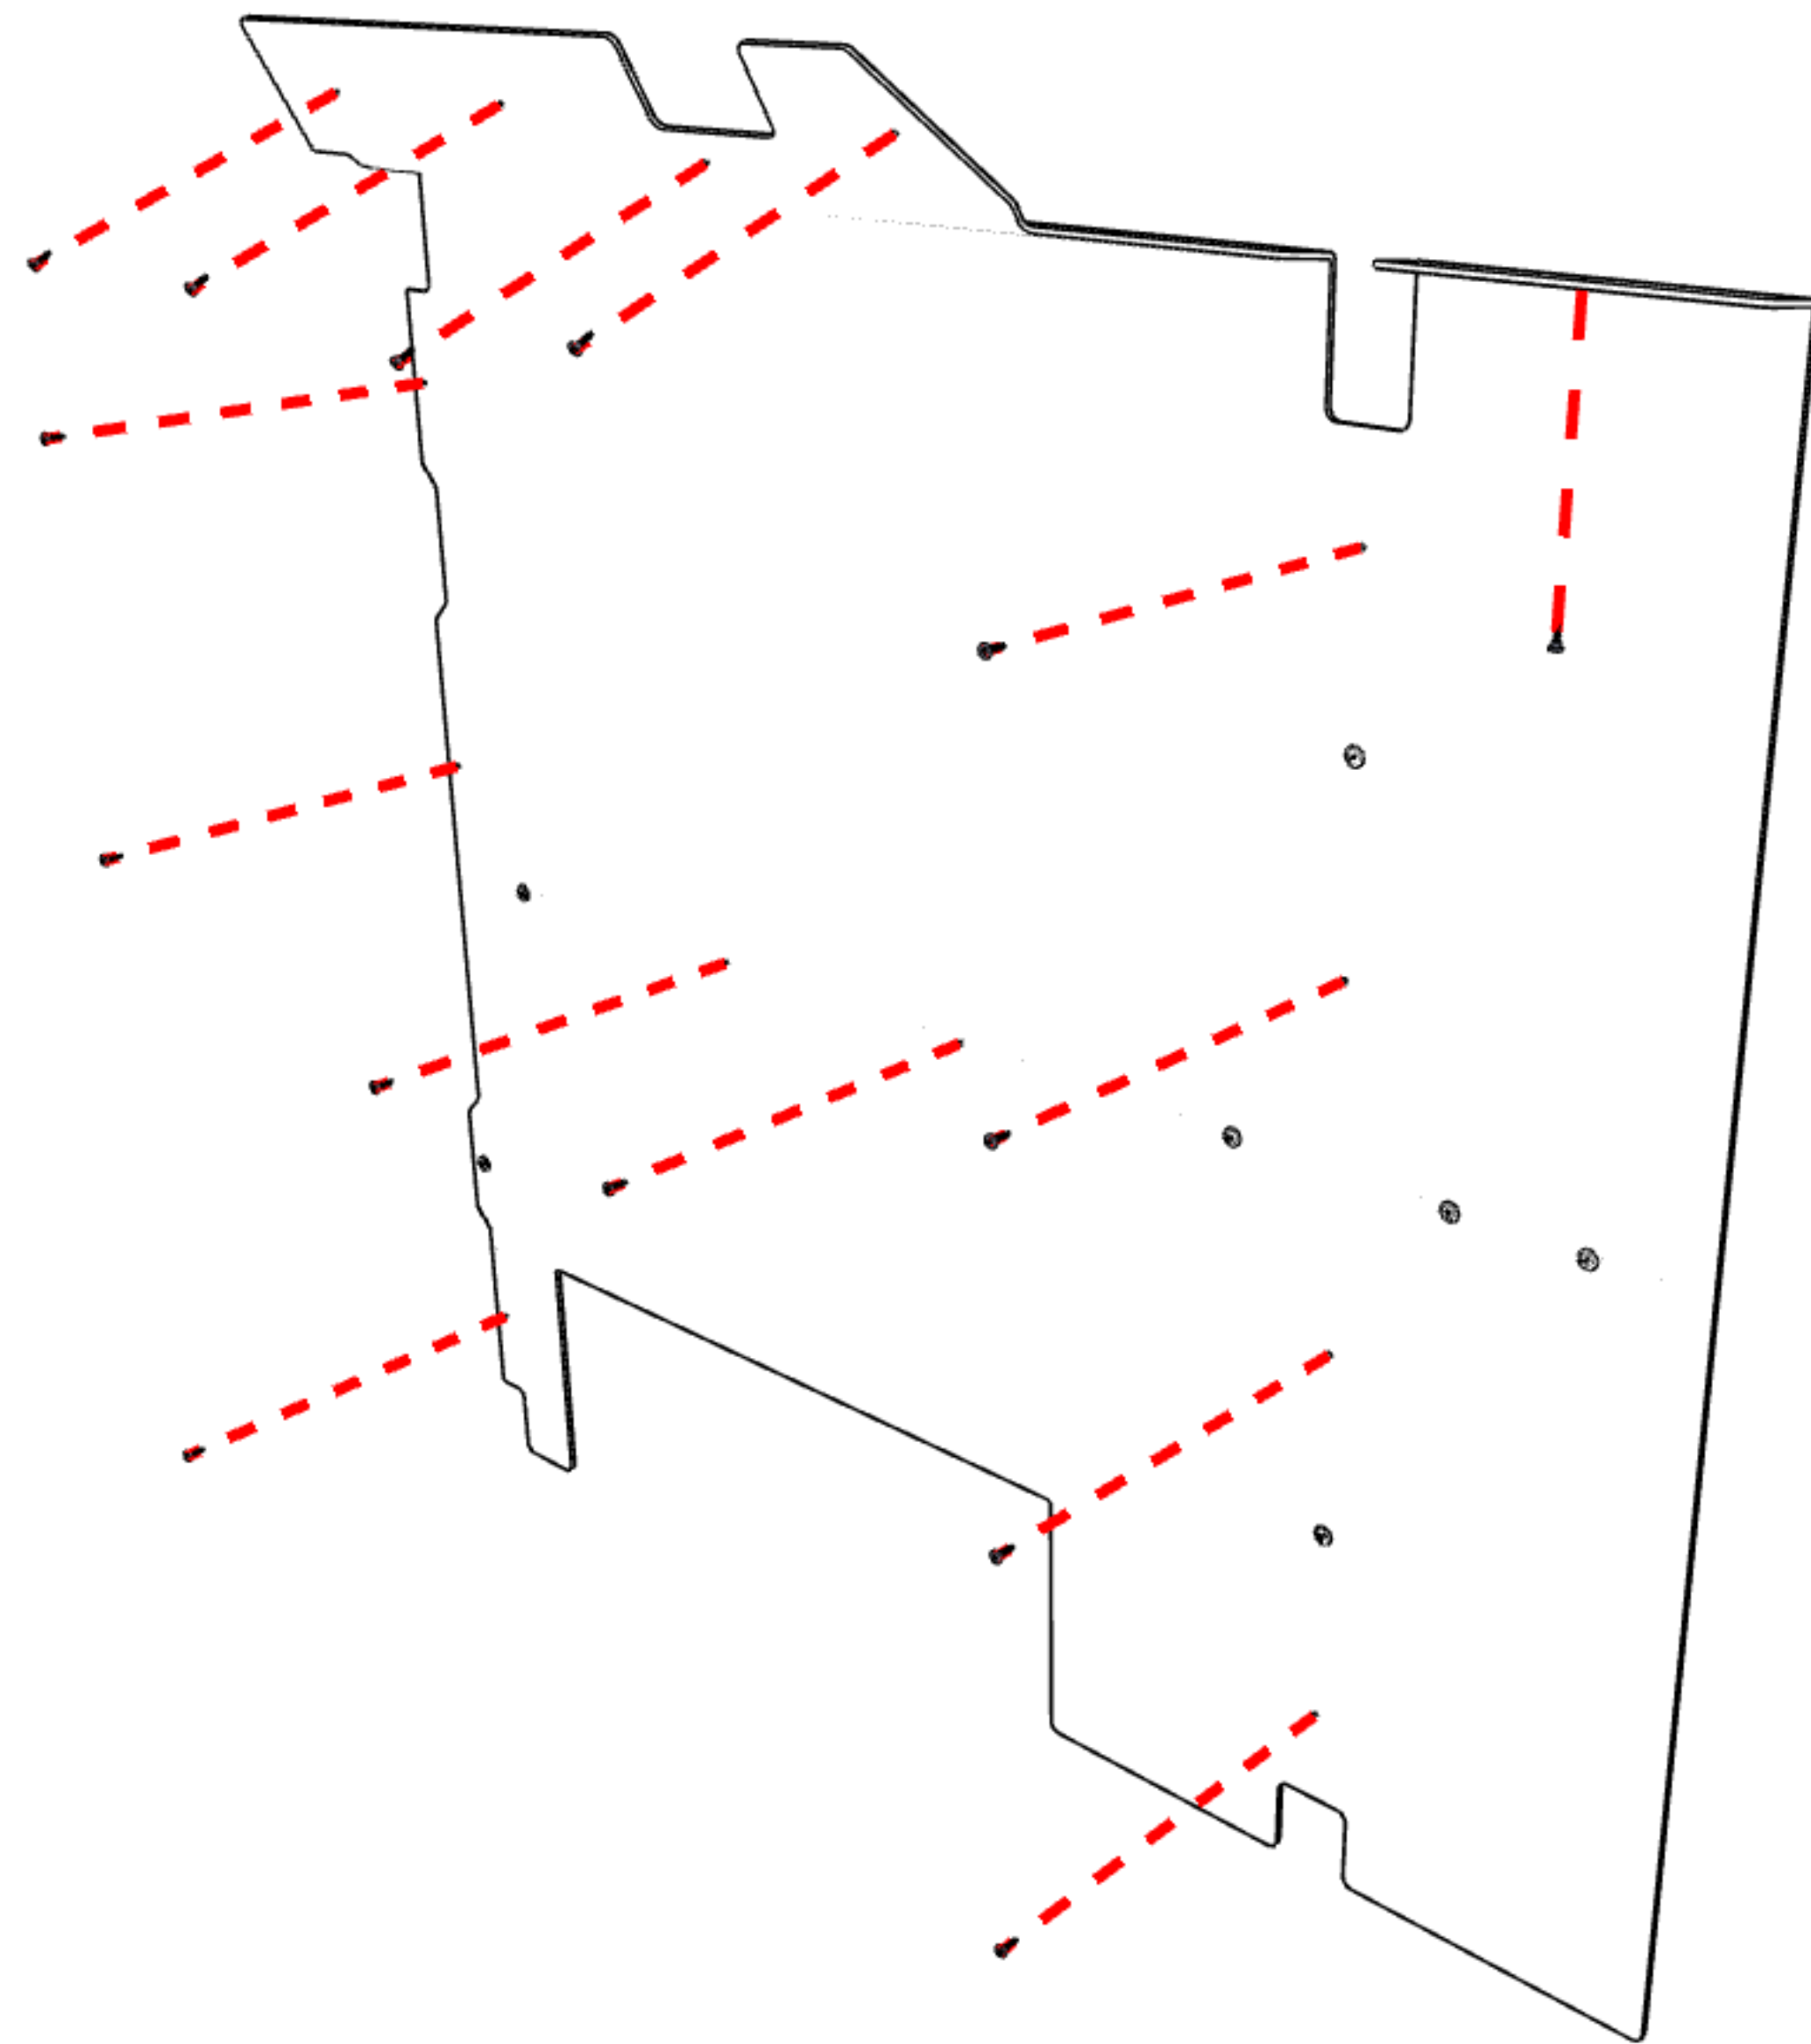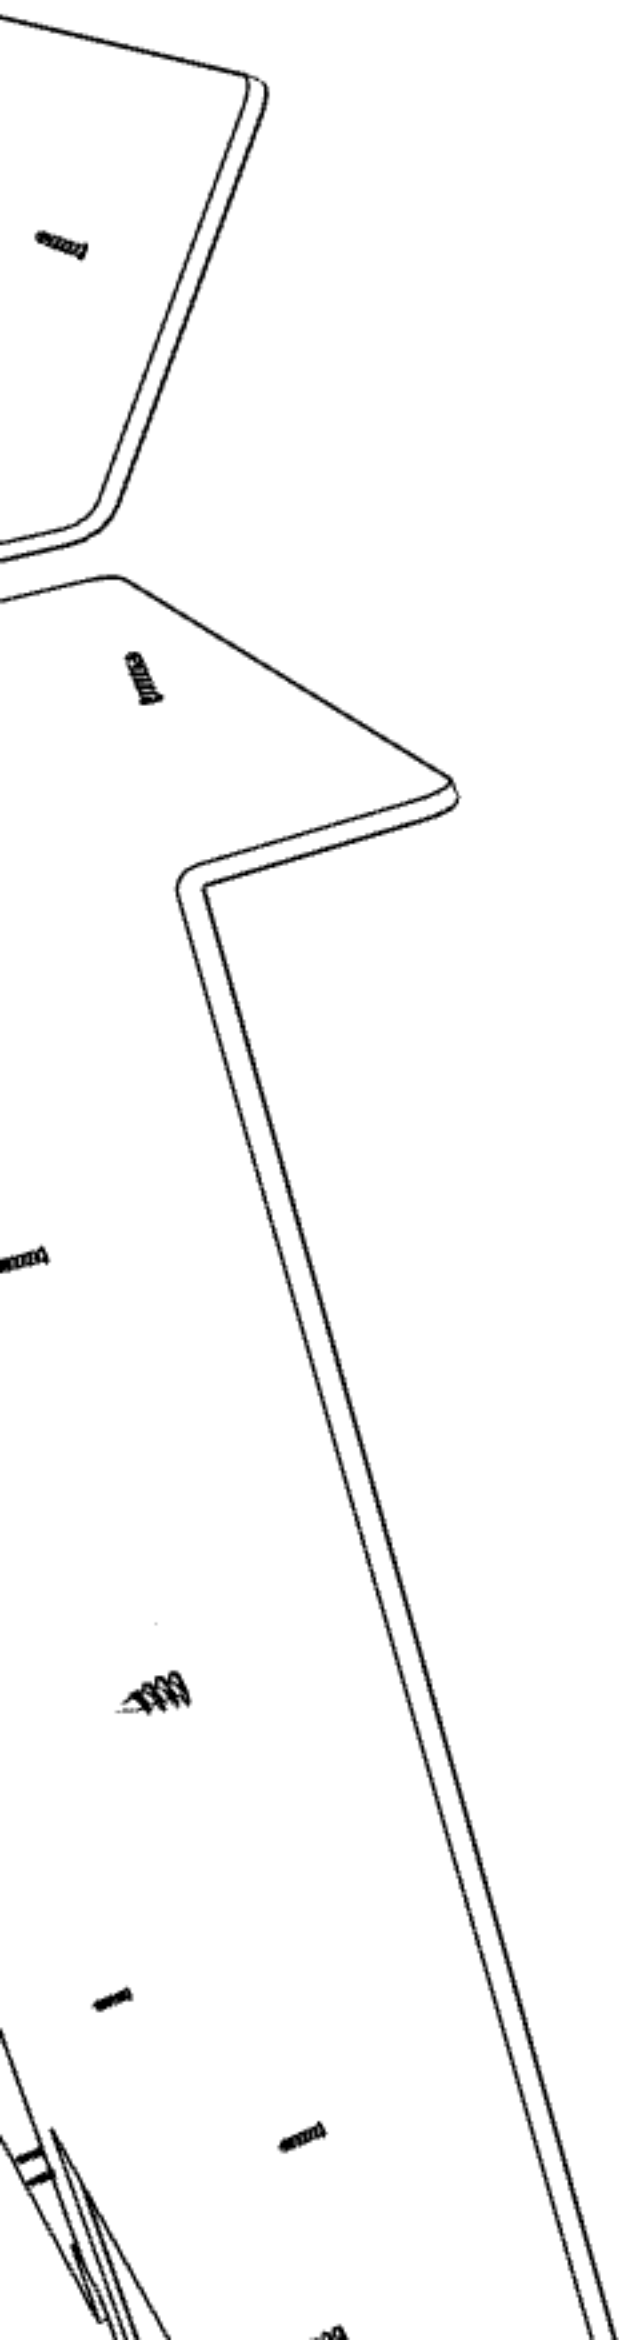


PASSENGER SIDE WALL

Drill Self Drill Screws in the following pilot hole locations.


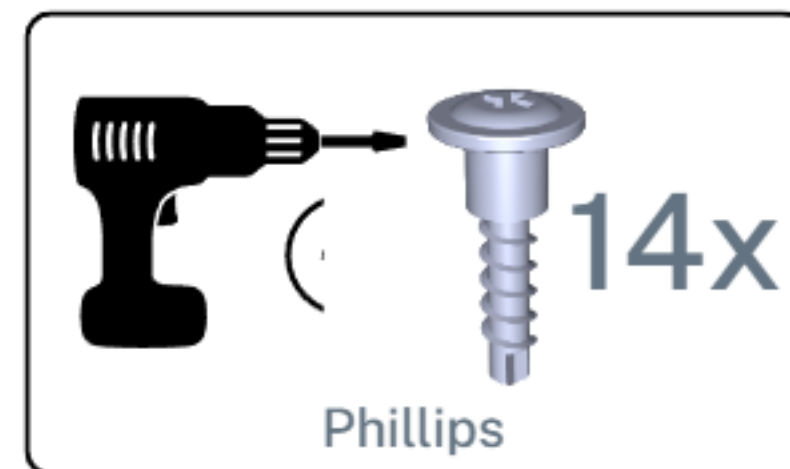


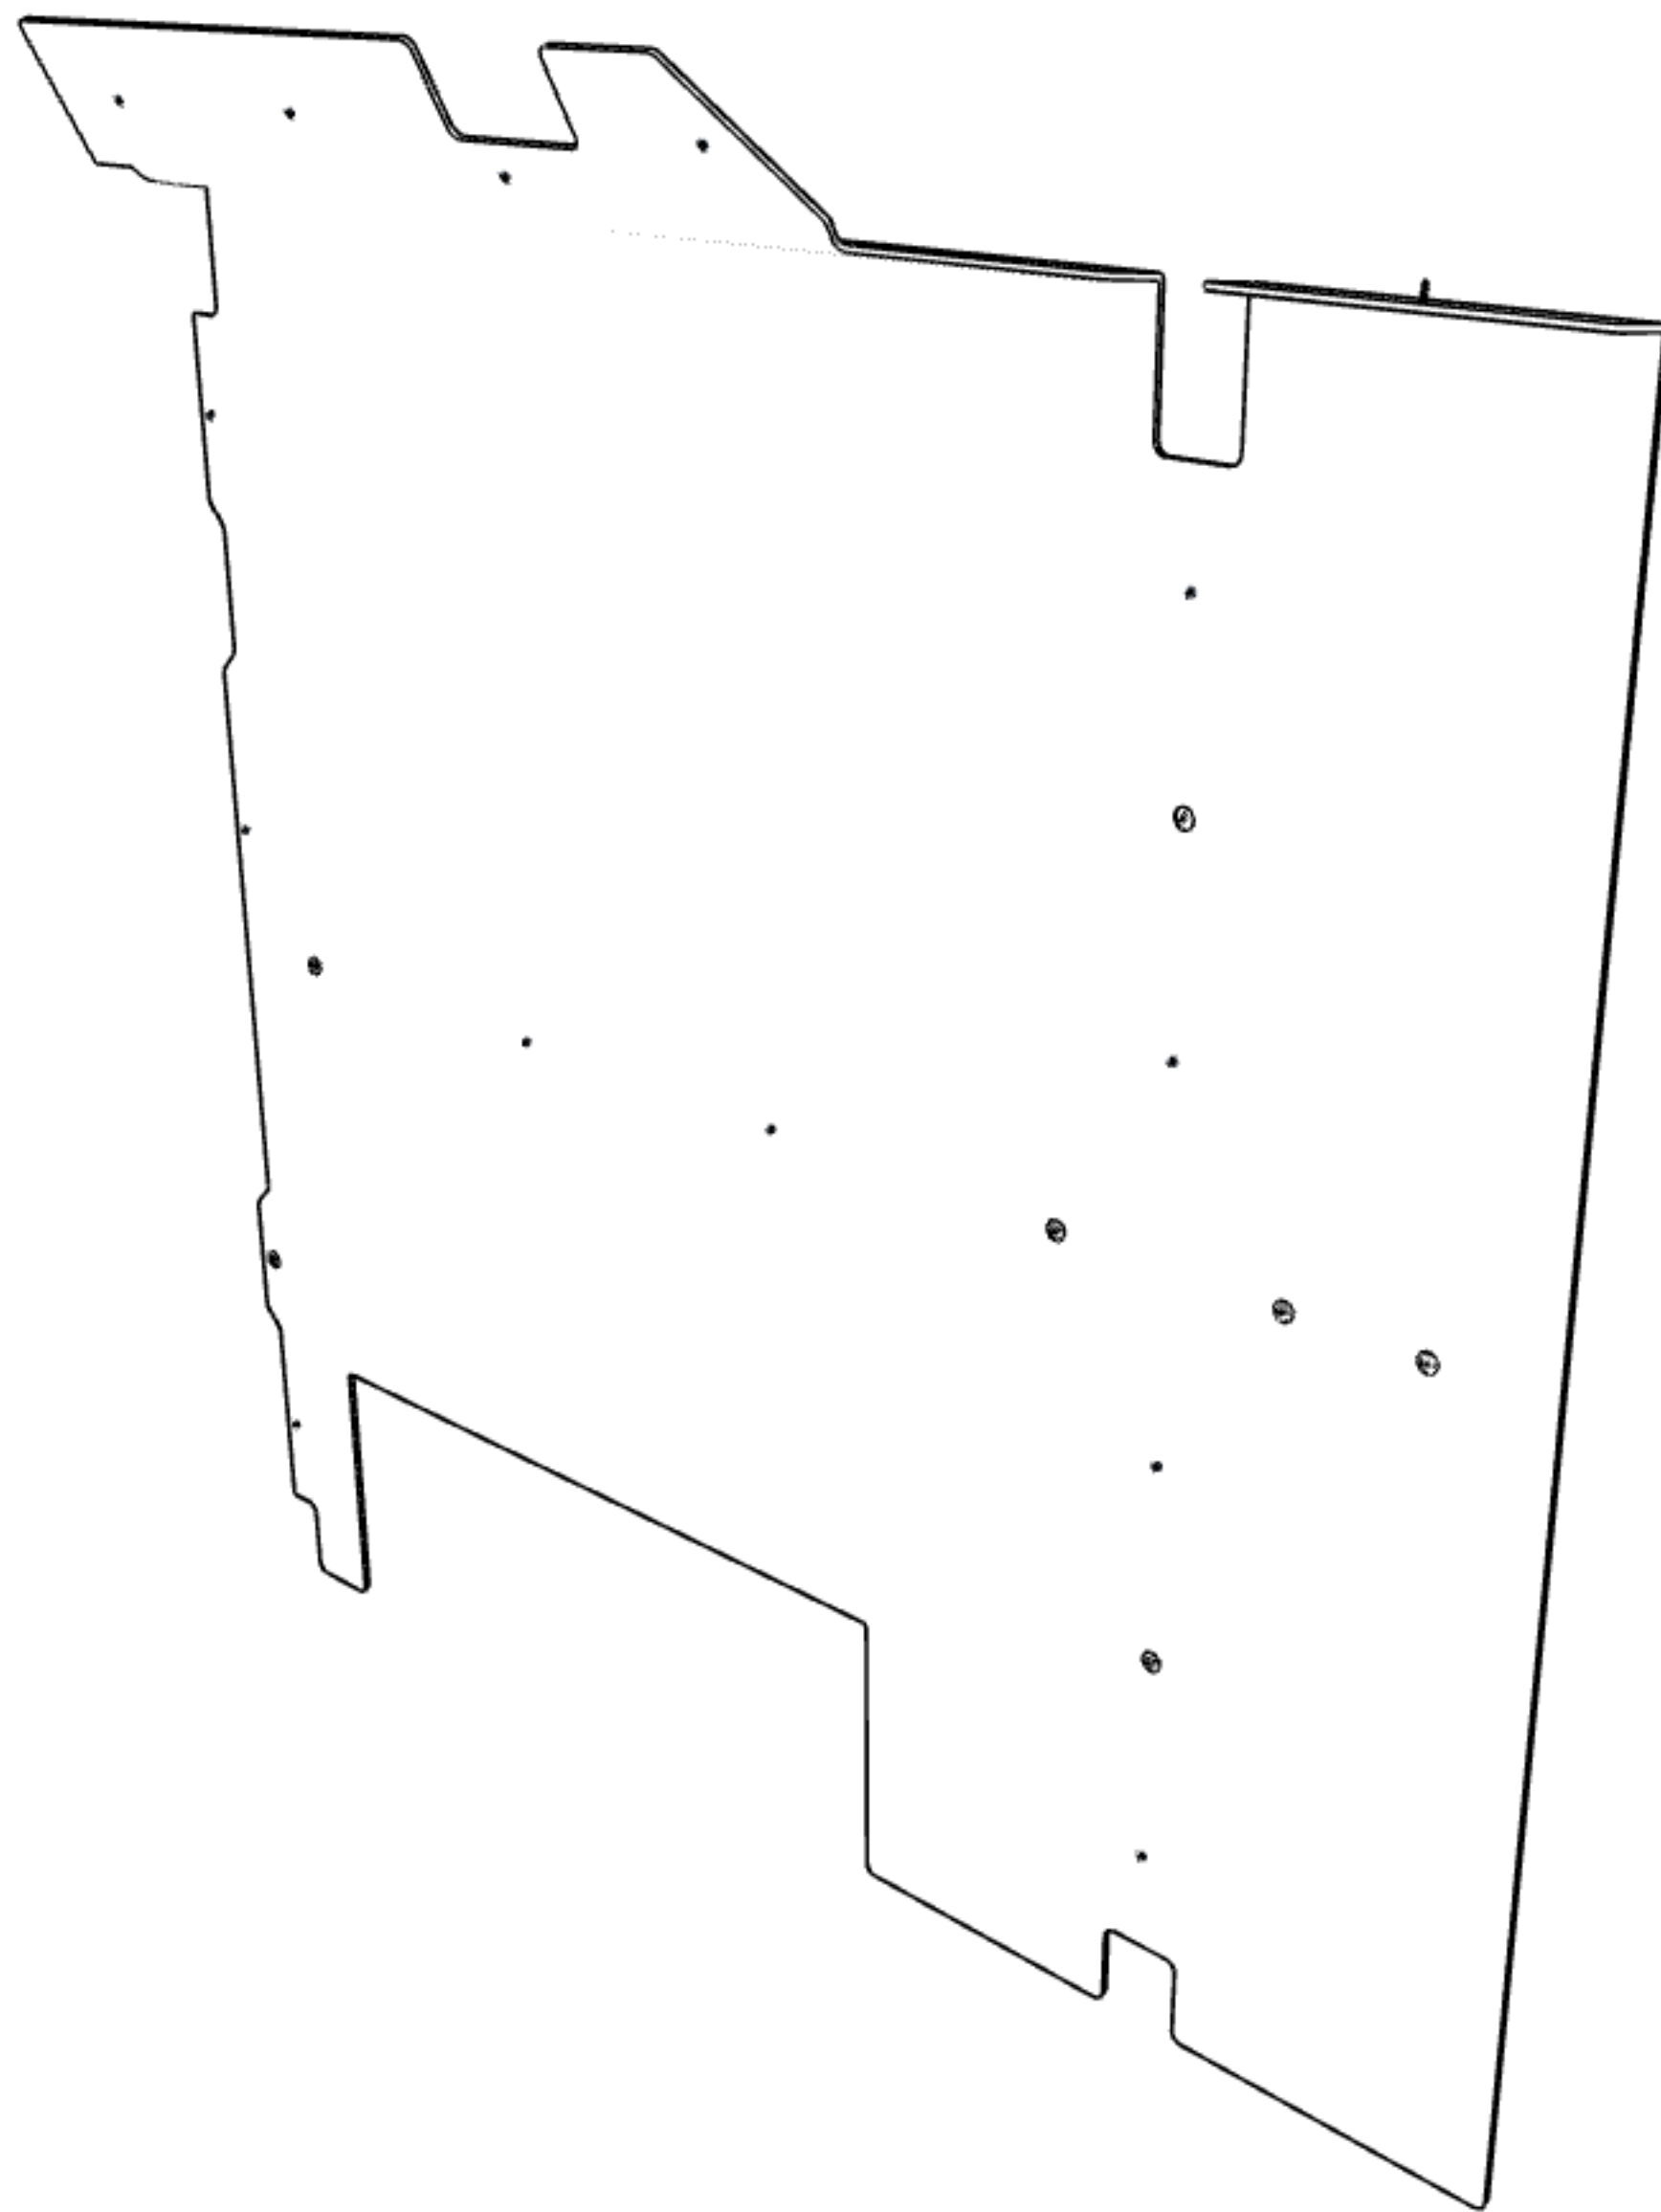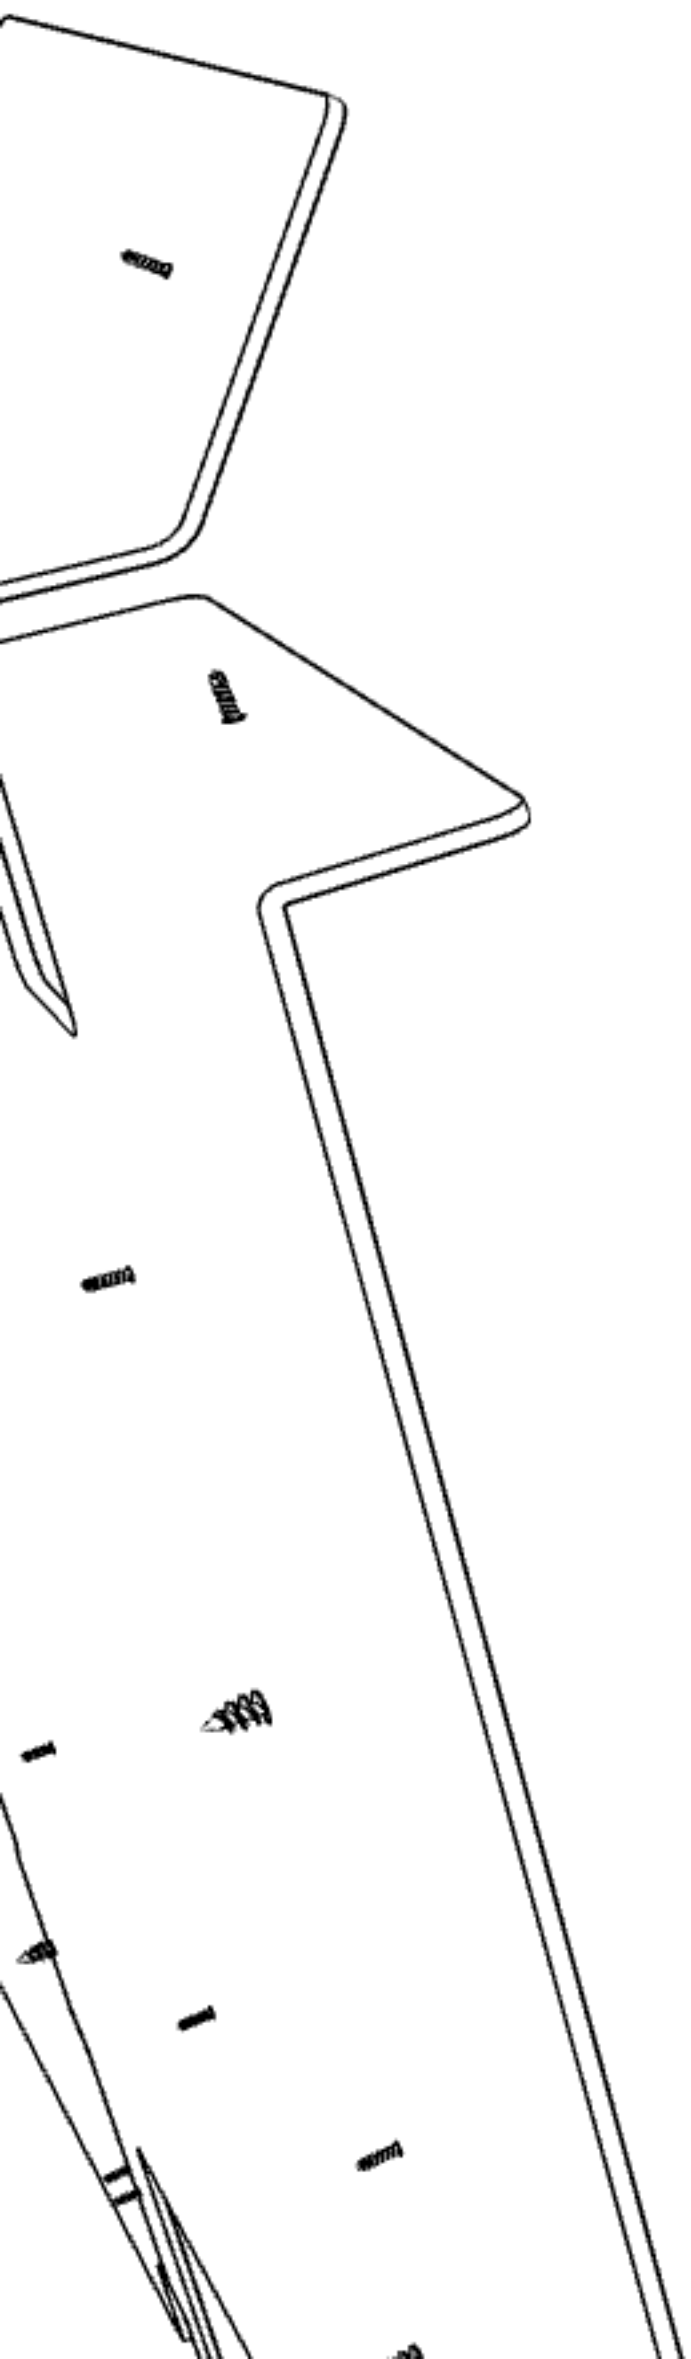



PASSENGER SIDE WALL

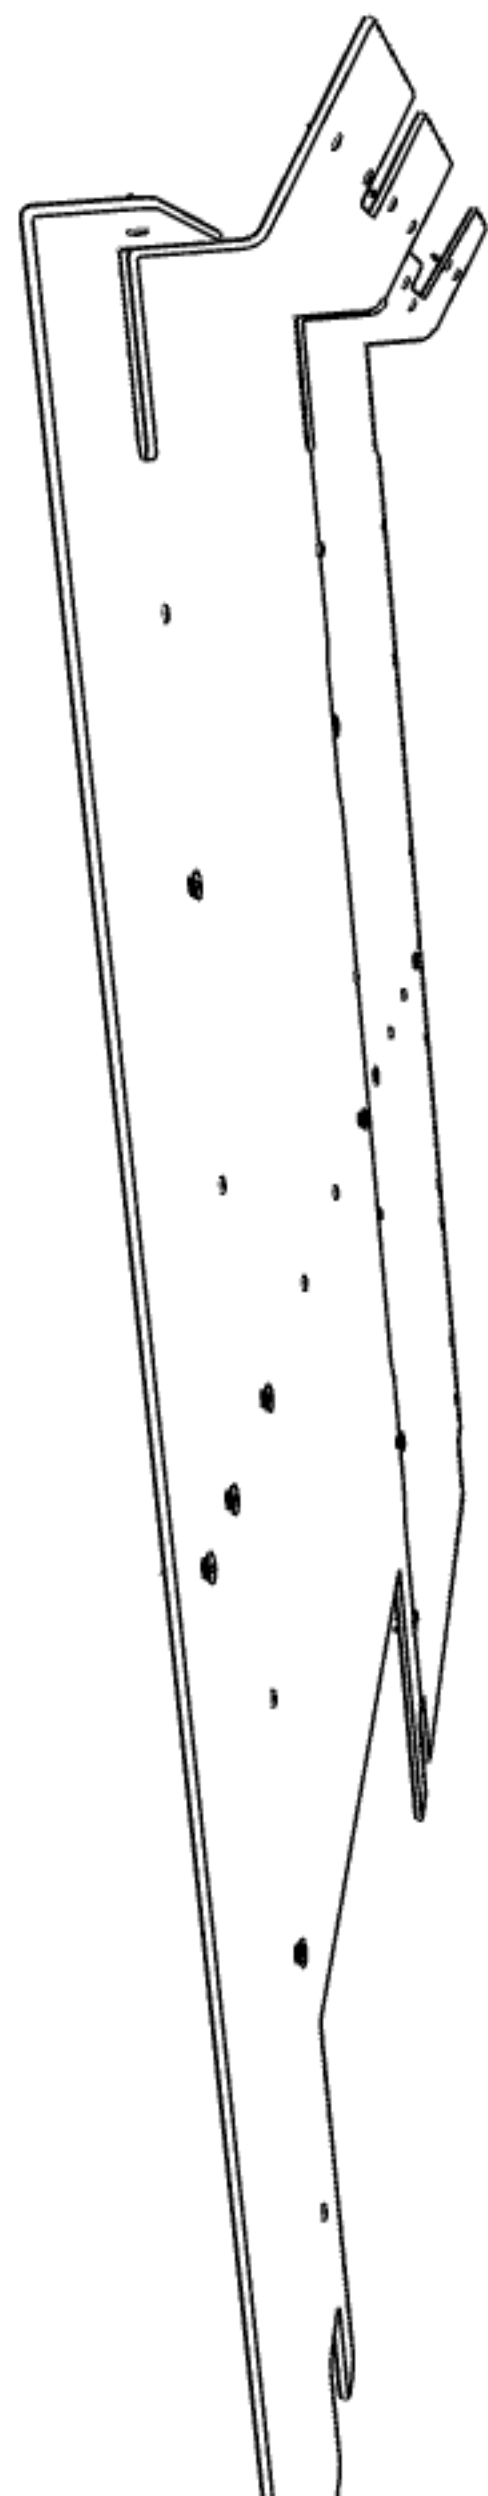




Align Passenger Side
Panel 2 rivet holes with
vehicle factory holes

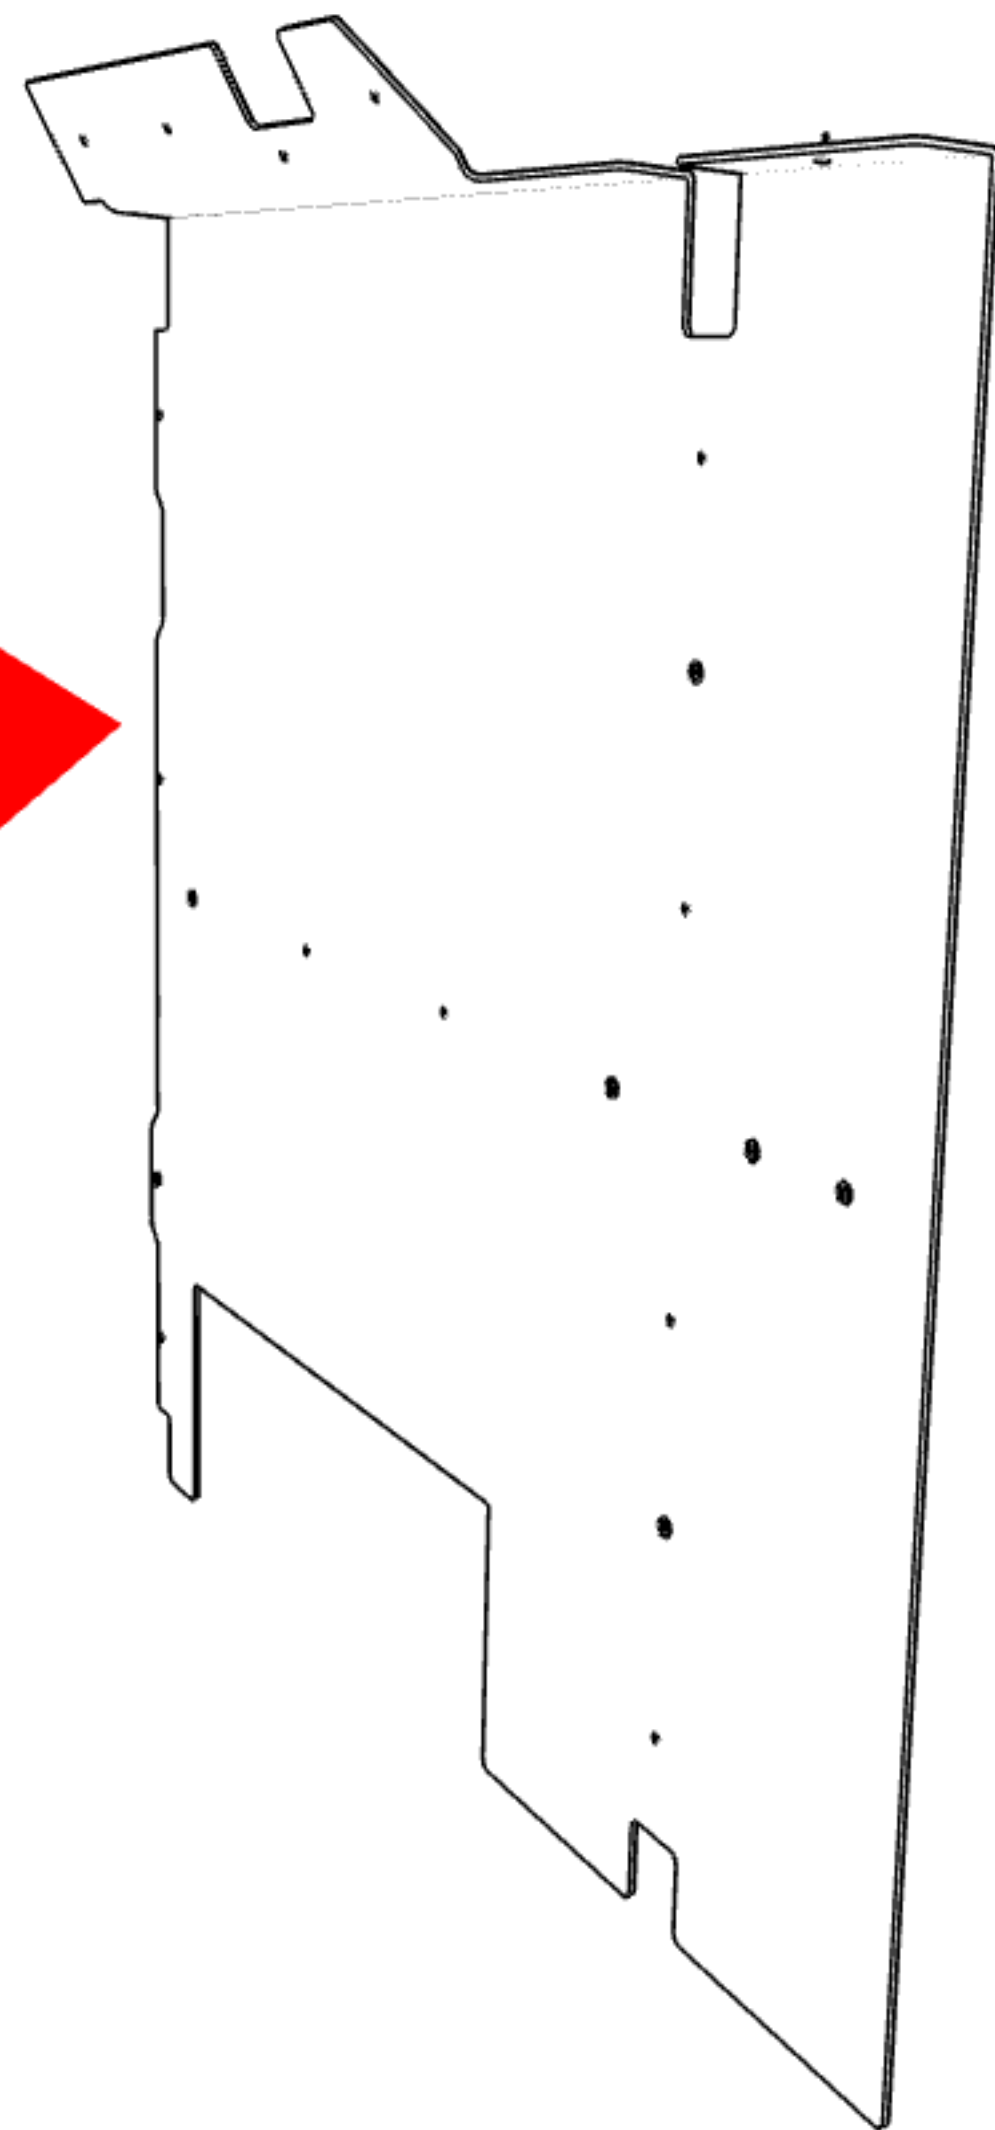
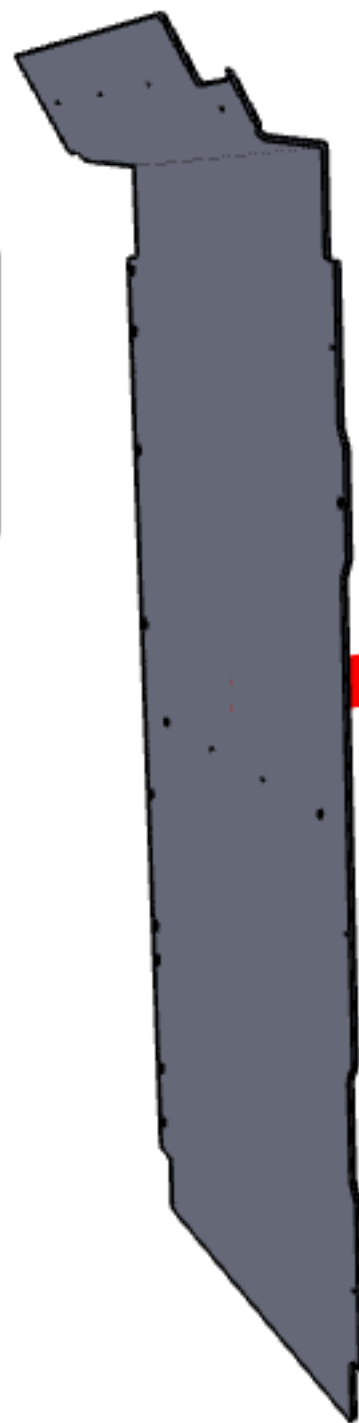




PASSENGER SIDE WALL

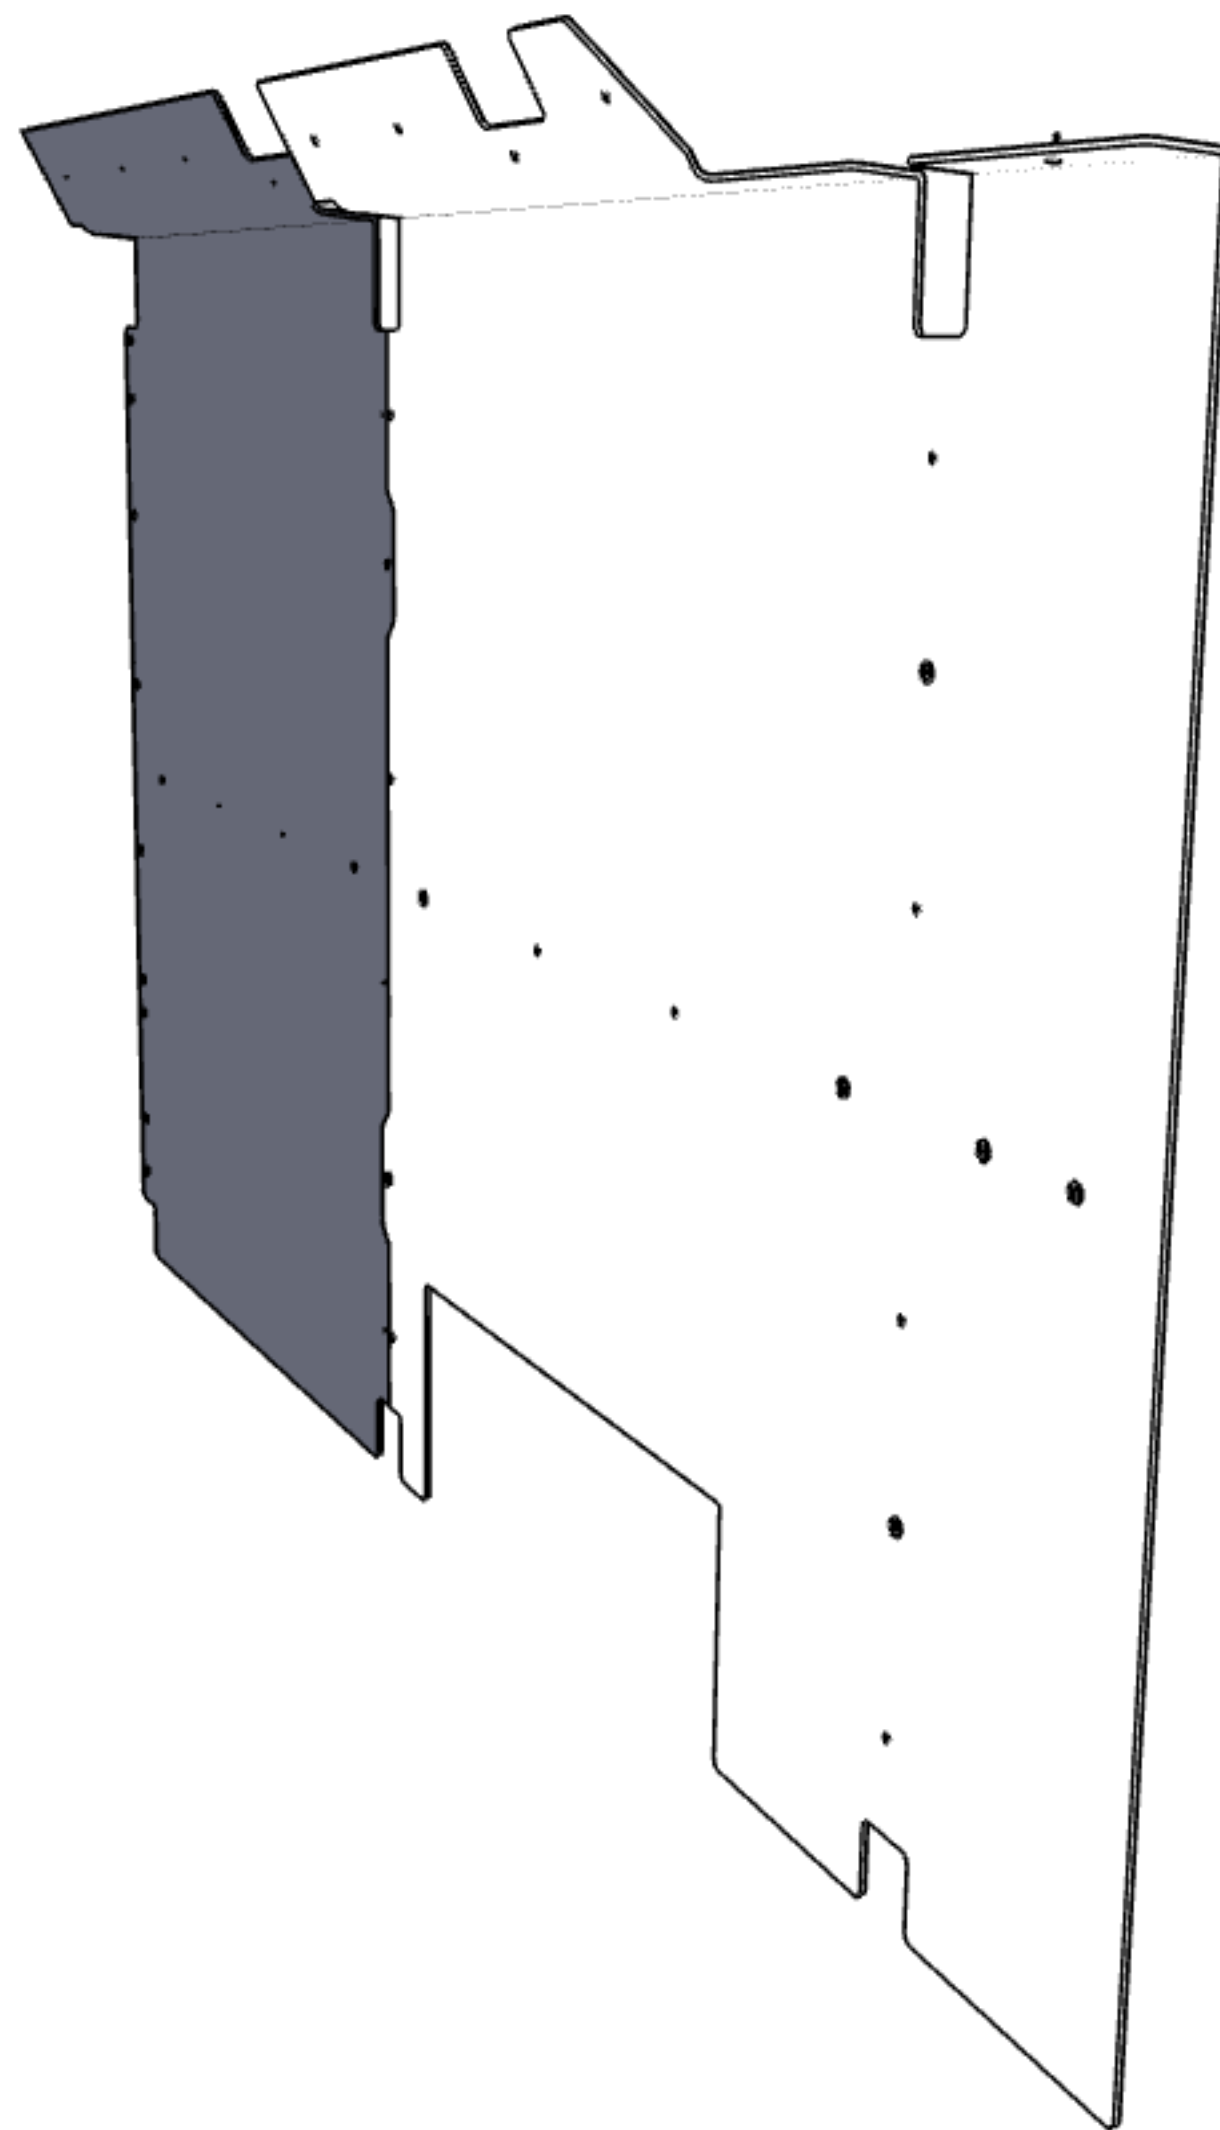
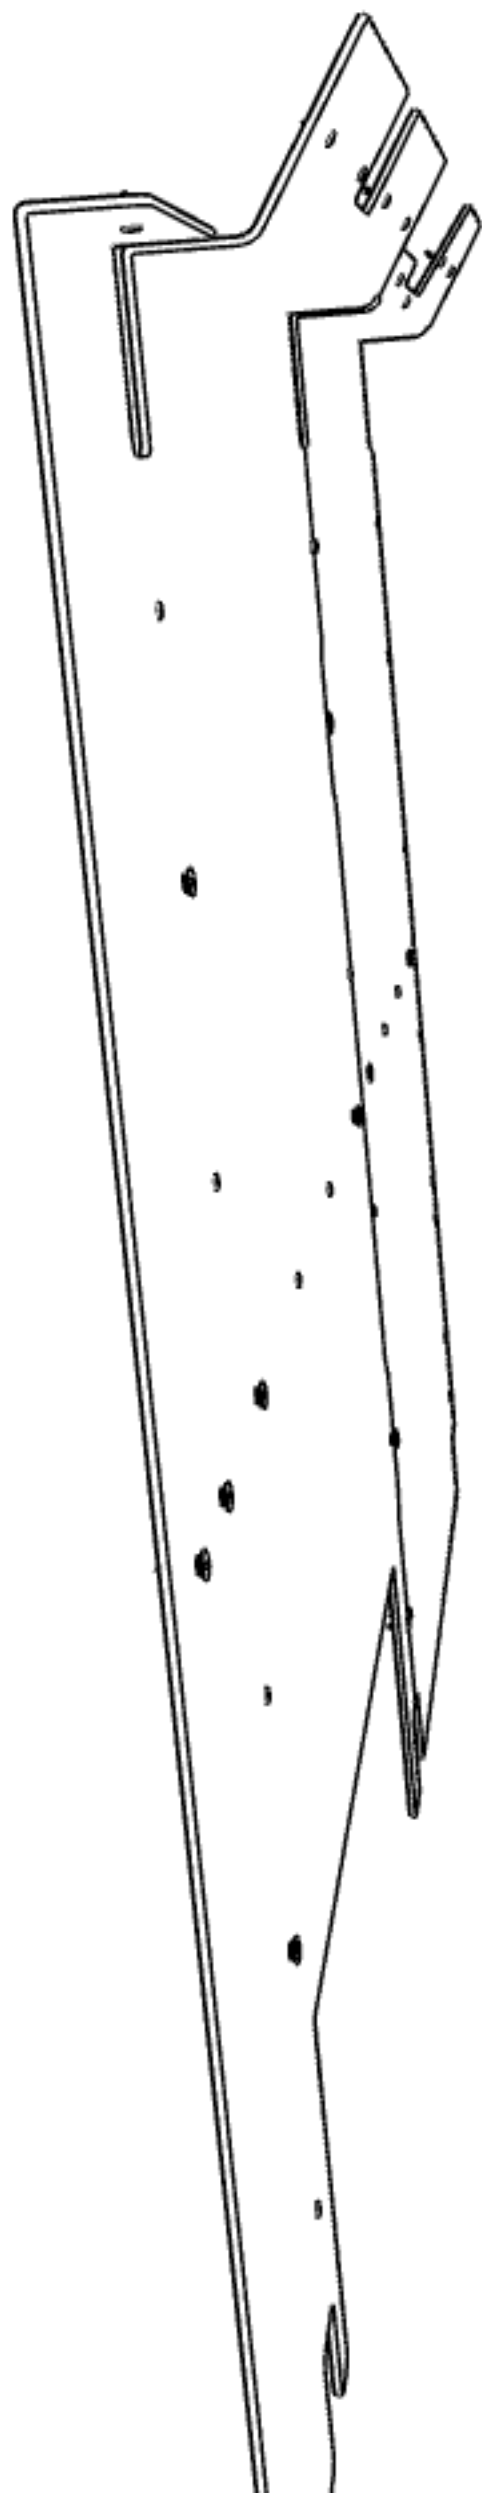



PASSENGER SIDE WALL

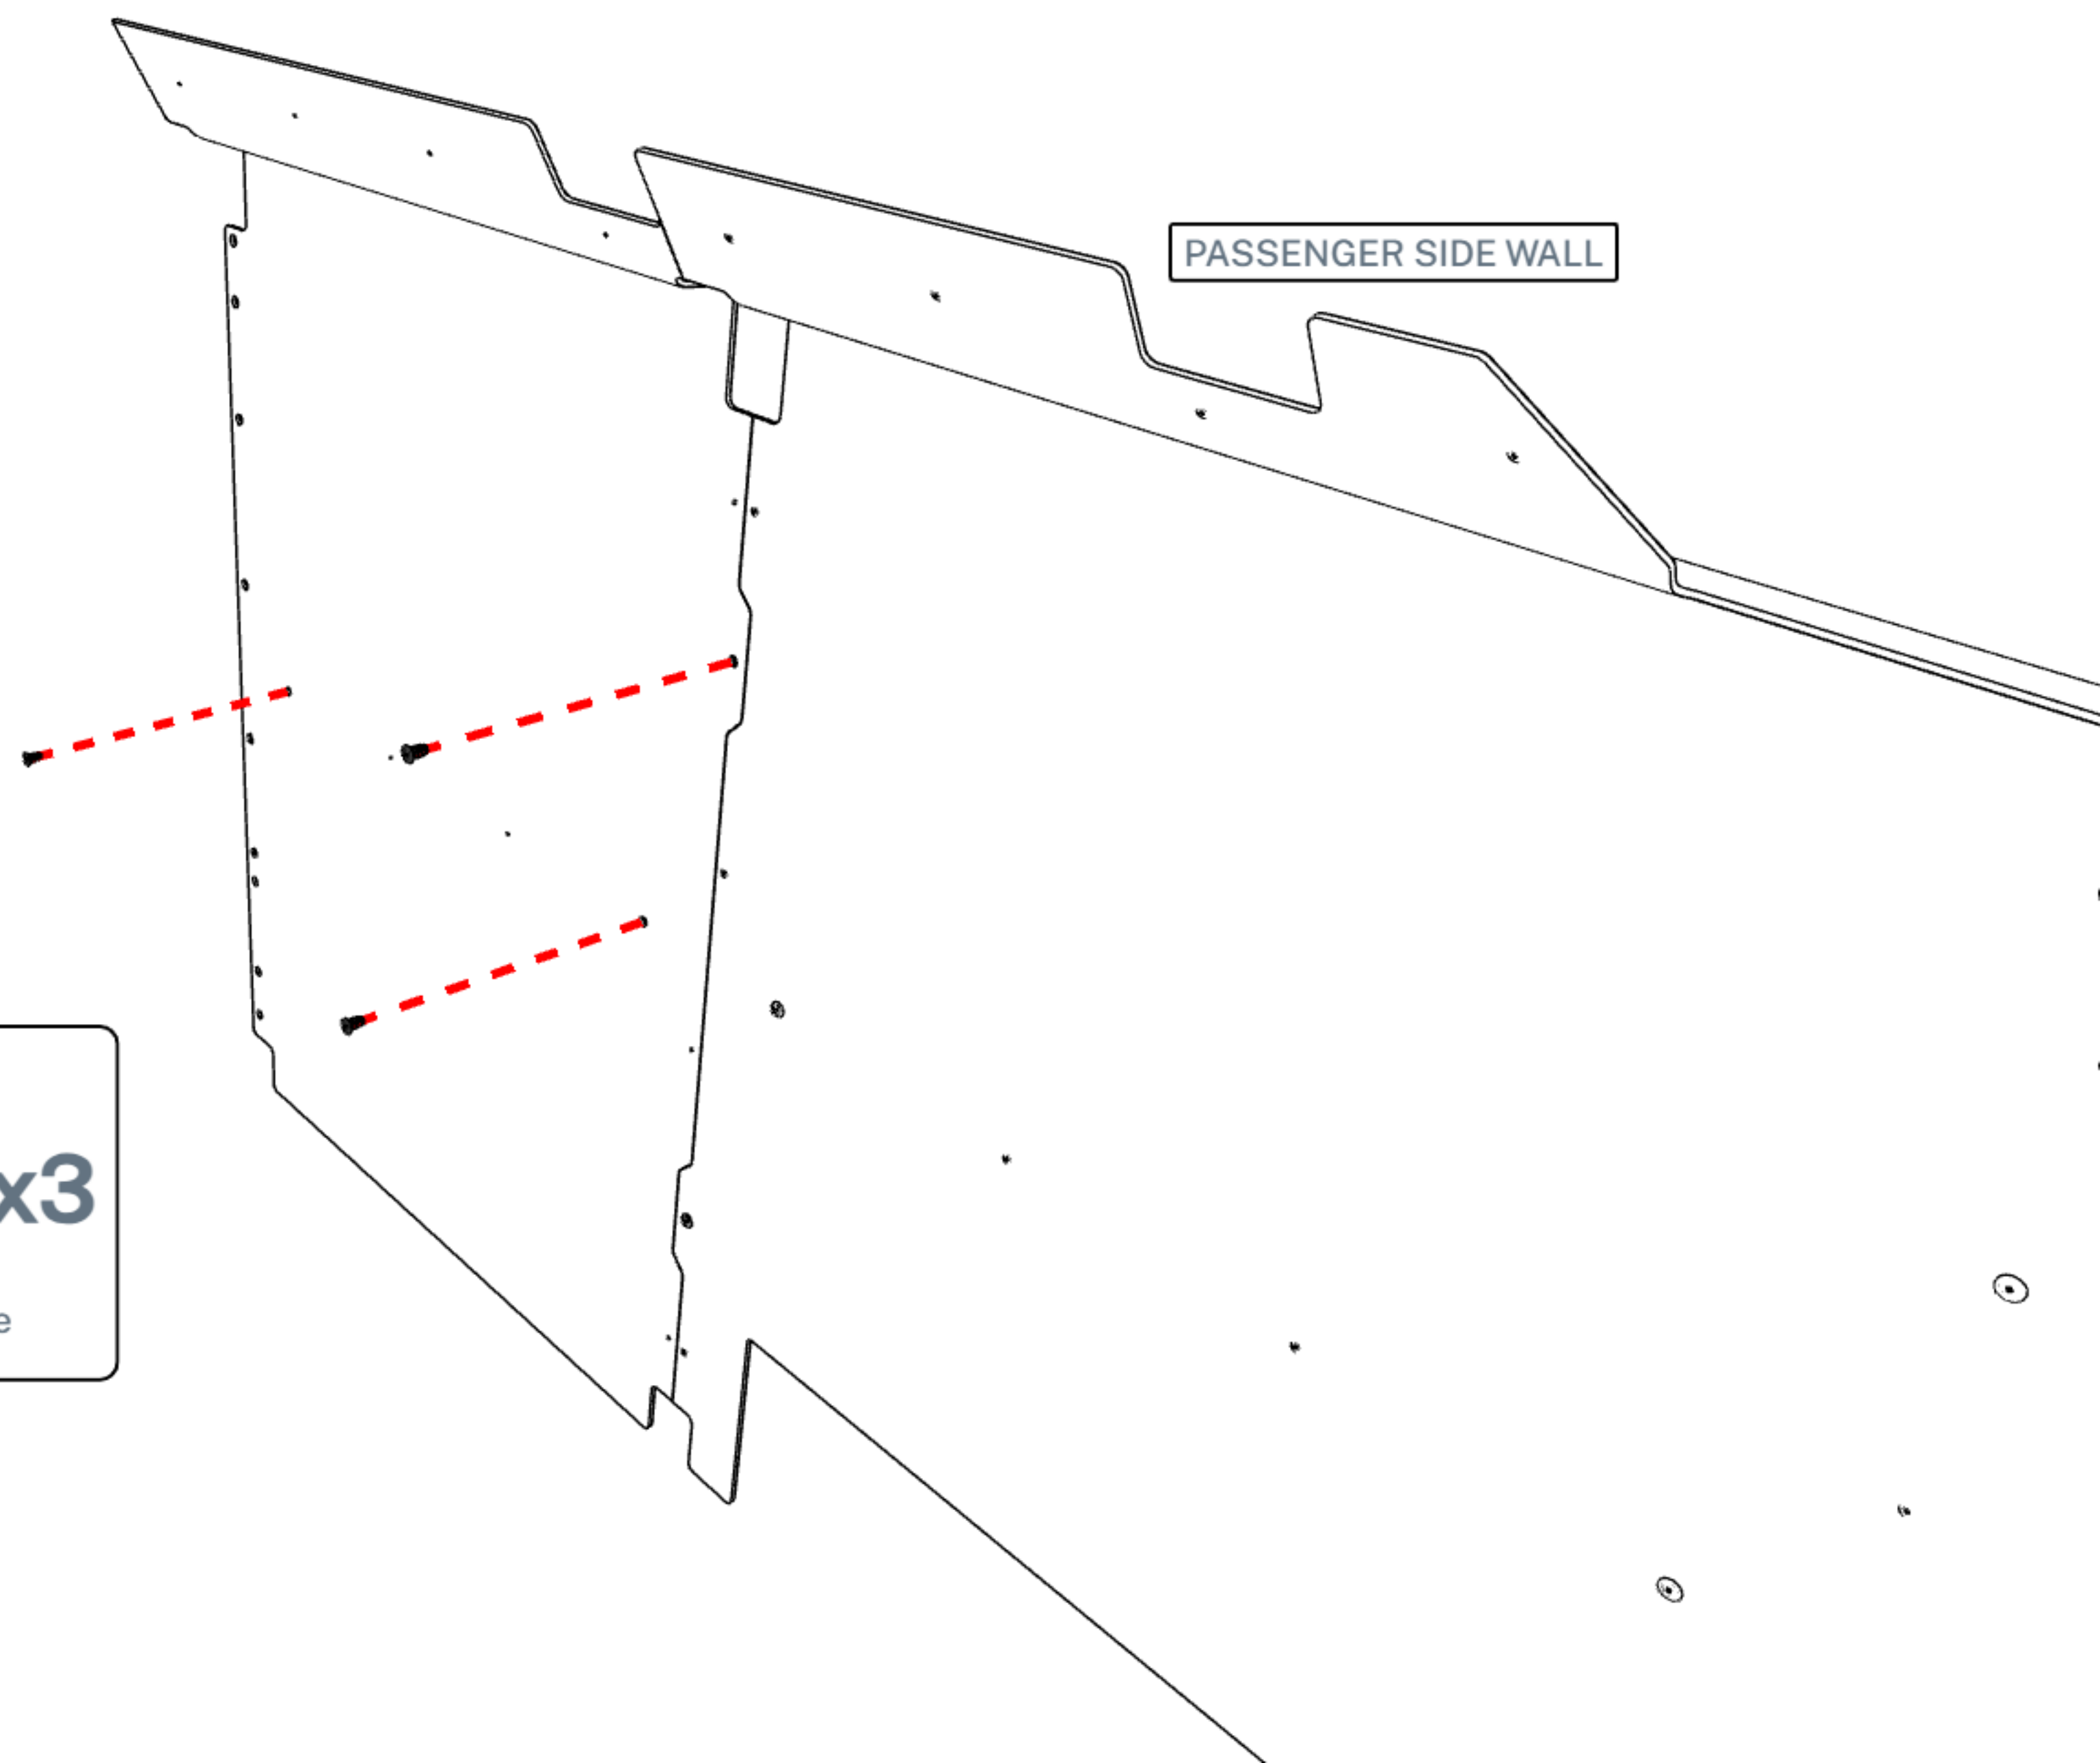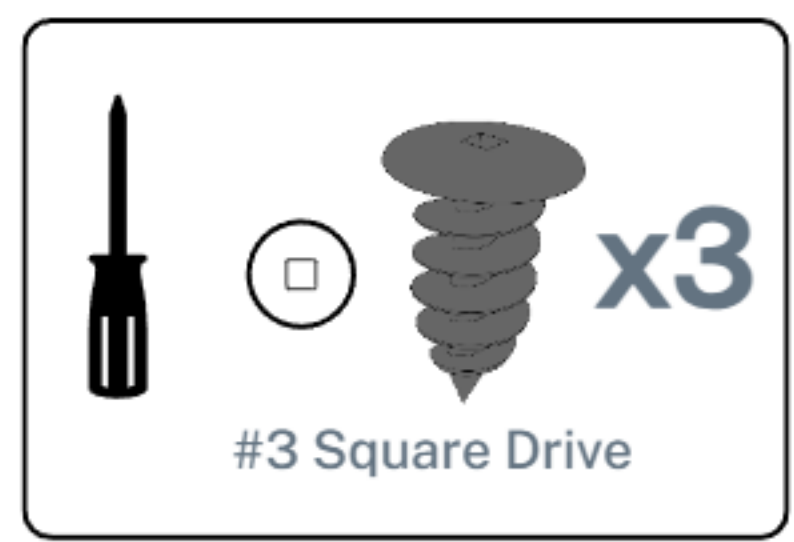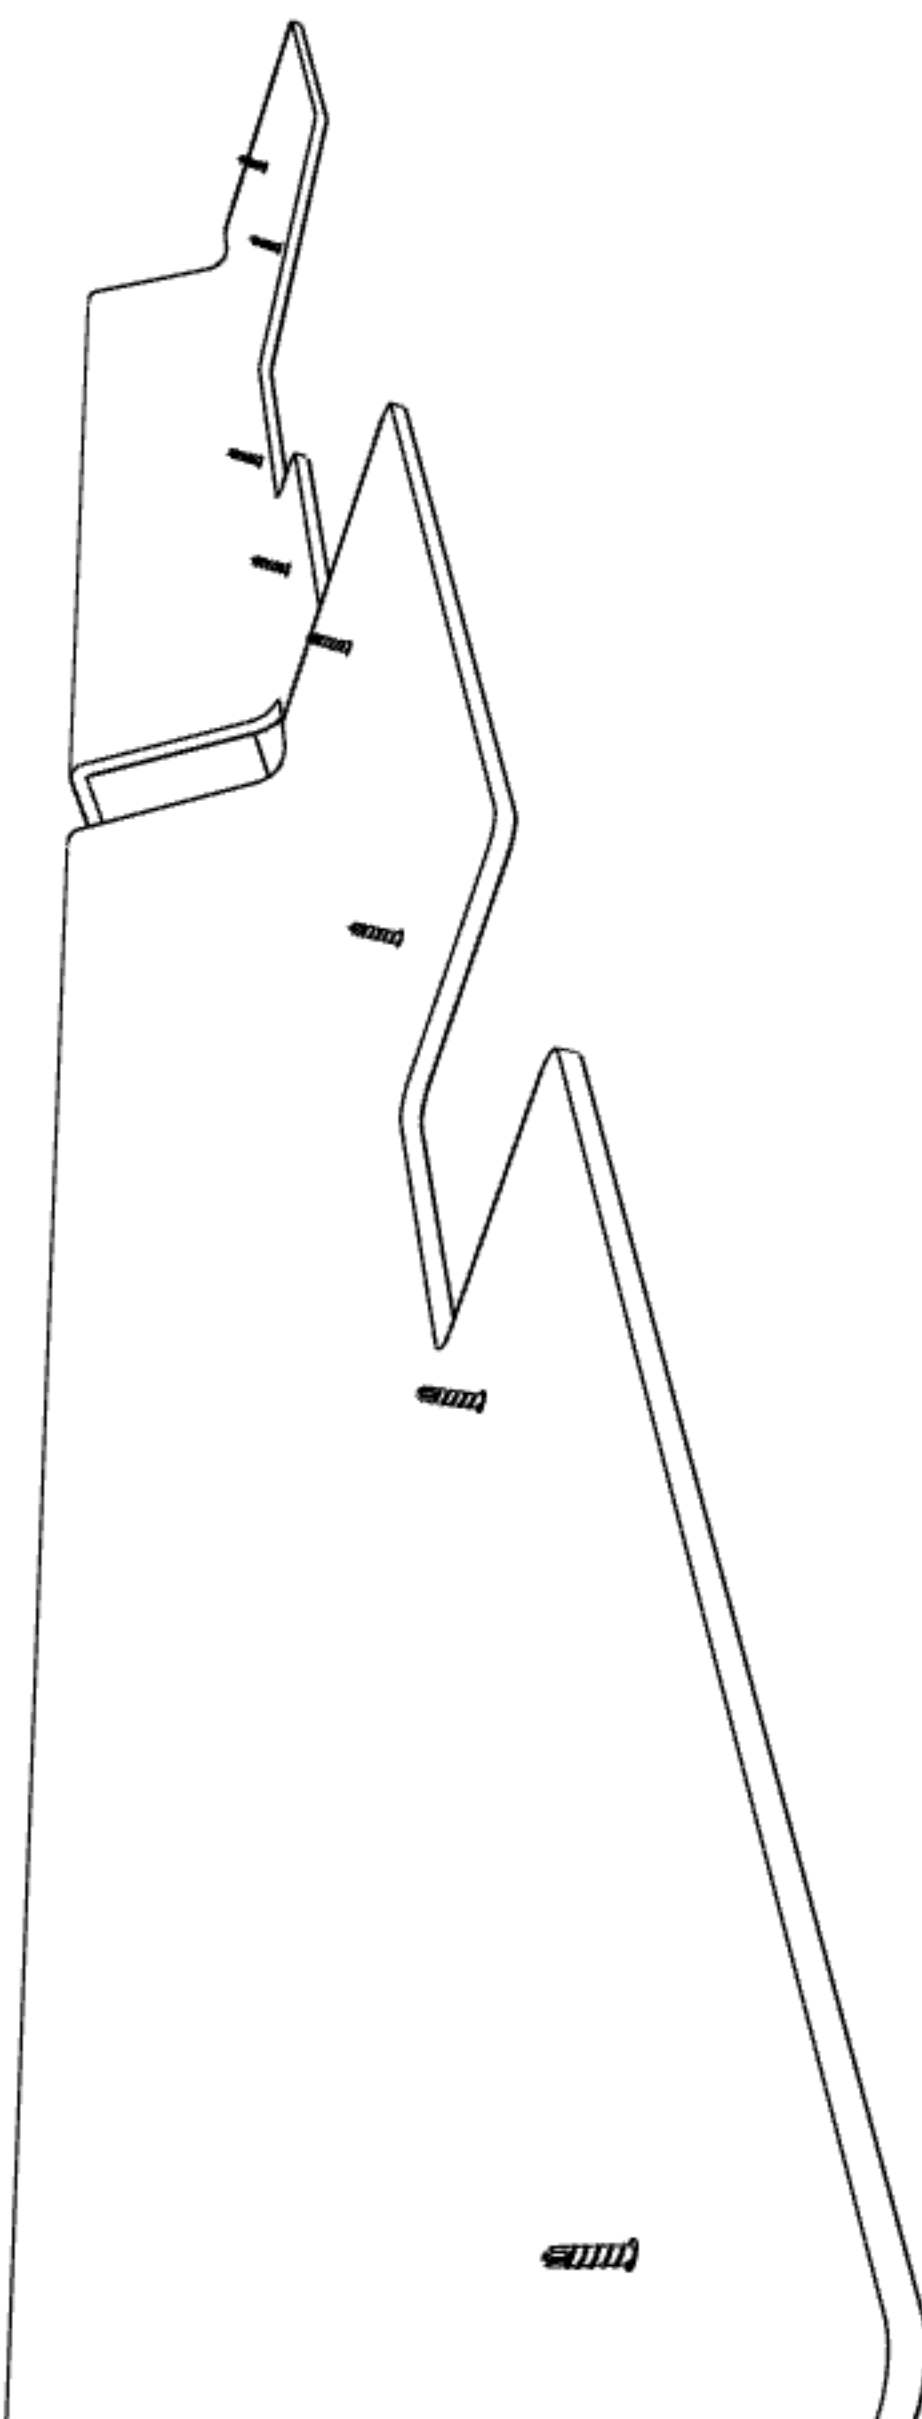

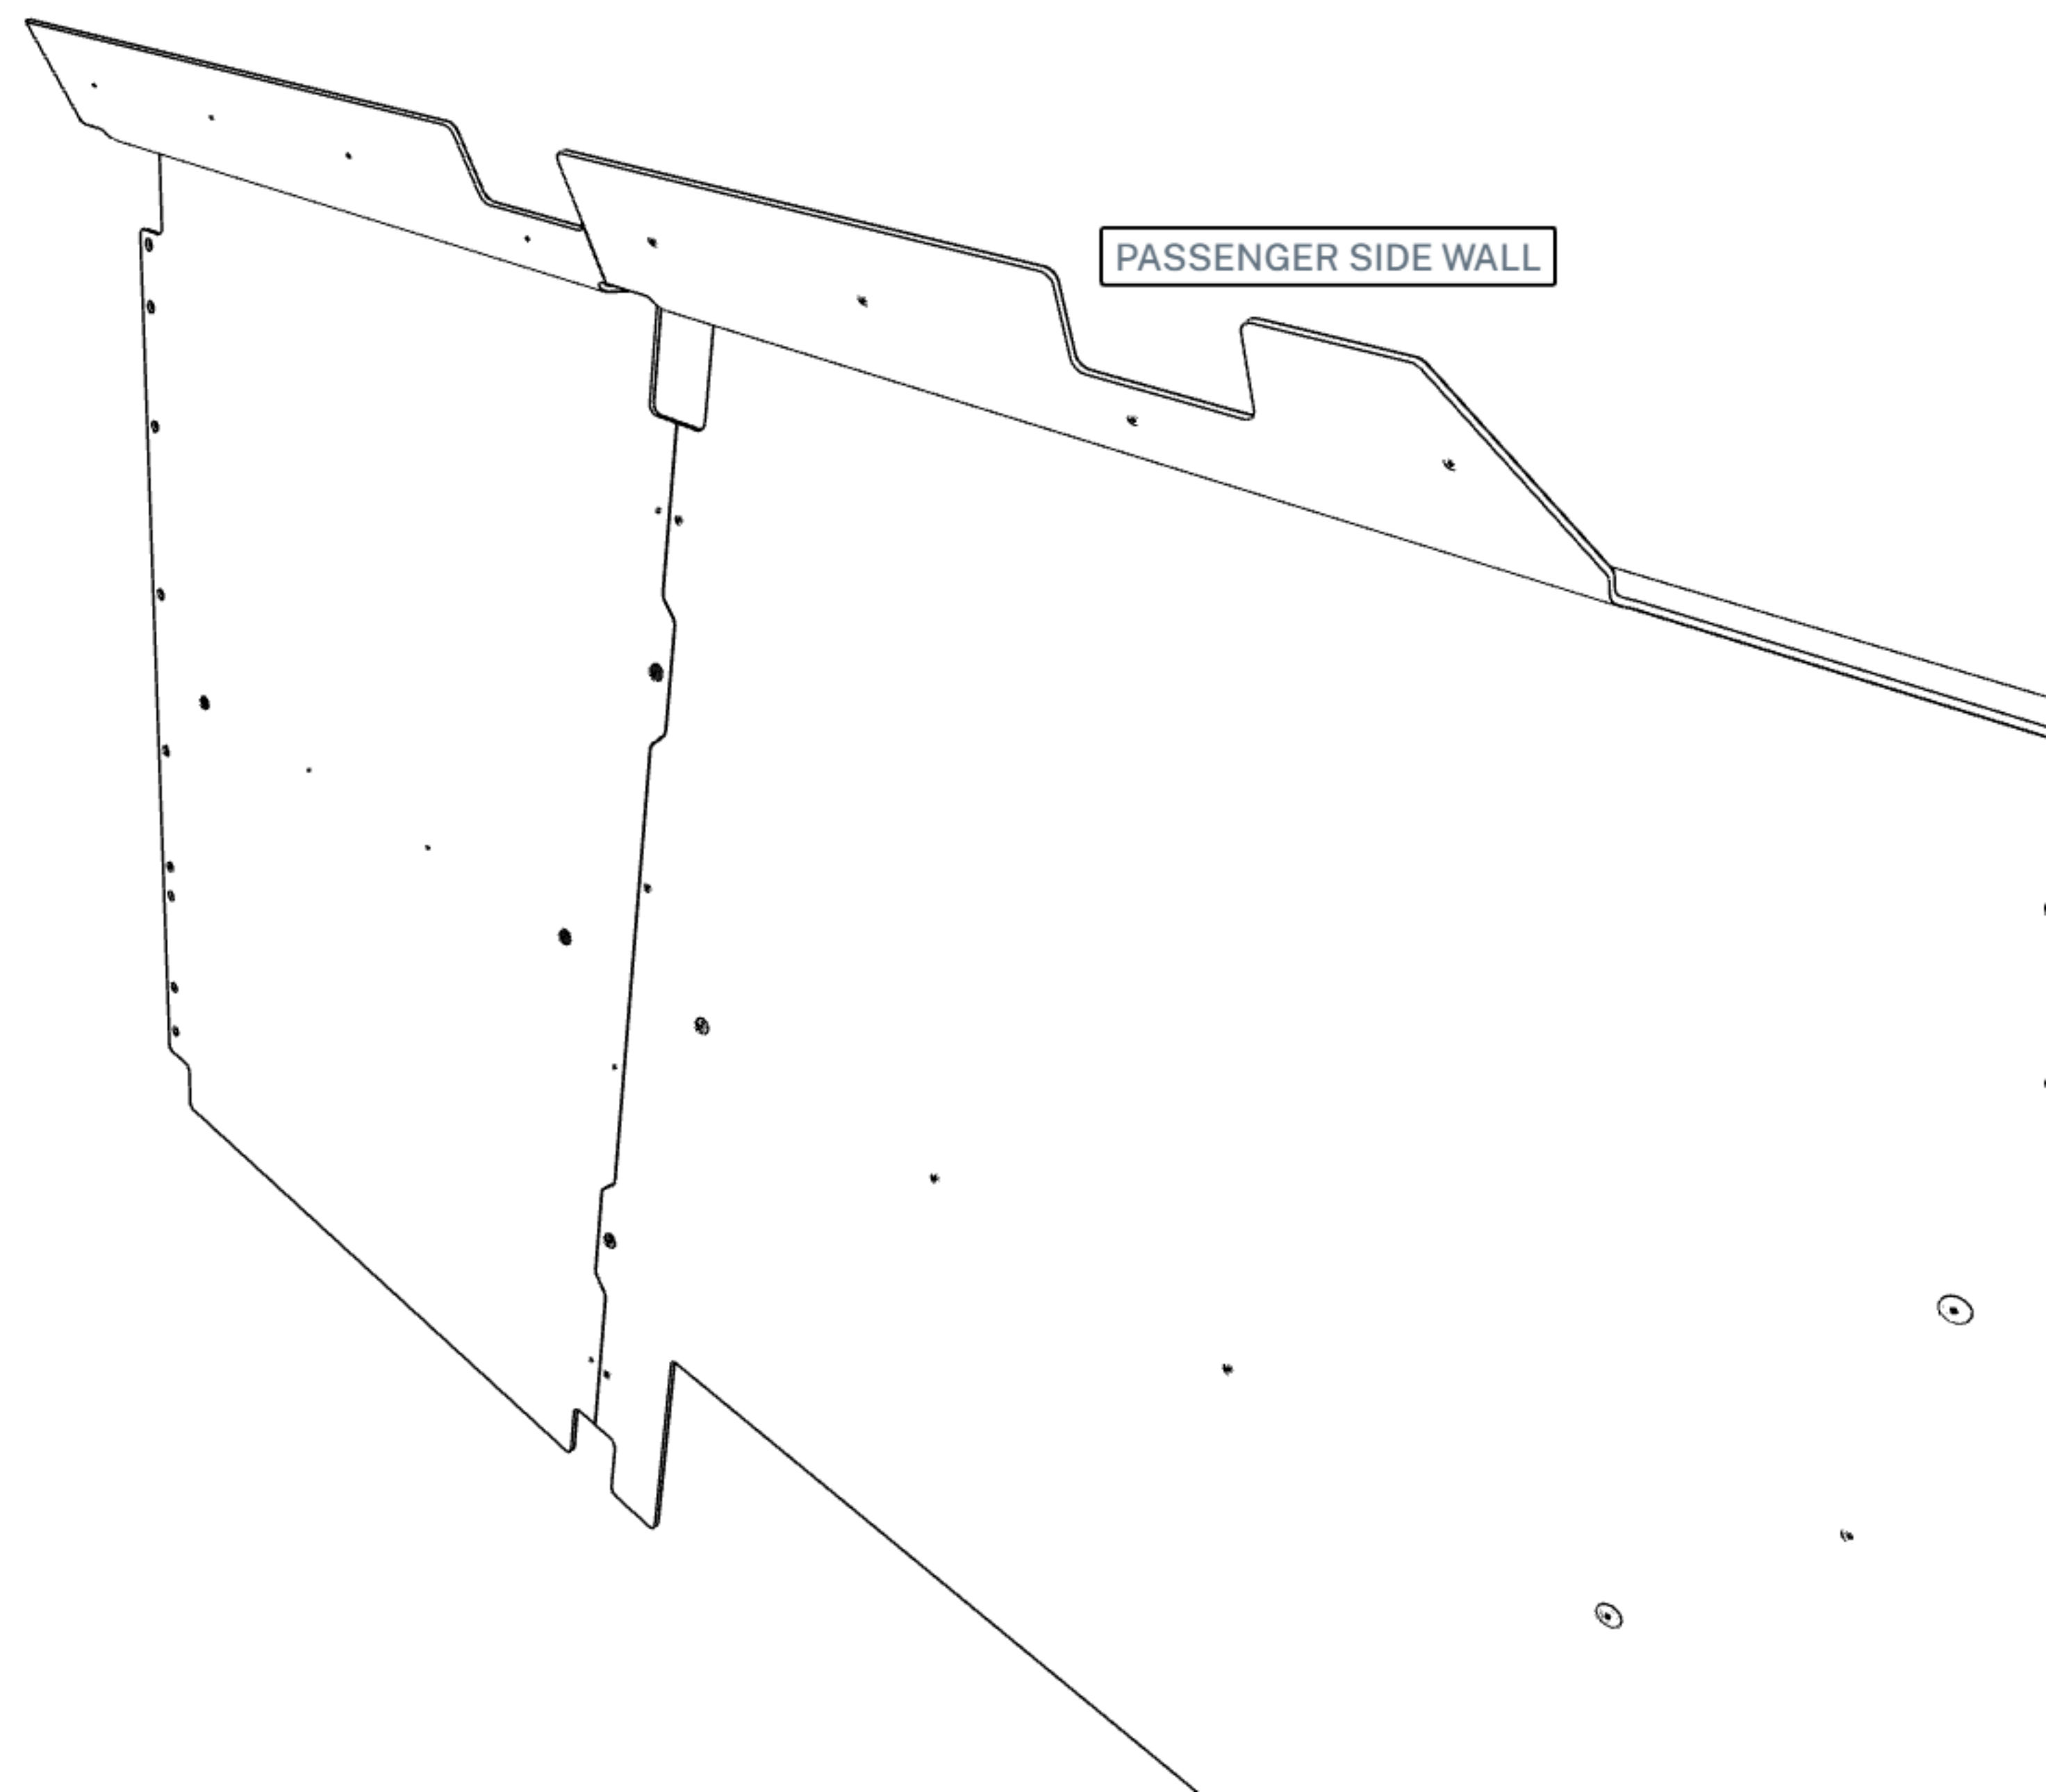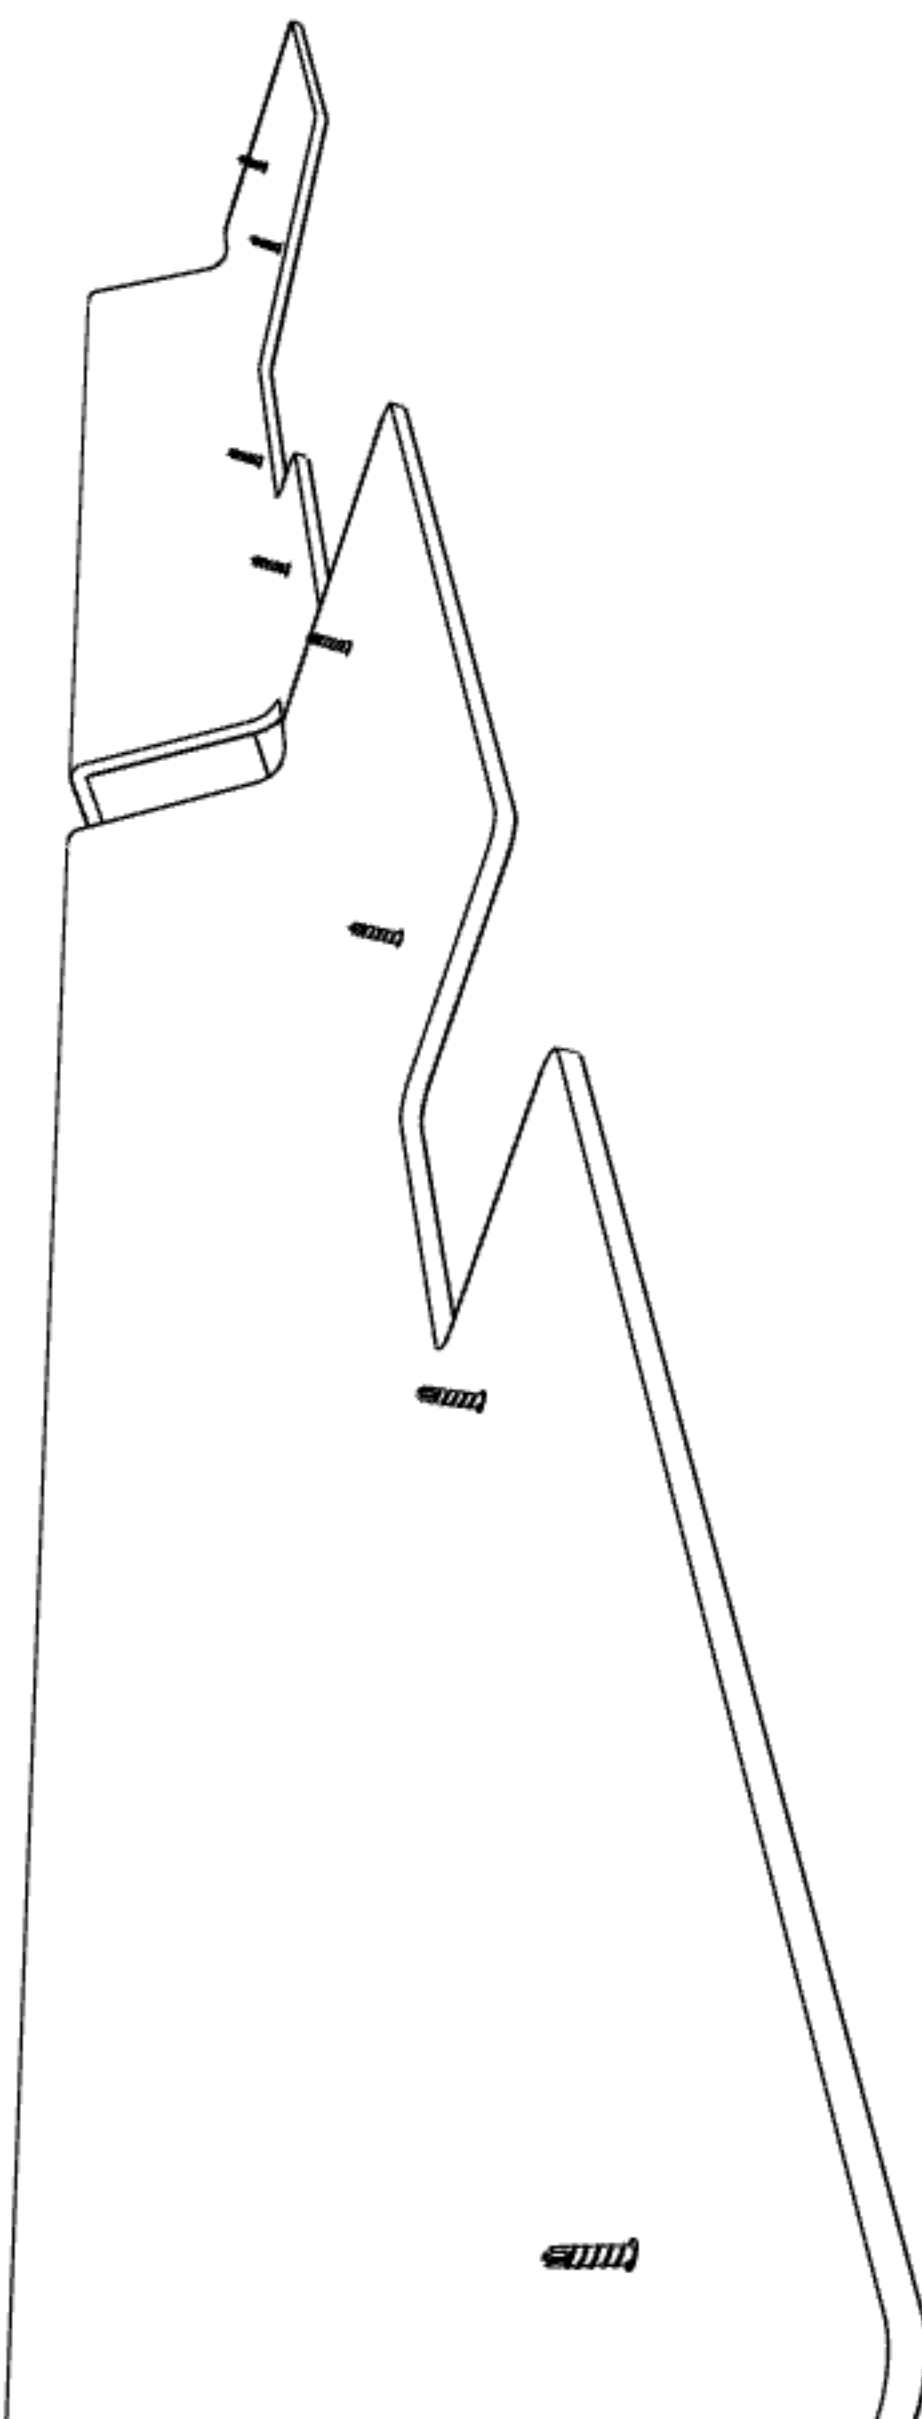

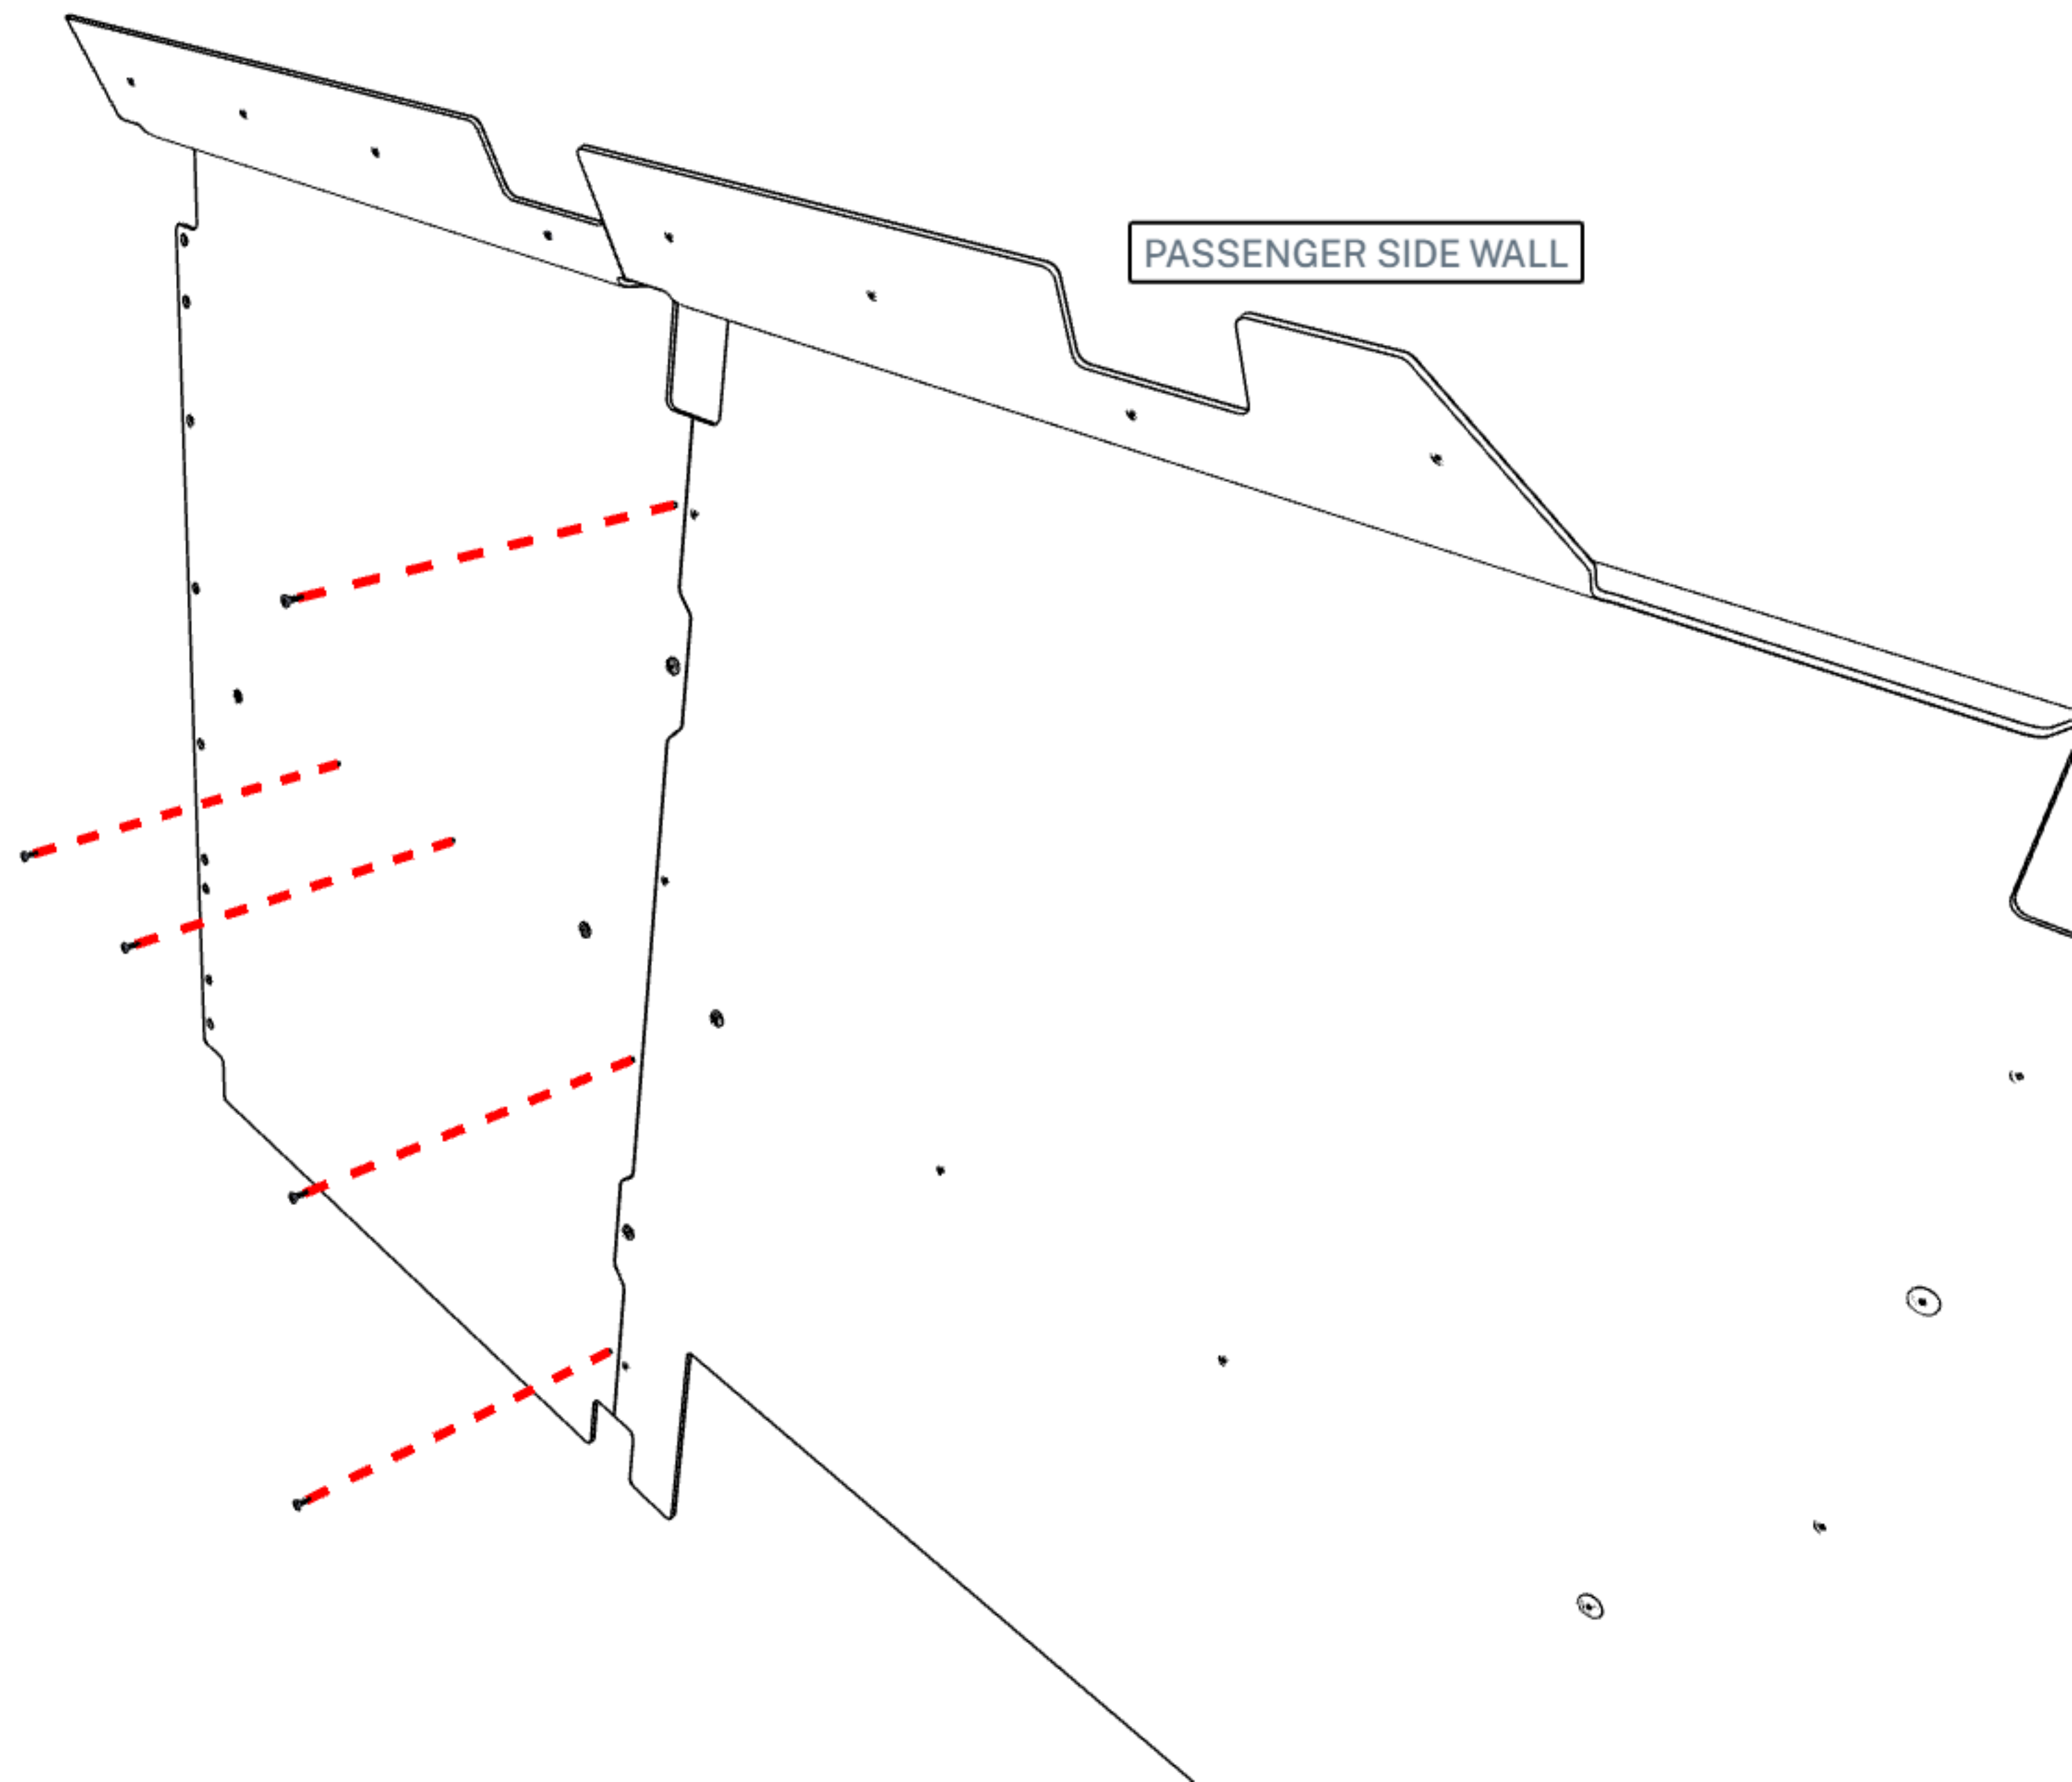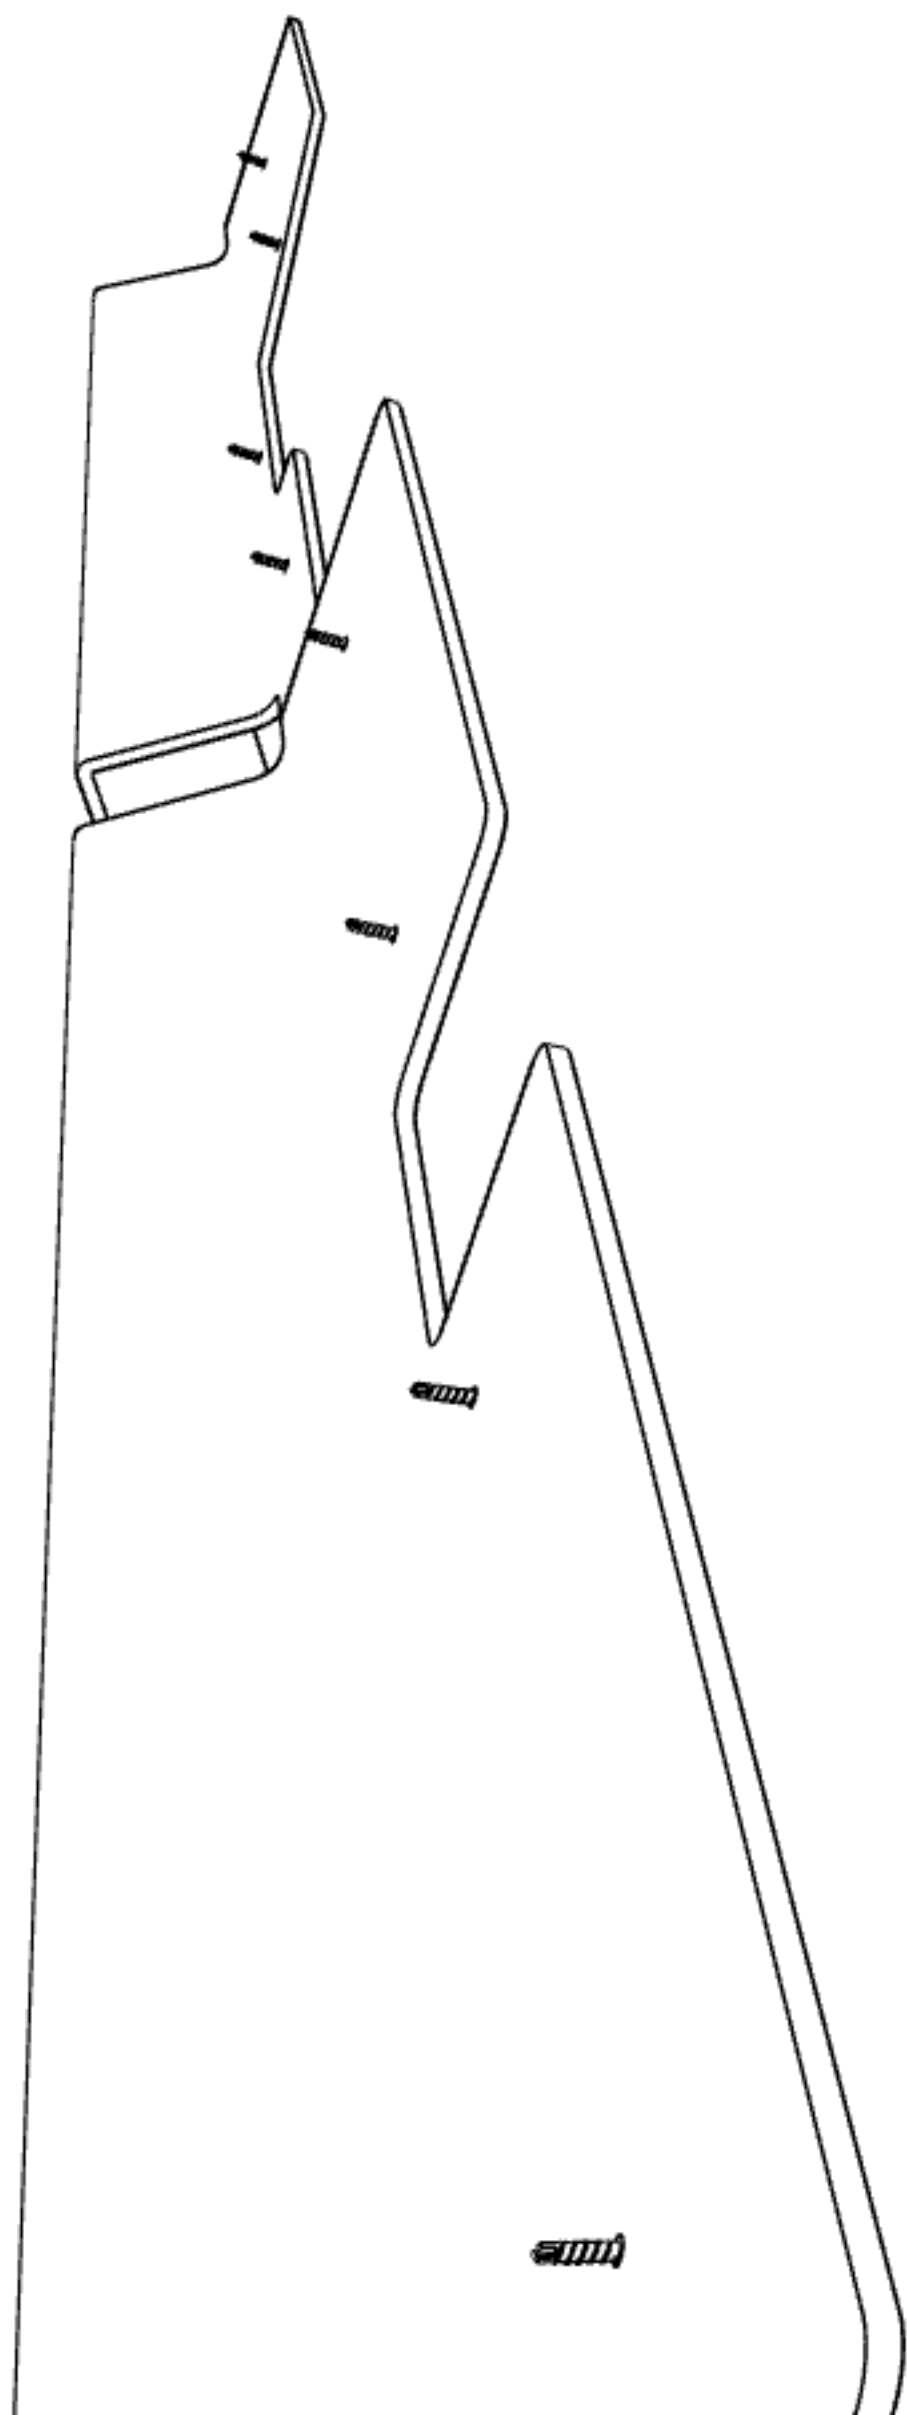

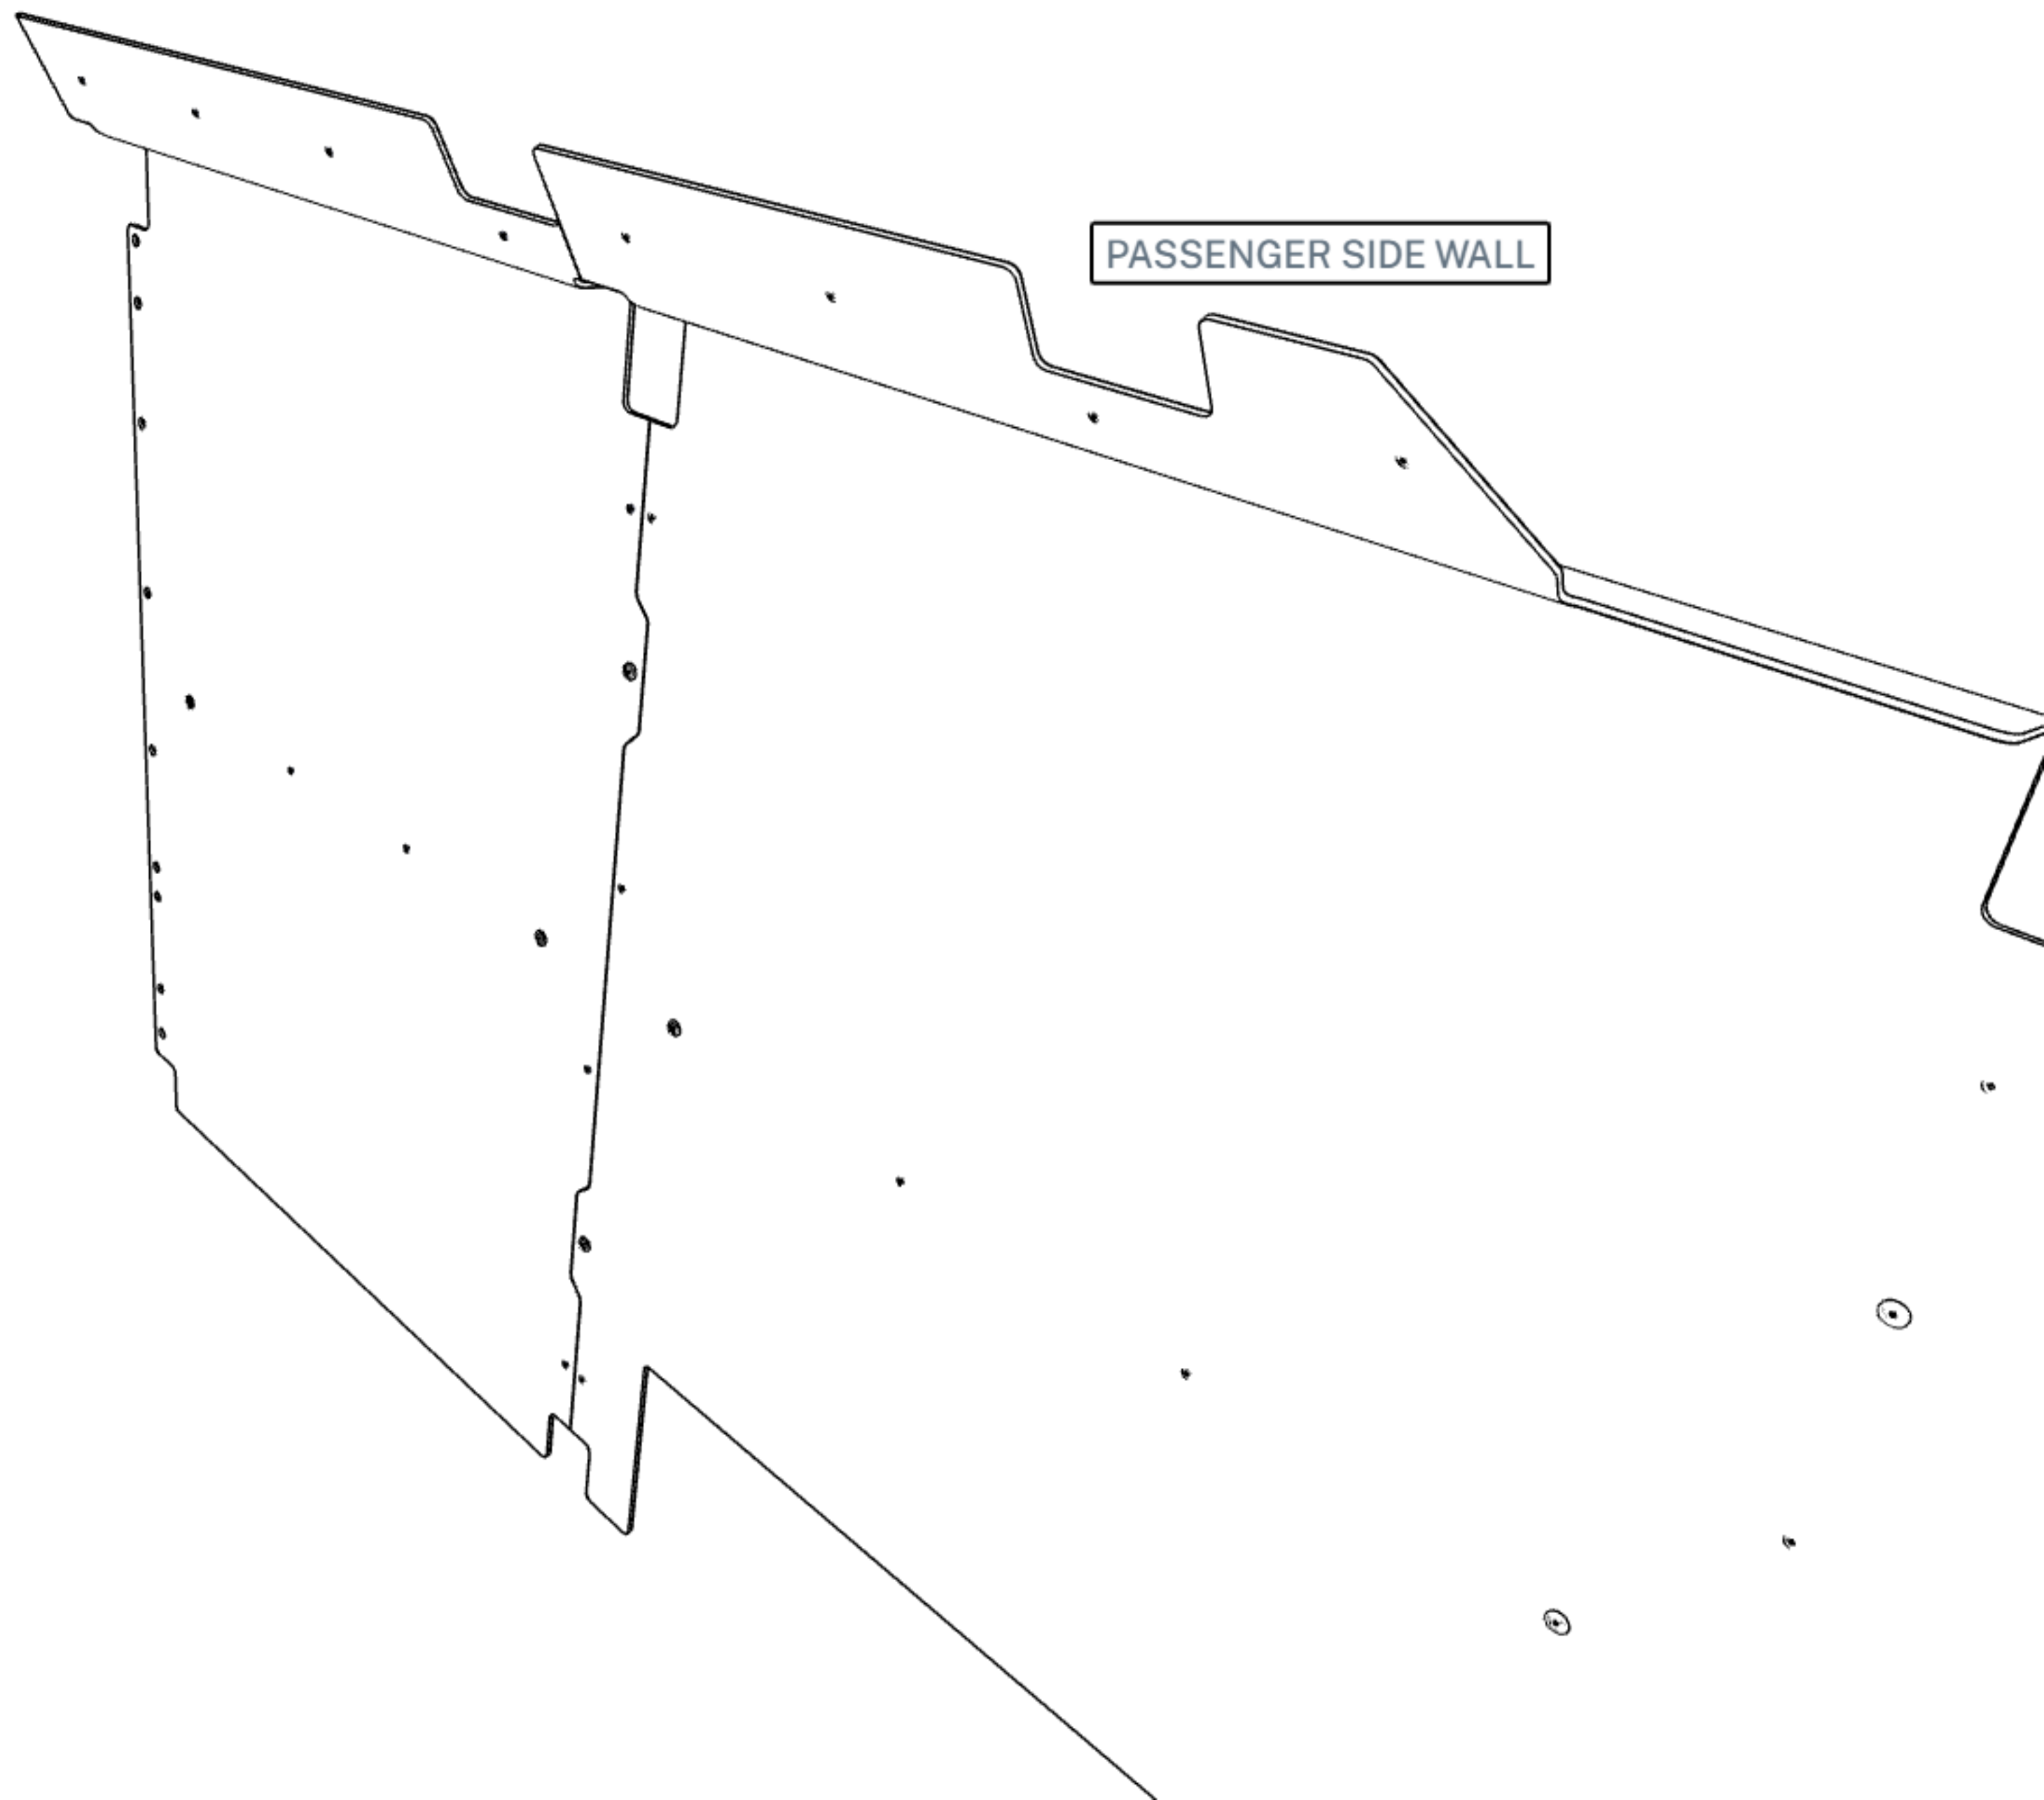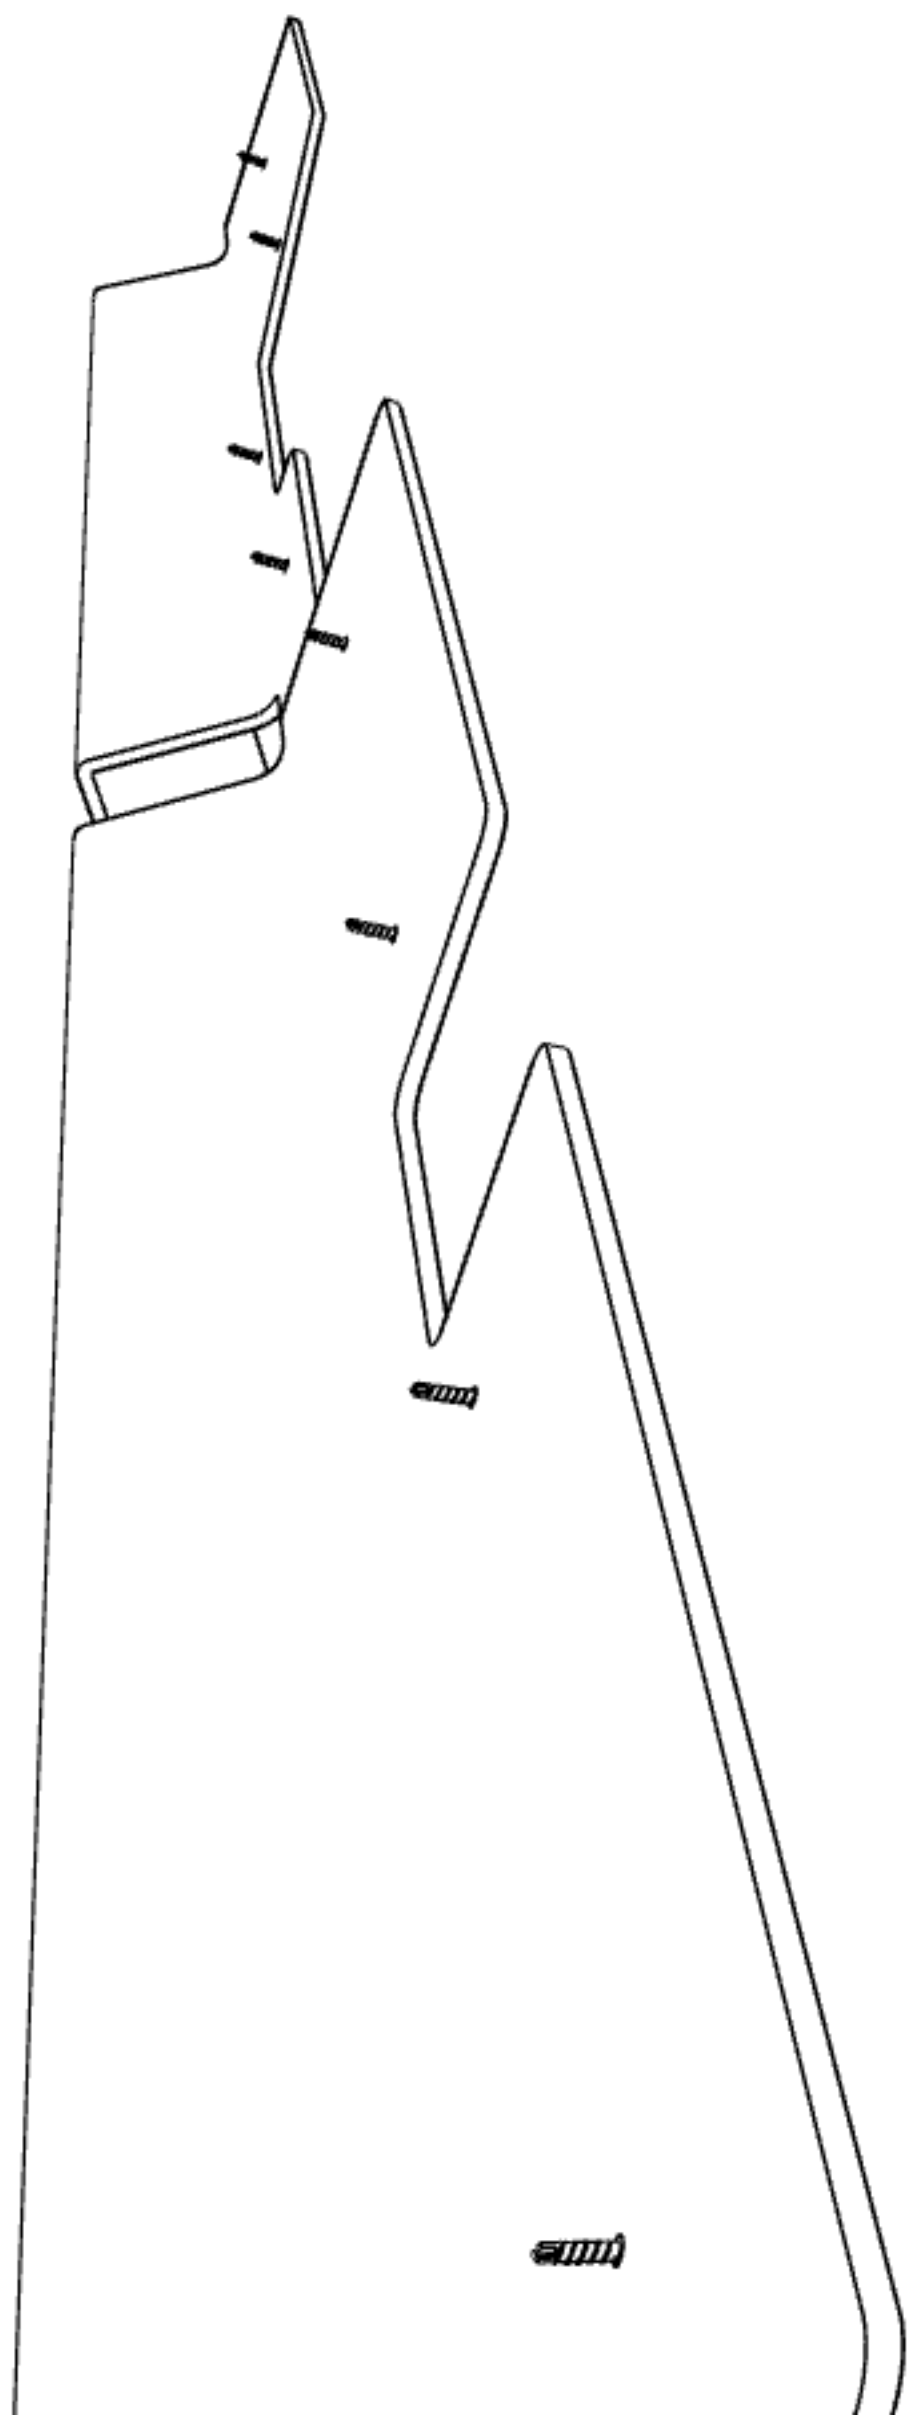


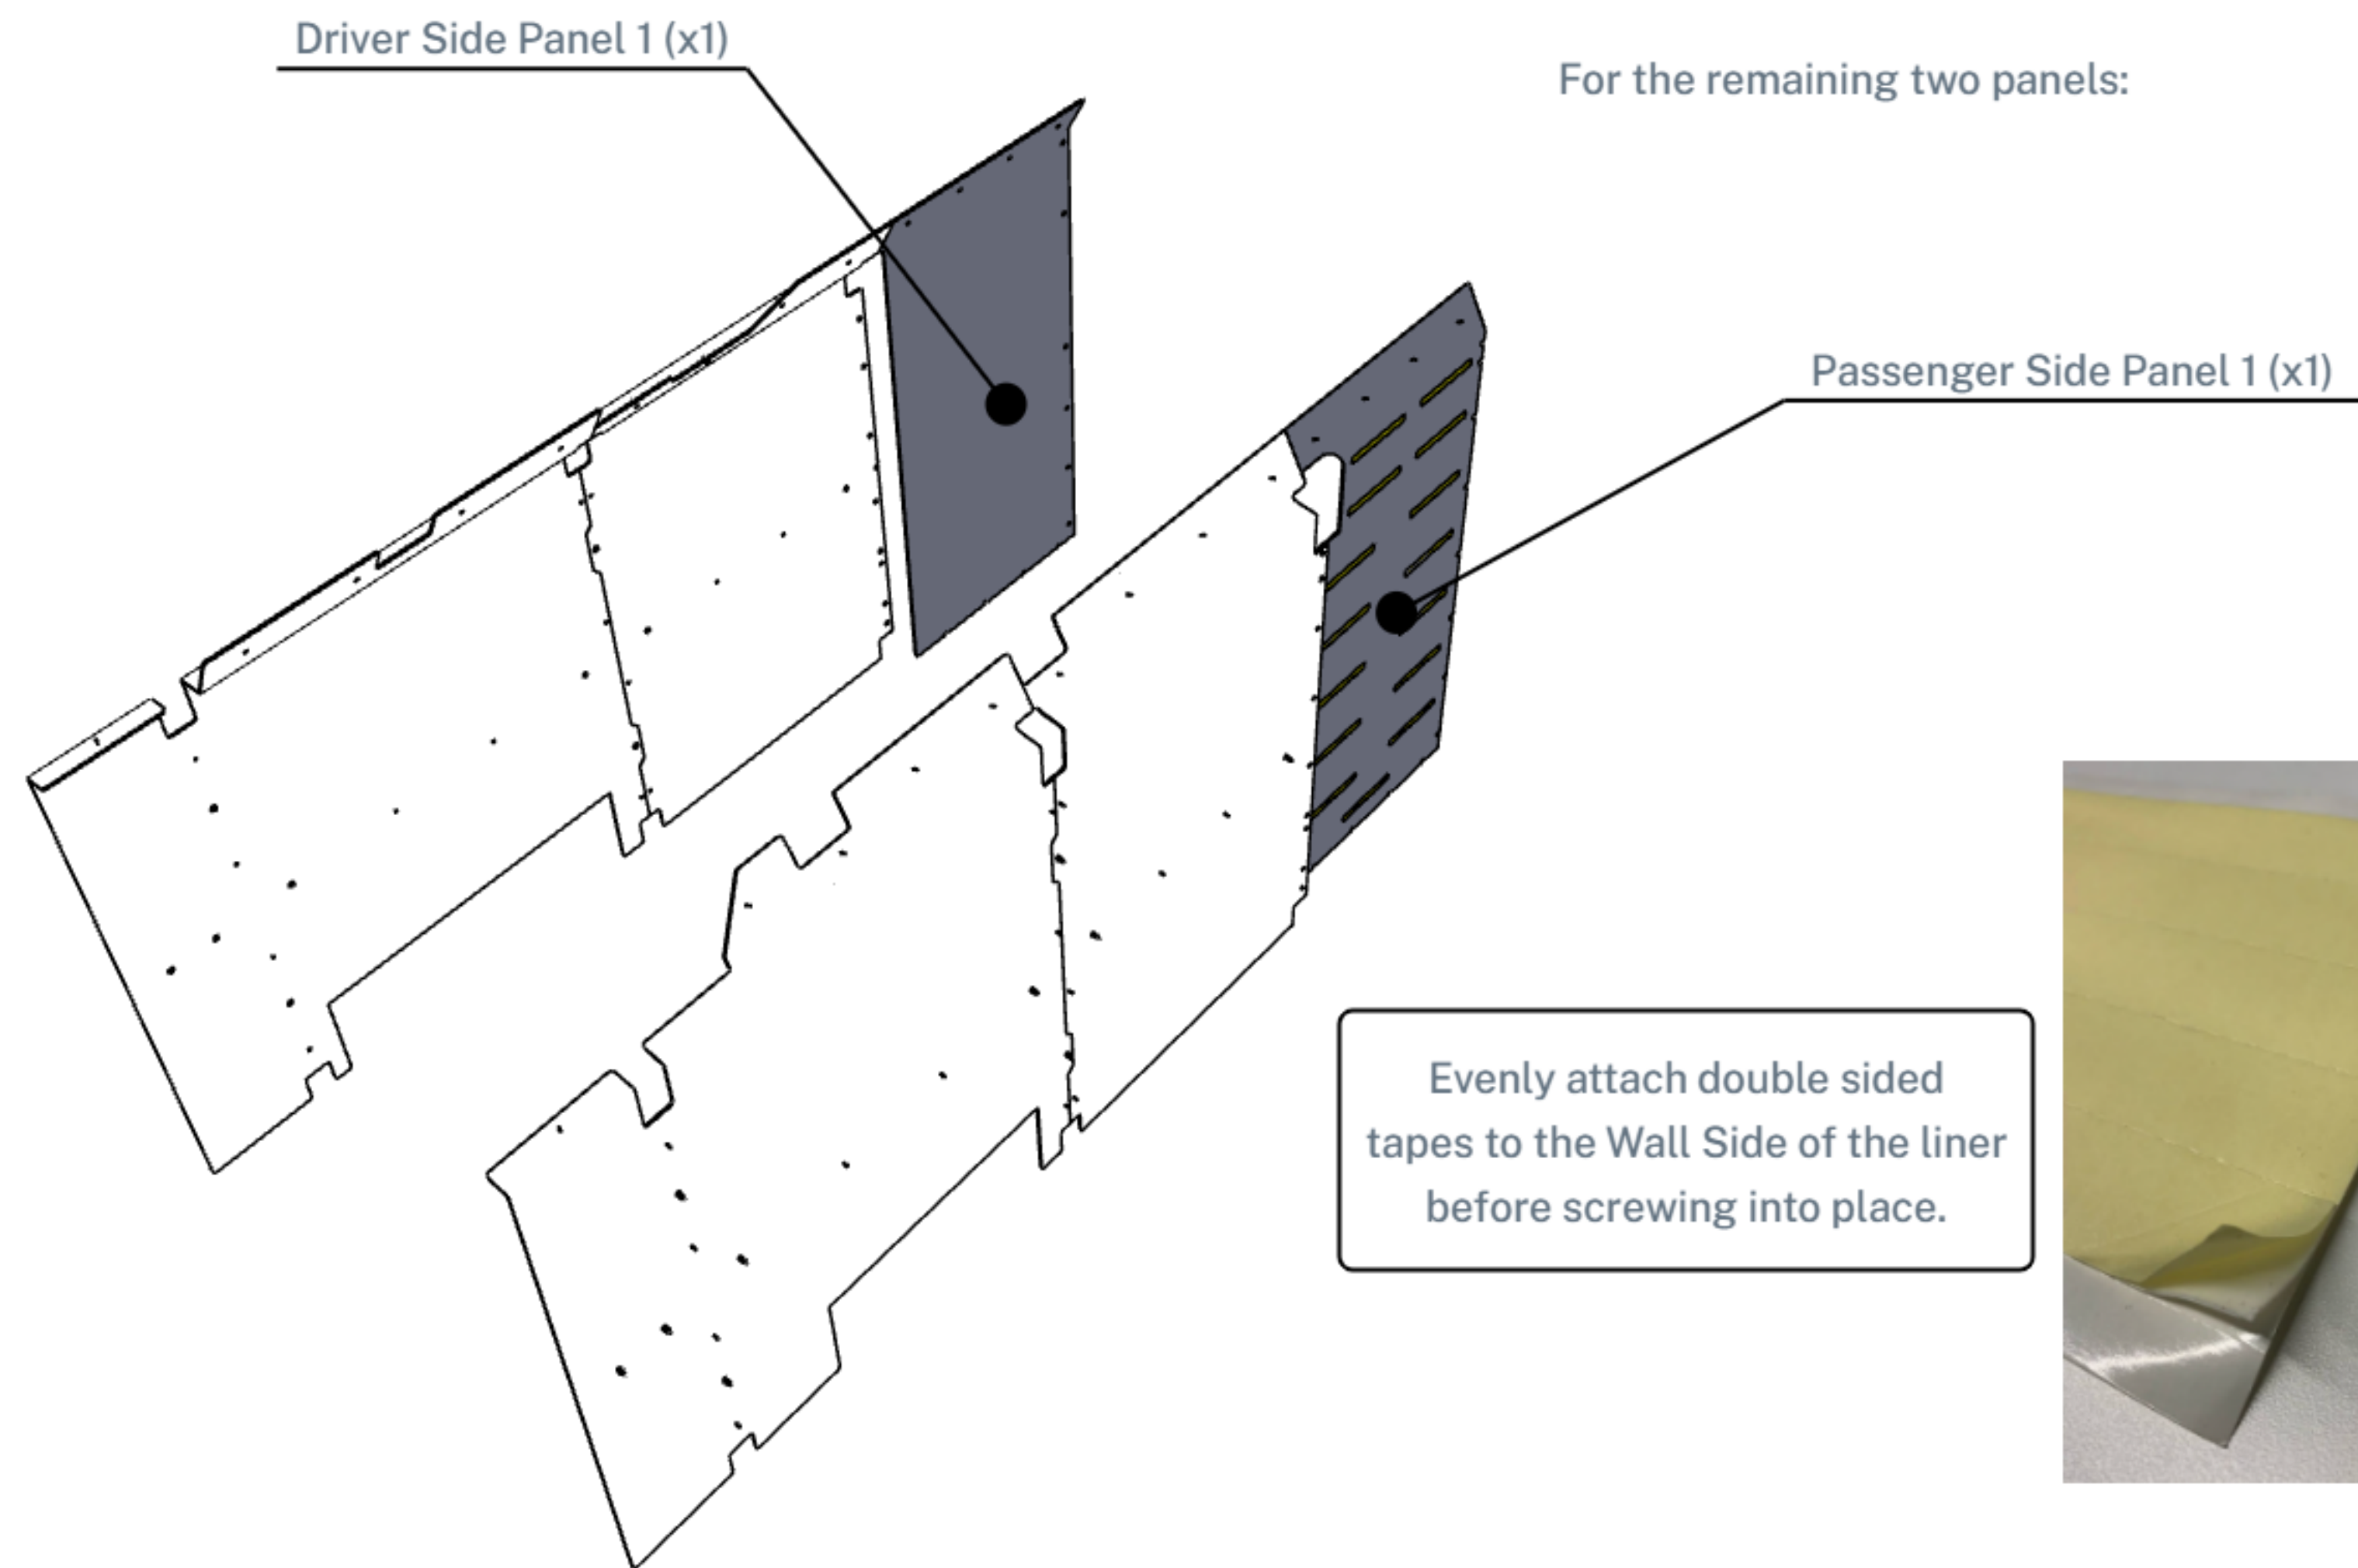


PASSENGER SIDE WALL




15x

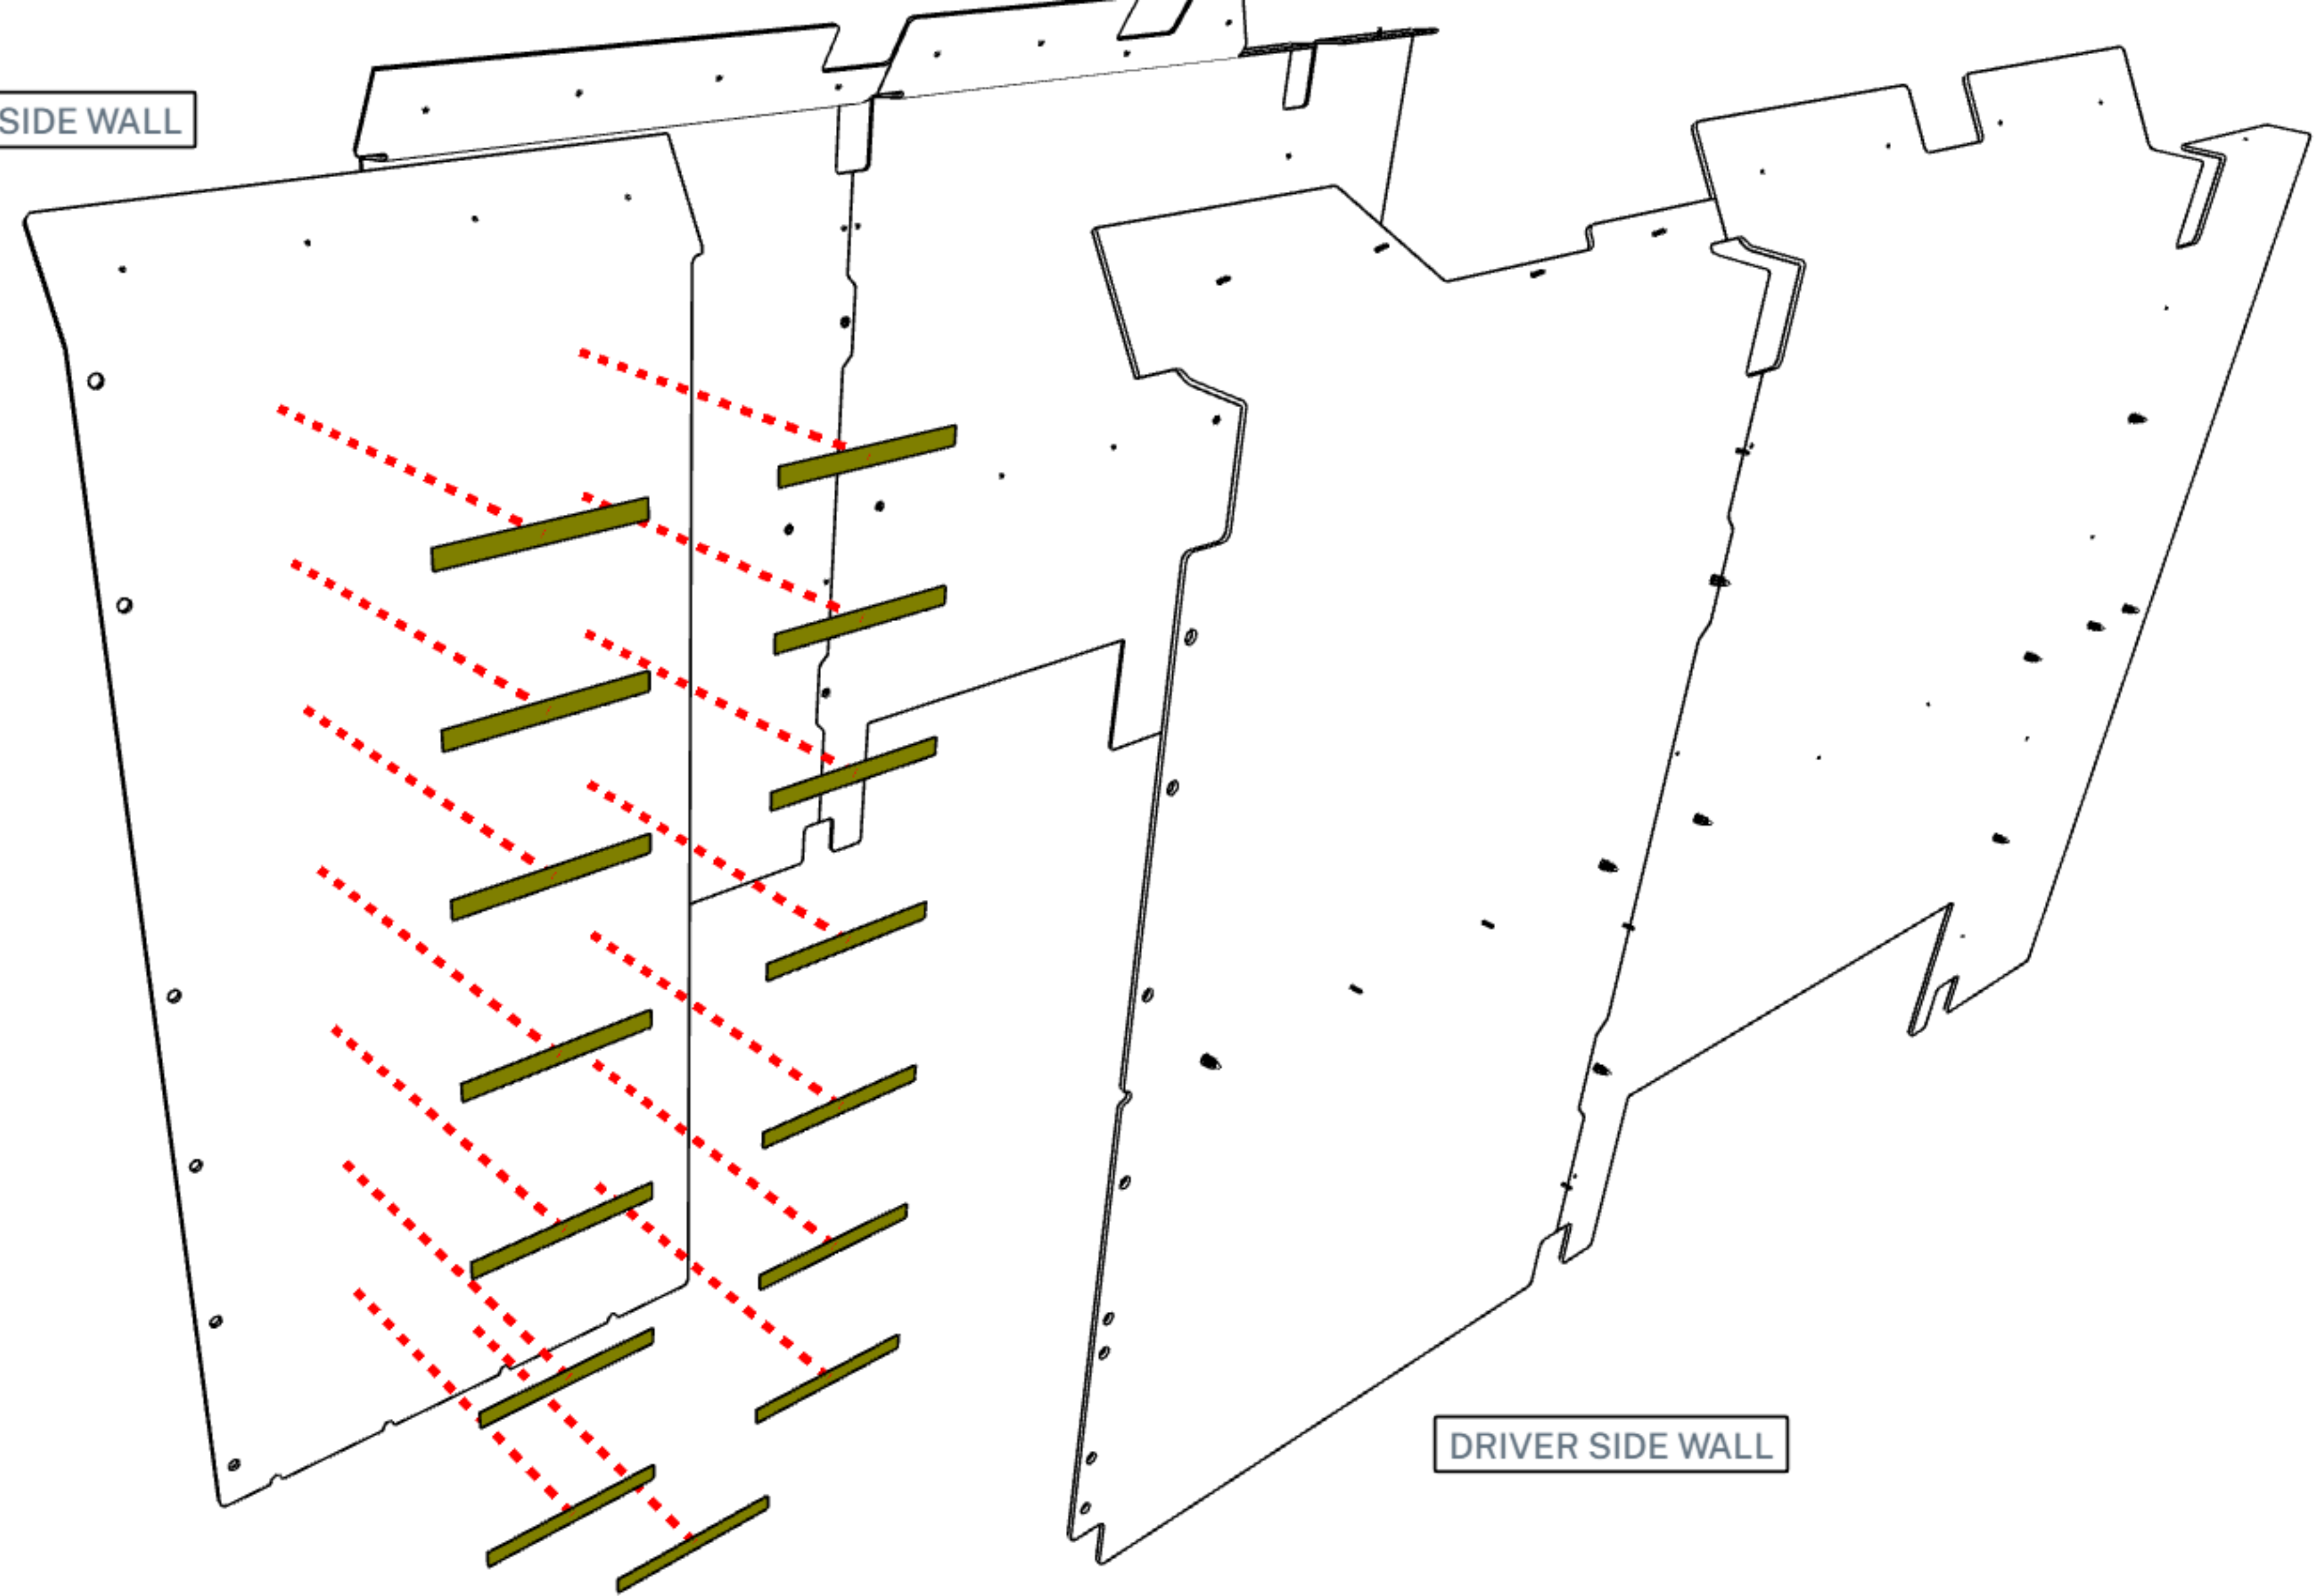


DRIVER SIDE WALL

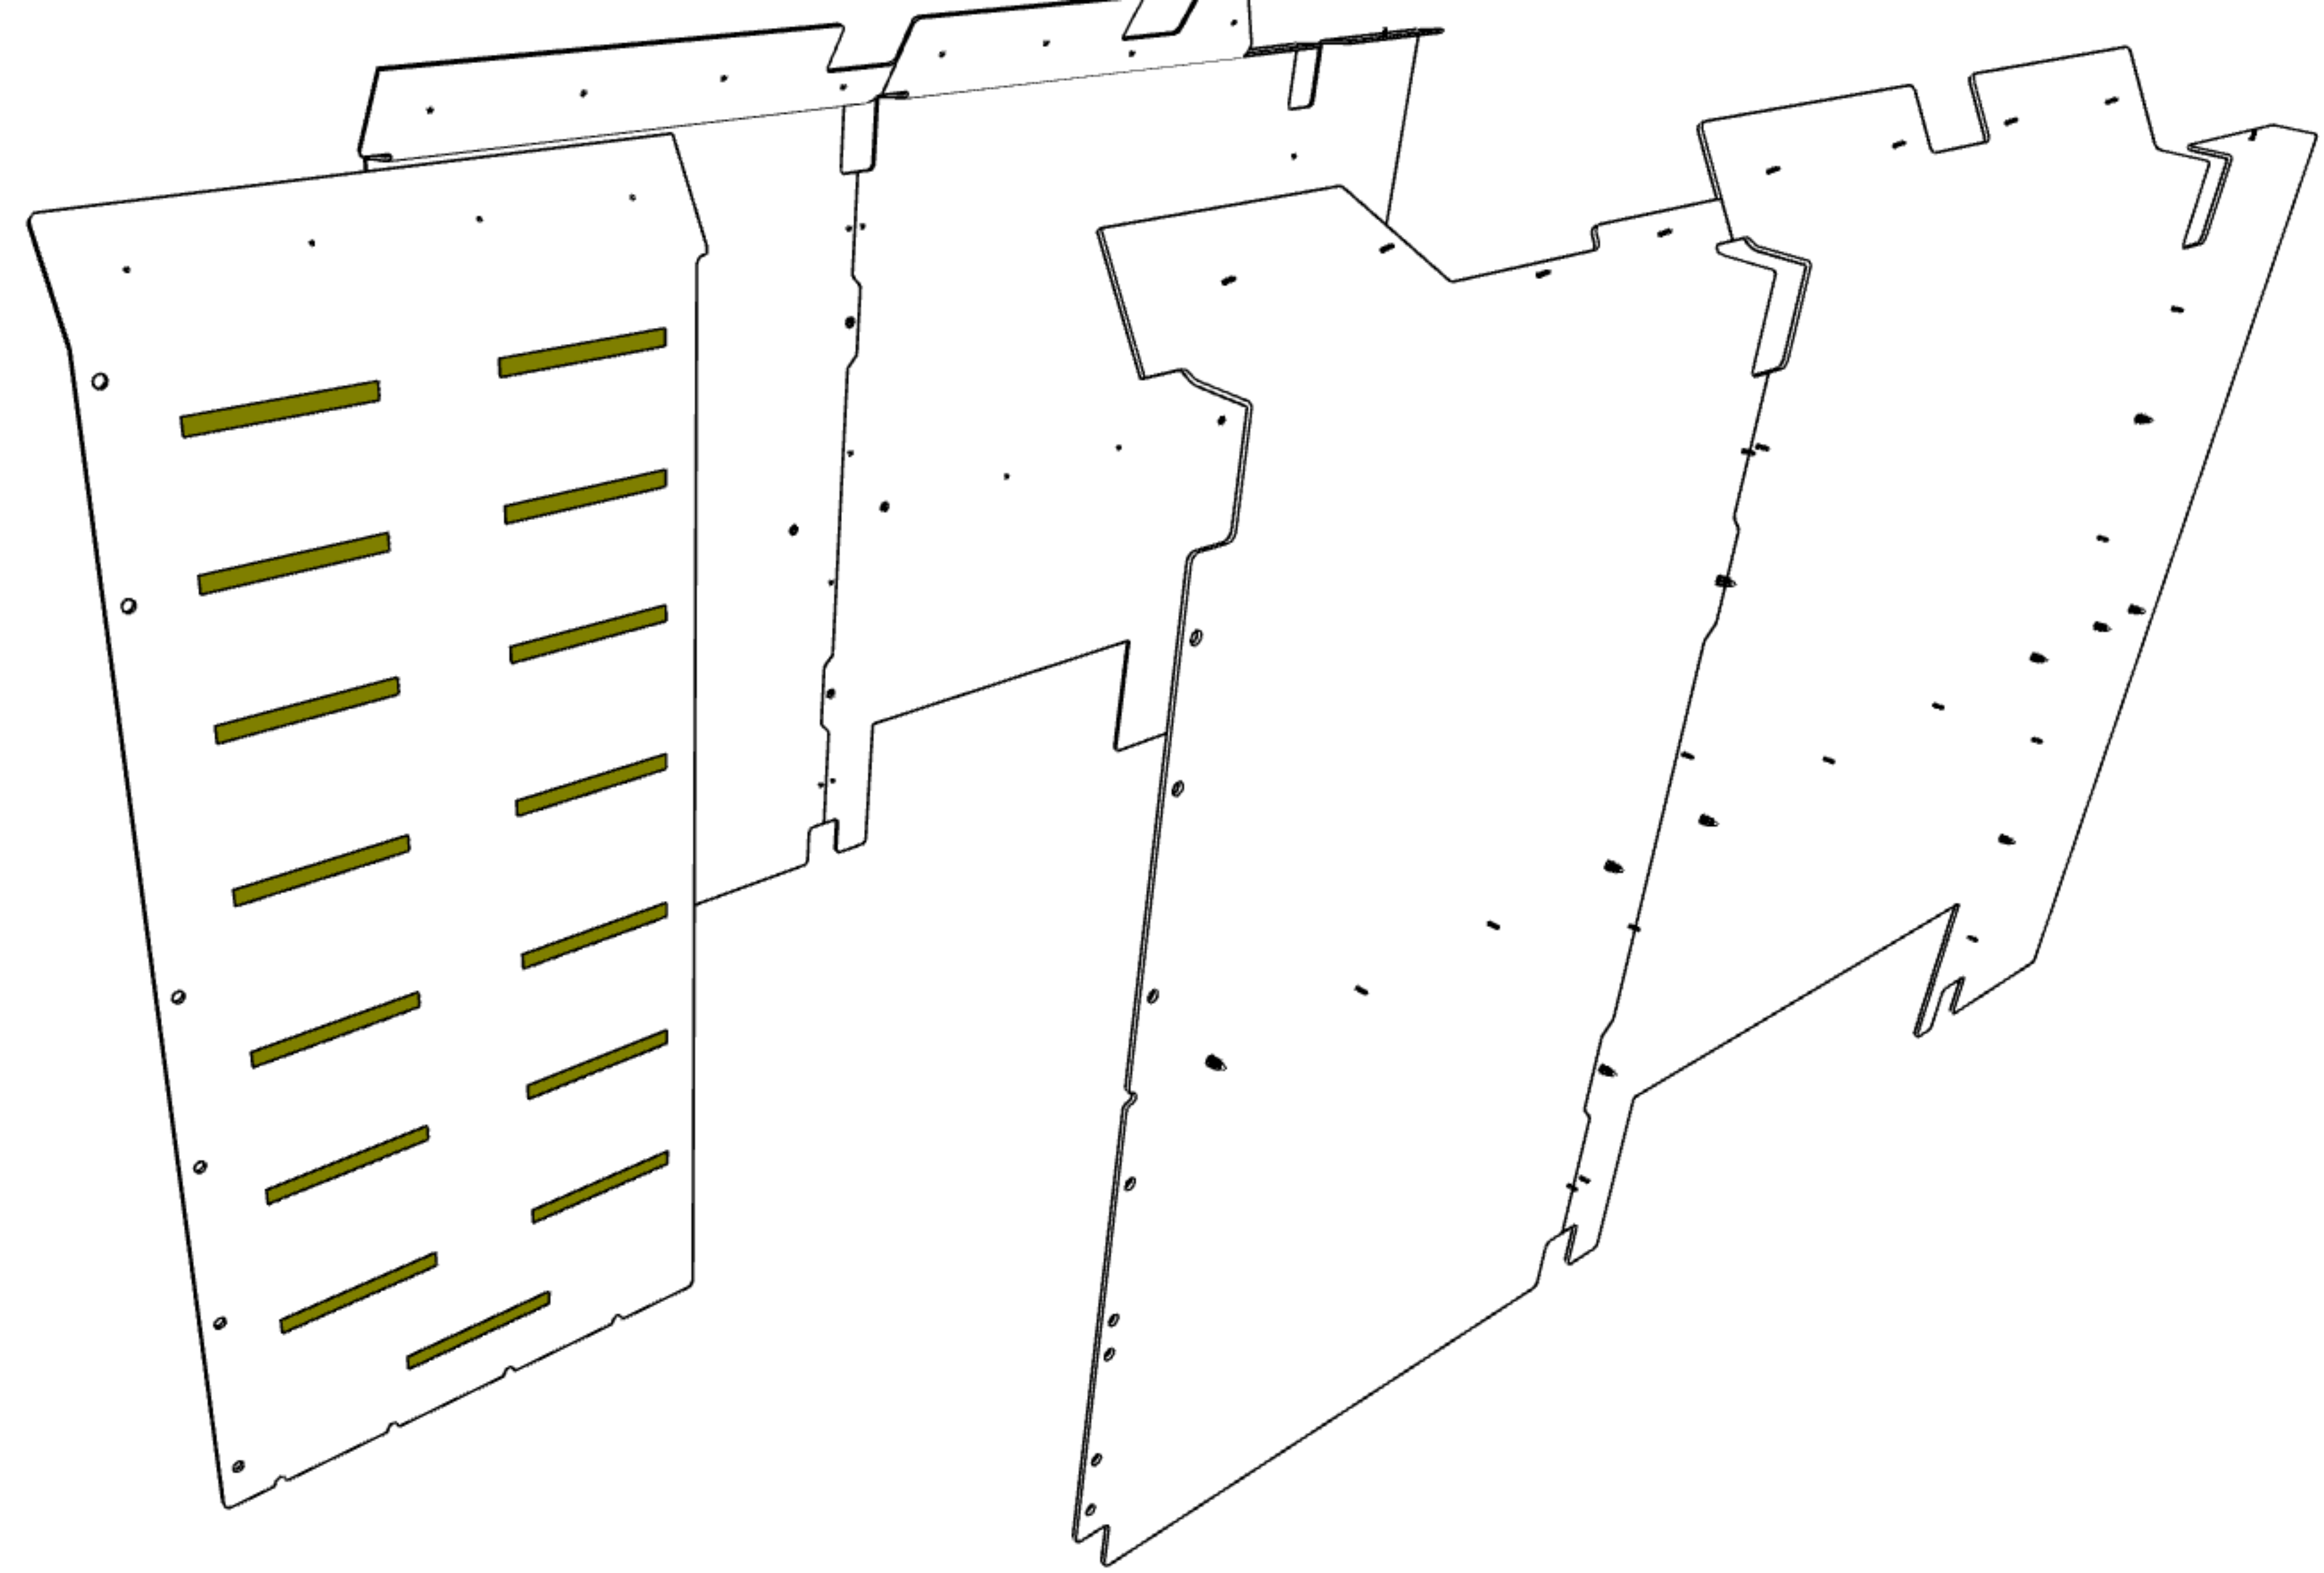

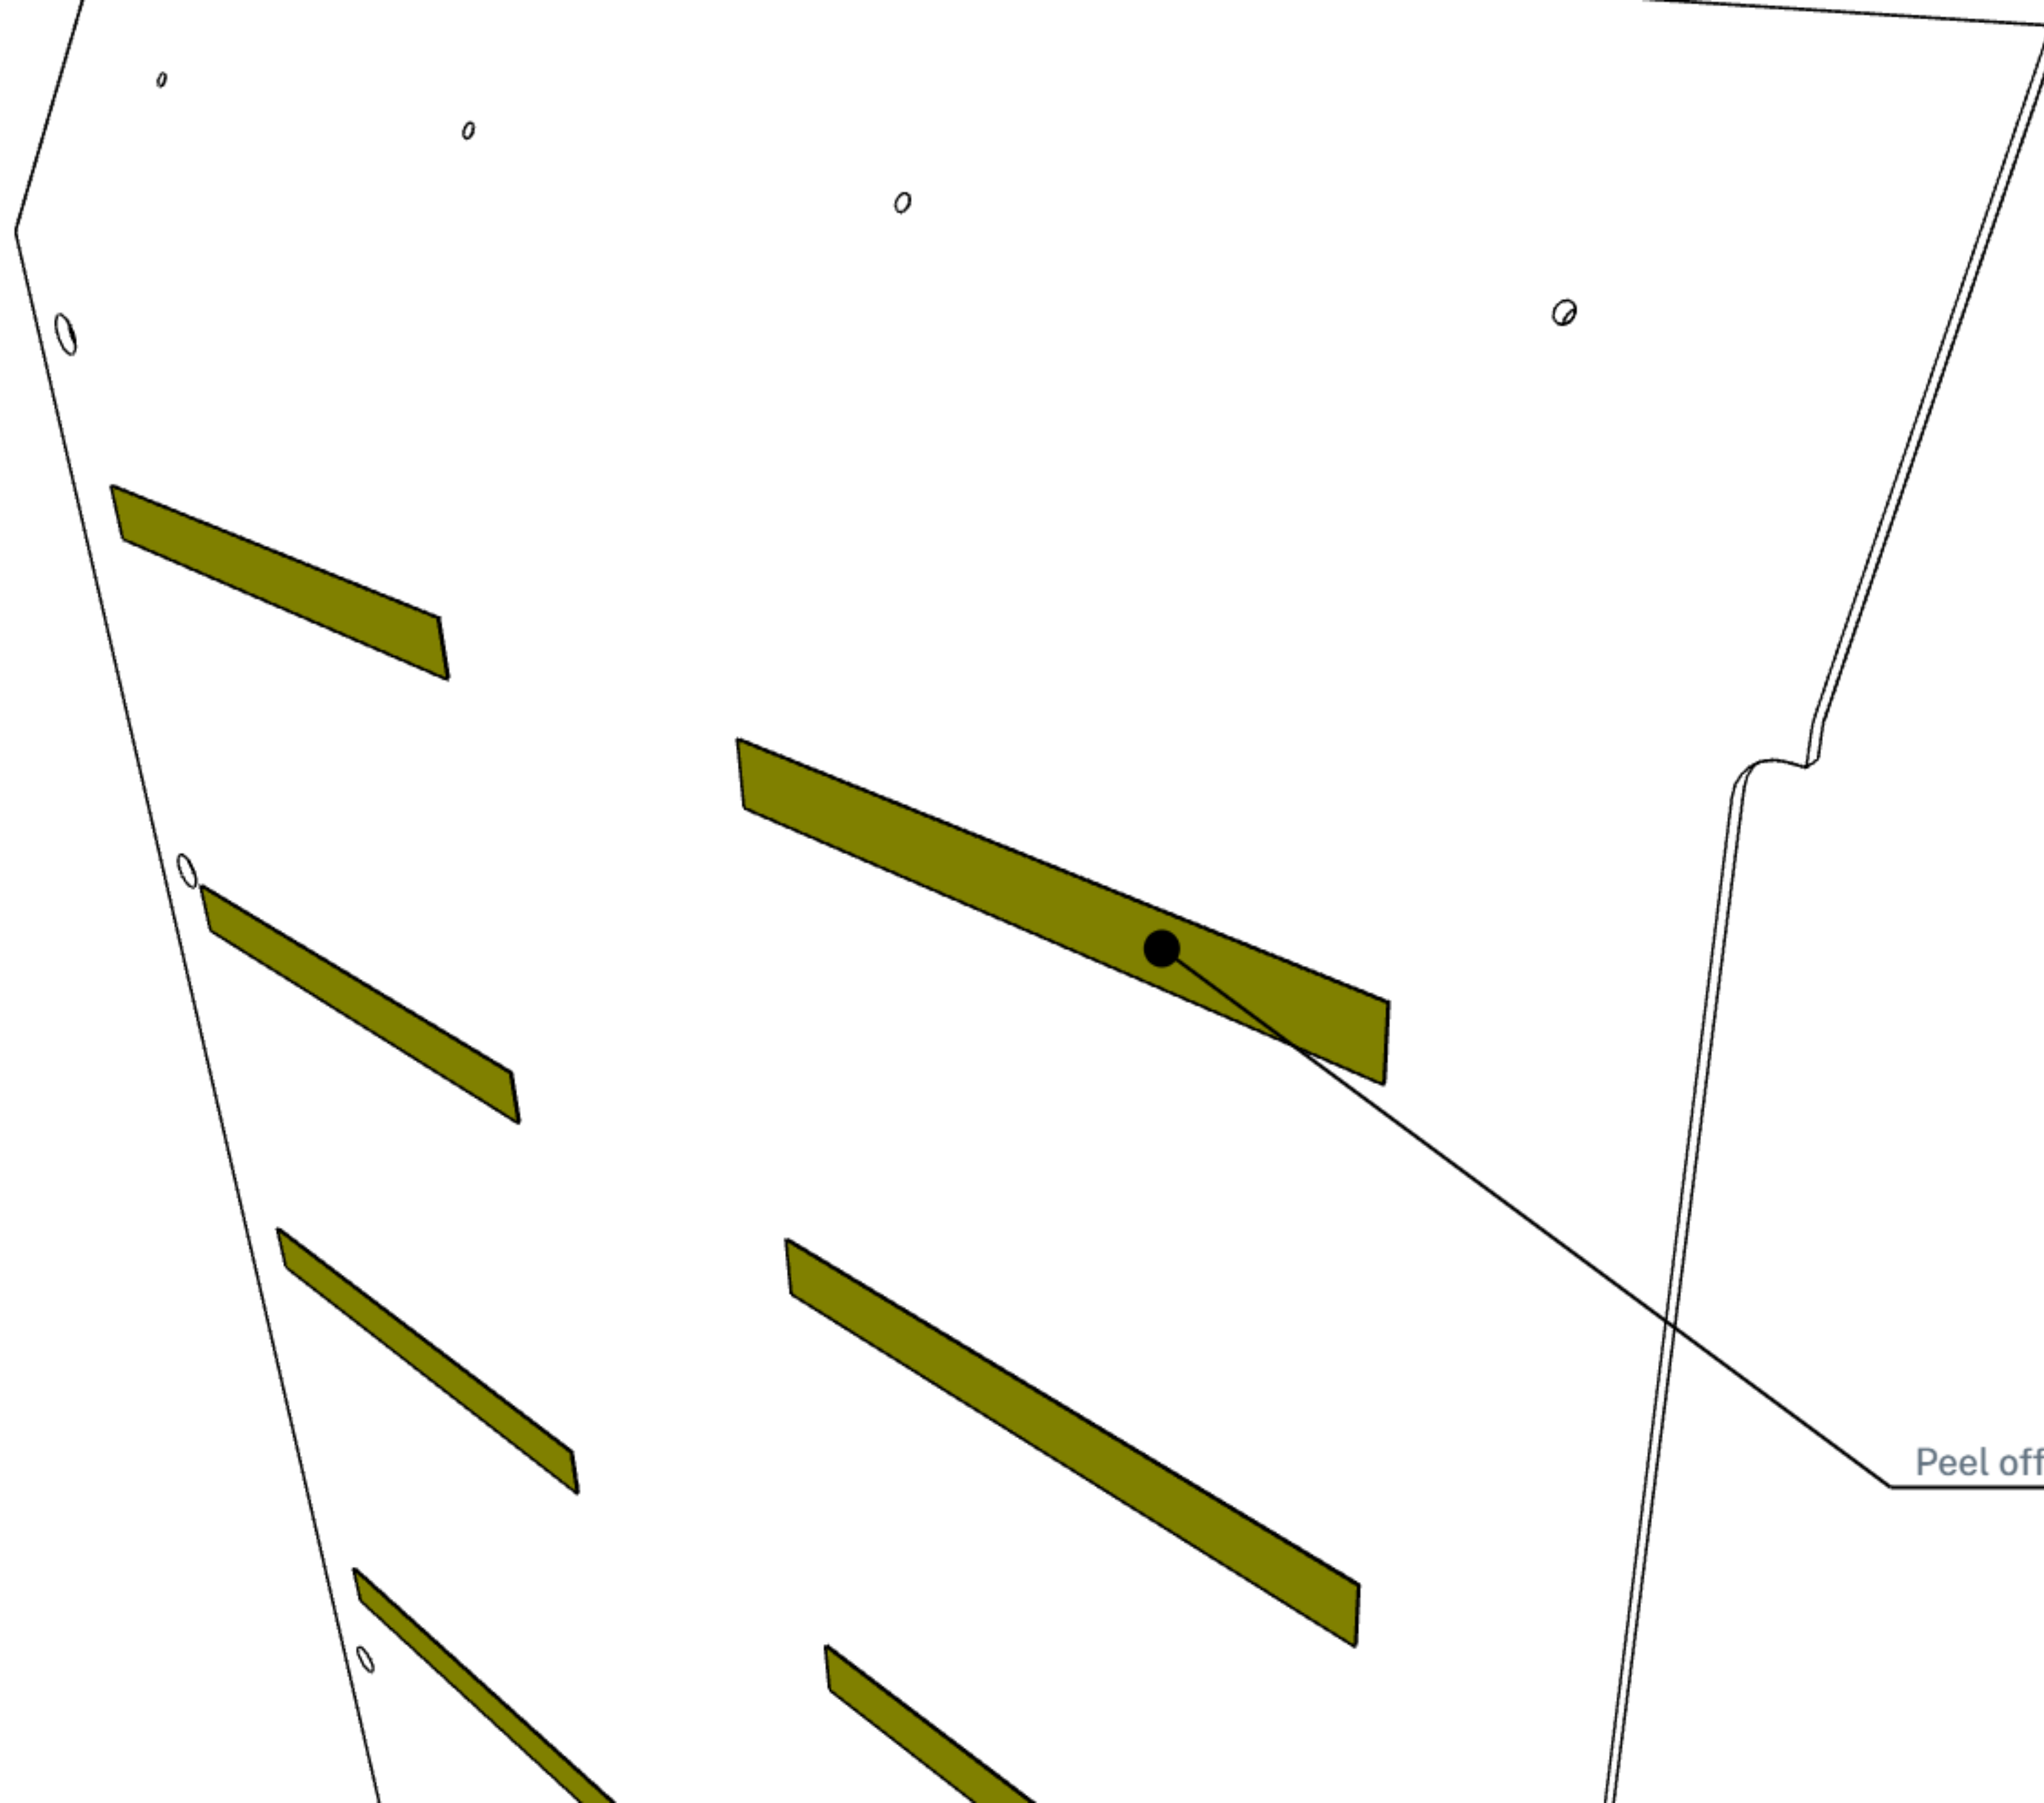


Peel off protective layer of all the double sided tapes

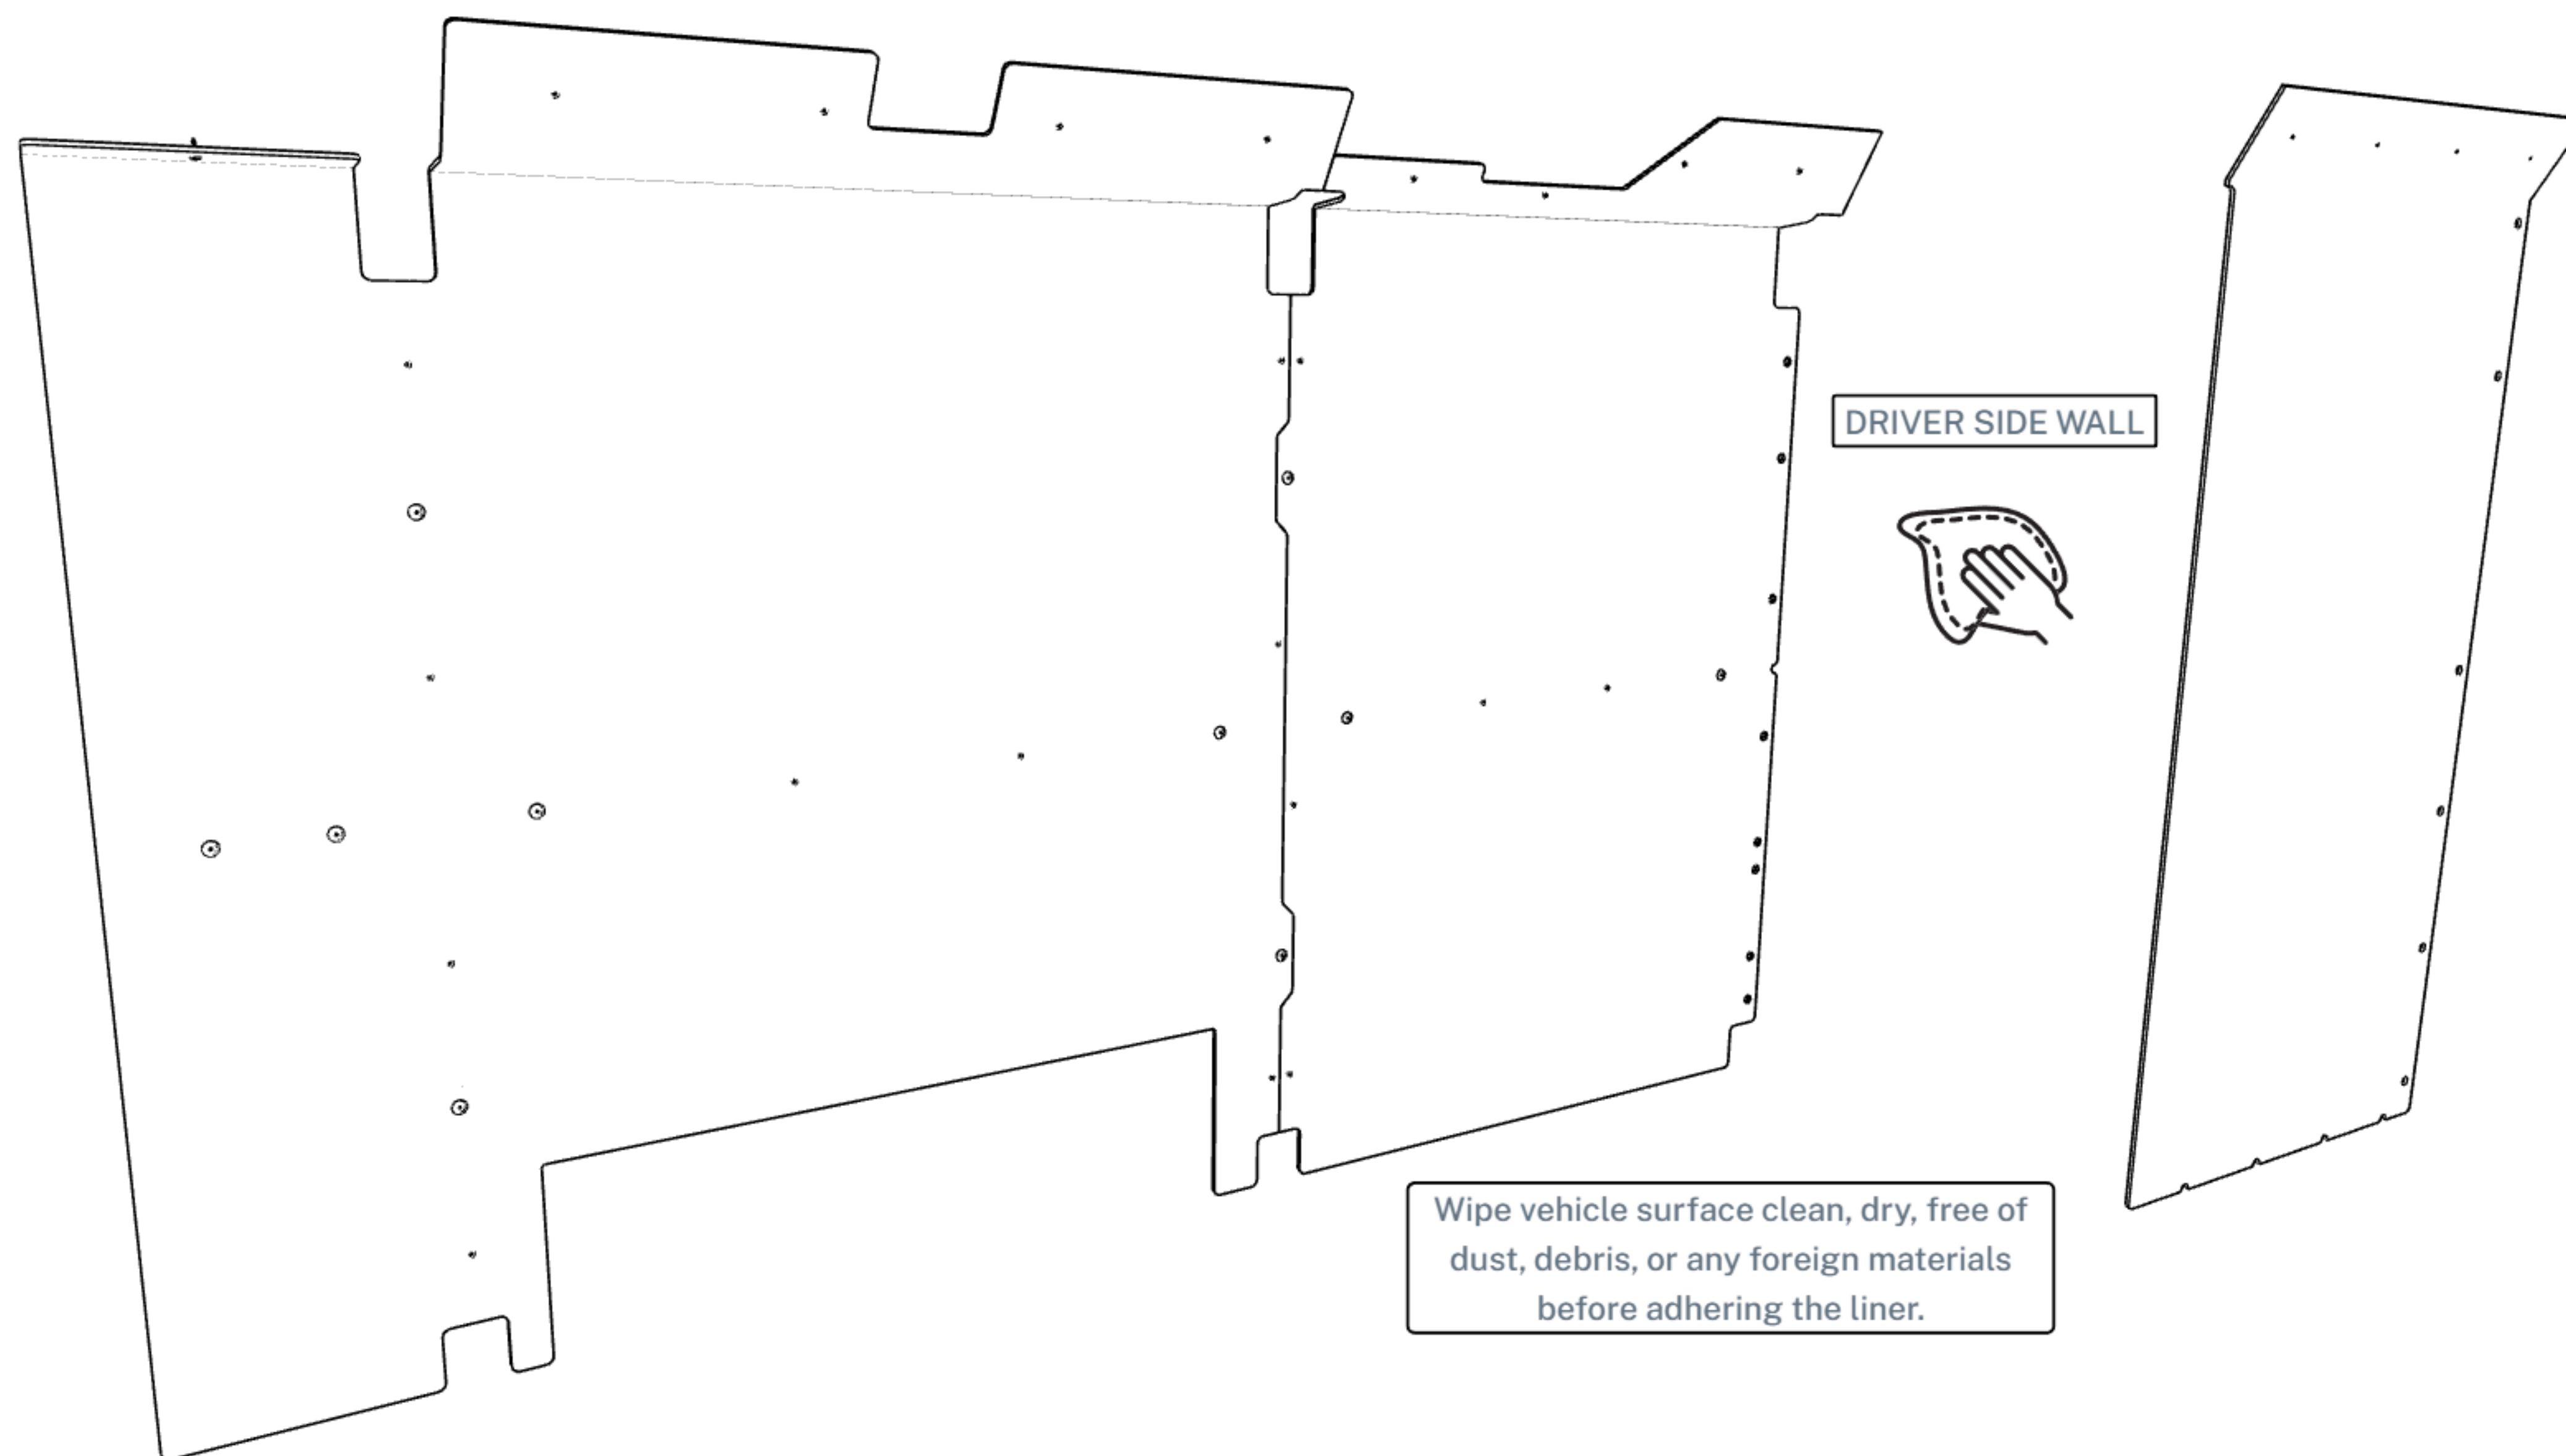


DRIVER SIDE WALL





Wipe vehicle surface clean, dry, free of
dust, debris, or any foreign materials
before adhering the liner.

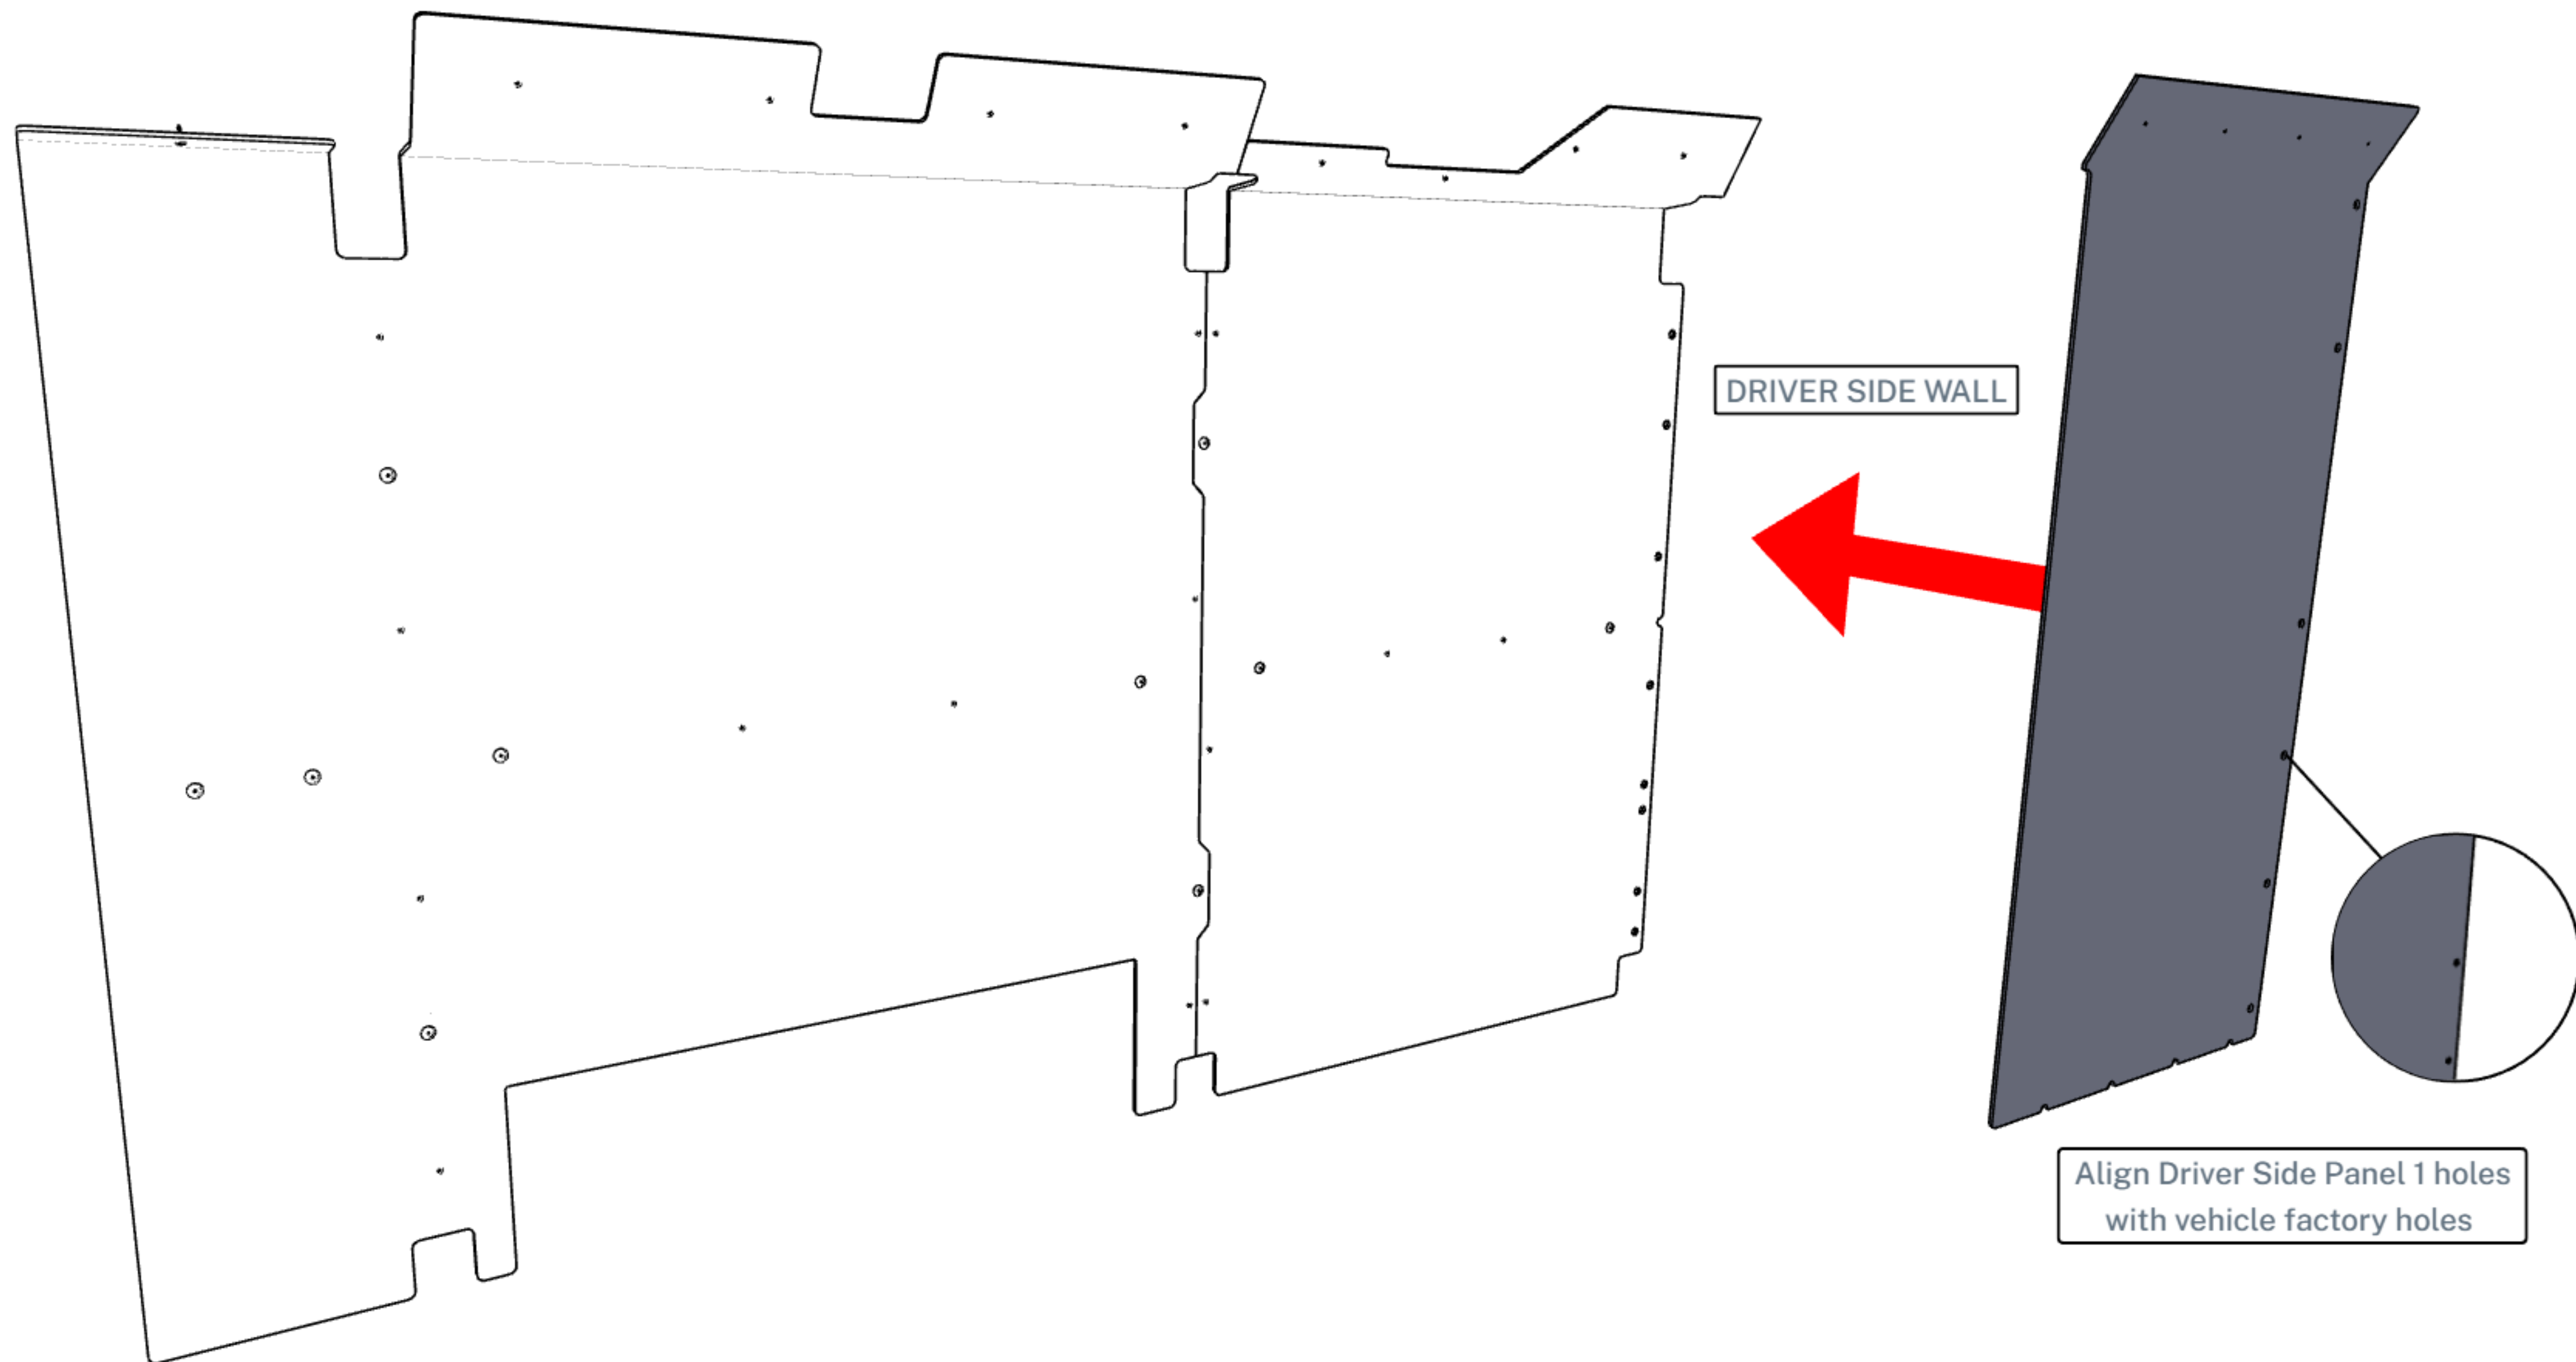


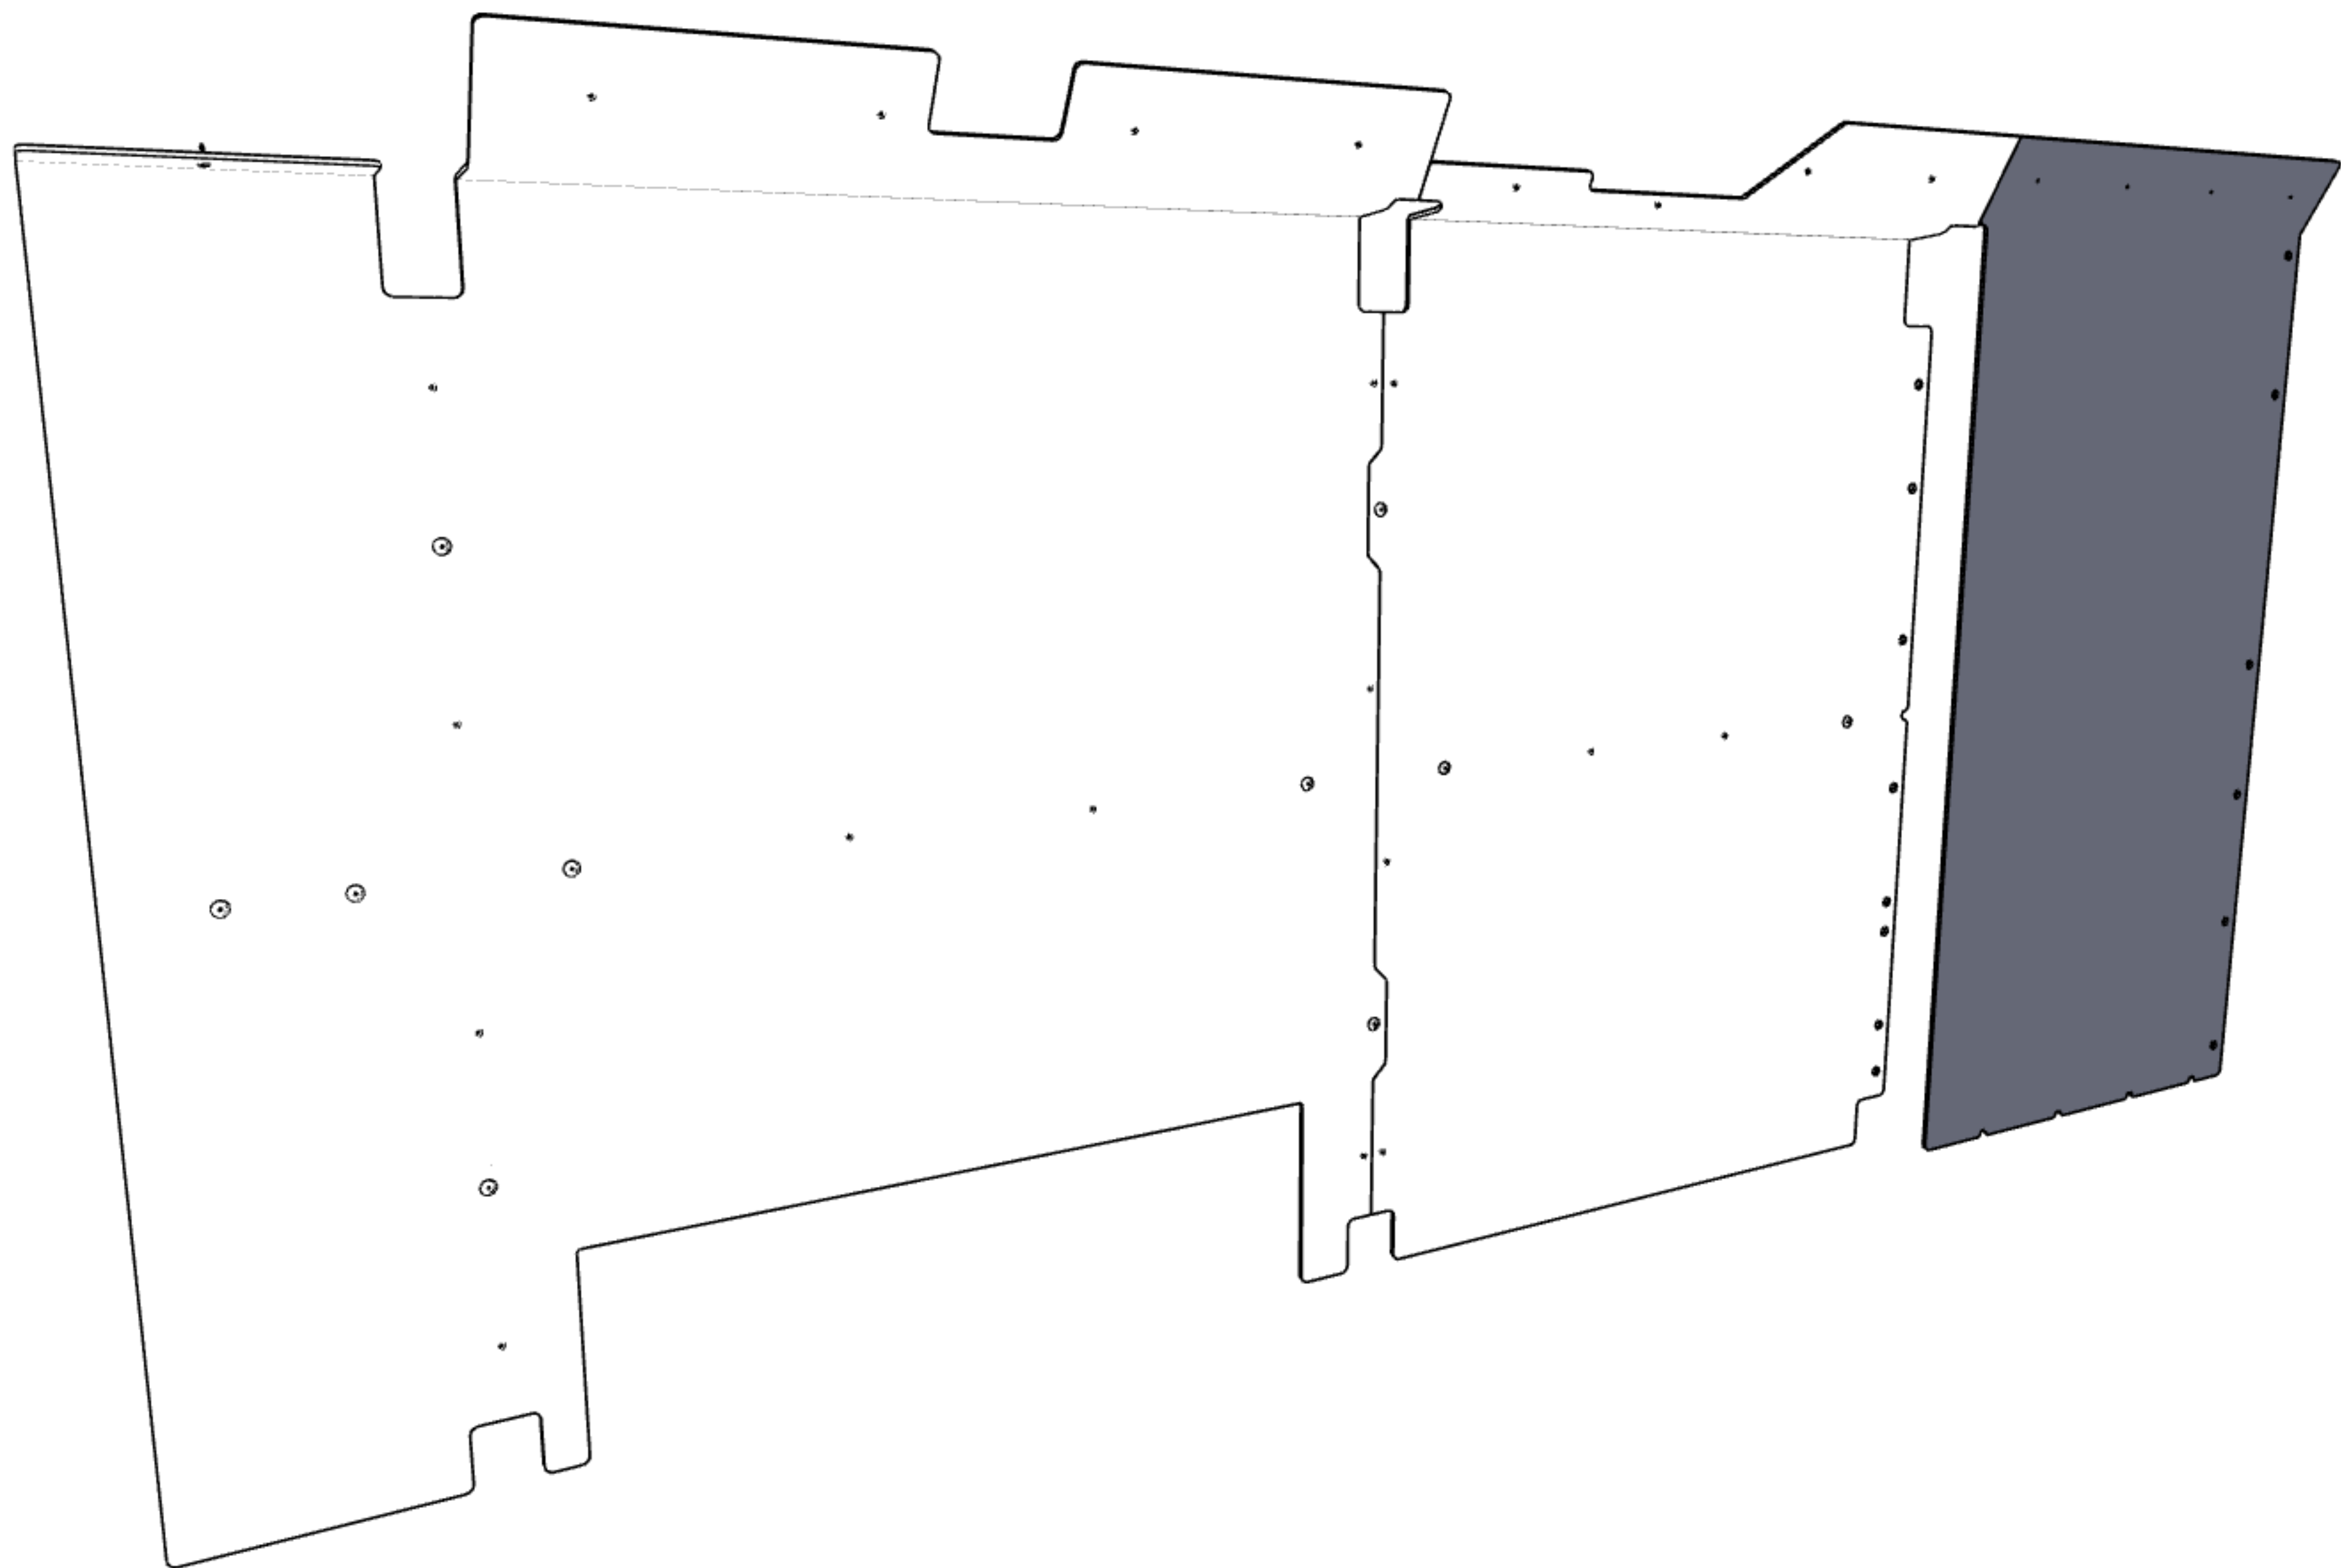



DRIVER SIDE WALL

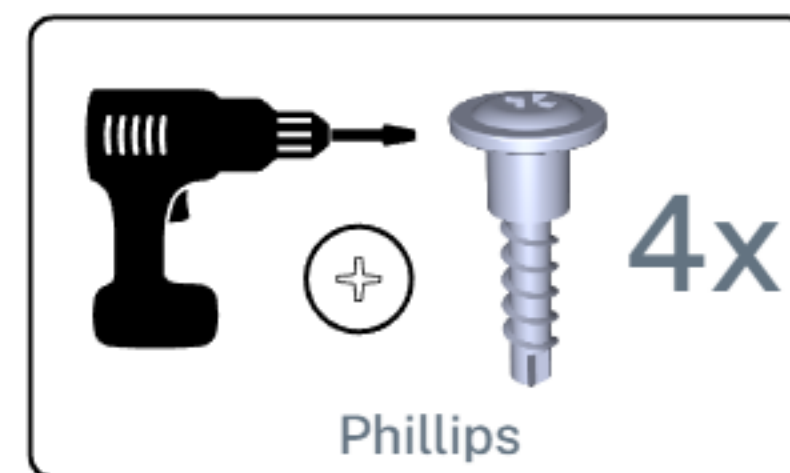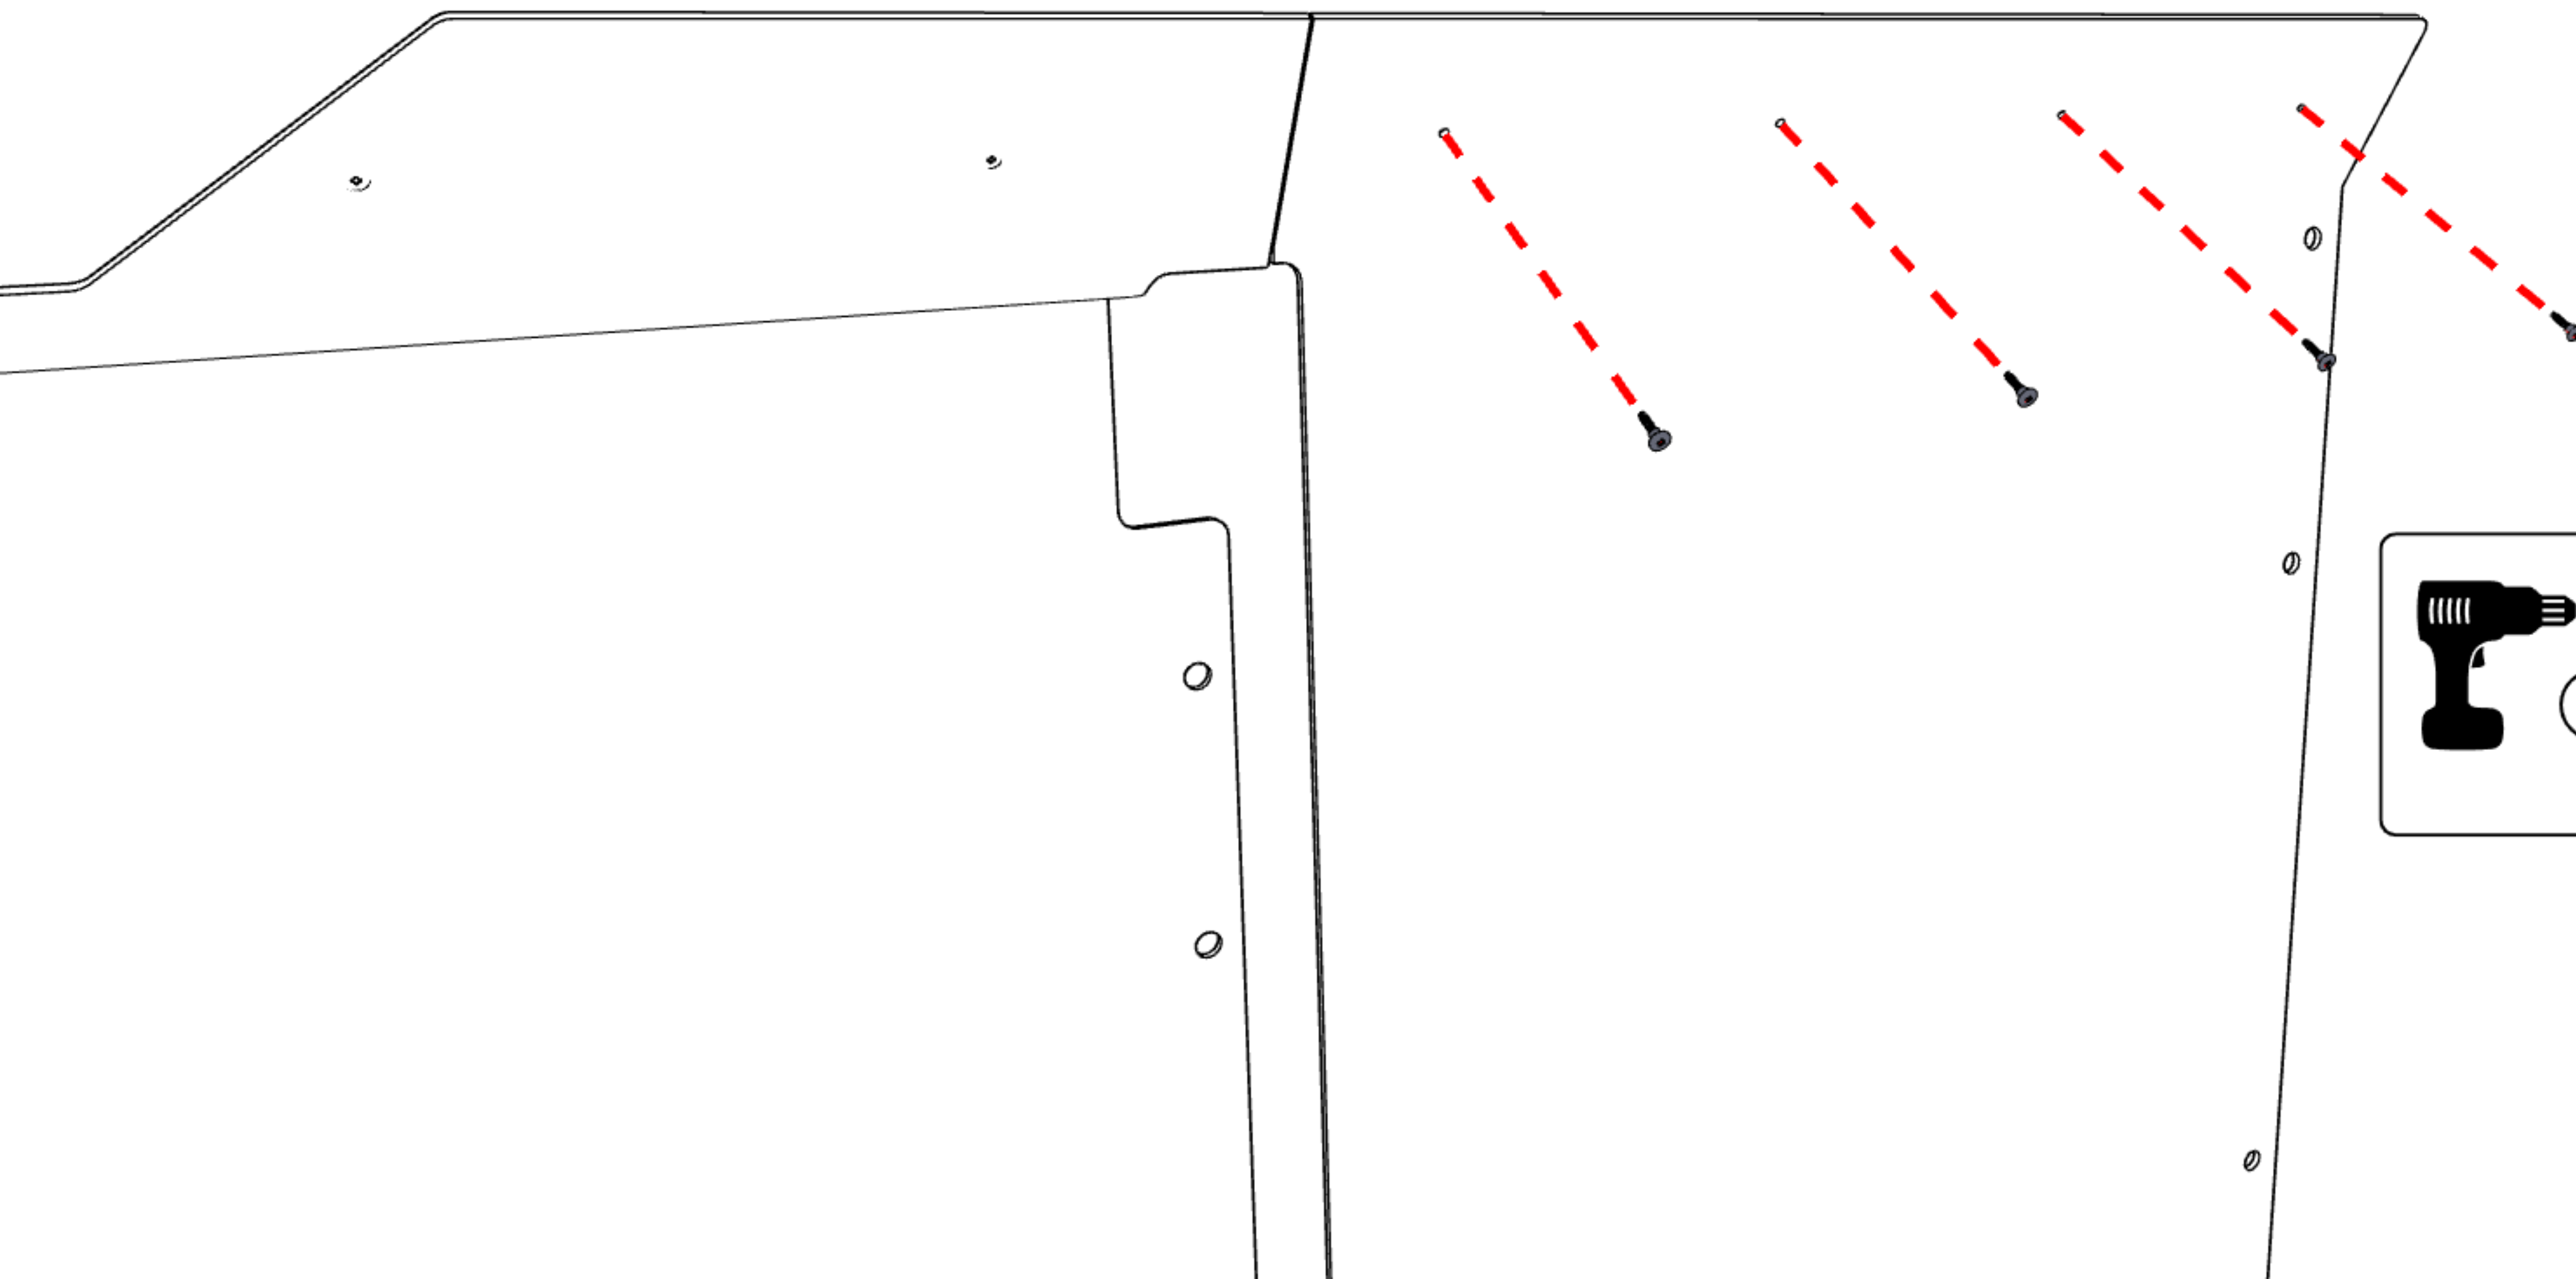


DRIVER SIDE WALL

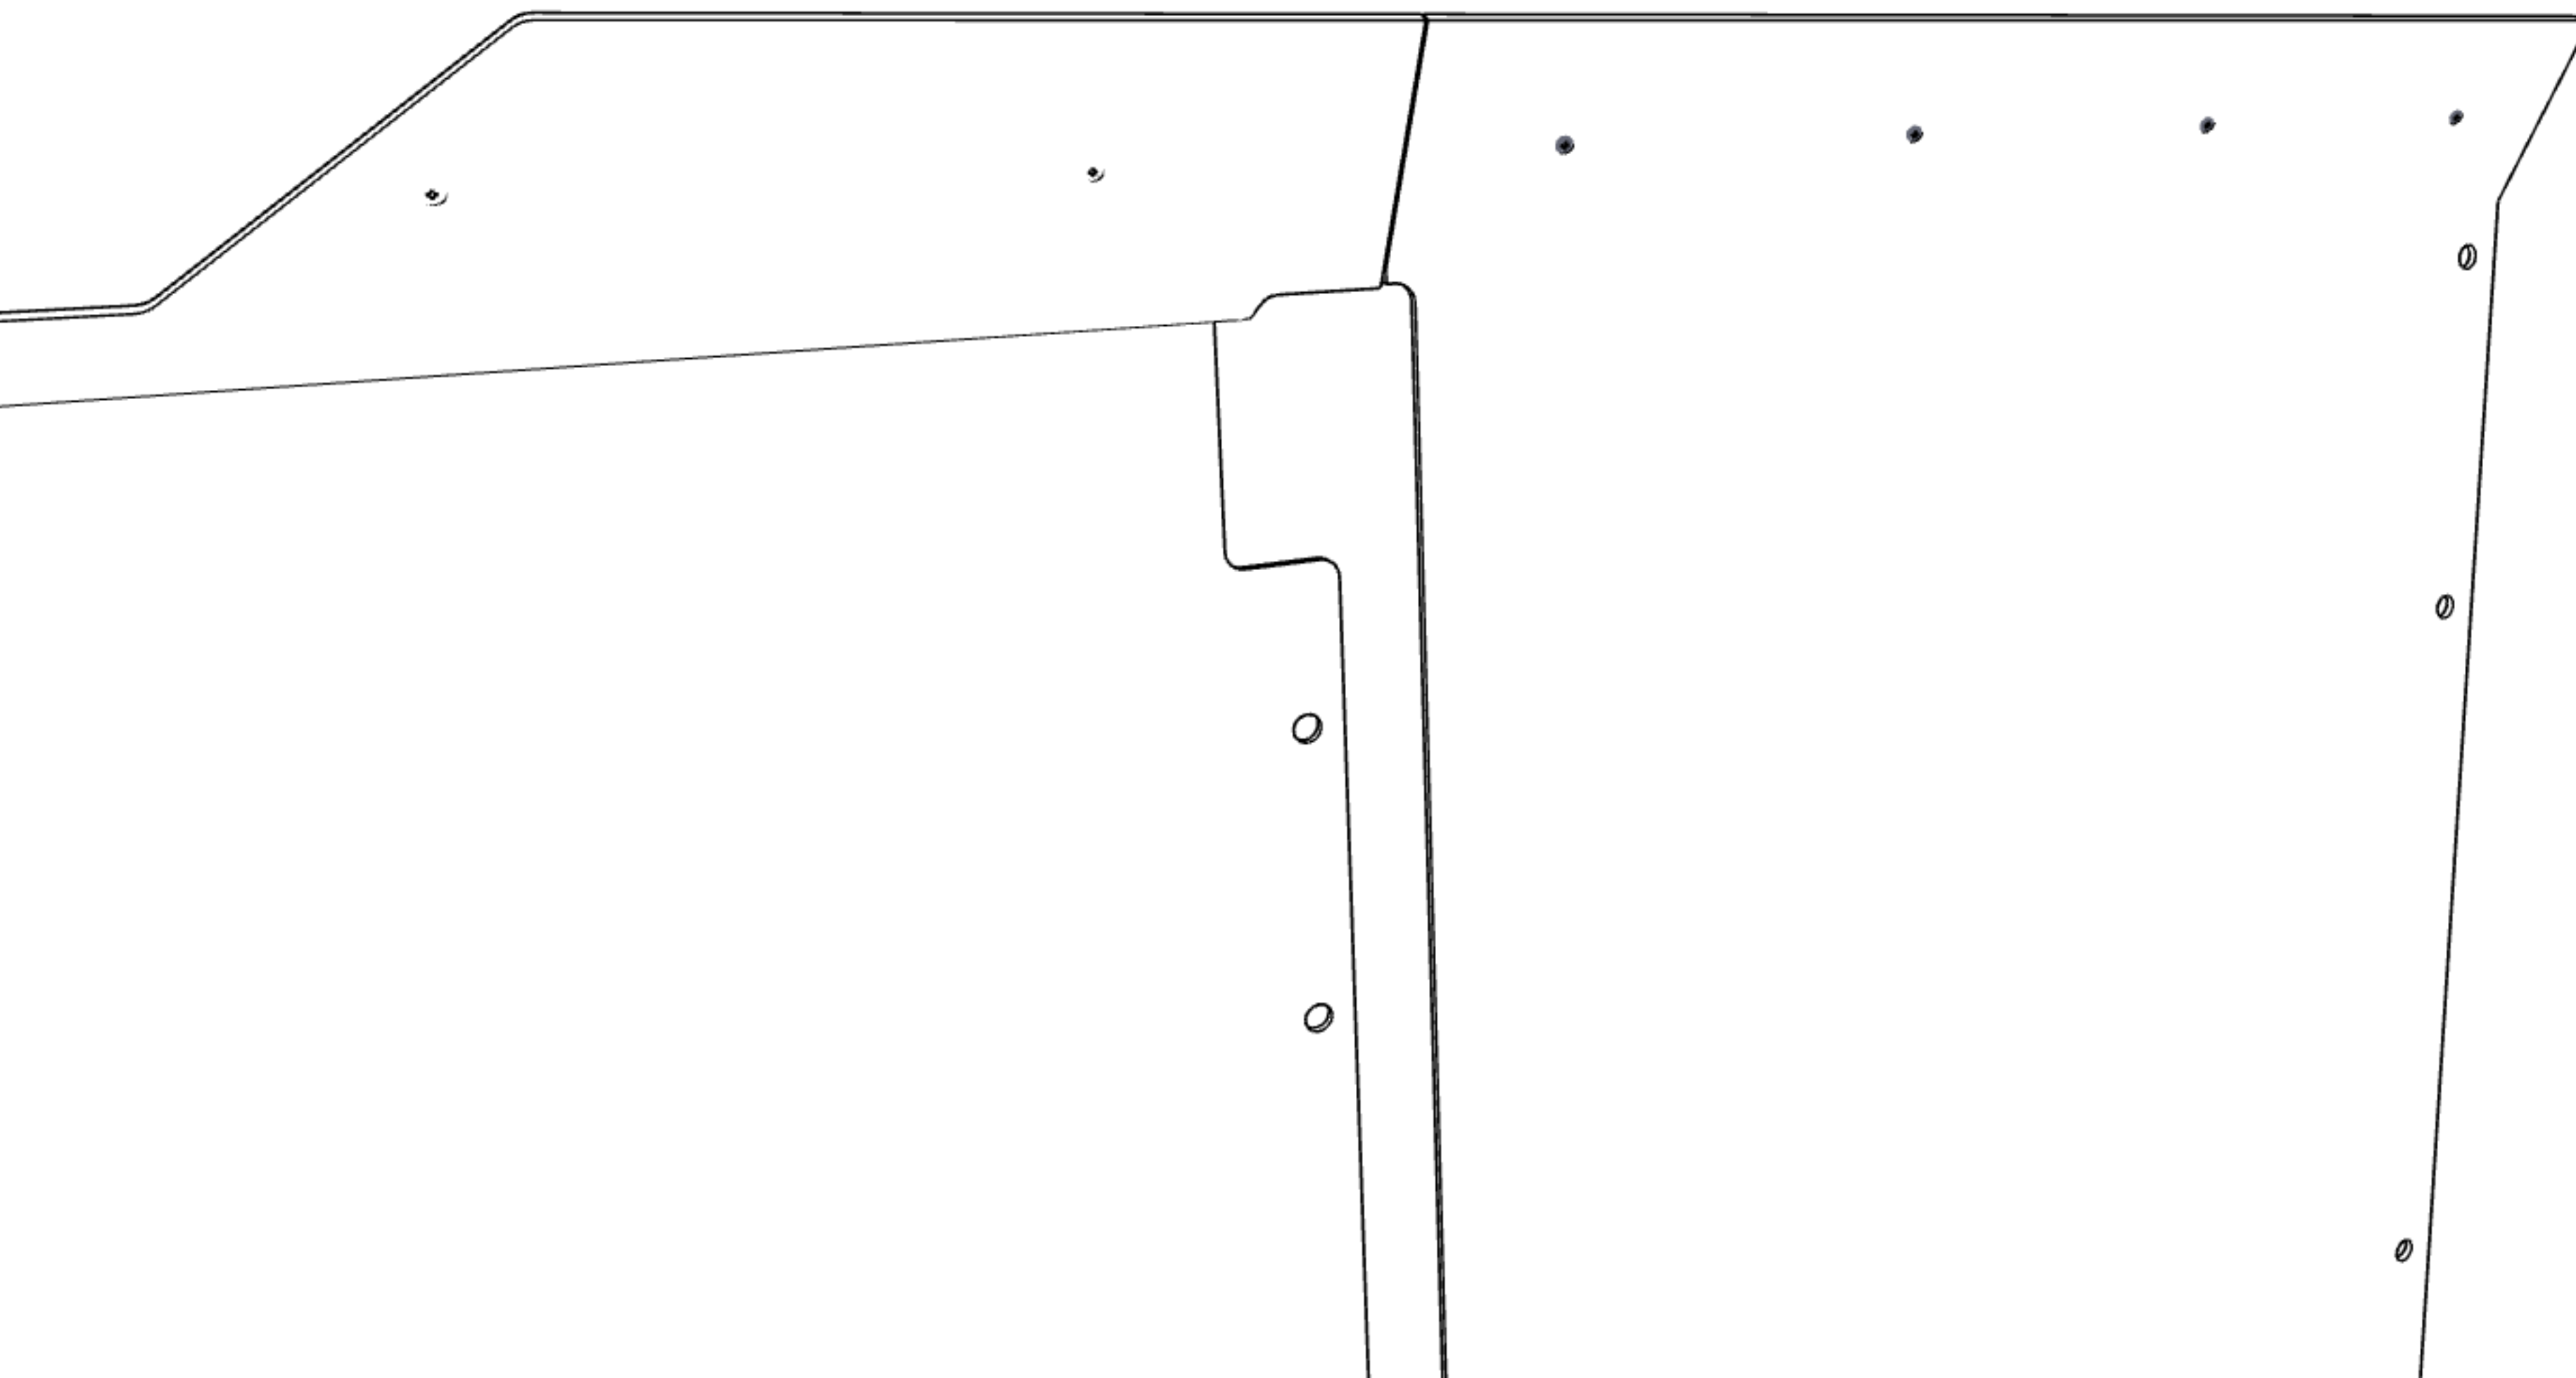

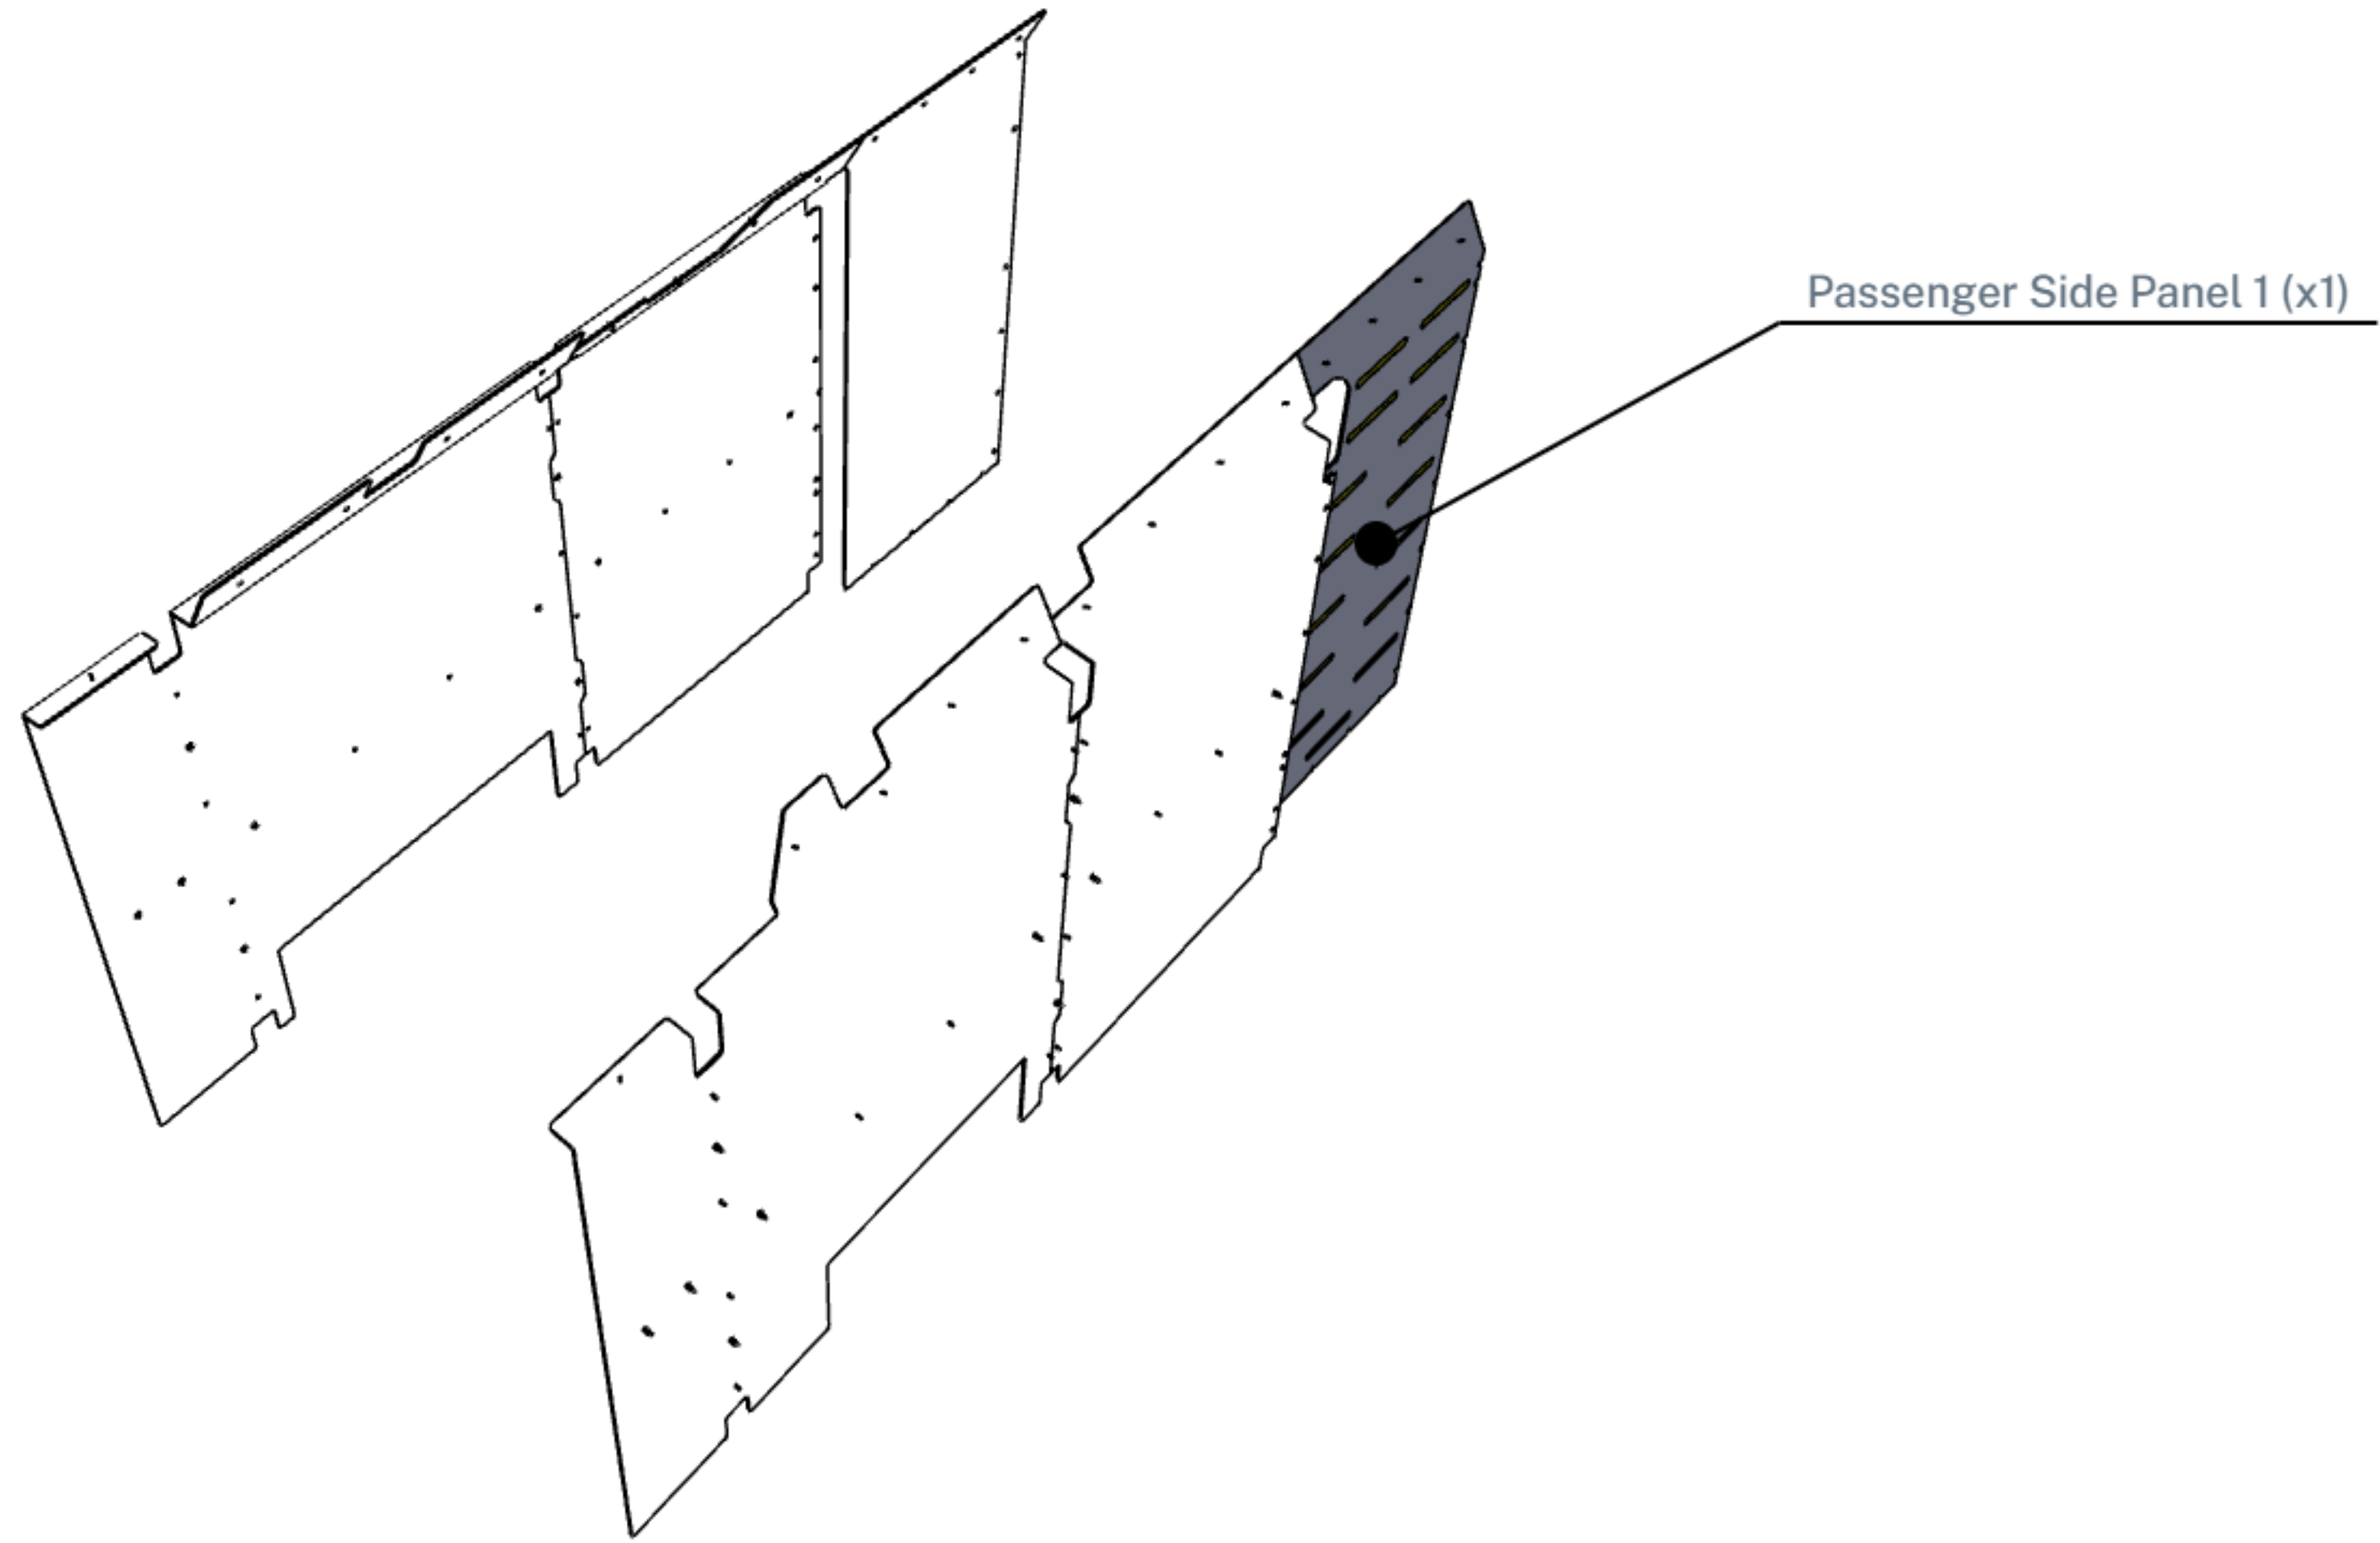

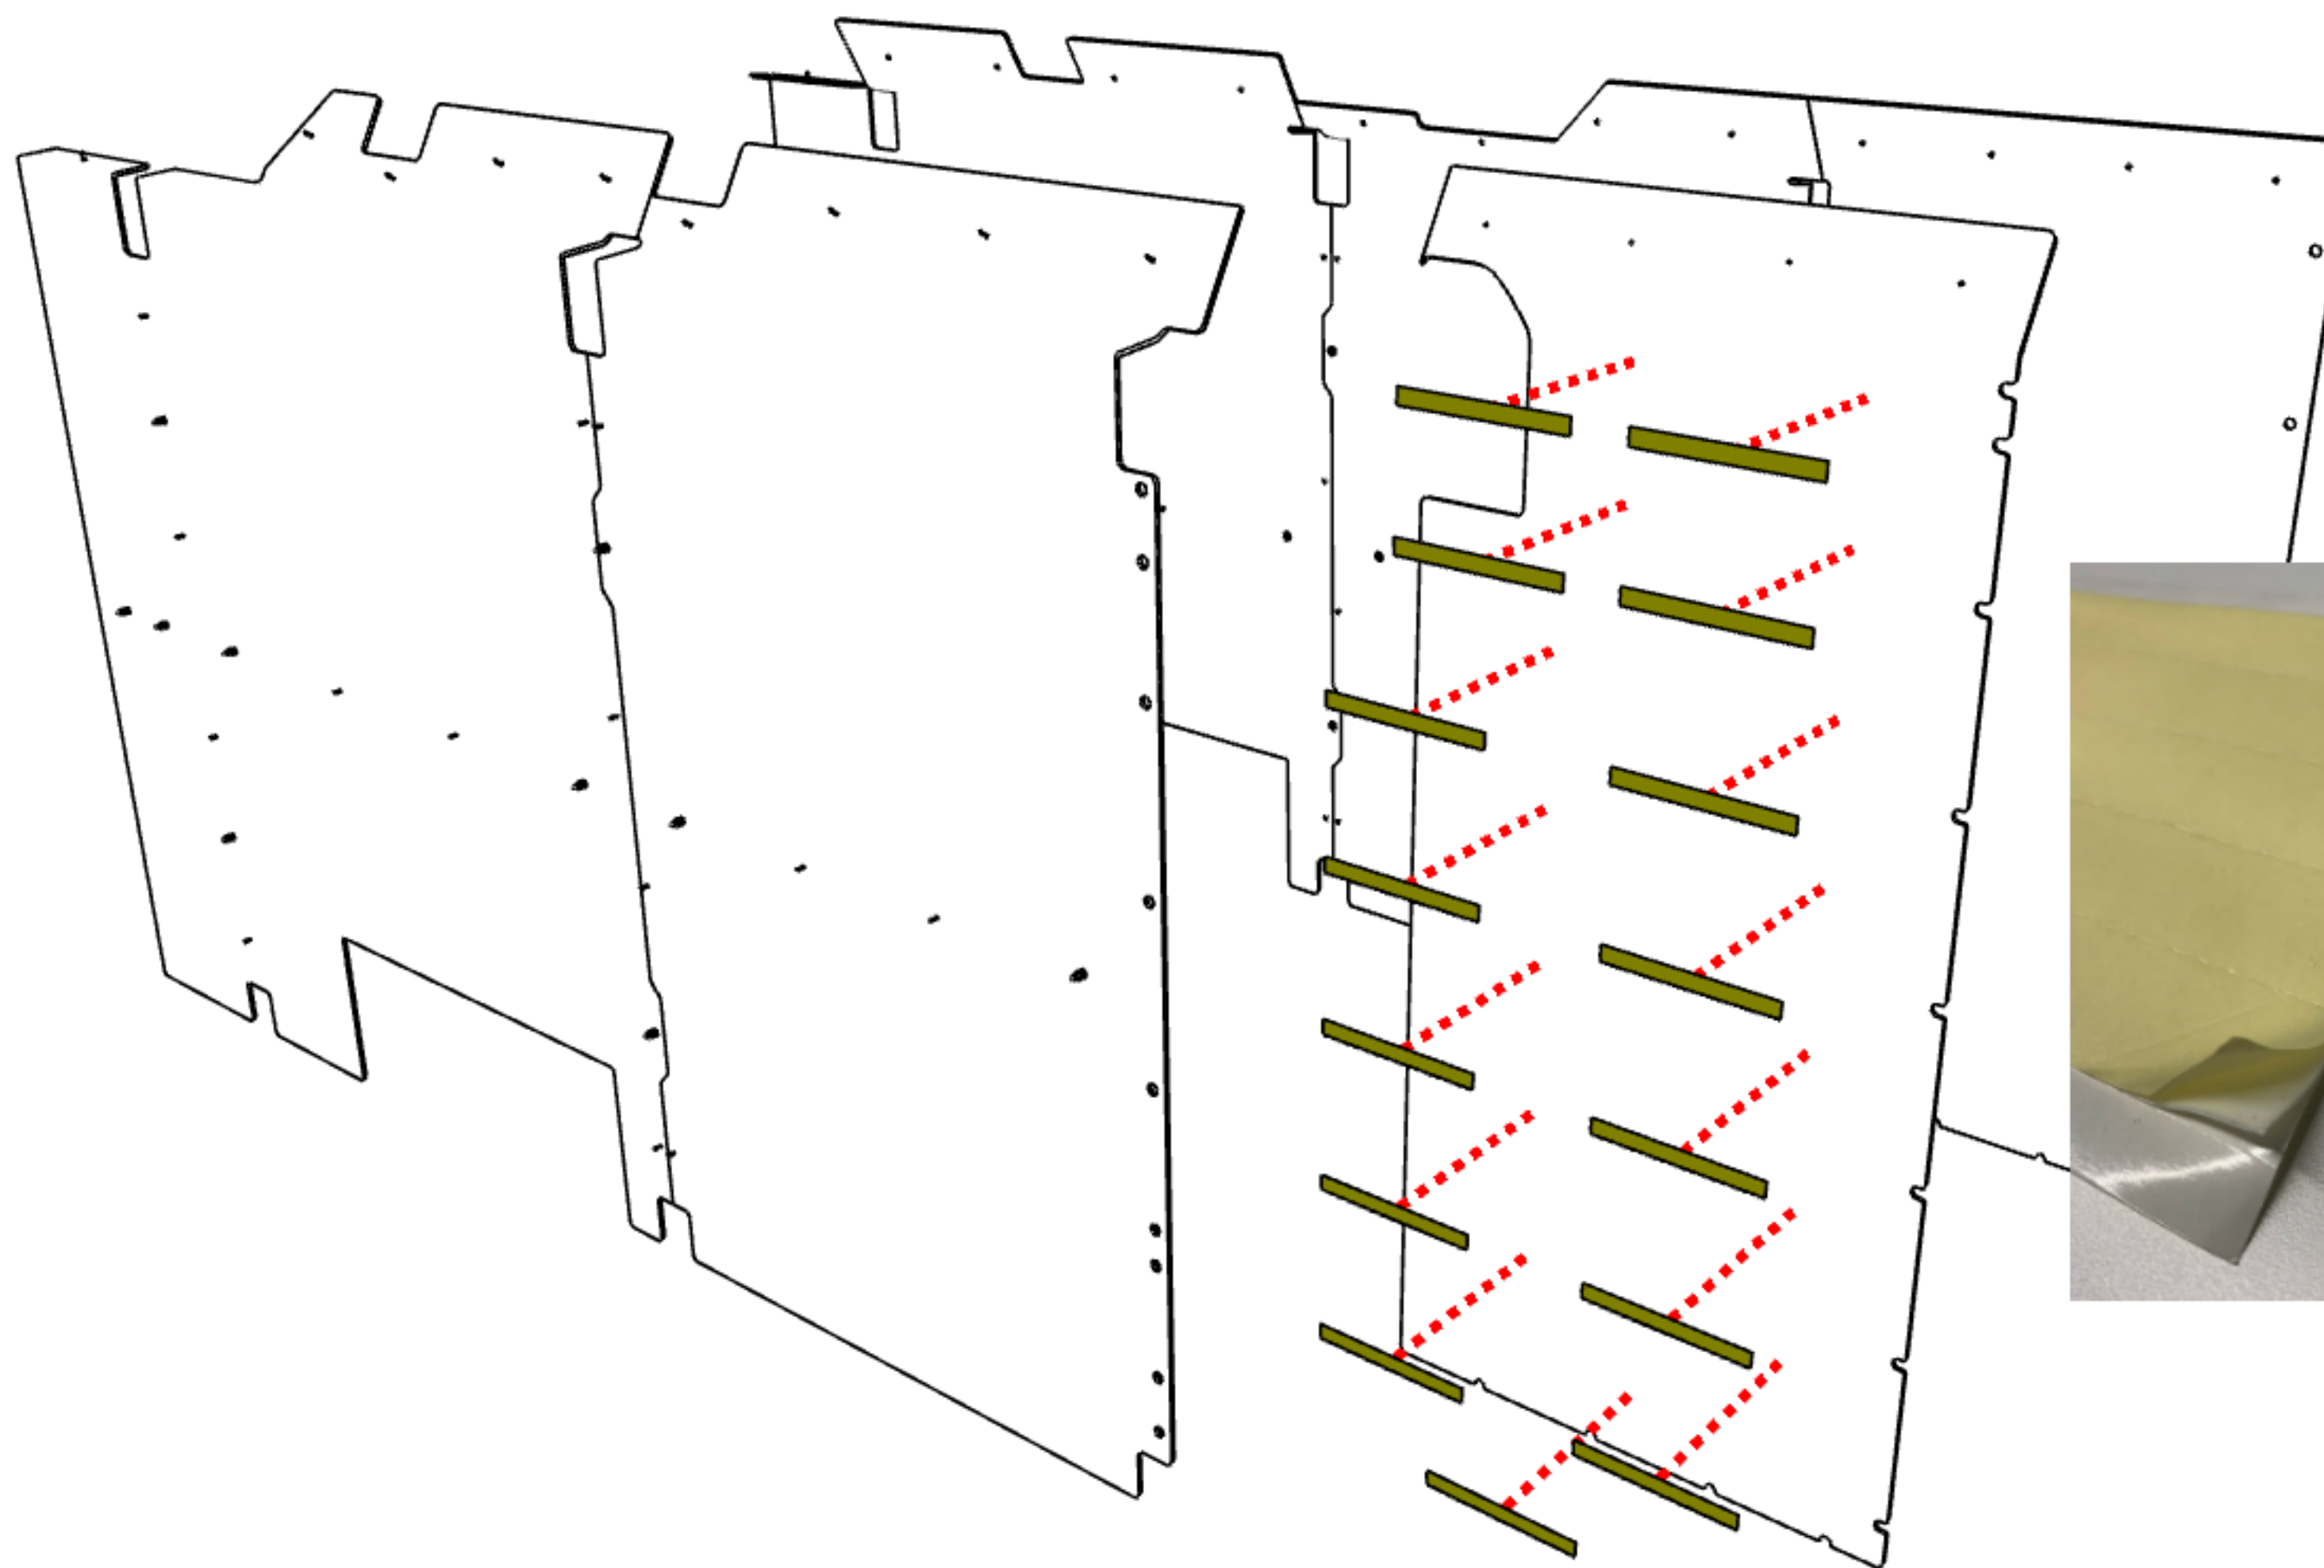


15x

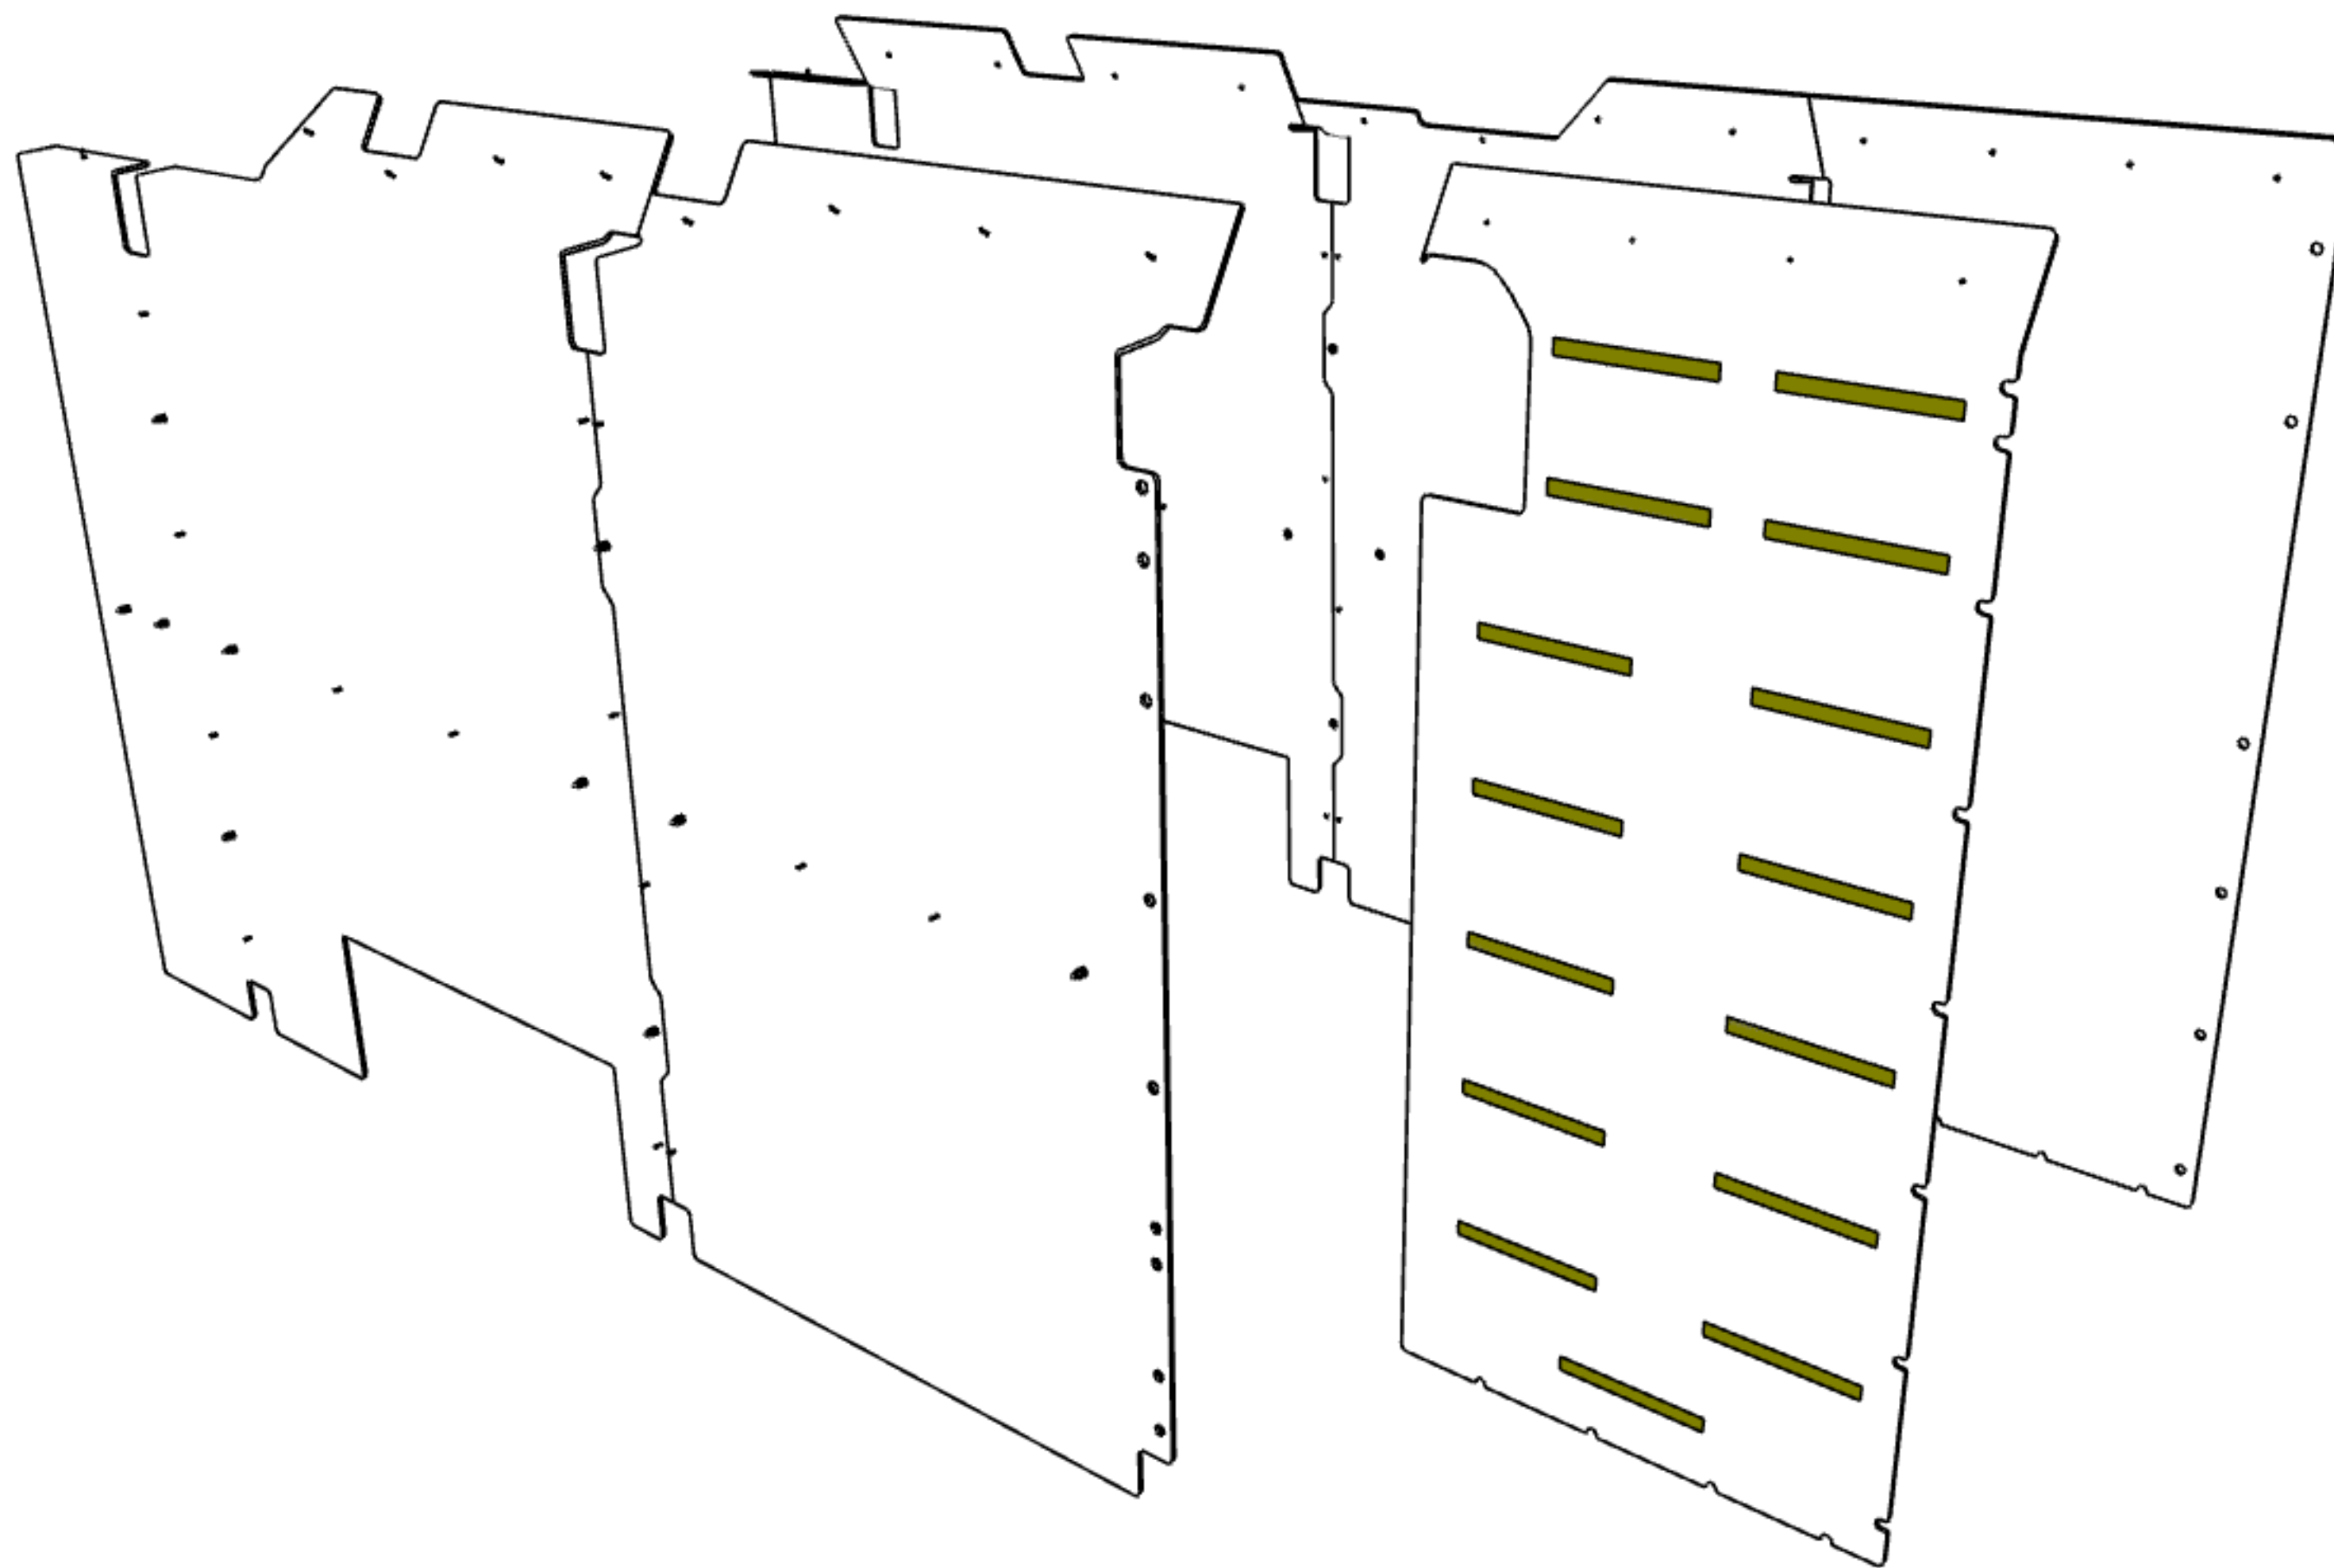




Peel off protective layer of all the double sided tapes

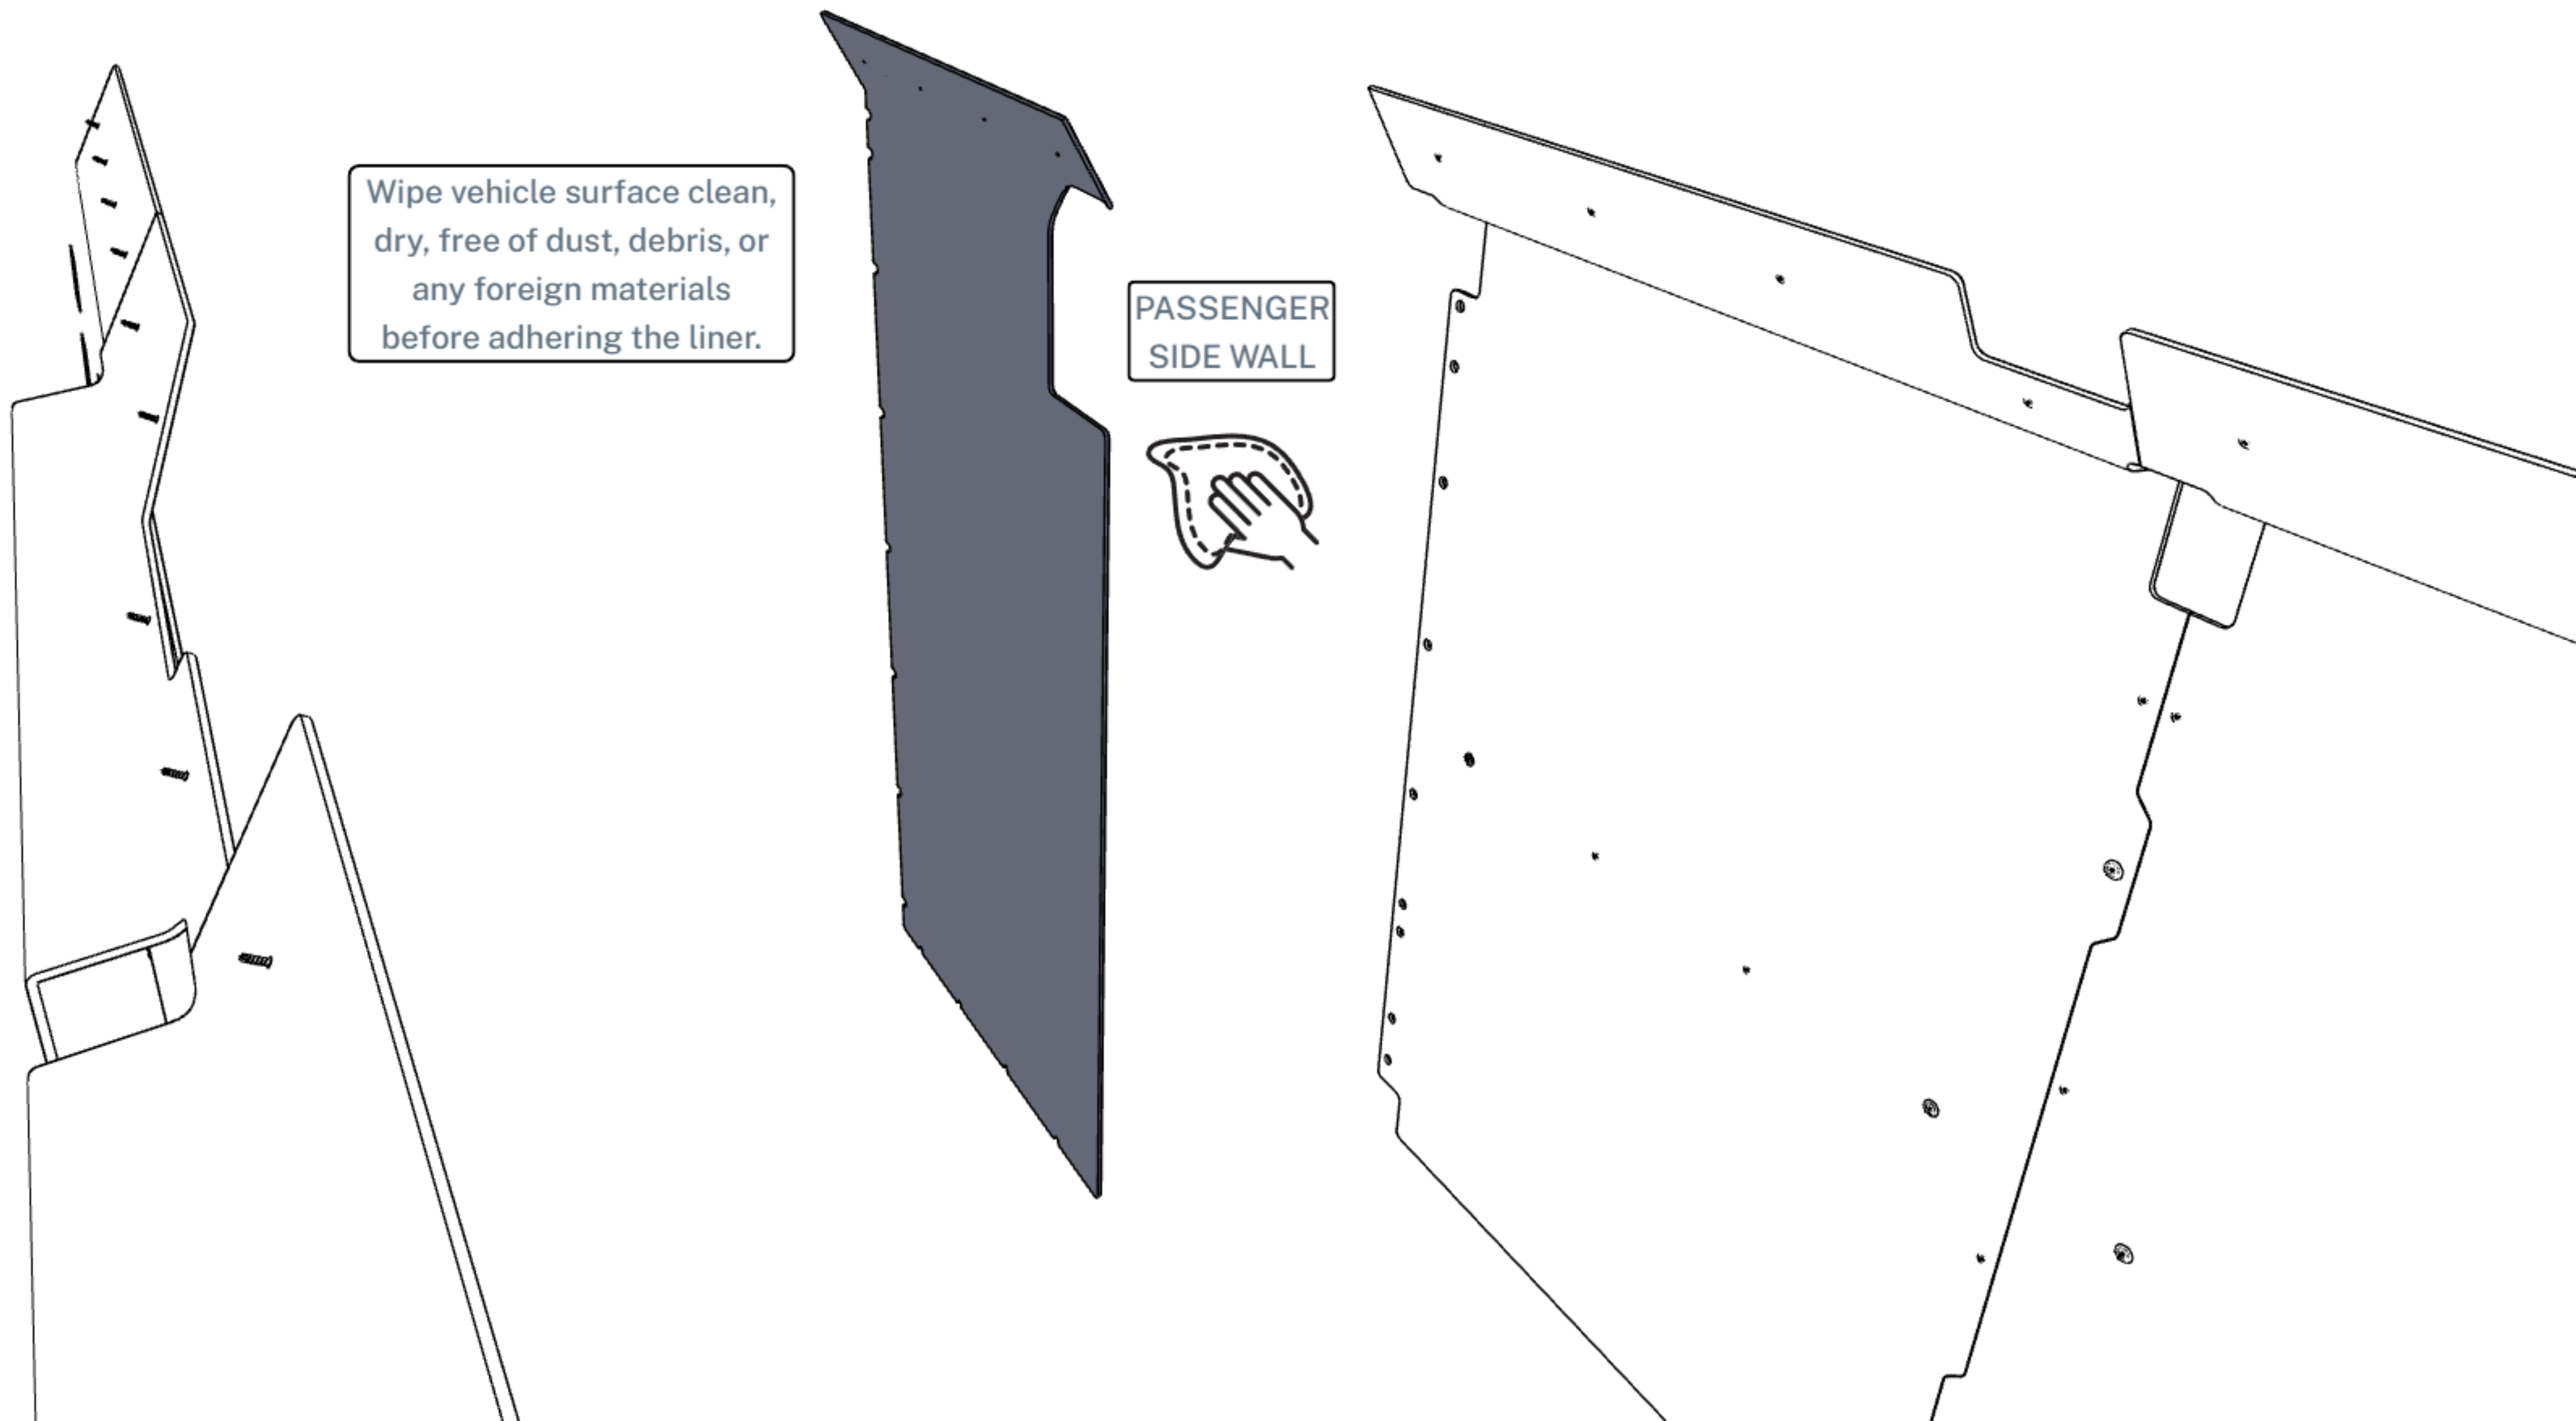

Wipe vehicle surface clean,
dry, free of dust, debris, or
any foreign materials
before adhering the liner.



PASSENGER
SIDE WALL



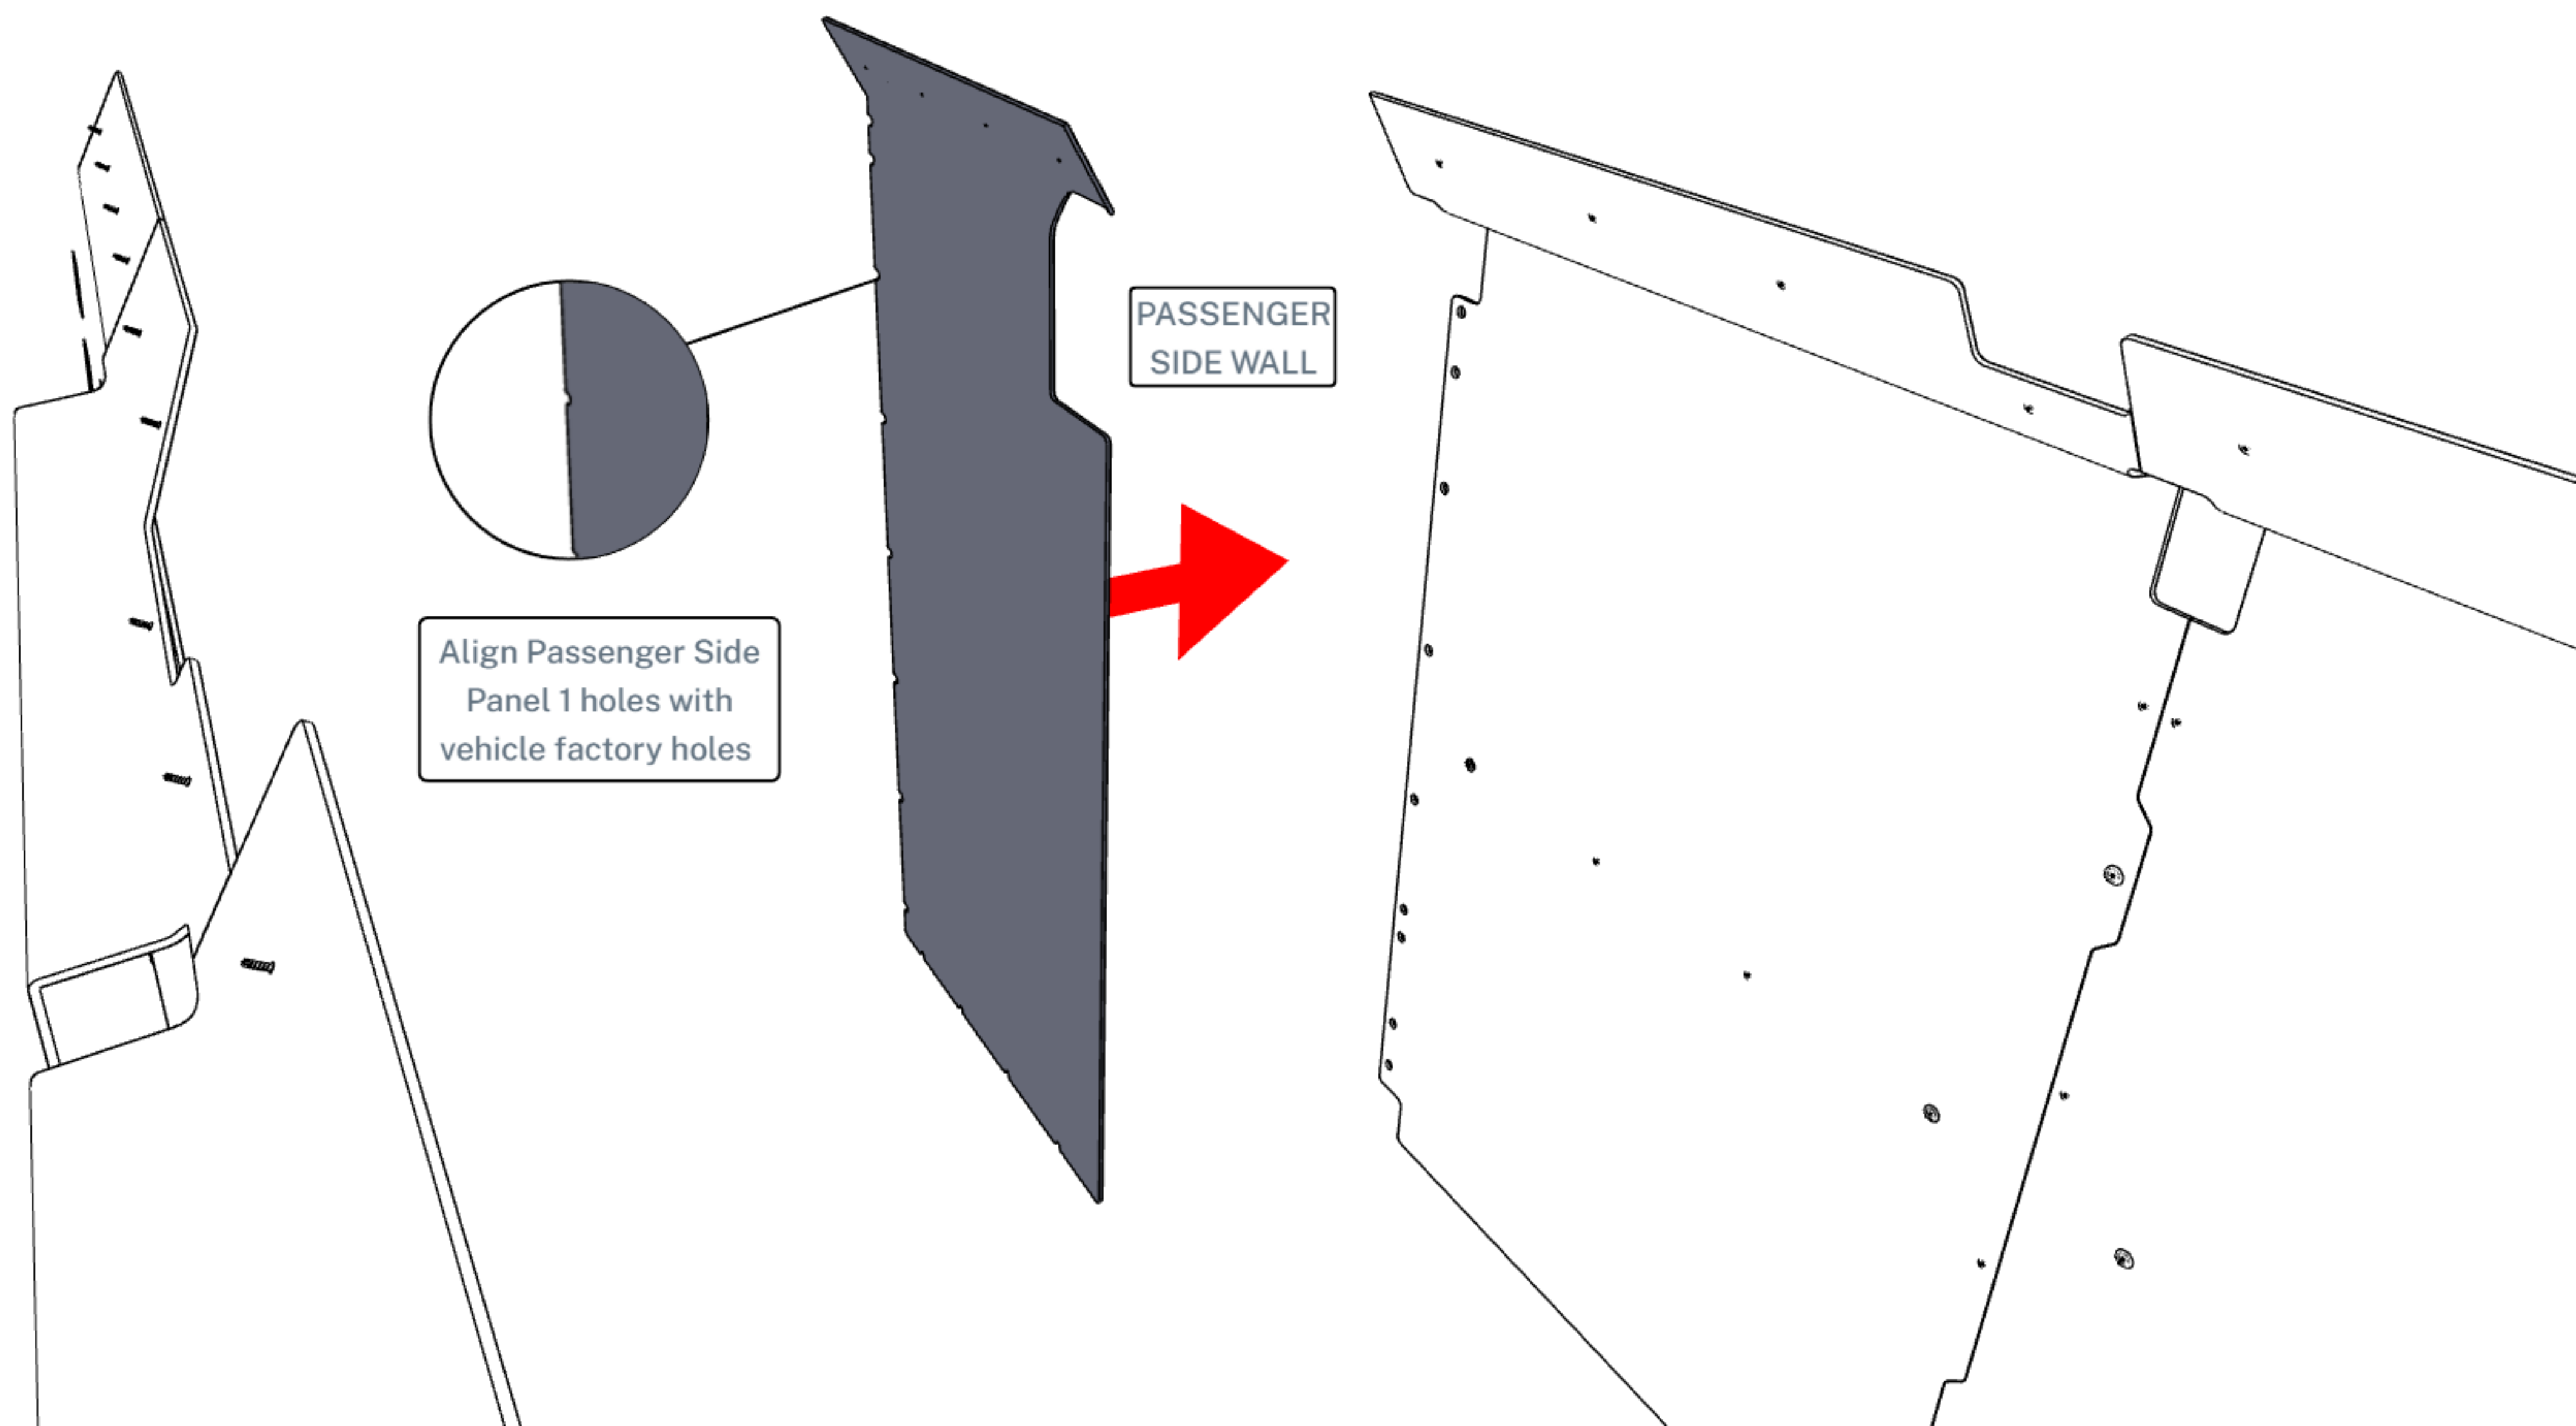


PASSENGER
SIDE WALL


Align Passenger Side
Panel 1 holes with
vehicle factory holes

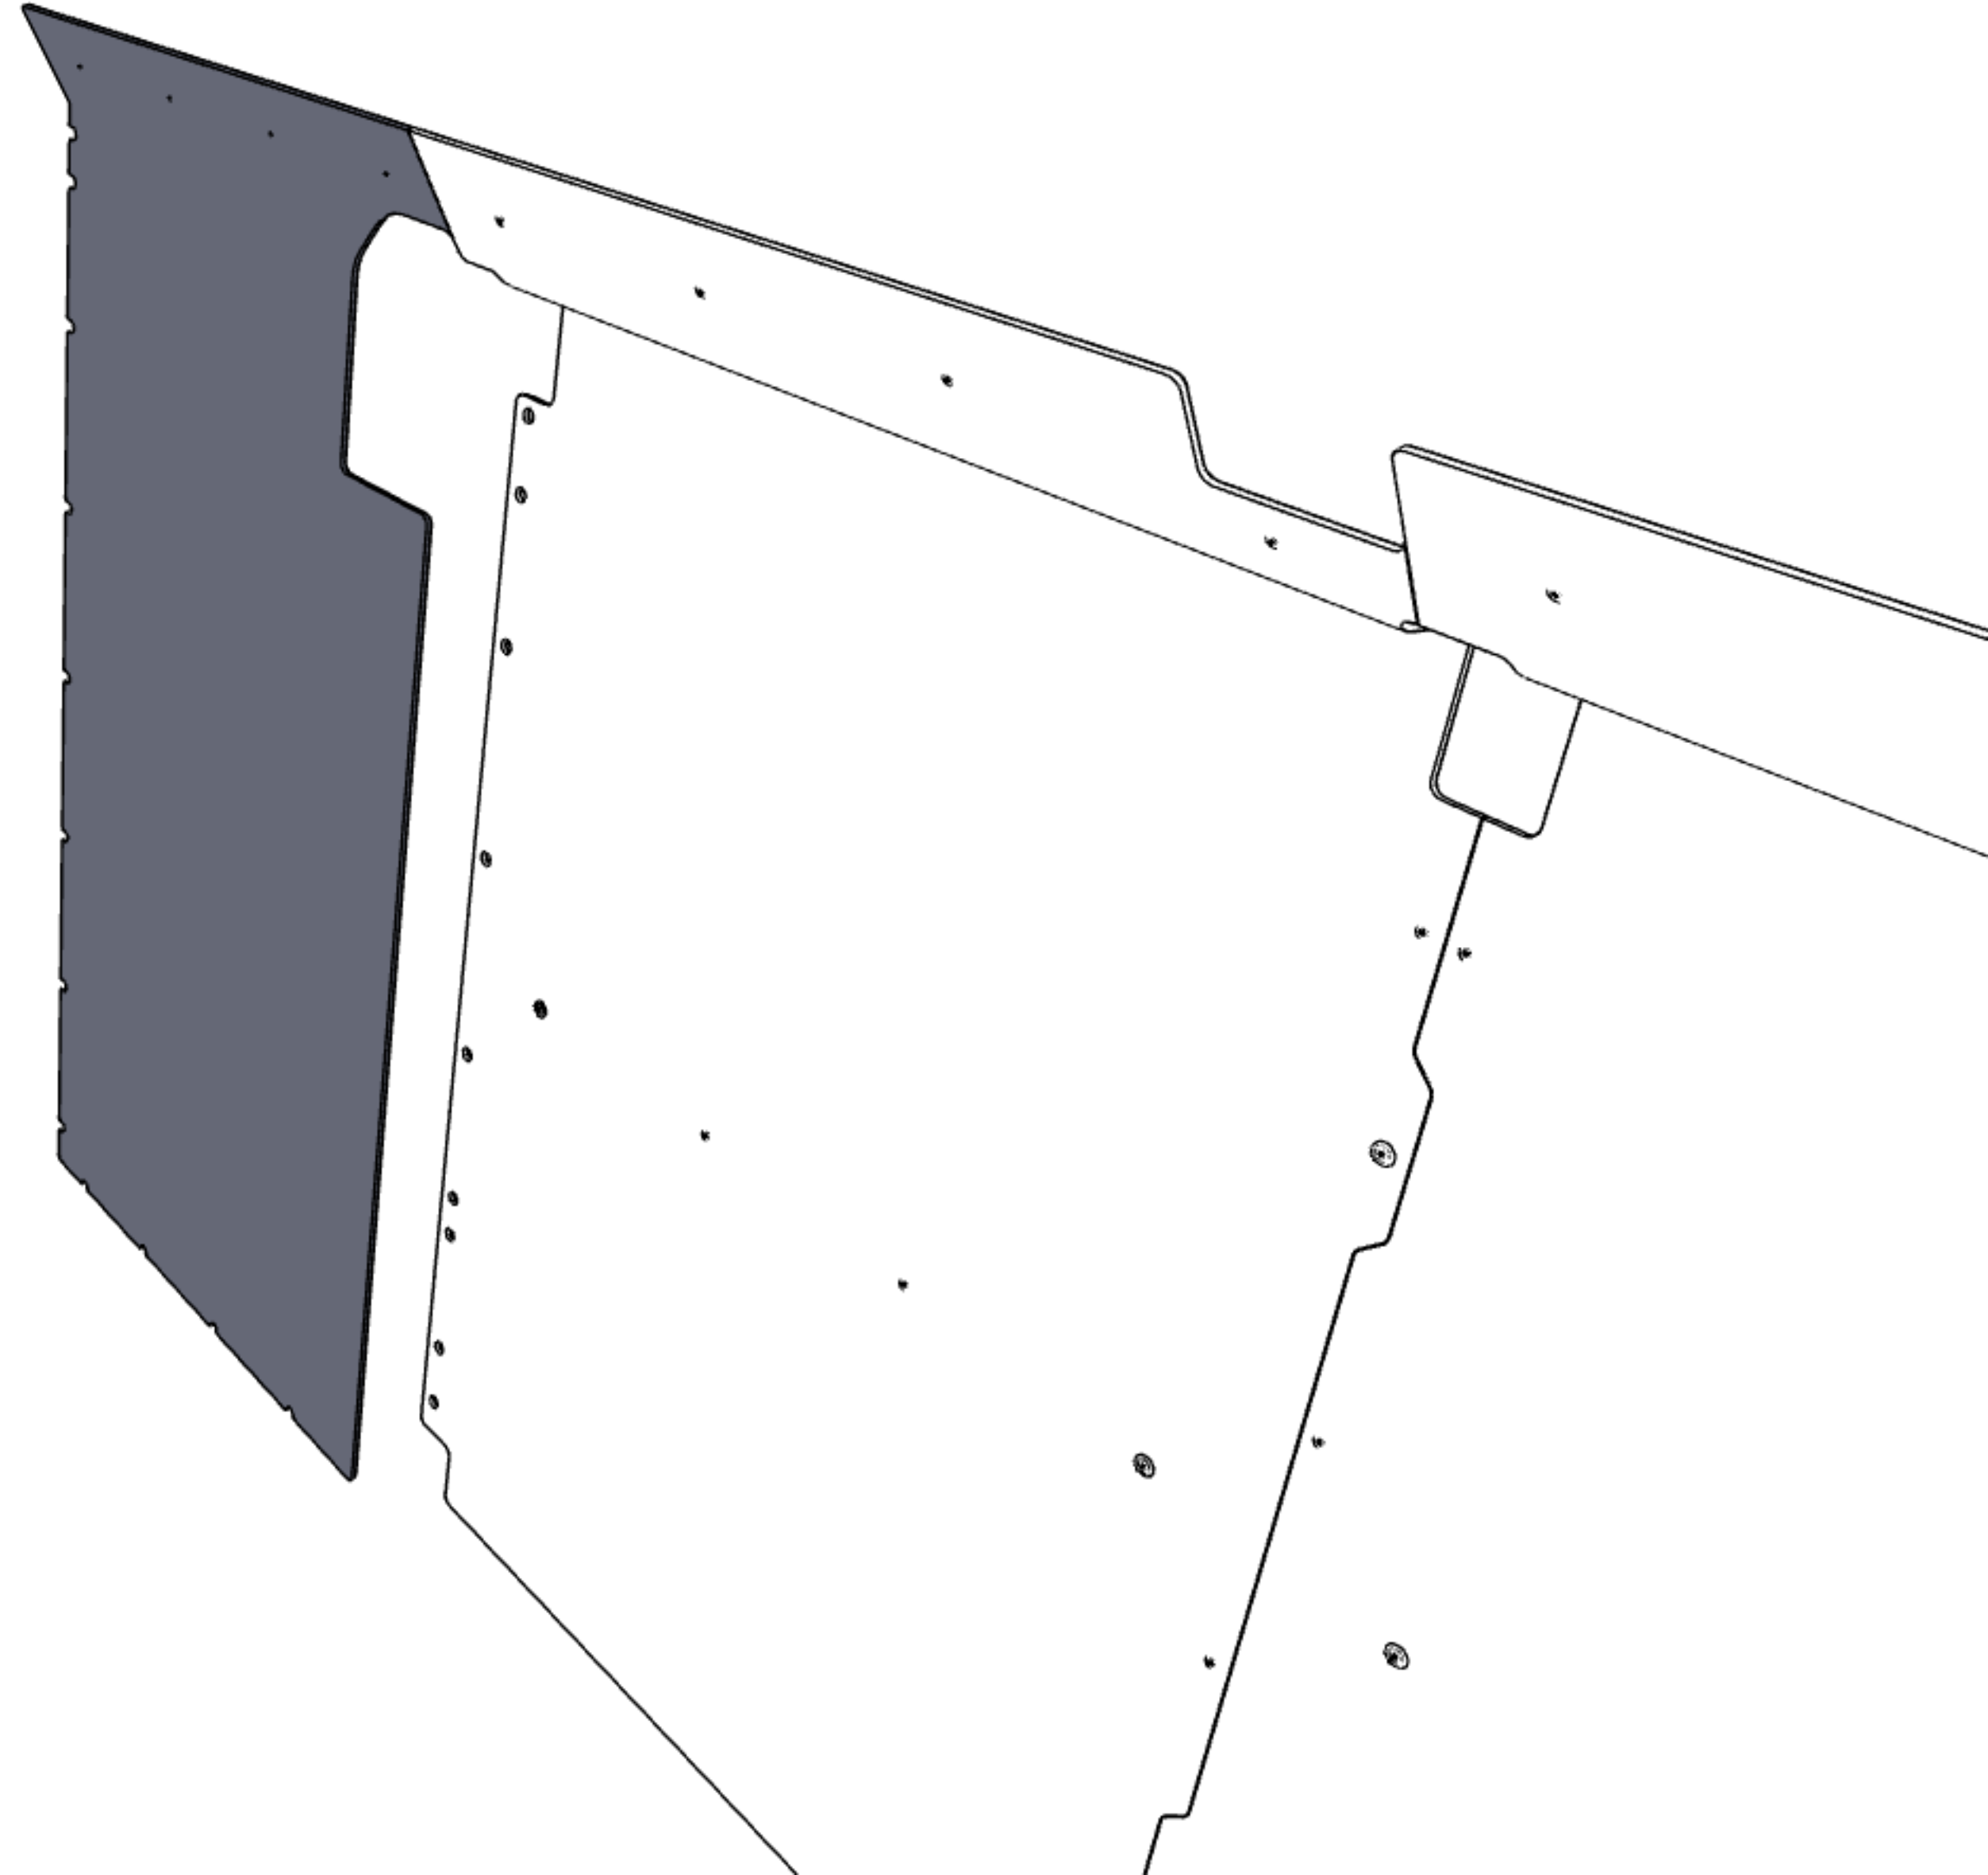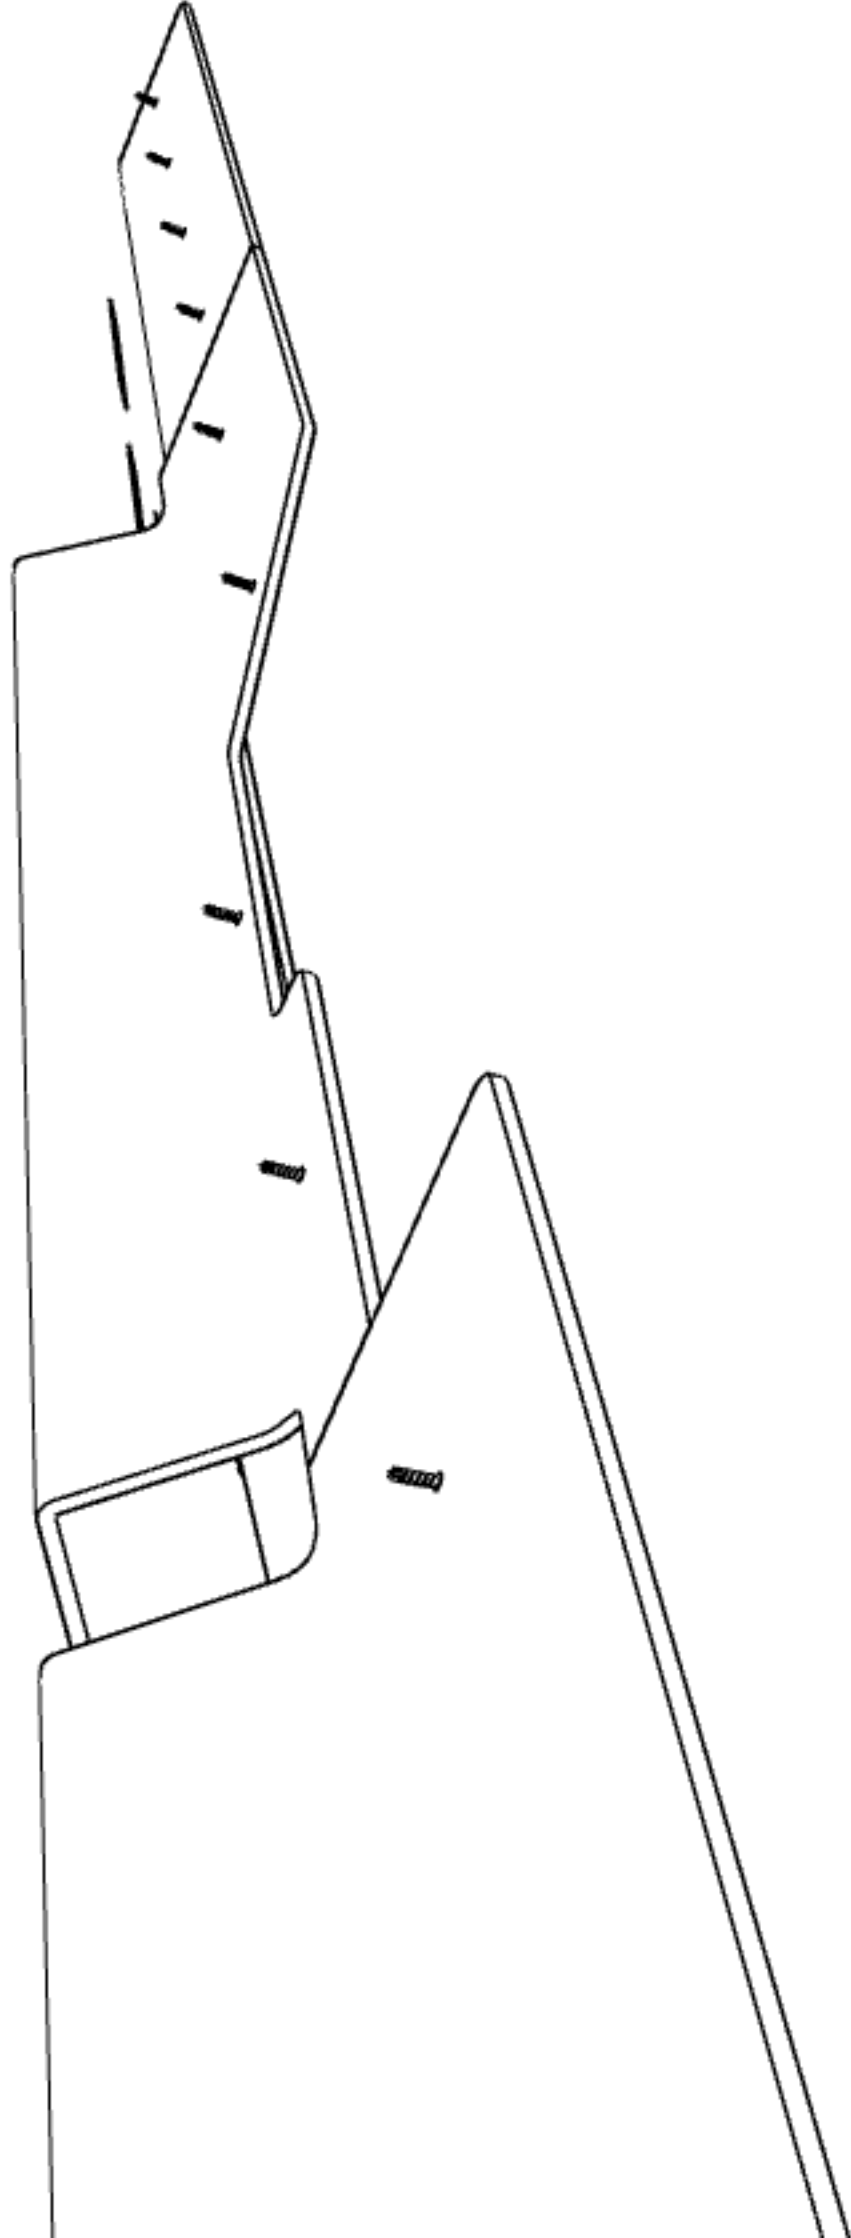


PASSENGER SIDE WALL

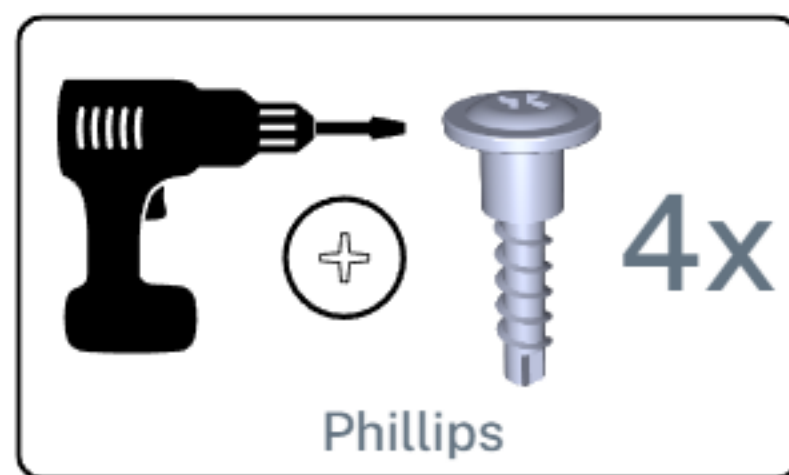


PASSENGER SIDE WALL

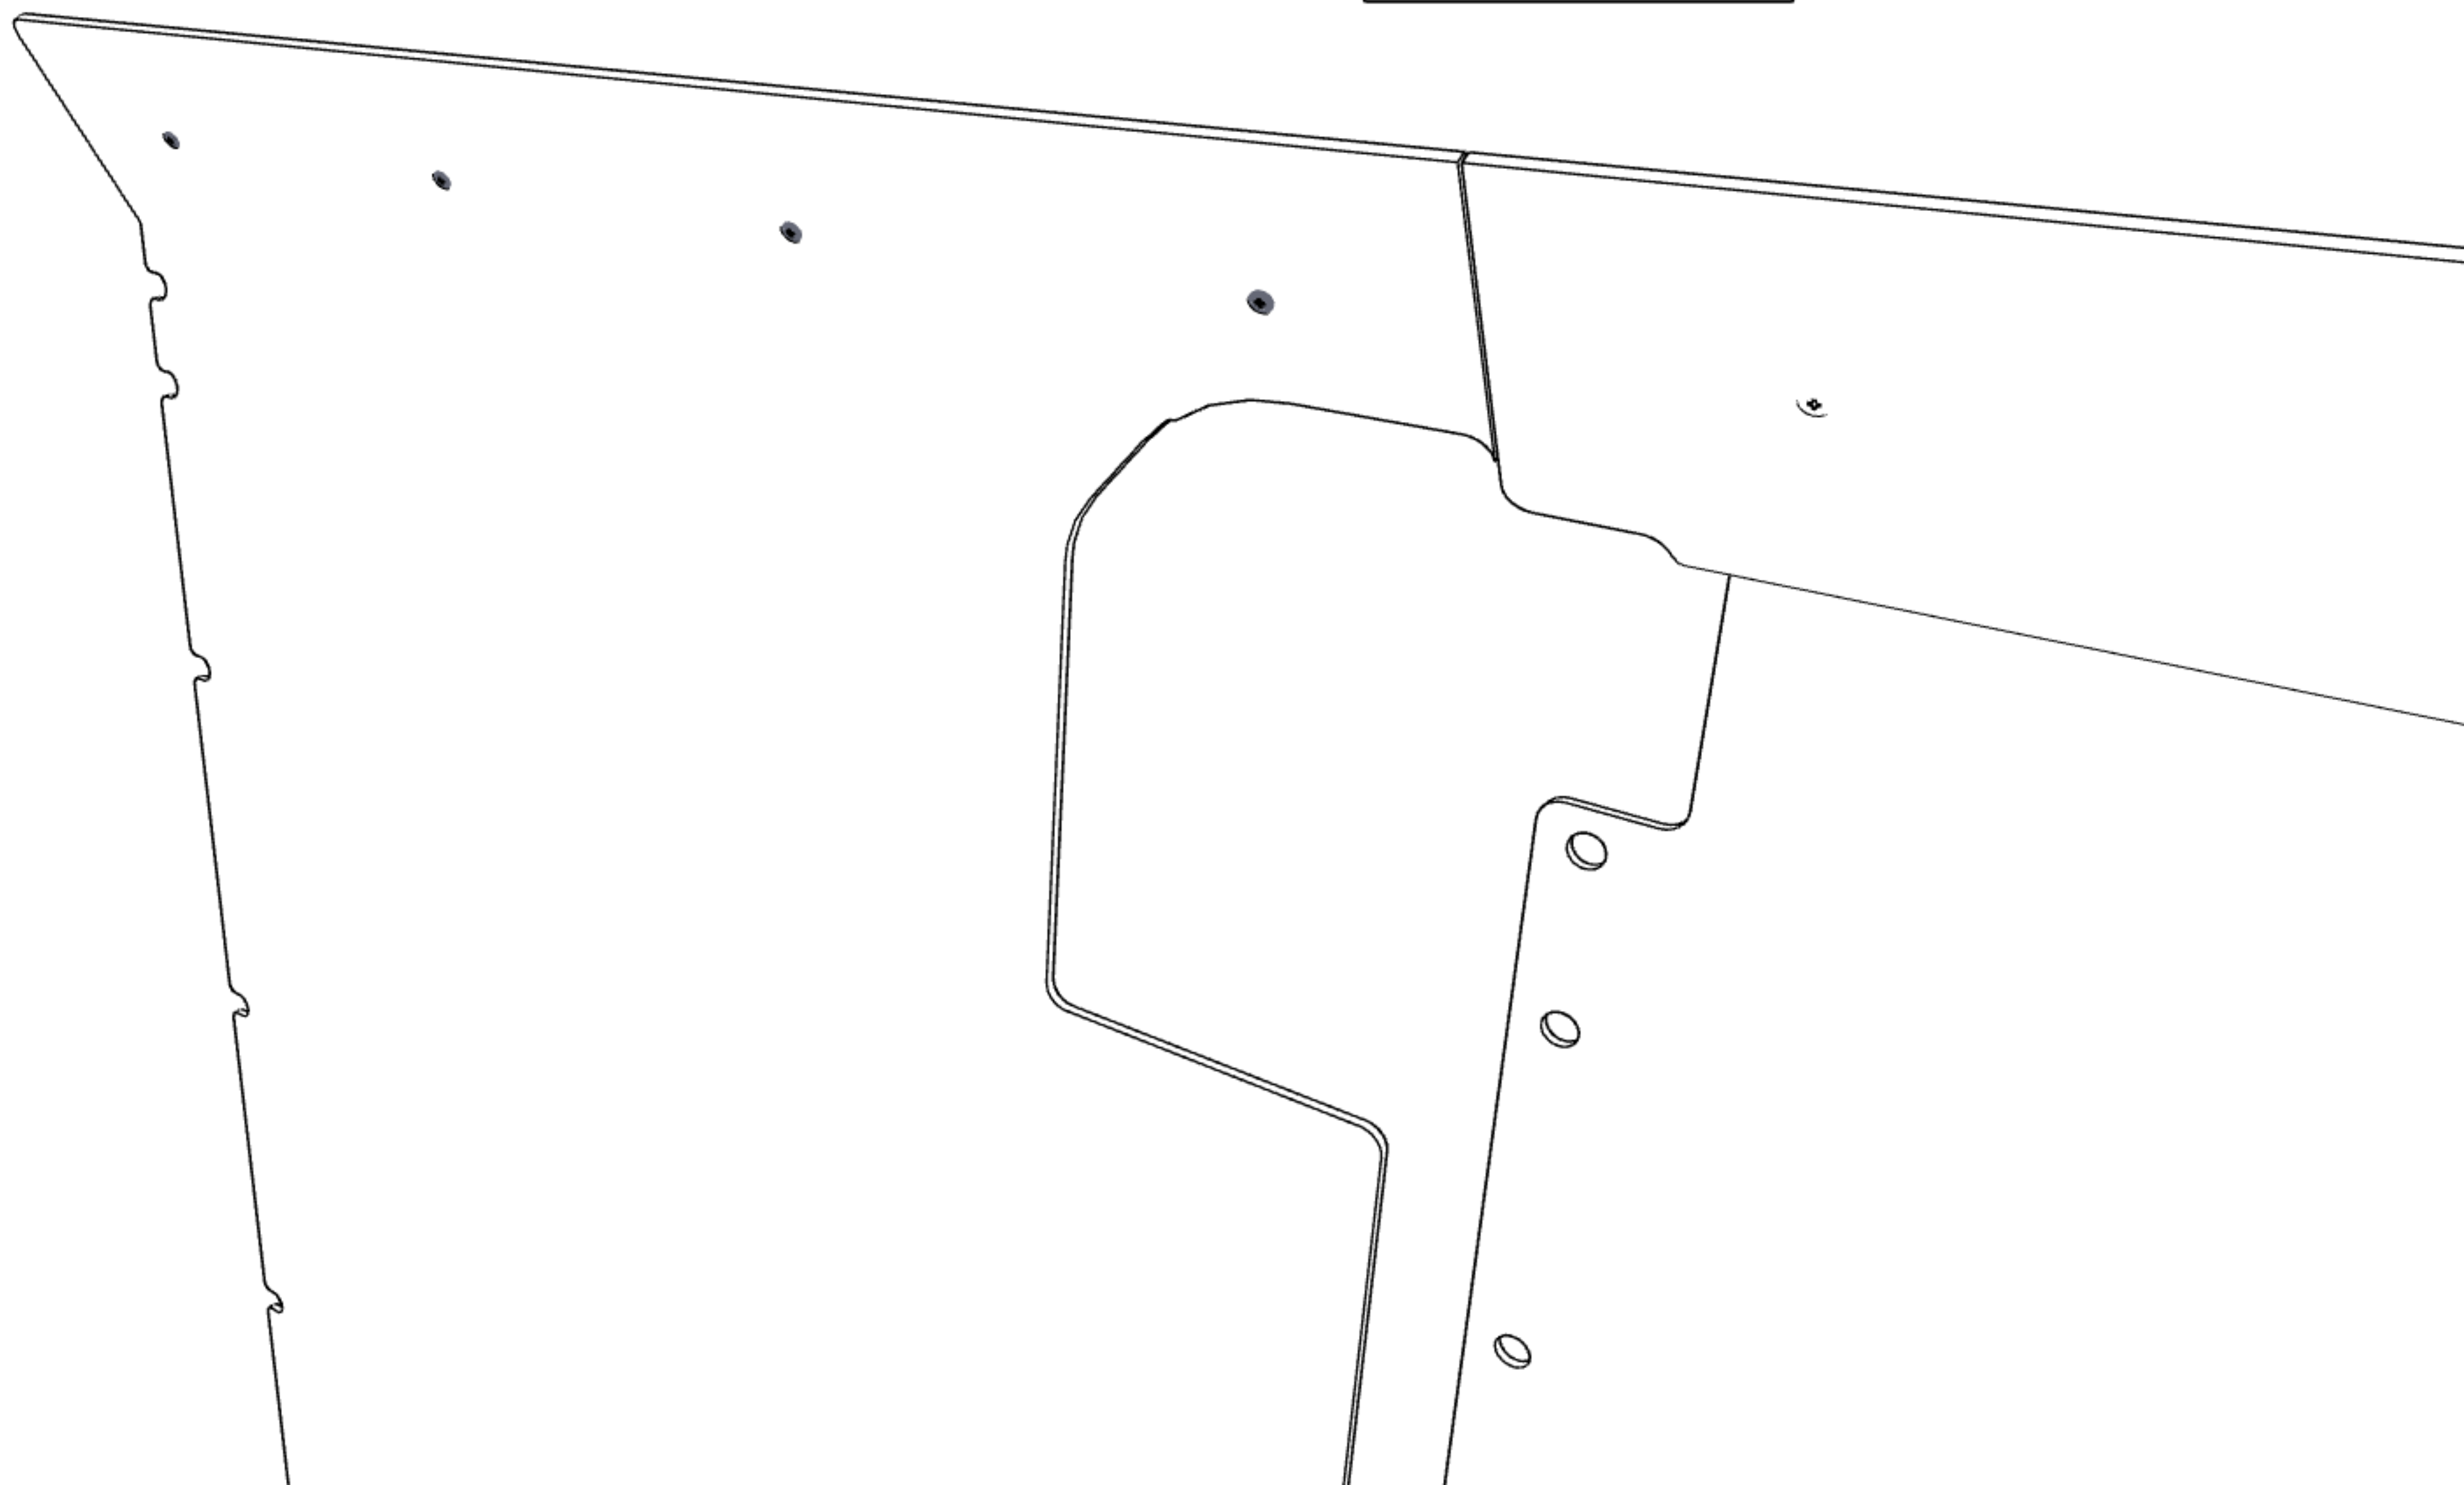

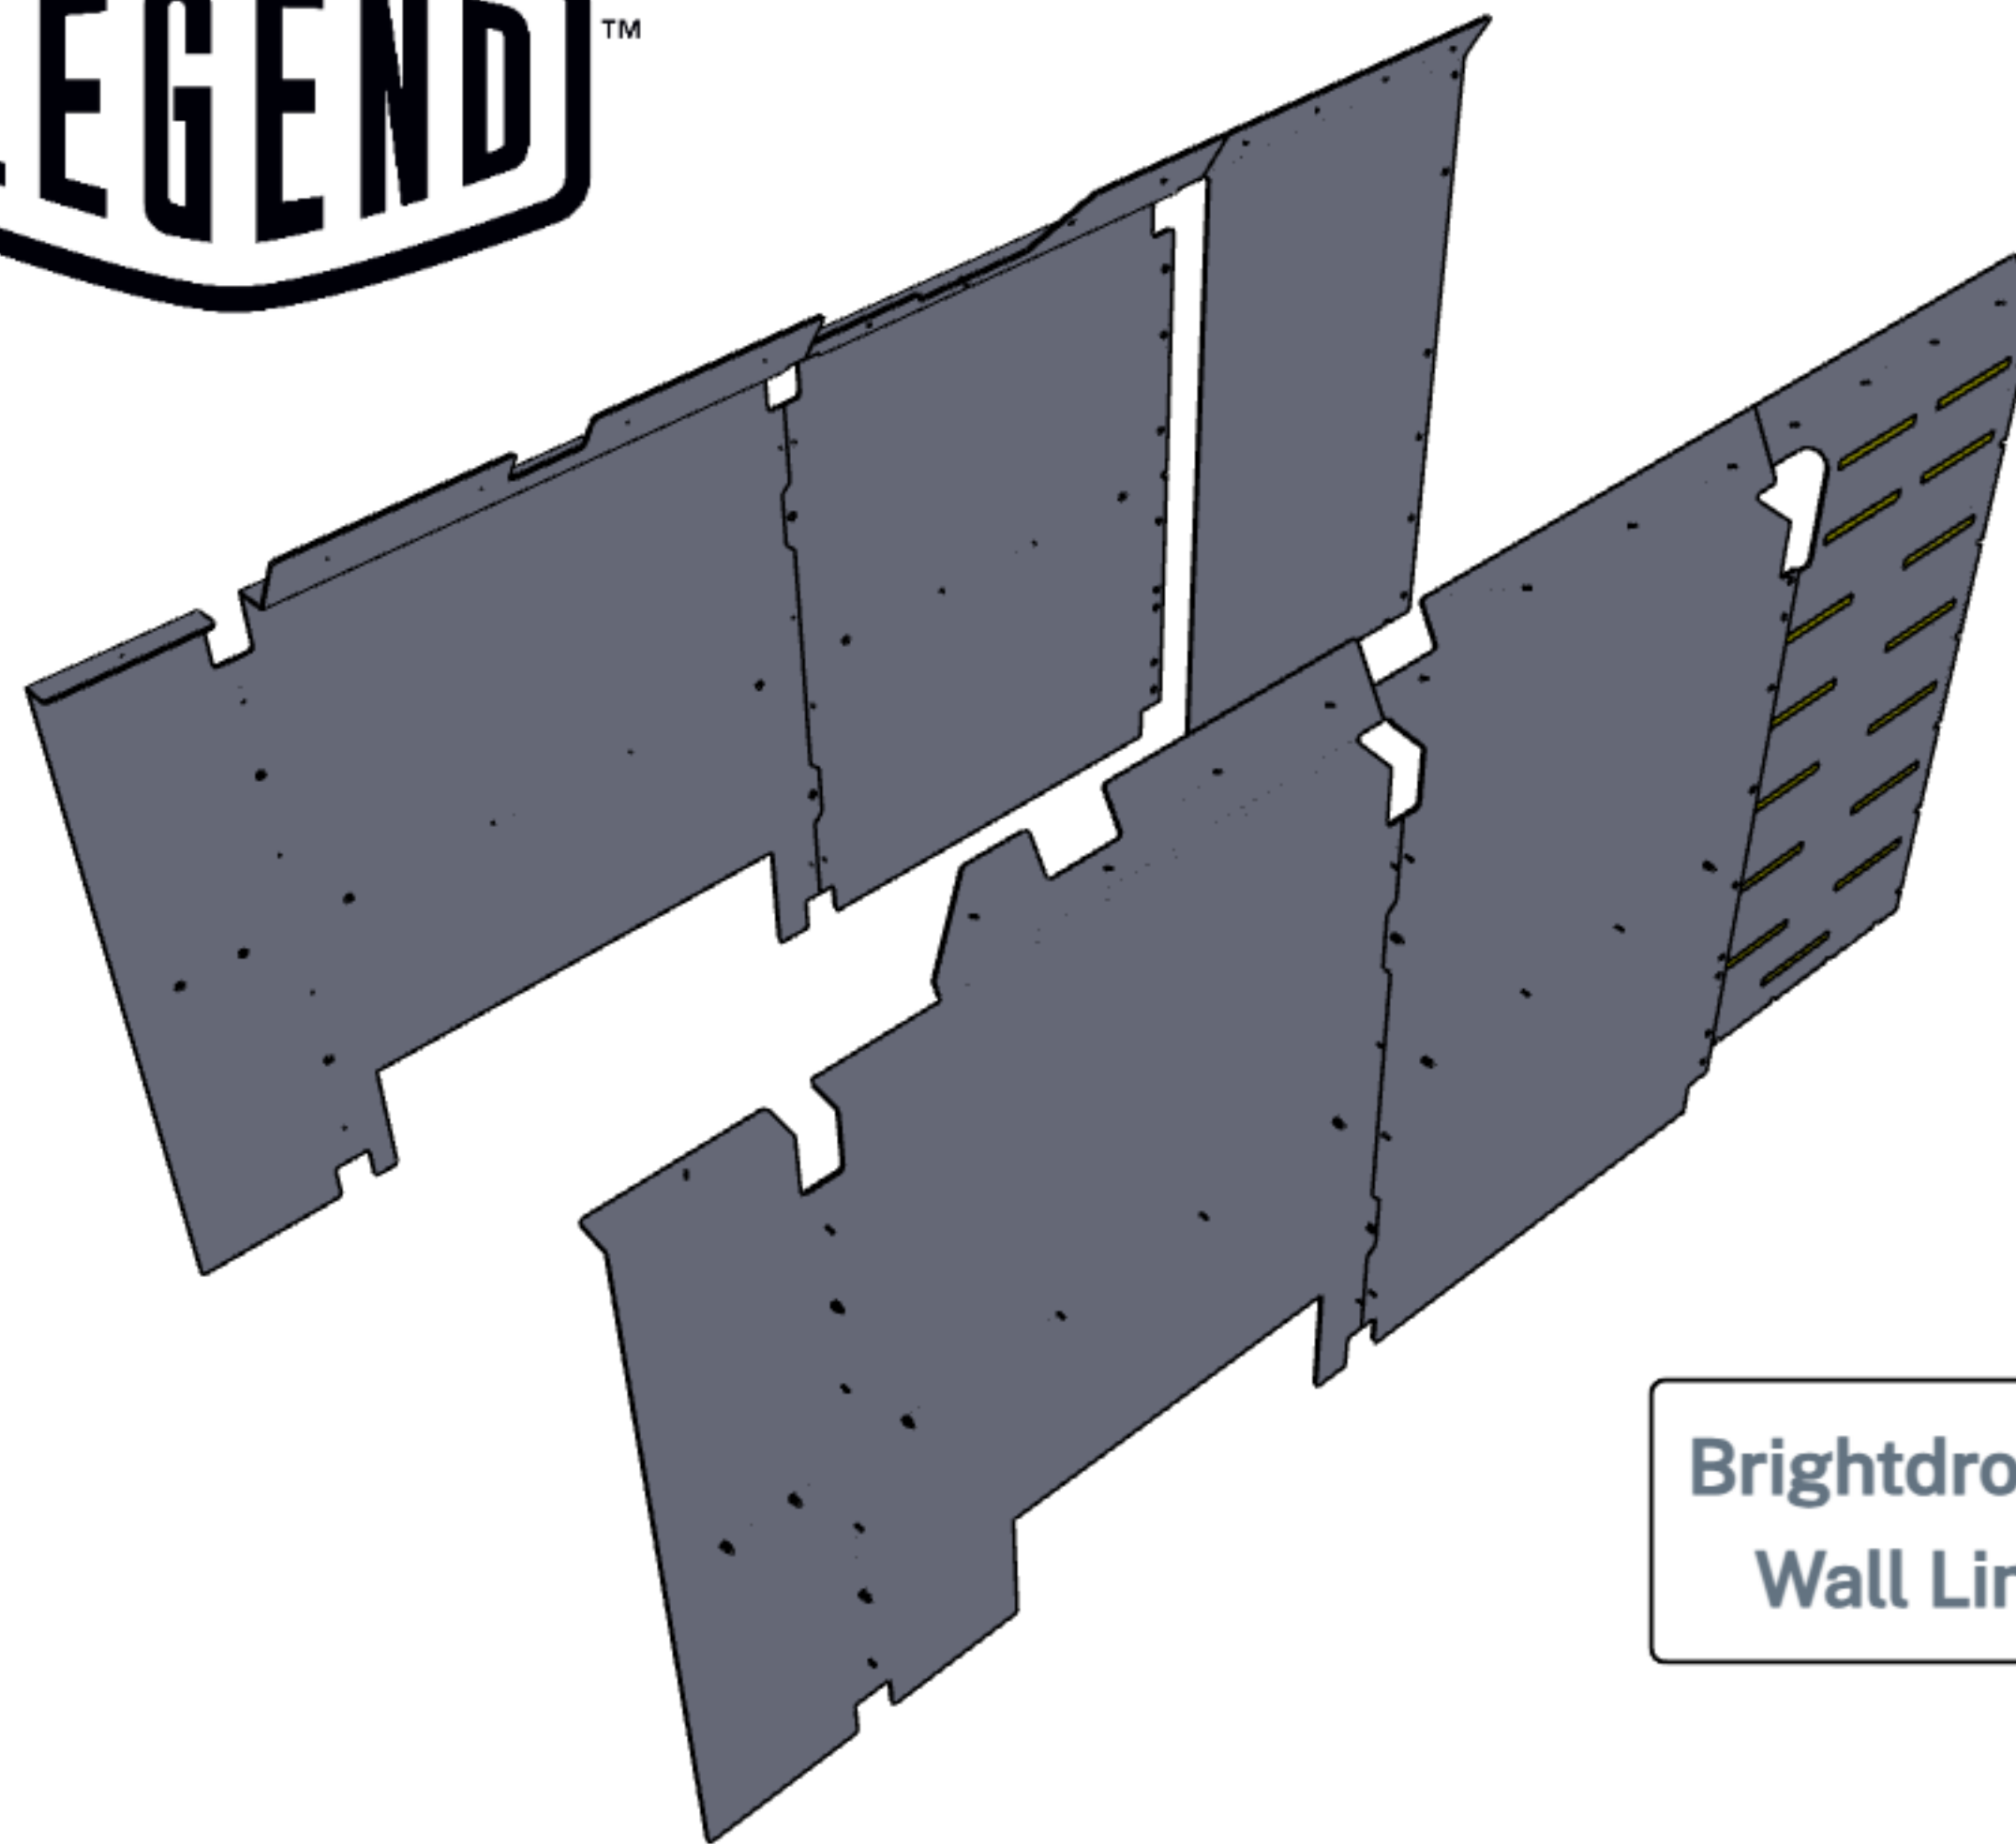

Brightdrop EV600
Wall Liner KIT

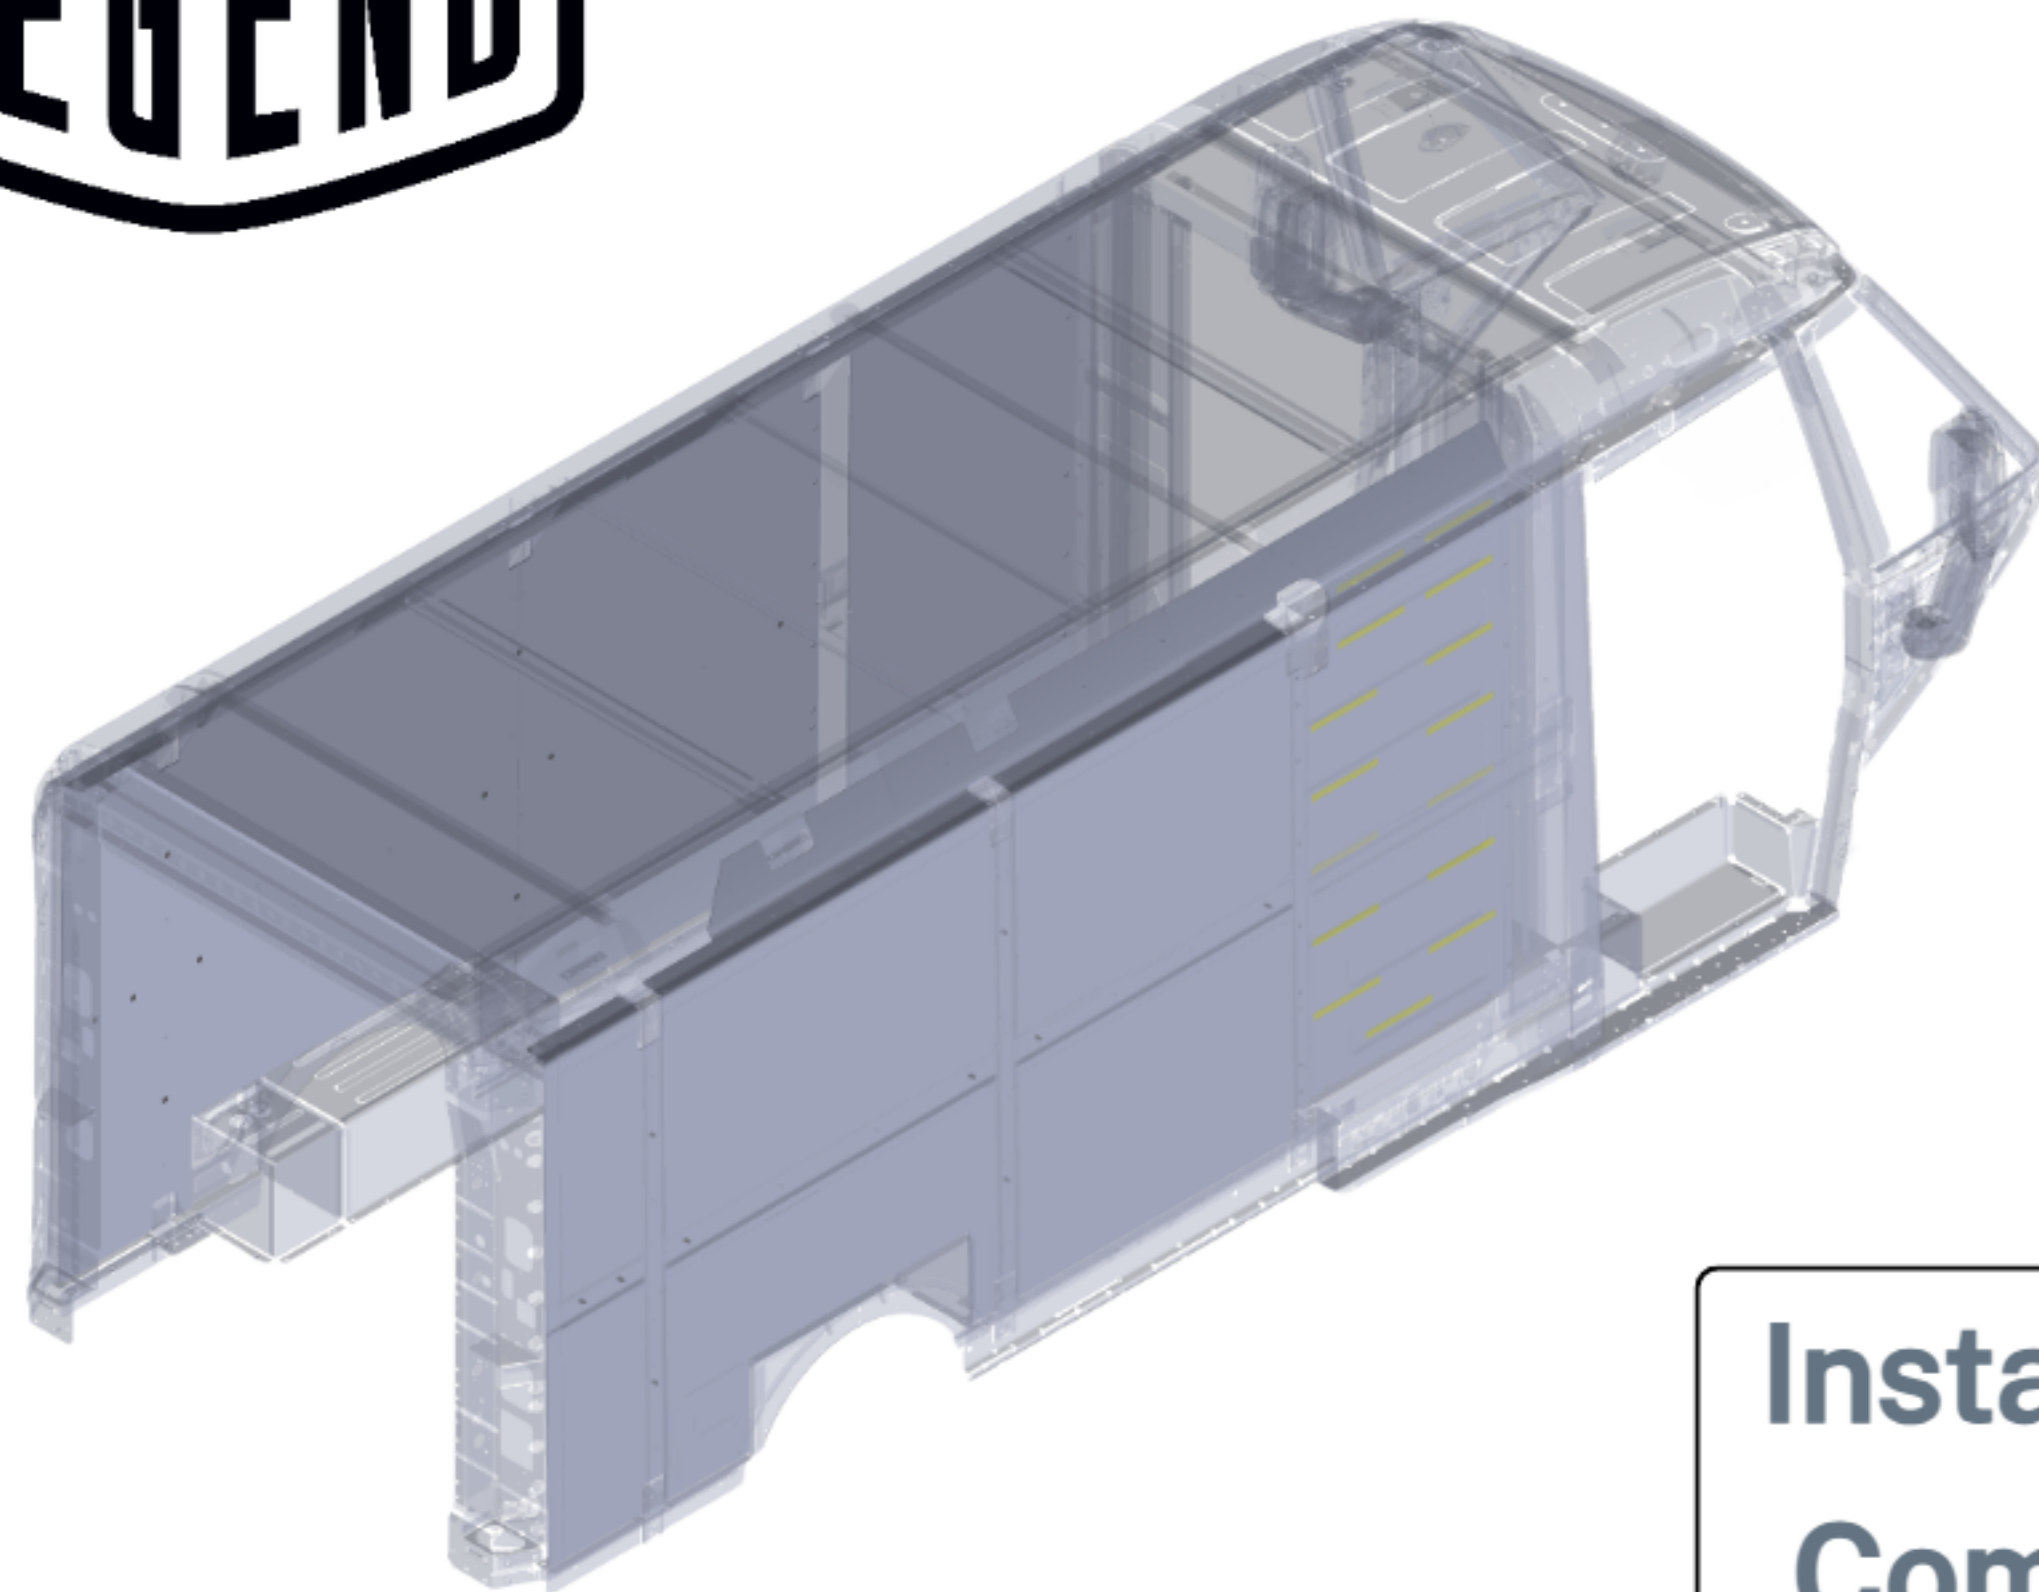

**Installation
Complete!**