

TEMPSHIELD ASSEMBLY INSTRUCTIONS

CHEVROLET BRIGHTDROP ZEVO 600

This document presents the detailed procedures for assembling Legend Fleet components and accessories.

Customers can make use these step-by-step procedures and easily assemble without major difficulty.



519 688 1043
customercare@legendfleet.com

56957 HWY 3 WEST,
TILLSONBURG,
ON N4G 4G8.

Table of Contents

Walls 3

 Parts List - Driver Side Wall.....3

 Parts List - Passenger Side Wall3

 Assembly Instructions.....4

Ceiling 5


 Parts List – Ceiling.....5

 Assembly Instructions.....5


Sheet Layouts 6

Walls

Parts List - Driver Side Wall

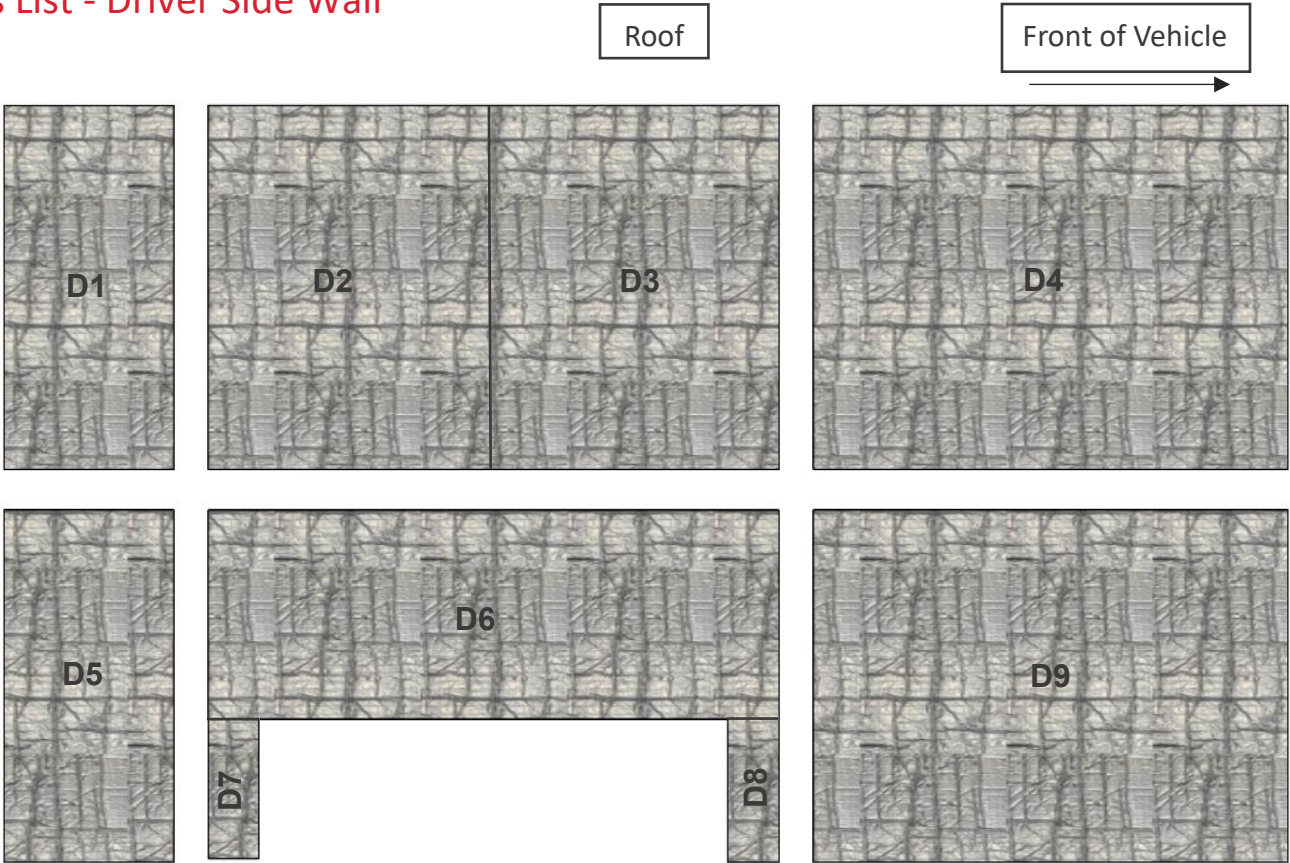

Parts List - Passenger Side Wall

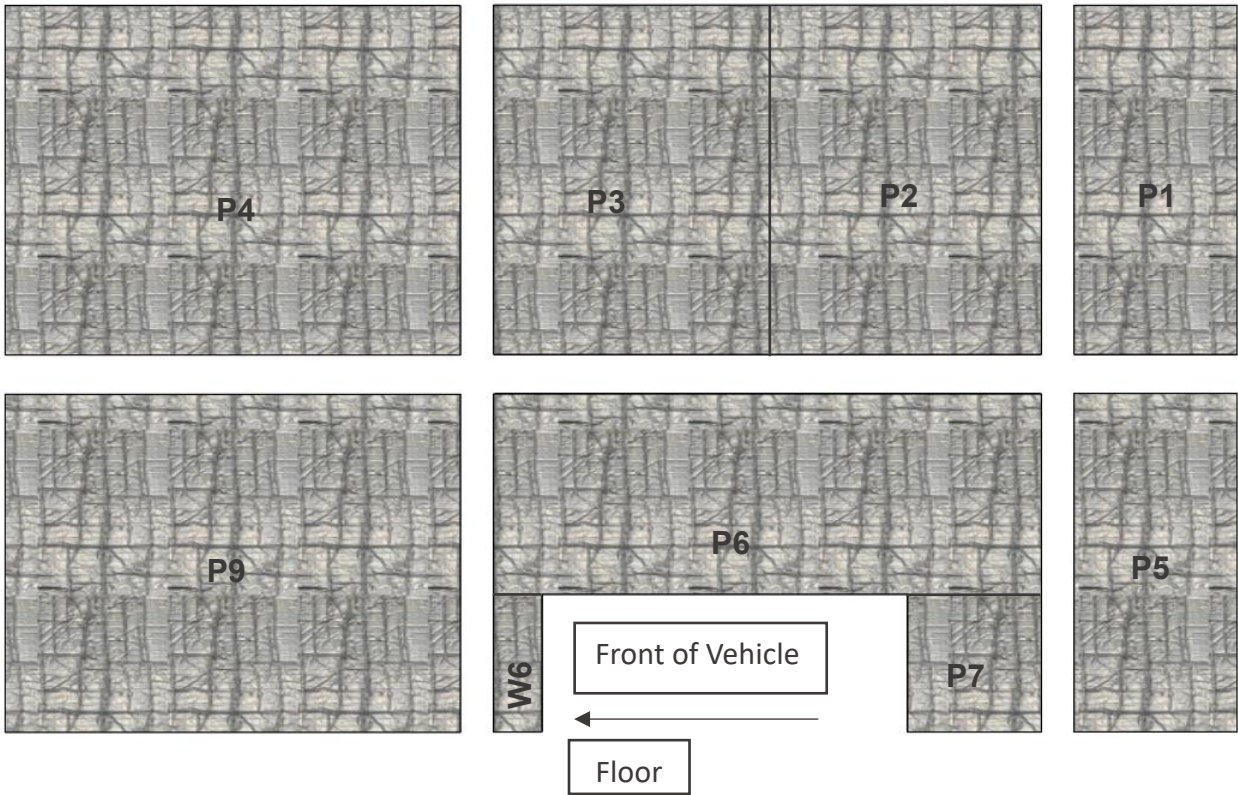

Assembly Instructions

Step 1: Identify the TempShield Panels and their respective vehicle surfaces as shown below. For additional guidance, please refer to the sheet layouts found in the last page of this document.

Step 2: Wipe the identified surfaces of the vehicle clean, dry, free of dust, debris, or any foreign materials before adhering the TempShield panels. Remove TempShield panels off the sheet layouts using a utility knife.

Step 3: Peel off the protective layer of the TempShield and place its adhesive side to the Van body.

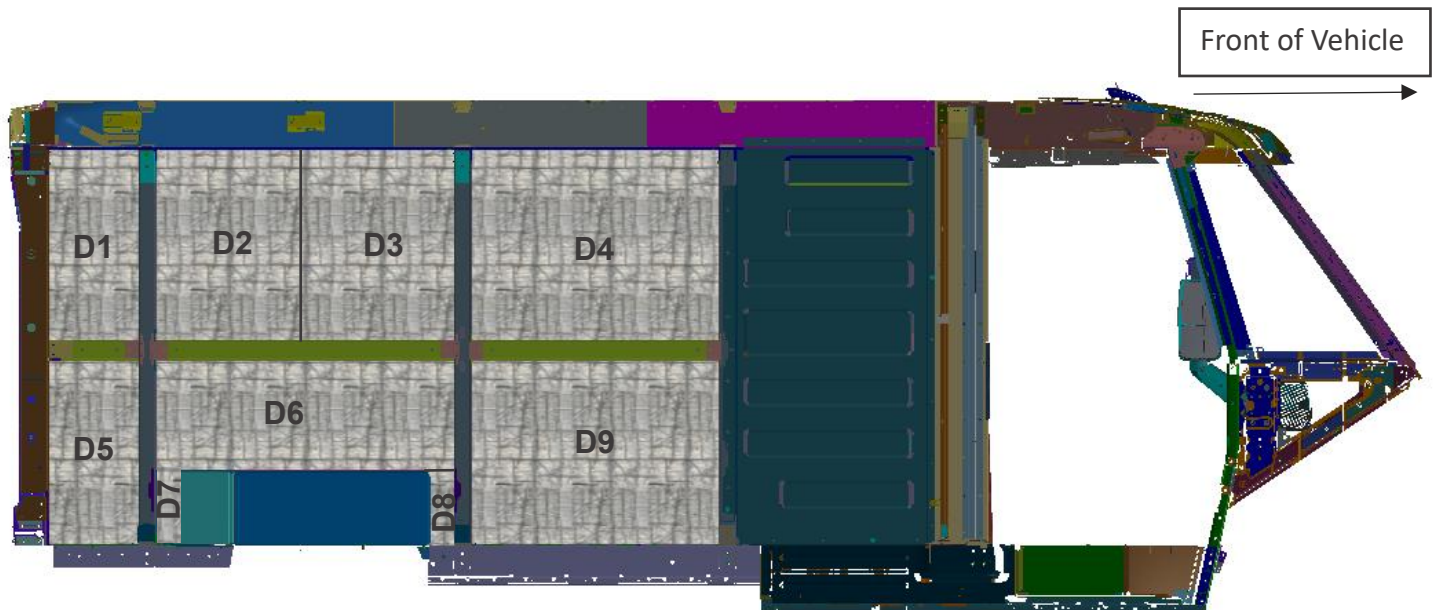


Figure 1

"Driver side TempShield Installed" This view is from Inside of Van-Viewing from Passenger side


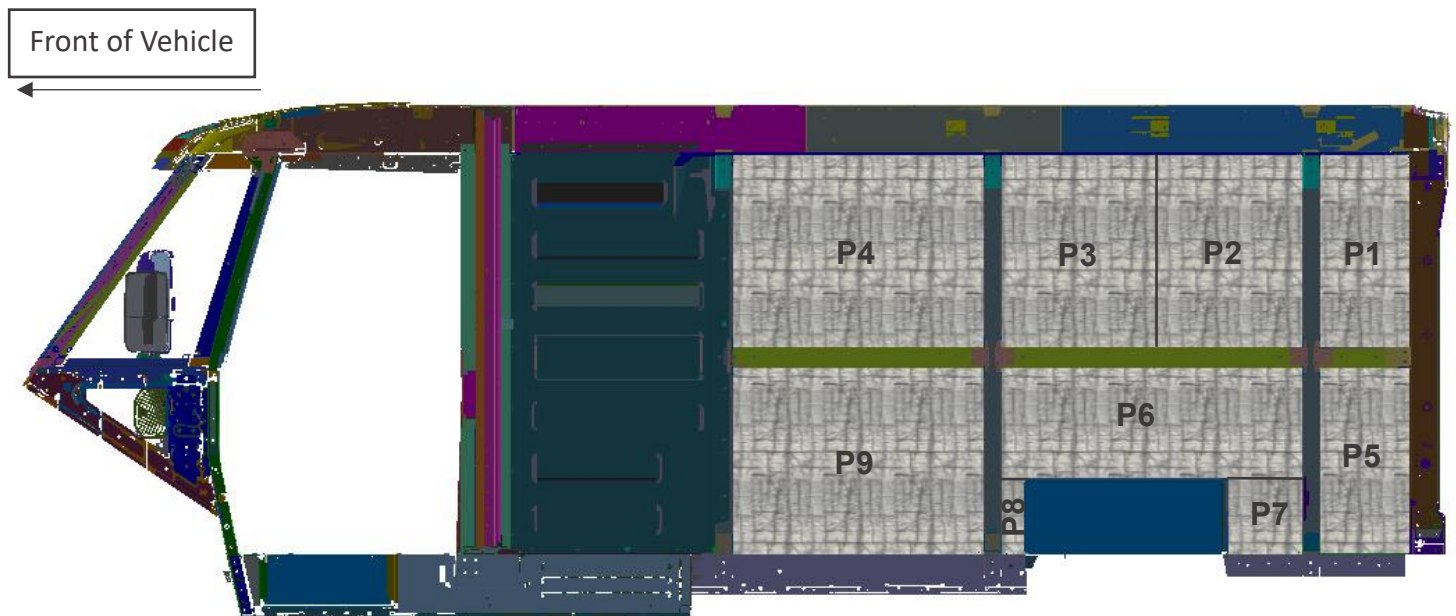


Figure 2

"Passenger side TempShield Installed" This view is from Inside of Van-Viewing from Driver side

Ceiling

Parts List – Ceiling

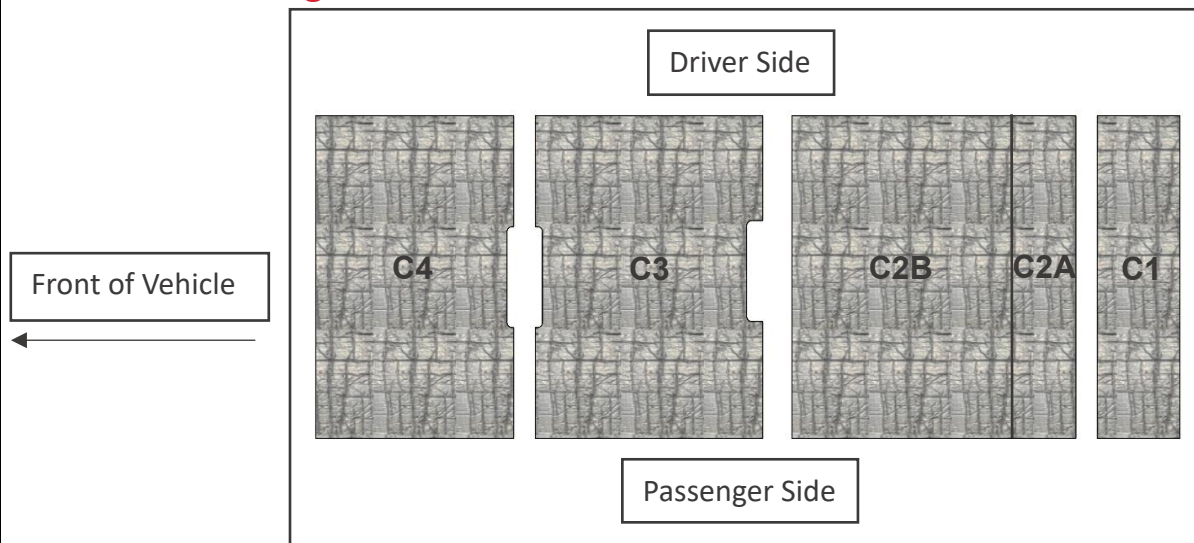

Assembly Instructions

Step 1: Identify the TempShield Panels and their respective vehicle surfaces as shown below. For additional guidance, please refer to the sheet layouts found in the last page of this document.

Step 2: Wipe the identified surfaces of the vehicle clean, dry, free of dust, debris, or any foreign materials before adhering the TempShield panels. Remove TempShield panels off the sheet layouts using a utility knife.

Step 3: Peel off the protective layer of the TempShield and place its adhesive side to the Van body.

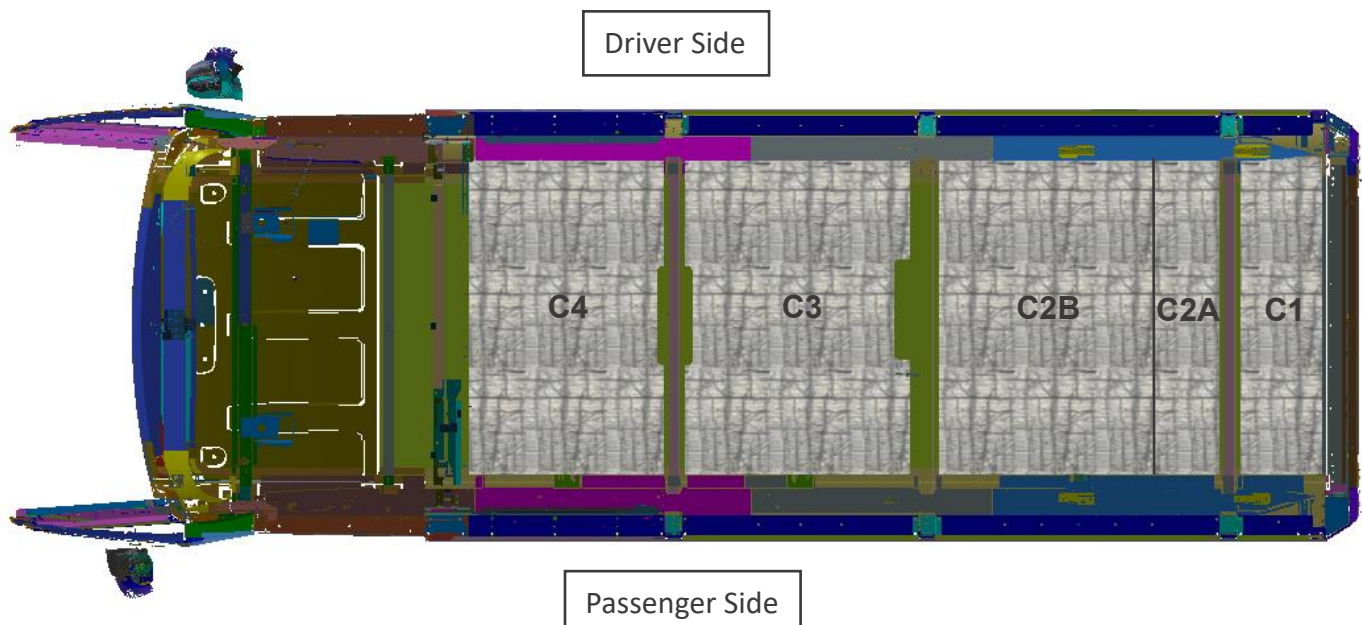


Figure 3

"Ceiling TempShield Installed" This view is from Inside of Van

Sheet Layouts

