LEGEND FLEET SOLUTIONS


NISSAN NV LOW ROOF WALL LINERS

INSTALLATION INSTRUCTIONS




NOTES:

- 1. Before commencing, remove all wall liners and "D" Rings already installed in the vehicle.
- 2. Consult layout PDF and compare vehicle layout allocated Legend.
- 3. Prepare hardware shown below and have them ready for installation.
- 4. Wall liners will be installed in the order shown in the instructions.
- 5. A drill with a Phillips driver is required to install hardware (**C**) #8 Screws, shown below.
- 6. Reinstall all "D" Rings once the wall liner kit installation is completed.

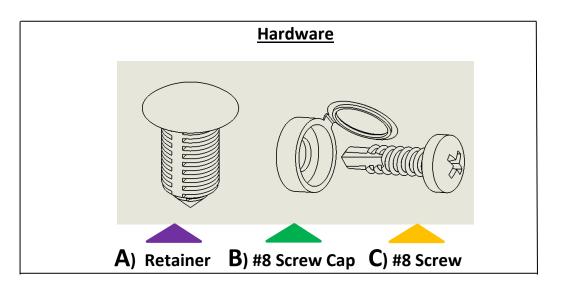

NISSAN NV LOW ROOF WALL LINERS

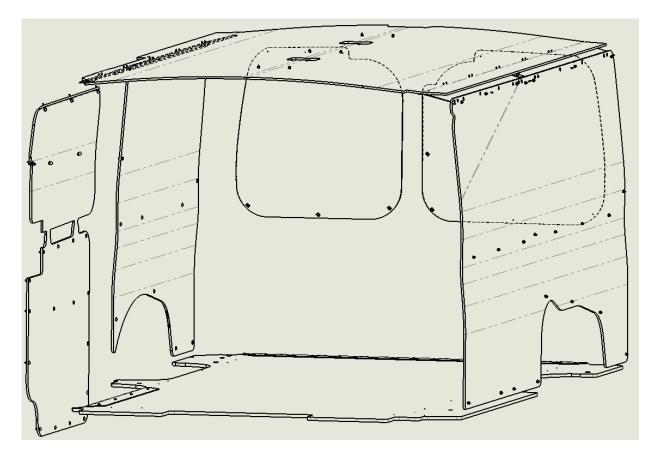

| BOM Table | | | |
|-------------|--------------|--|------|
| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
| 1 | 513-114-2613 | GREY SLIDING DOOR PANEL NISSAN NV LR | 1 |
| 2 | 512-xxx-6641 | FLOOR NISSAN NV | 1 |
| 3 | 524-114-2613 | GREY WALL PANEL DRIVER SIDE NISSAN NV | 1 |
| 4 | 515-114-2613 | GREY CEILING PANEL NISSAN NV LR | 1 |
| 5 | SCREW CAP | SCREW CAP | 20 |
| 6 | SCREW | SCREW - PHIL. PAN HD #8X.75 SELF DRILLING | 71 |
| 7 | 513-114-2613 | GREY REAR DOOR PANEL DRIVER SIDE NISSAN NV LR | 1 |
| 8 | 513-114-2613 | GREY REAR DOOR PANEL PASSENGER SIDE NISSAN NV LR | 1 |
| 9 | 524-114-2613 | GREY REAR PANEL PASSENGER SIDE NISSAN NV | 1 |
| 10 | 517-151-1010 | CEILING SILL "C" NISSAN NV LR | 1 |
| 11 | 517-151-1010 | CEILING SILL "A" NISSAN NV LR | 1 |
| 12 | 517-151-1010 | CEILING SILL JOINER PLATE | 2 |
| 13 | 517-151-1010 | CEILING SILL "B" NISSAN NV | 1 |
| 14 | 517-151-1010 | CEILING SILL "D" NISSAN NV LR | 1 |
| 15 | RETAINER | RETAINER- BLACK NYLON | 57 |
| 16 | 008-151-1010 | FLOOR SILL REAR DOOR NISSAN NV | 1 |
| 17 | 006-151-1010 | FLOOR SILL SIDE DOOR NISSAN NV | 1 |

Note:

Model may differ depending if the vehicle was purchased with an OEM partition or not.

