

**Brightdrop EV400  
Wall Liner KIT**

# DISCLAIMER/DESCARGO DE RESPONSABILIDAD/CLAUDE DE NON-RESPONSABILITÉ



## DISCLAIMER

Legend Fleet Solutions will not accept responsibility for damages resulting from improper installation. Please follow these instructions carefully. If you have any questions please contact Legend Fleet Solutions using the details below. By proceeding with the installation, you acknowledge and accept this disclaimer.



## DESCARGO DE RESPONSABILIDAD

Legend Fleet Solutions no aceptará responsabilidad por los daños resultantes de una instalación incorrecta. Por favor, siga estas instrucciones cuidadosamente. Si tiene alguna pregunta, comuníquese con Legend Fleet Solutions utilizando los detalles a continuación. Al continuar con la instalación, usted reconoce y acepta este descargo de responsabilidad.



## CLAUDE DE NON-RESPONSABILITÉ

Legend Fleet Solutions n'acceptera aucune responsabilité pour les dommages résultant d'une mauvaise installation. Veuillez suivre attentivement ces instructions. Si vous avez des questions, veuillez contacter Legend Fleet Solutions en utilisant les détails ci-dessous. En procédant à l'installation, vous reconnaissez et acceptez cette clause de non-responsabilité.

**Legend Fleet Solutions**

Email: [customercare@legendfleet.com](mailto:customercare@legendfleet.com)

Phone: 1-519-688-1043

## WARNING/ADVERTENCIA/AVERTISSEMENT



- Edges of material may be sharp. Wear gloves.
- Some materials may contain fiberglass. Wear appropriate PPE while handling.
- Take care when using power tools.




- Los bordes del material pueden estar afilados. Usar guantes.
- Algunos materiales pueden contener fibra de vidrio. Utilice EPP adecuado durante la manipulación.
- Tenga cuidado al utilizar herramientas eléctricas.



- Les bords du matériau peuvent être coupants. Porter des gants.
- Certains matériaux peuvent contenir de la fibre de verre. Portez un EPI approprié lors de la manipulation.
- Soyez prudent lorsque vous utilisez des outils électriques.



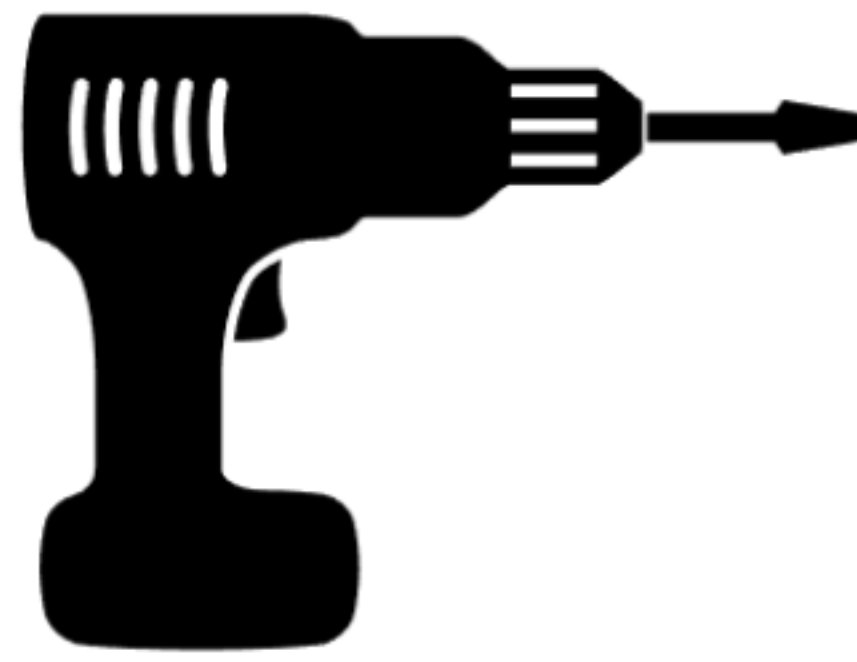


#3 Square Drive



Phillips



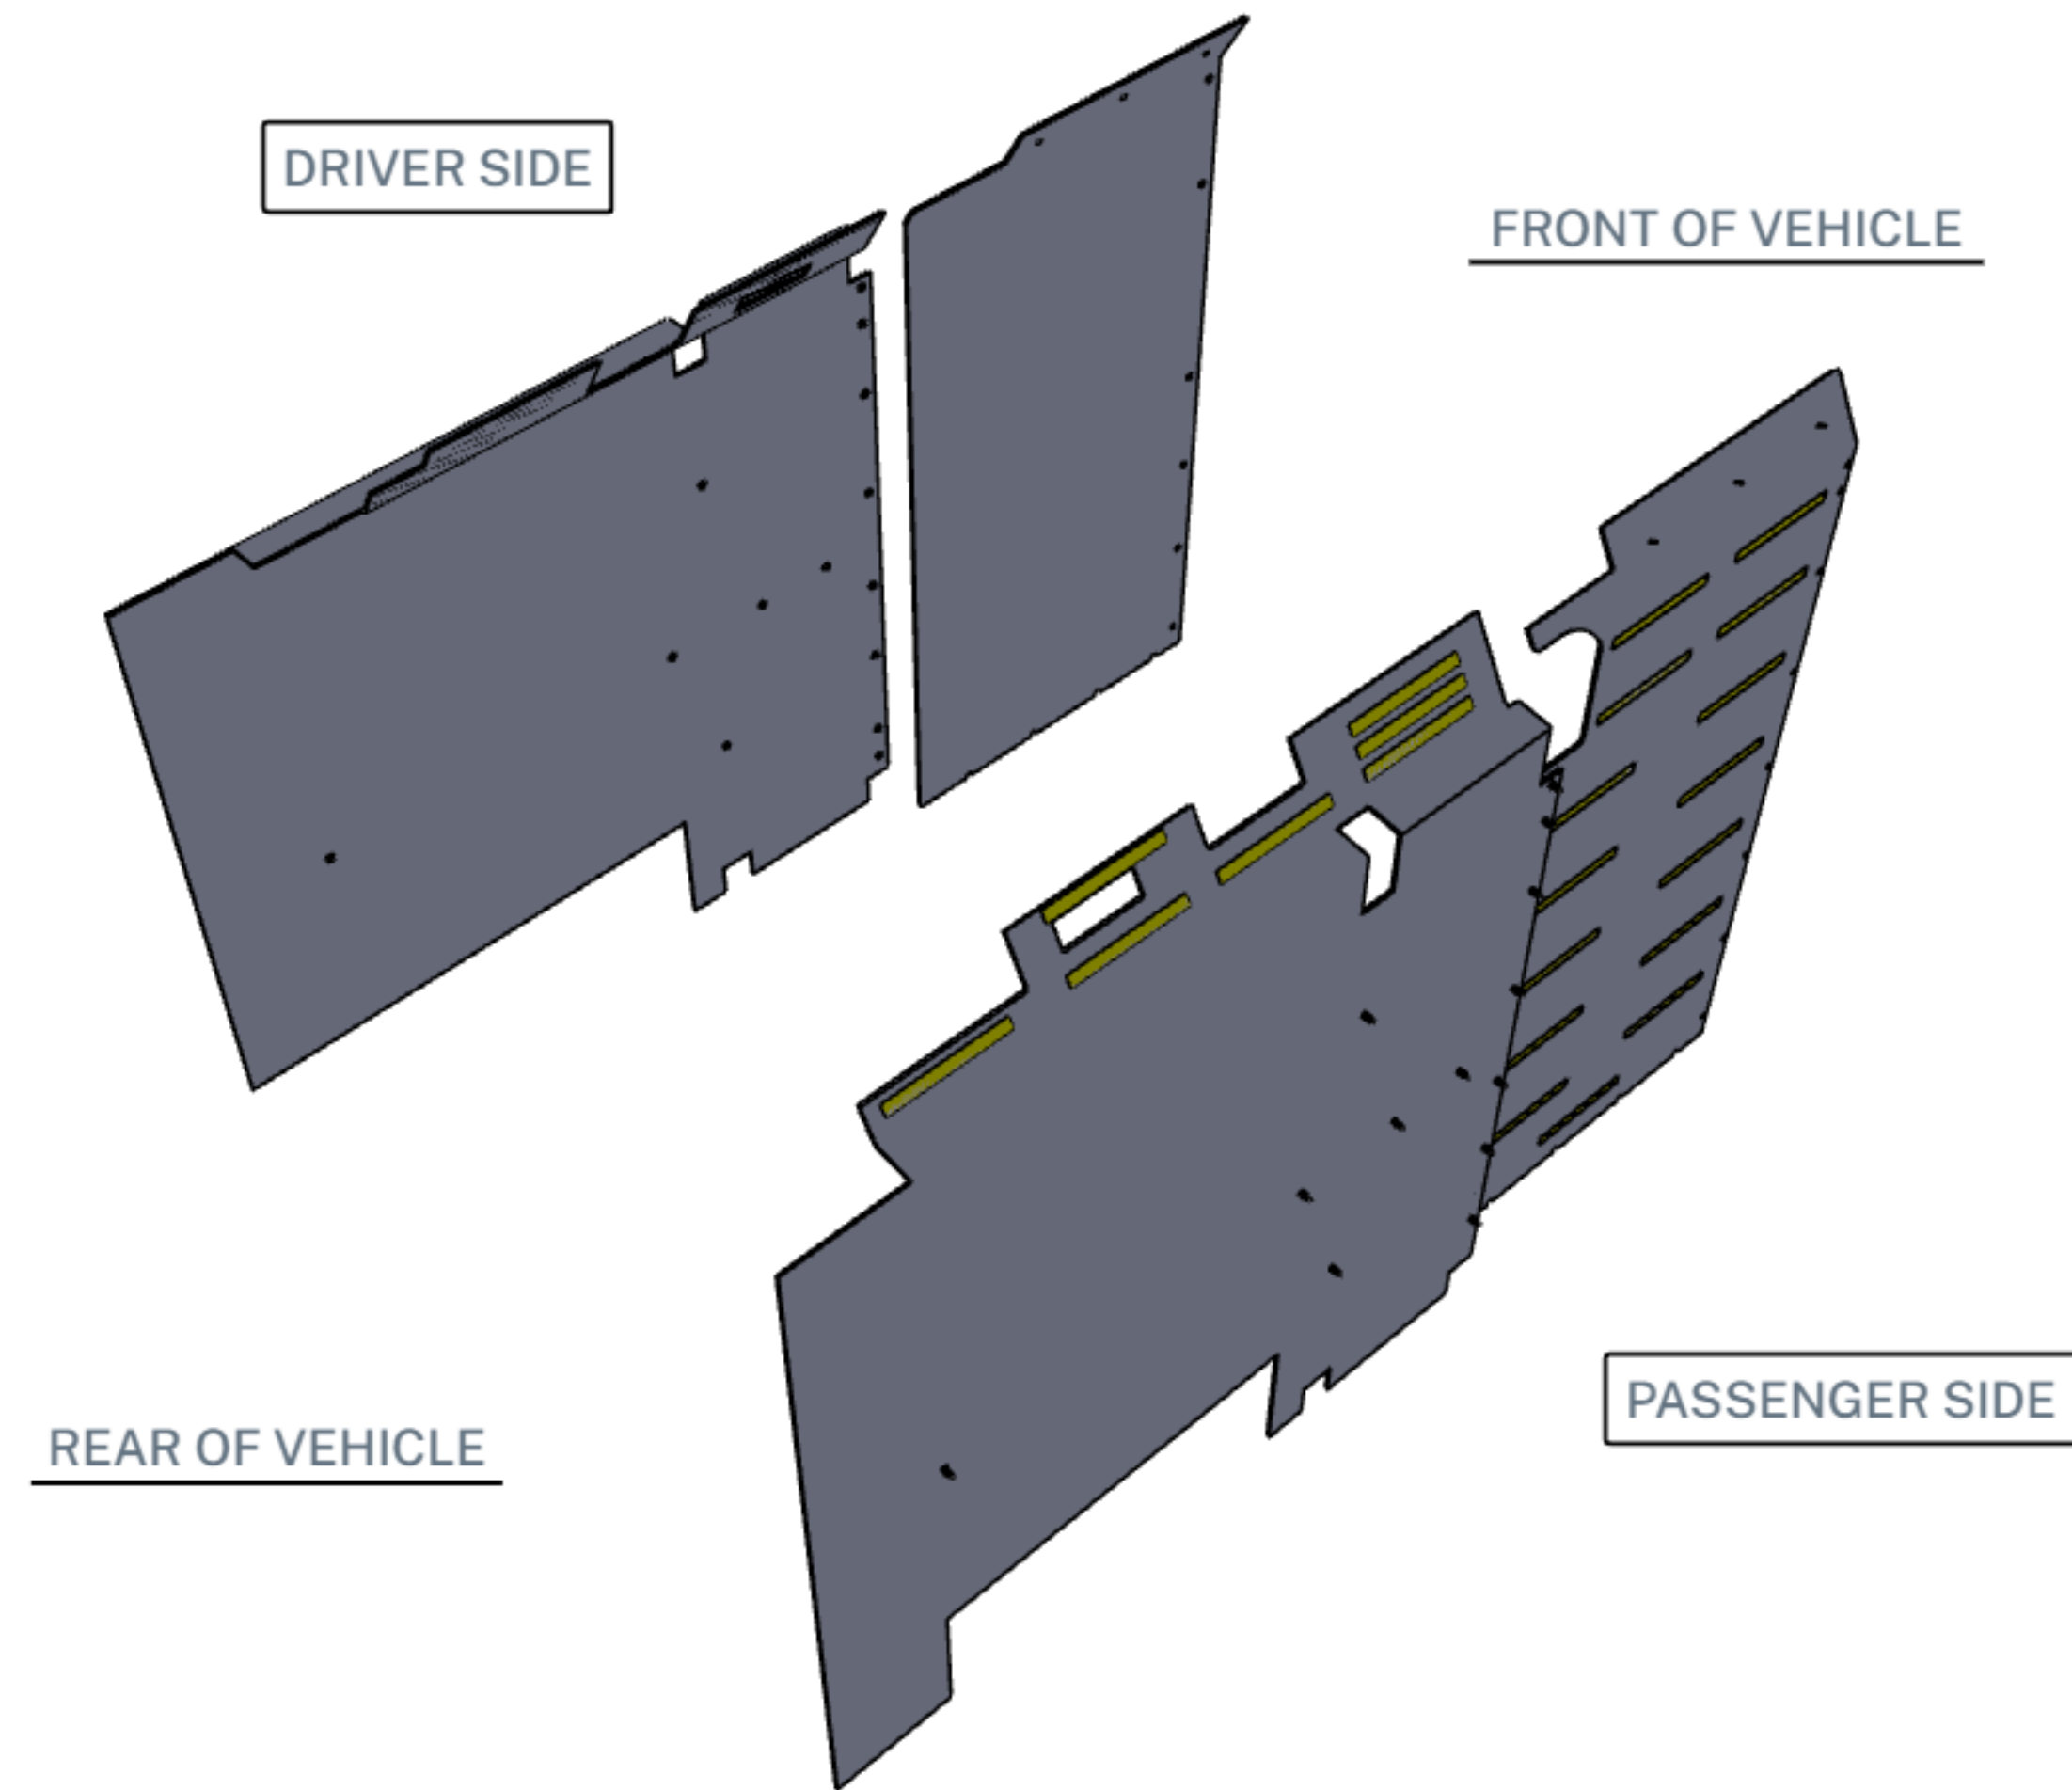


DRIVER SIDE

FRONT OF VEHICLE

REAR OF VEHICLE

PASSENGER SIDE

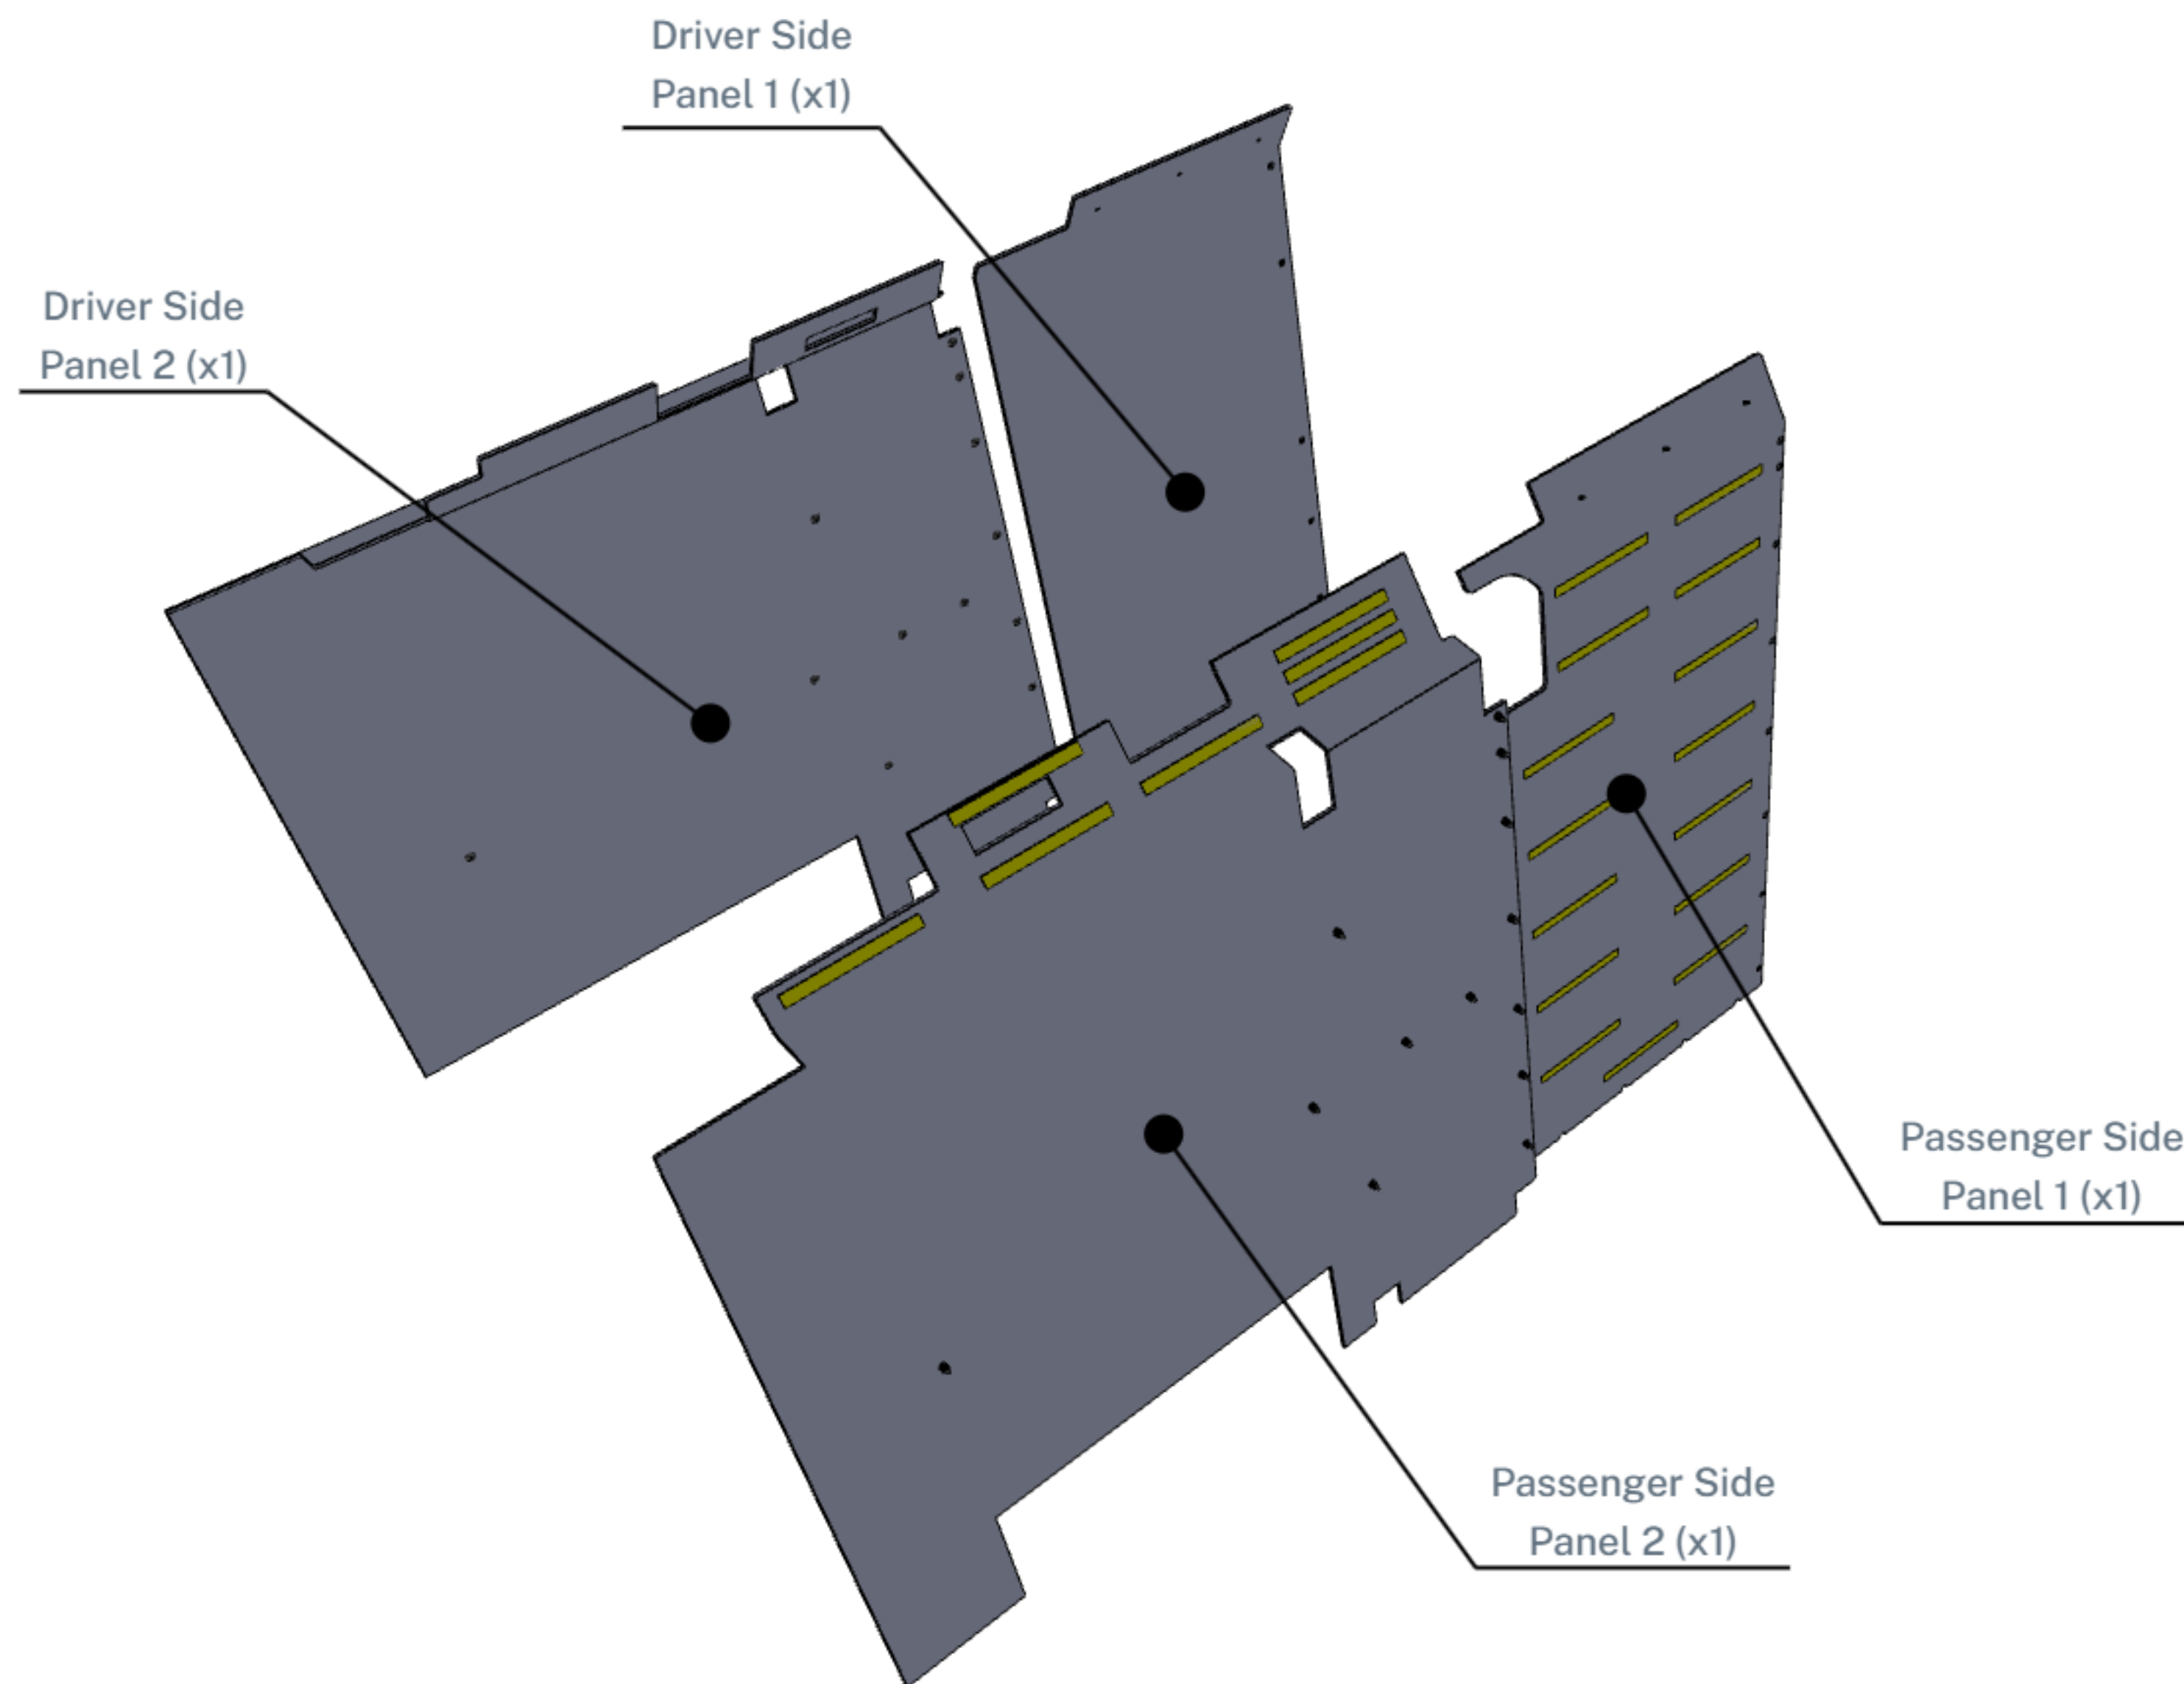

**BD0222-41CP3**

EconoLite Wall Liner Kit - Grey

**BD0222-41CR4**

EconoLite Wall Liner Kit - White


**BD0222-41DR3**

EconoLite Wall Liner Kit - Grey

**BD0222-41DR4**

EconoLite Wall Liner Kit - White

## Hardware Required

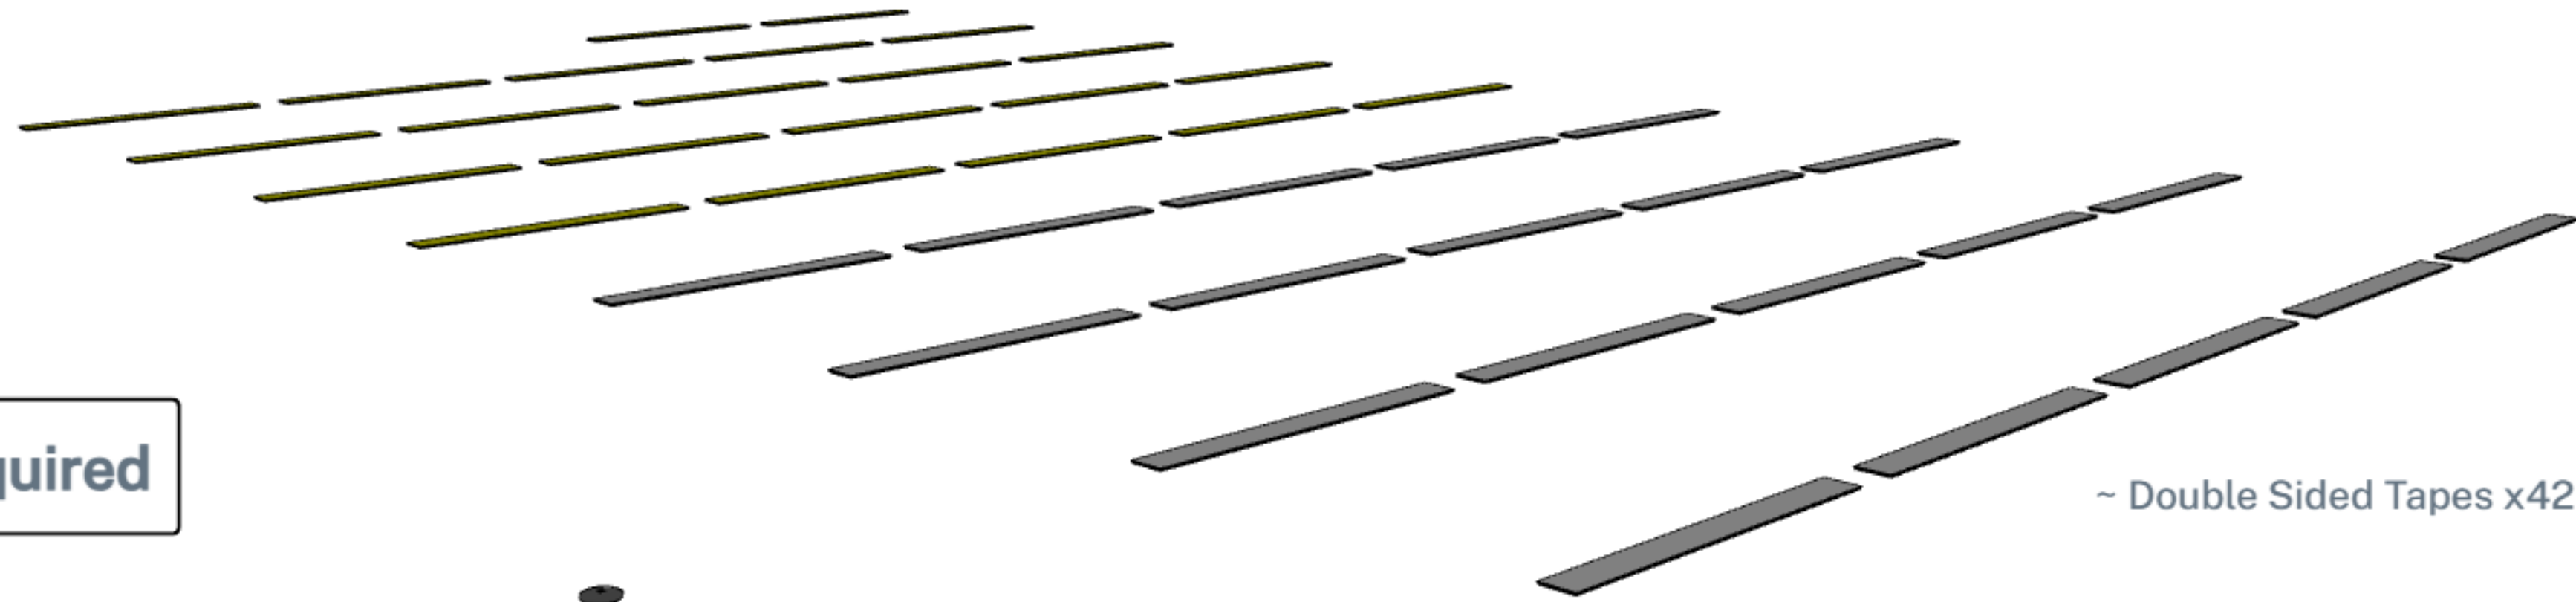


~ Double Sided Tapes x42




~ Screw Rivets x27



~ Self Drill Screws x6

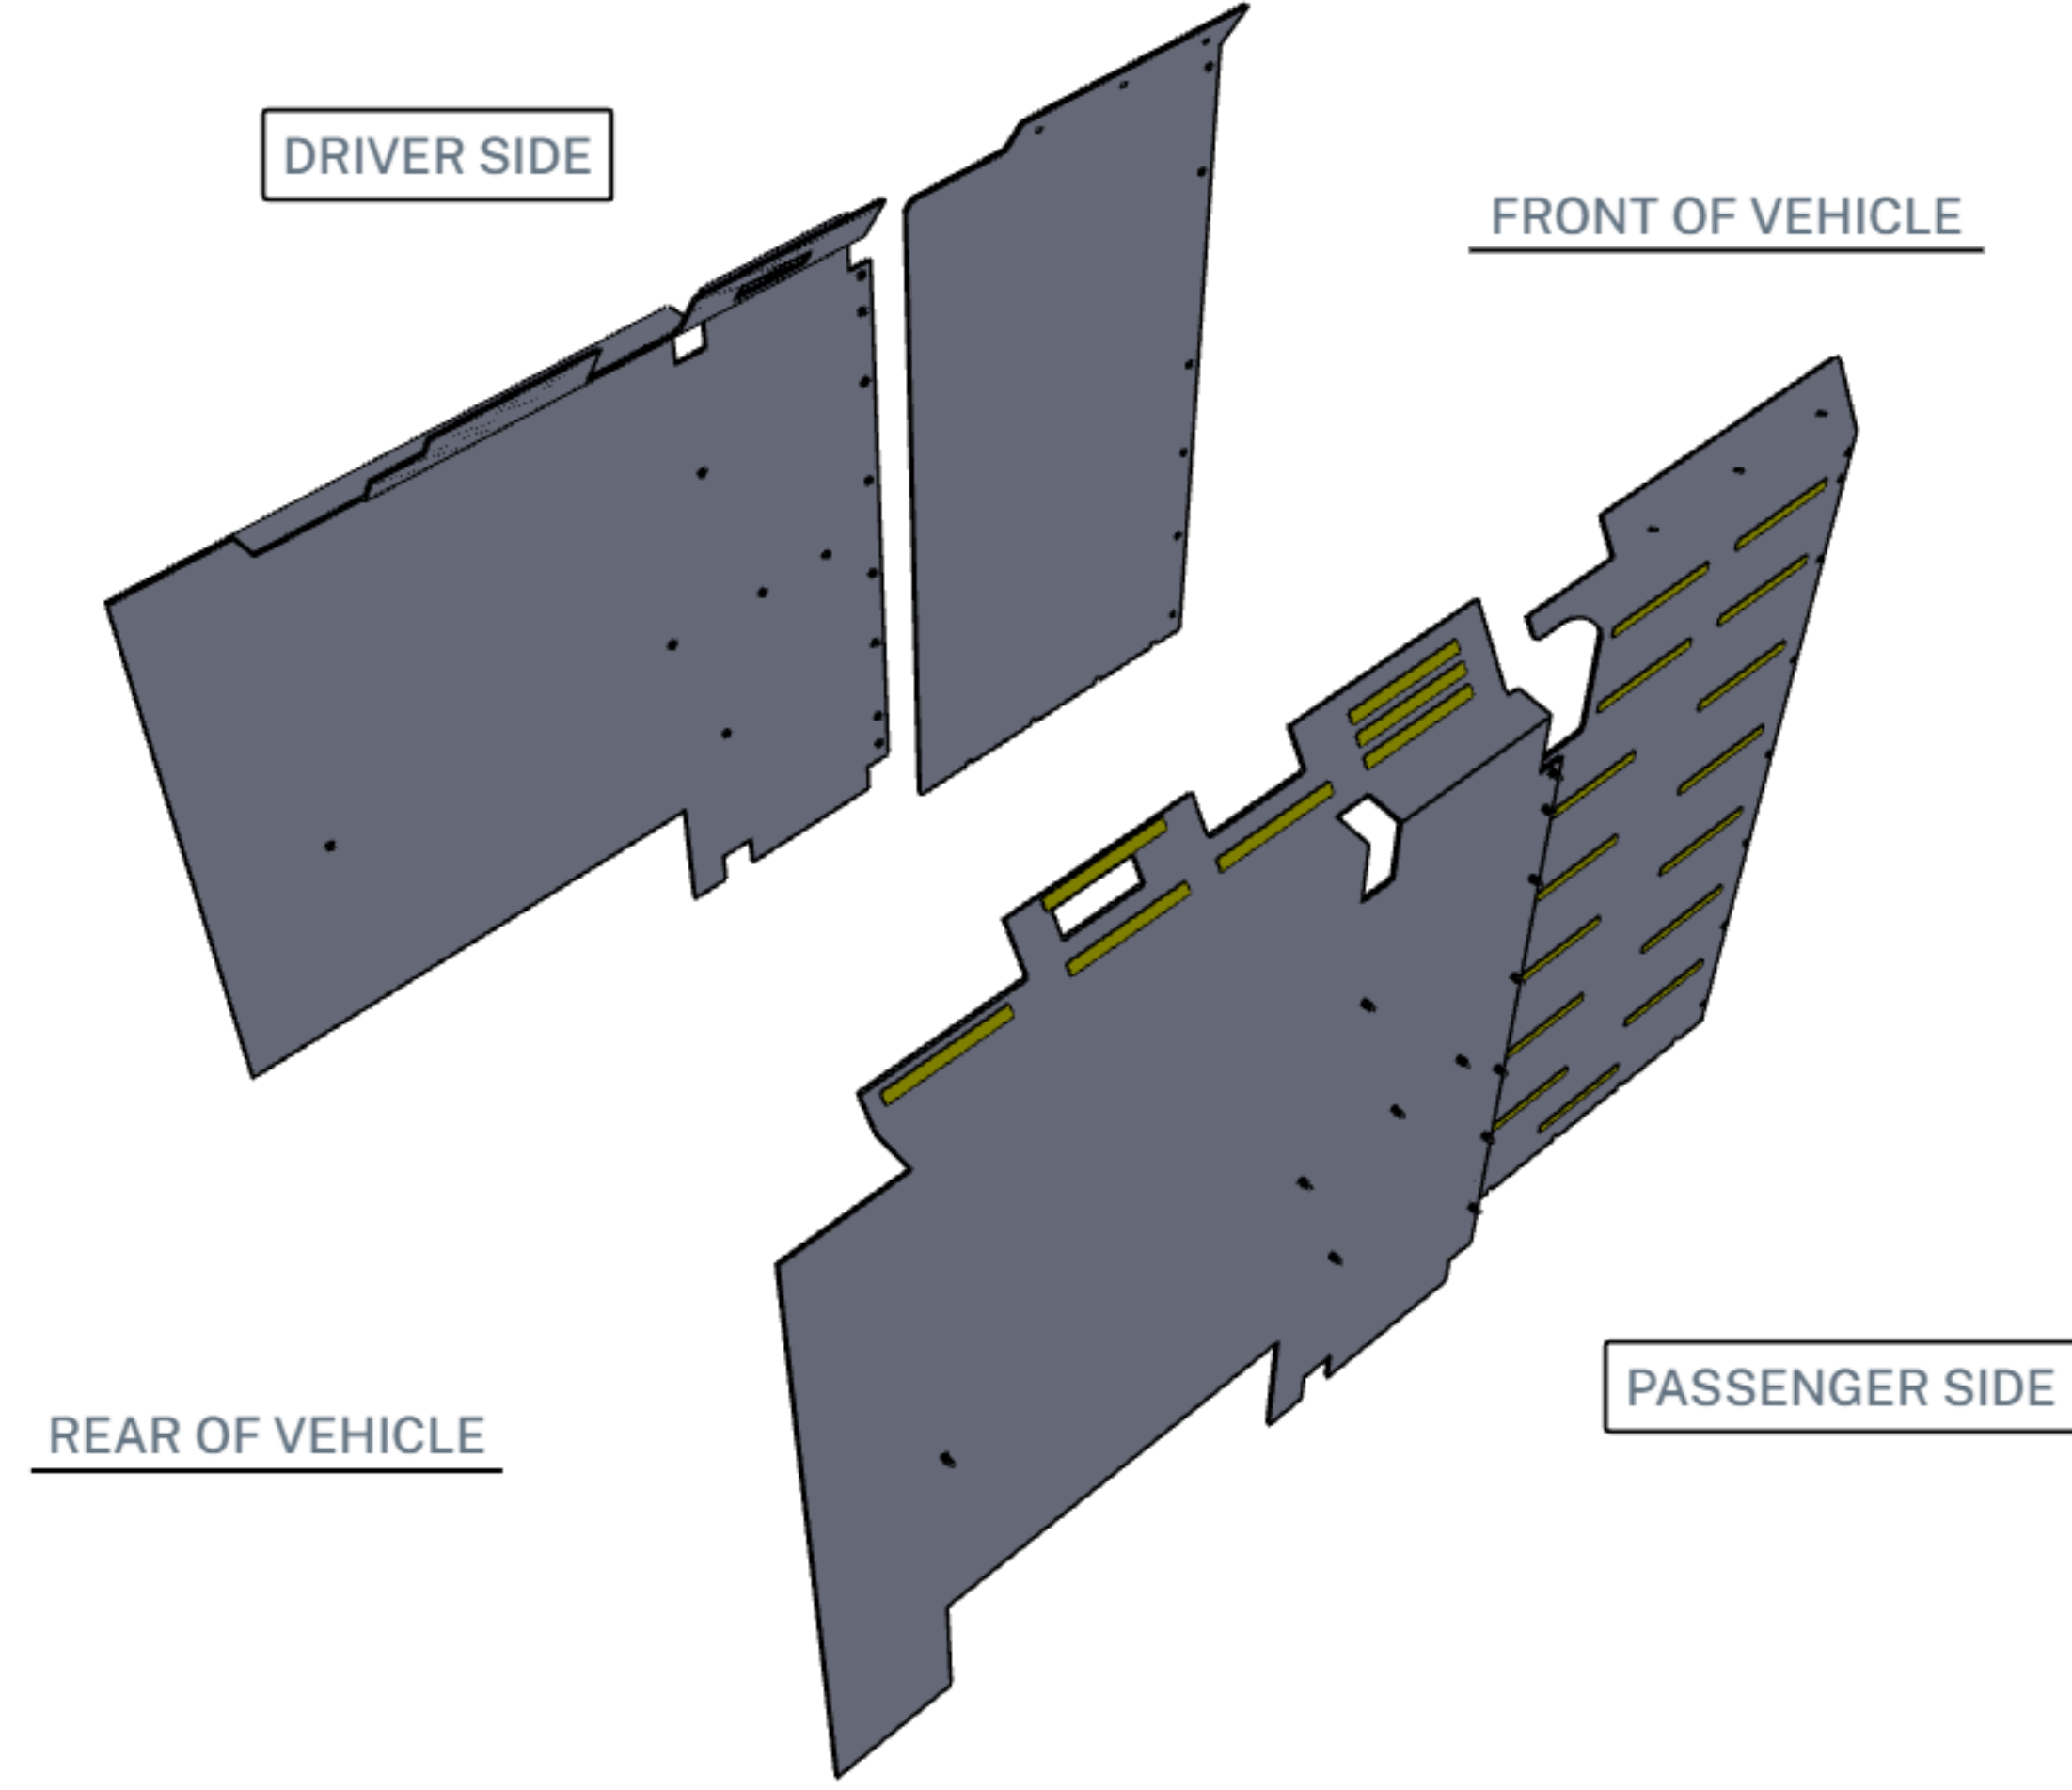




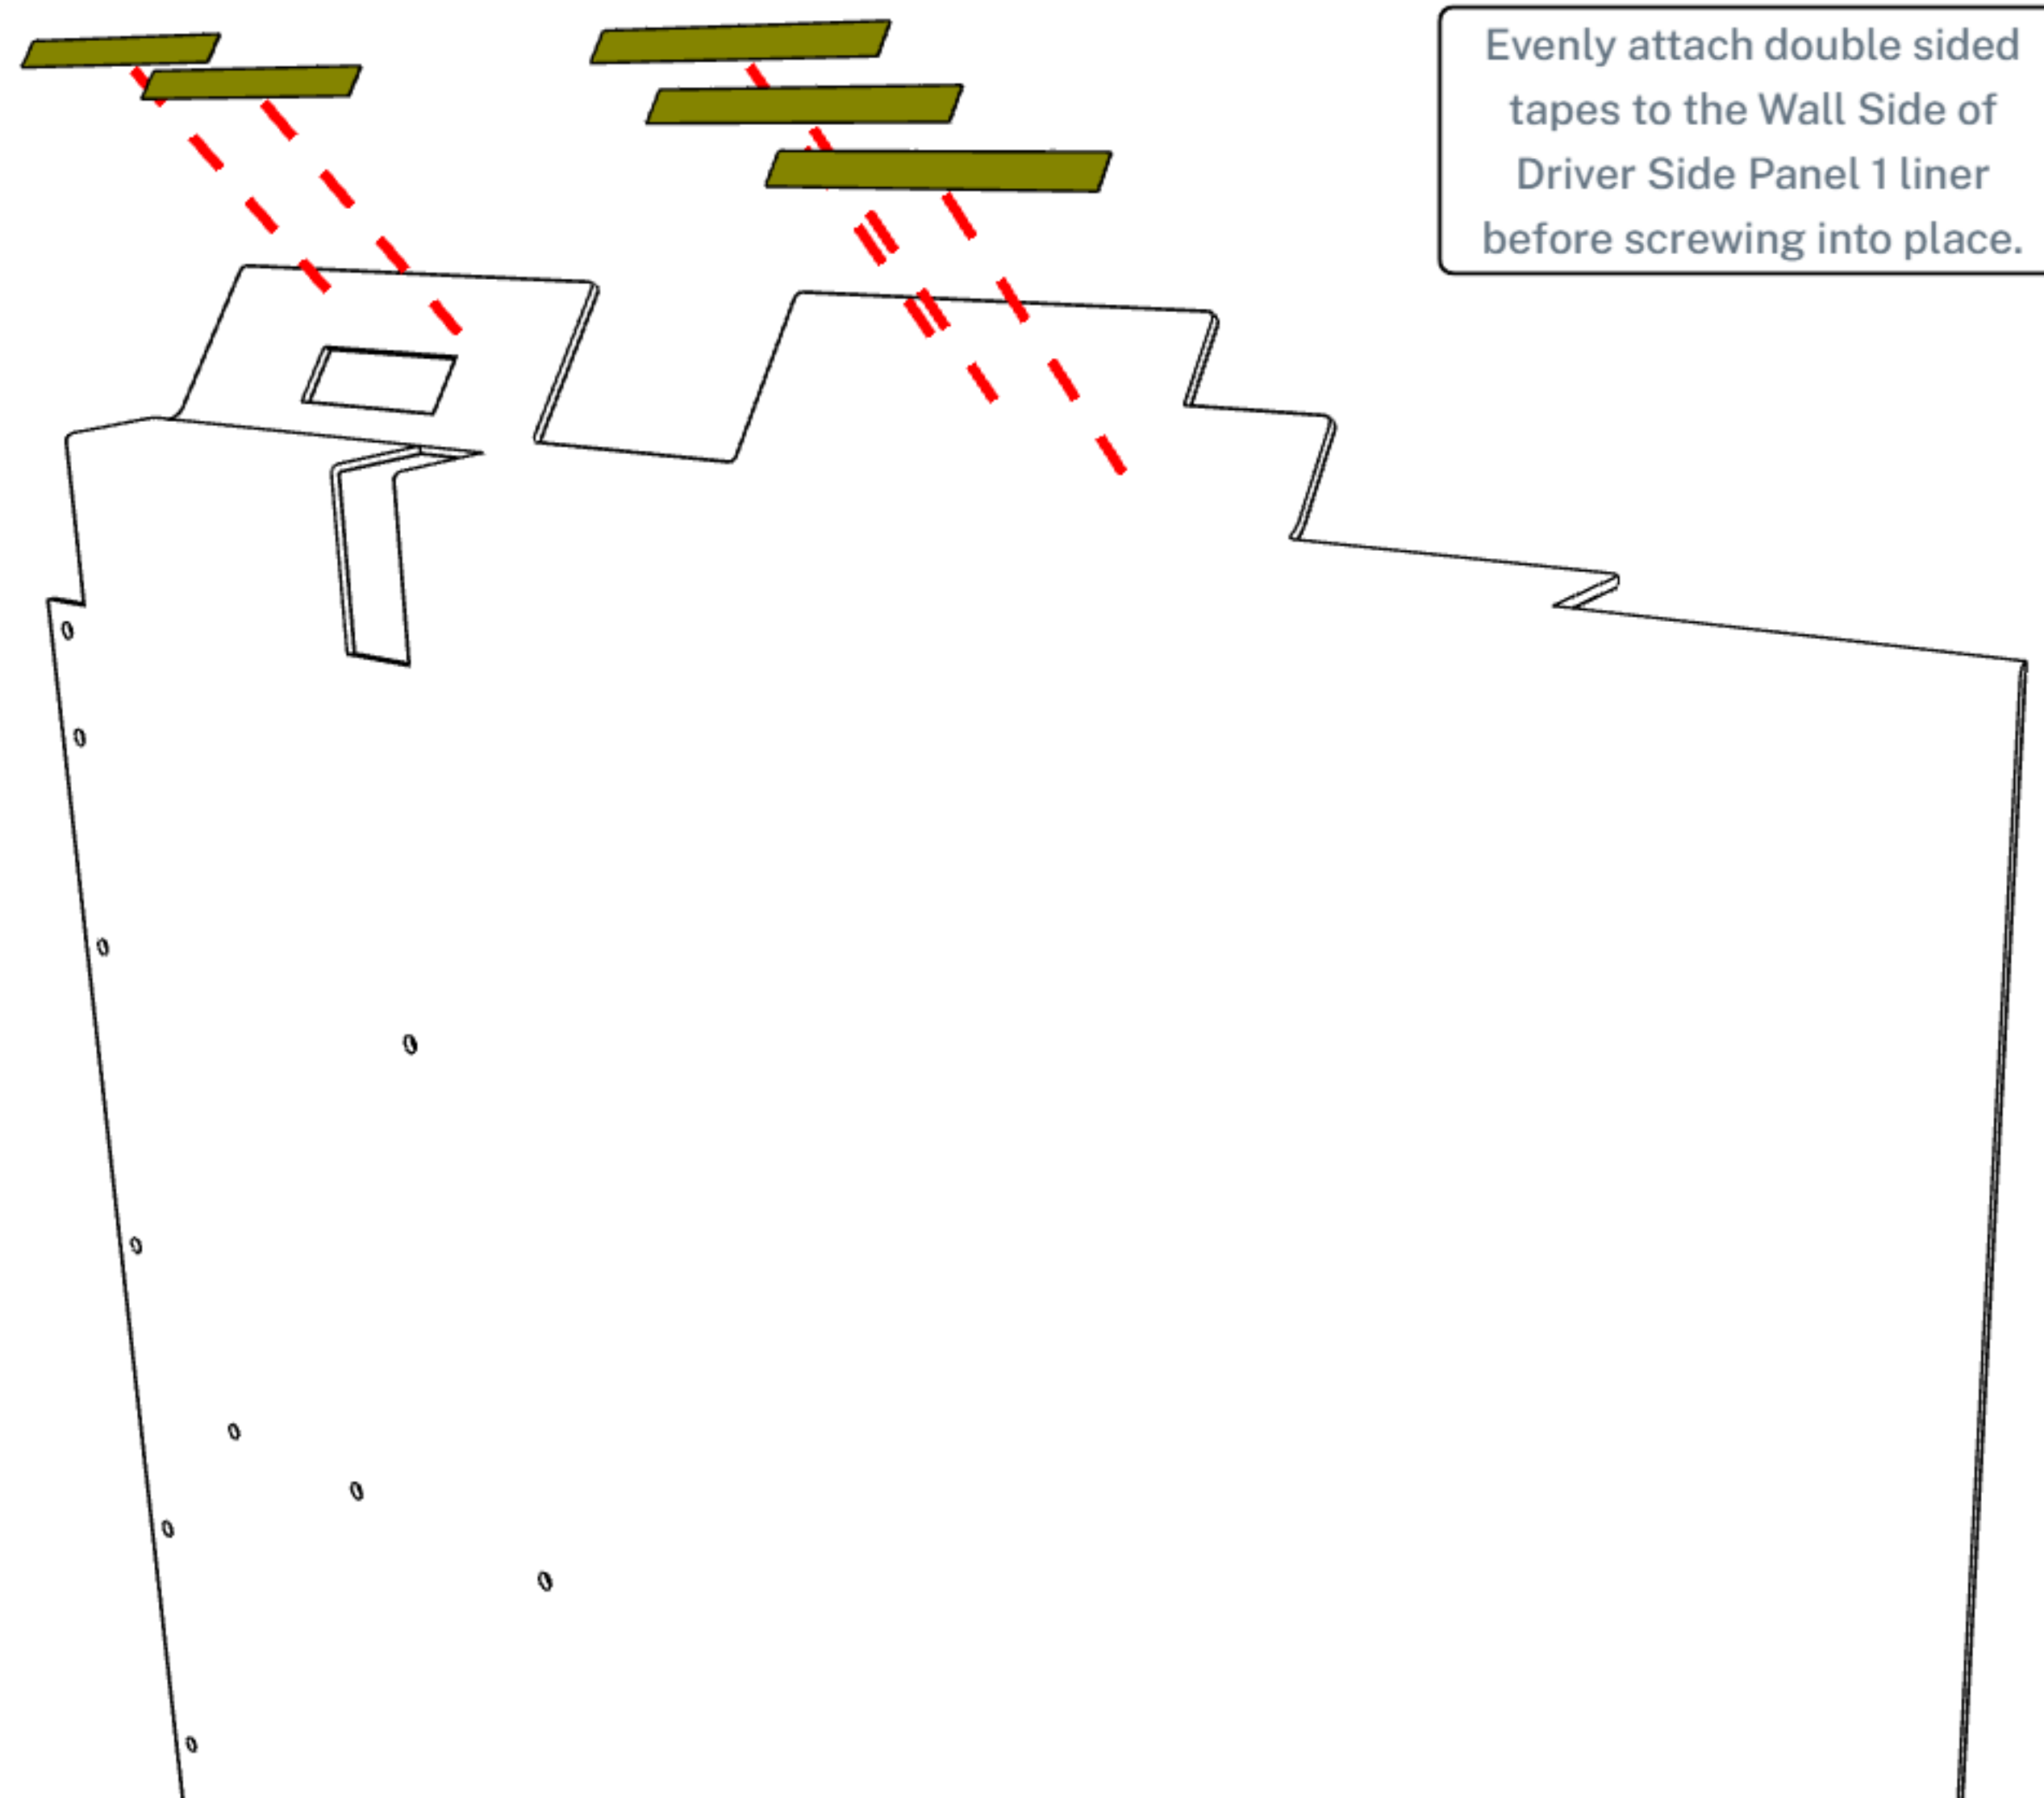


Evenly attach double sided  
tapes to the Wall Side of  
Driver Side Panel 1 liner  
before screwing into place.



5x

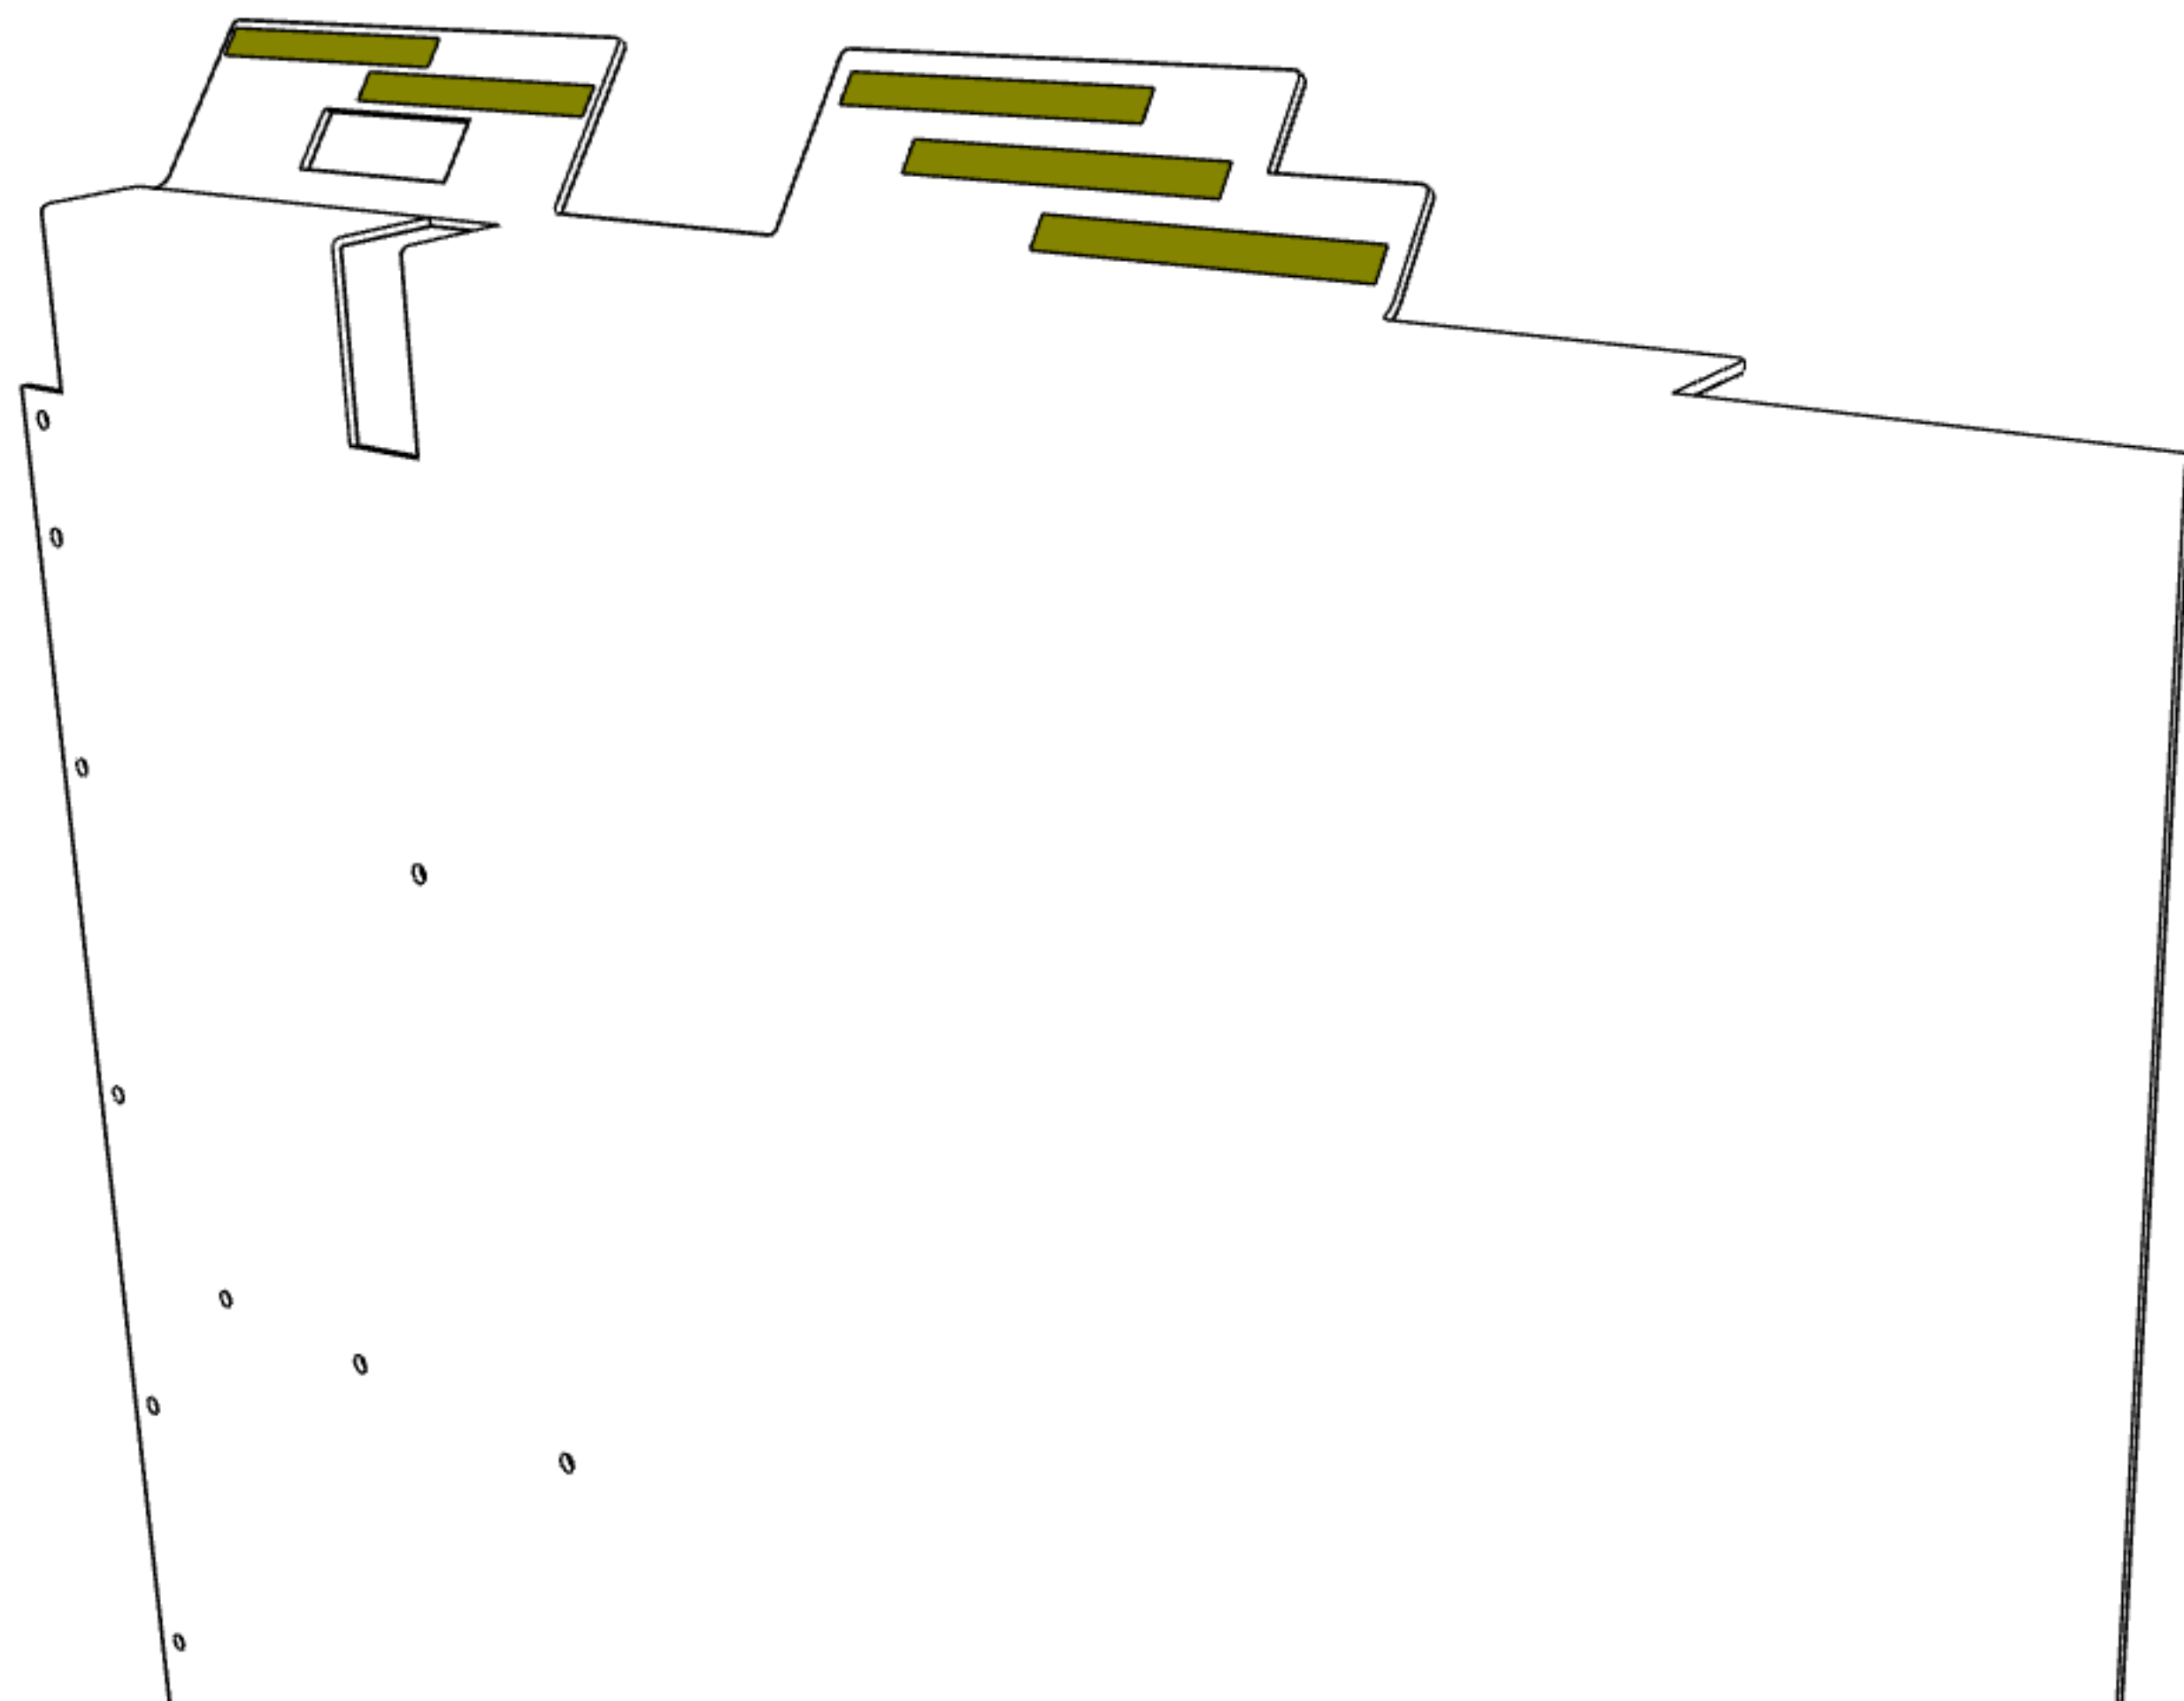


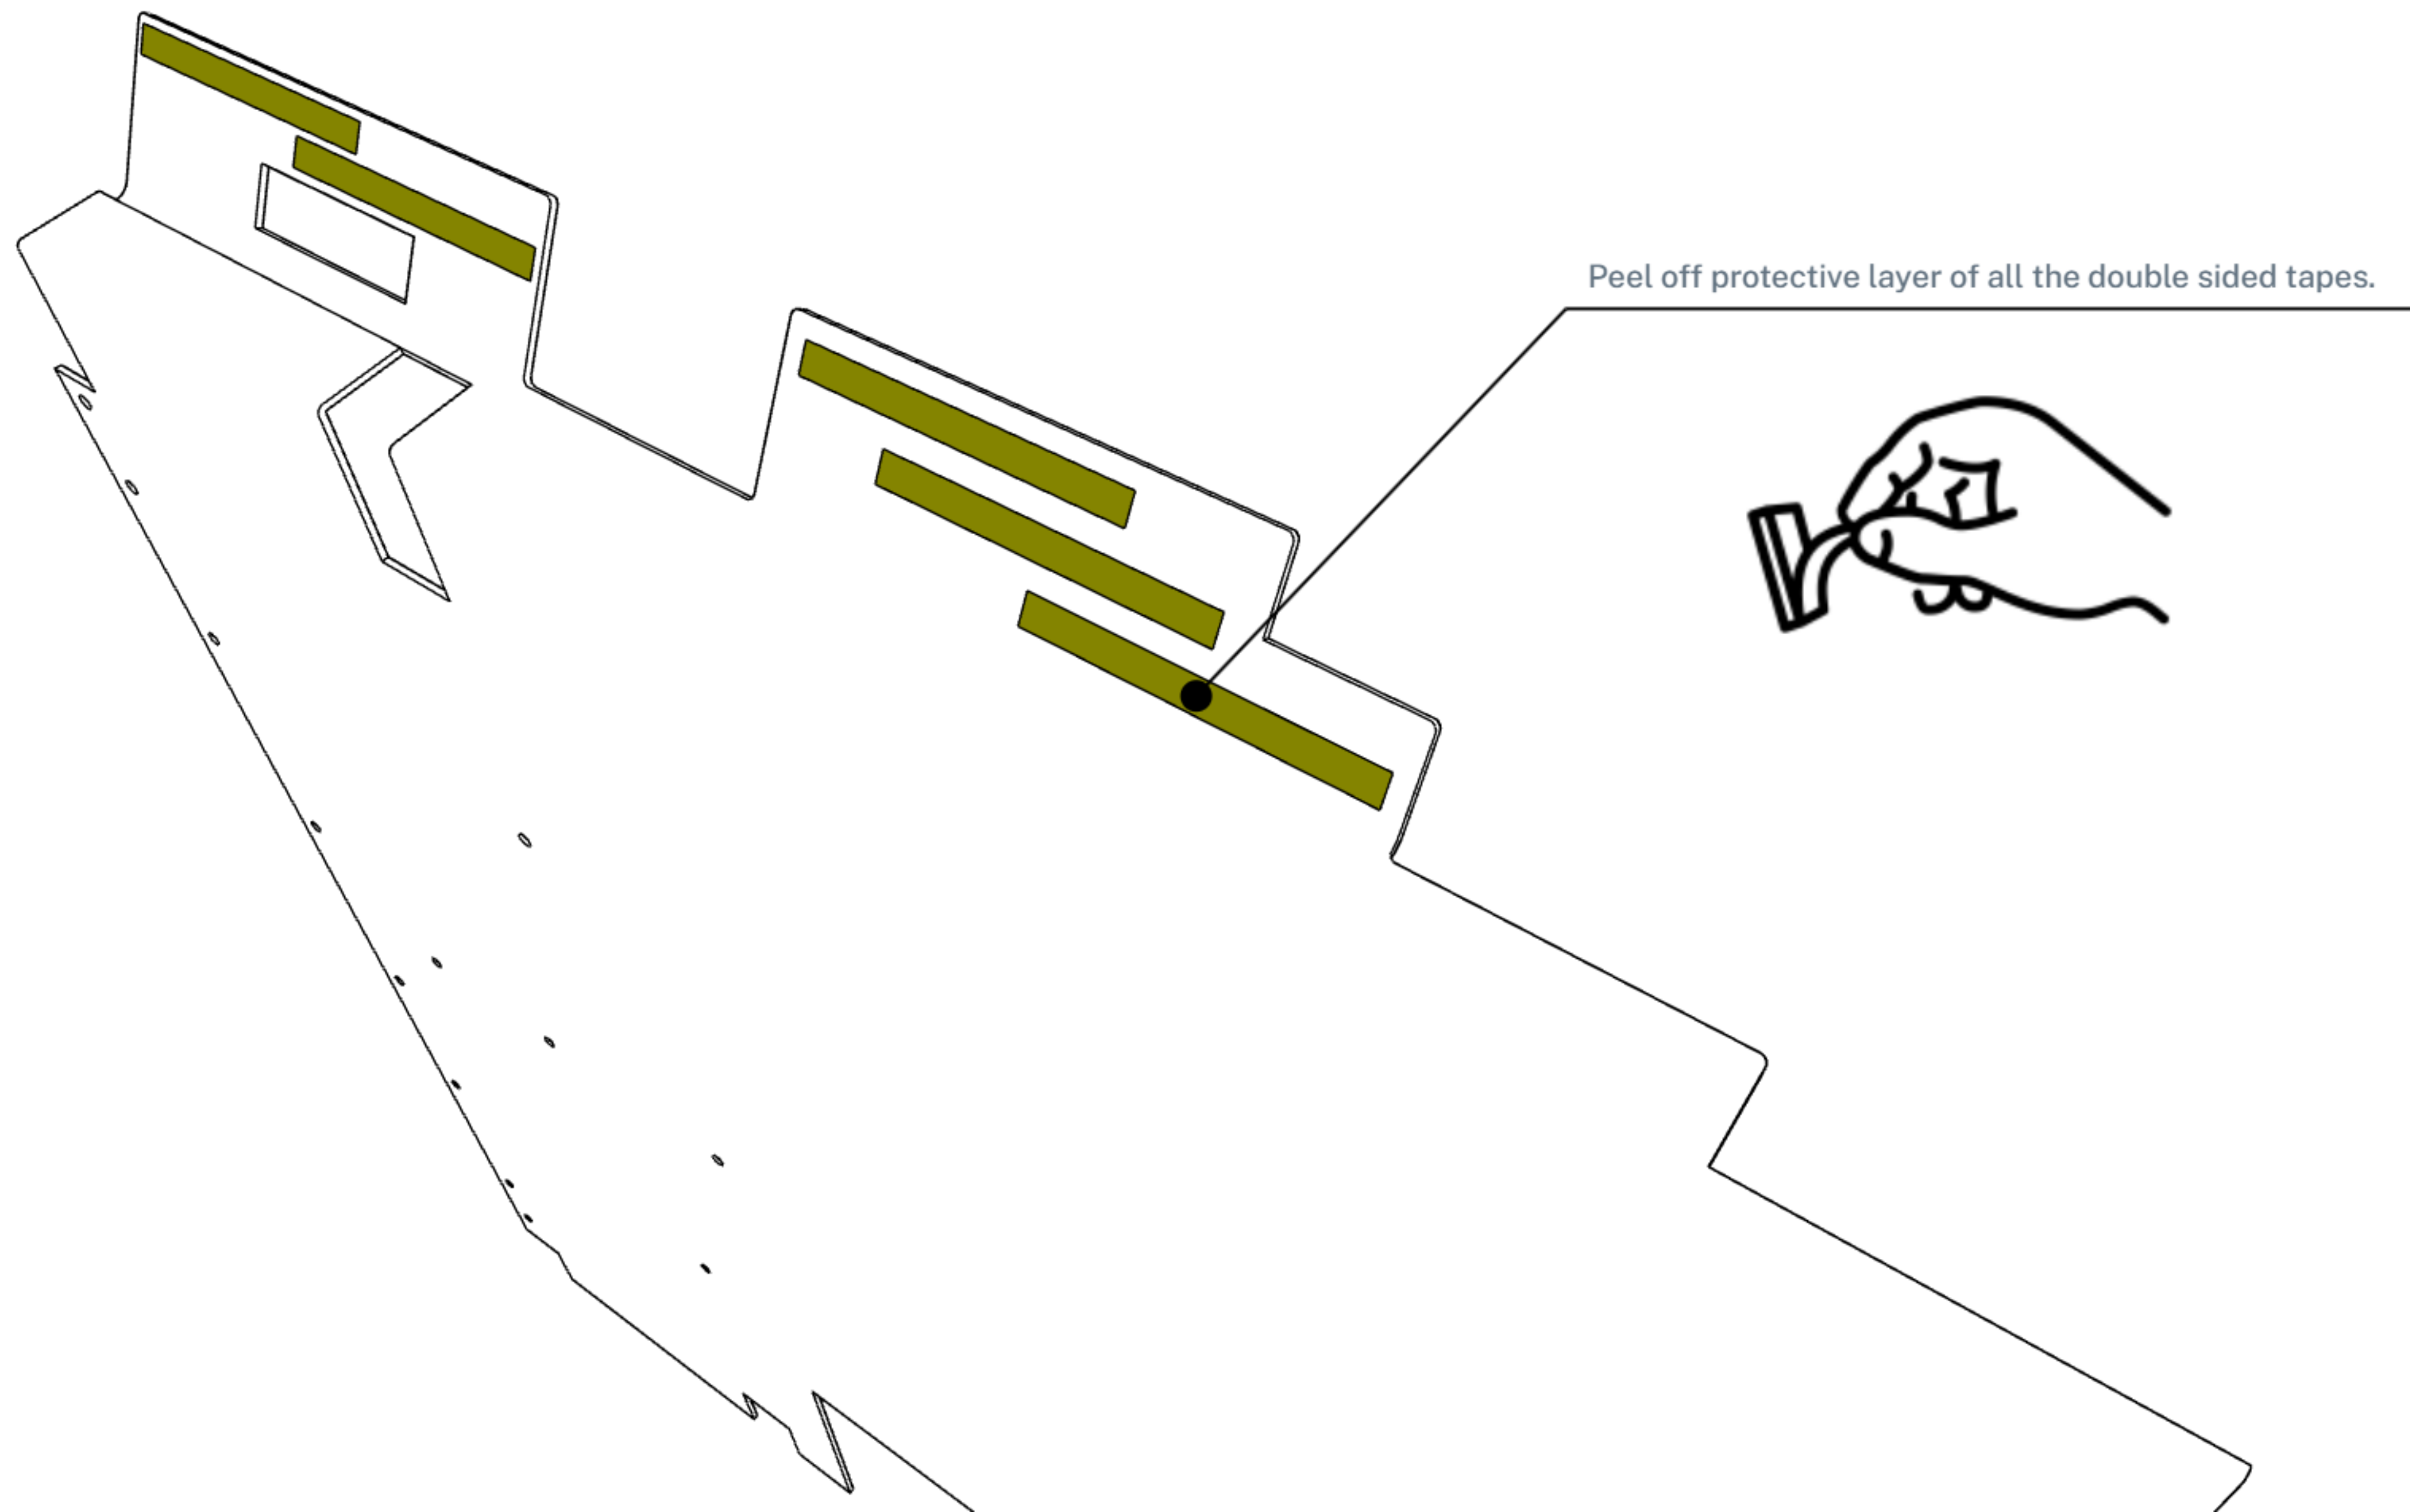

Peel off protective layer of all the double sided tapes.



REAR OF VEHICLE

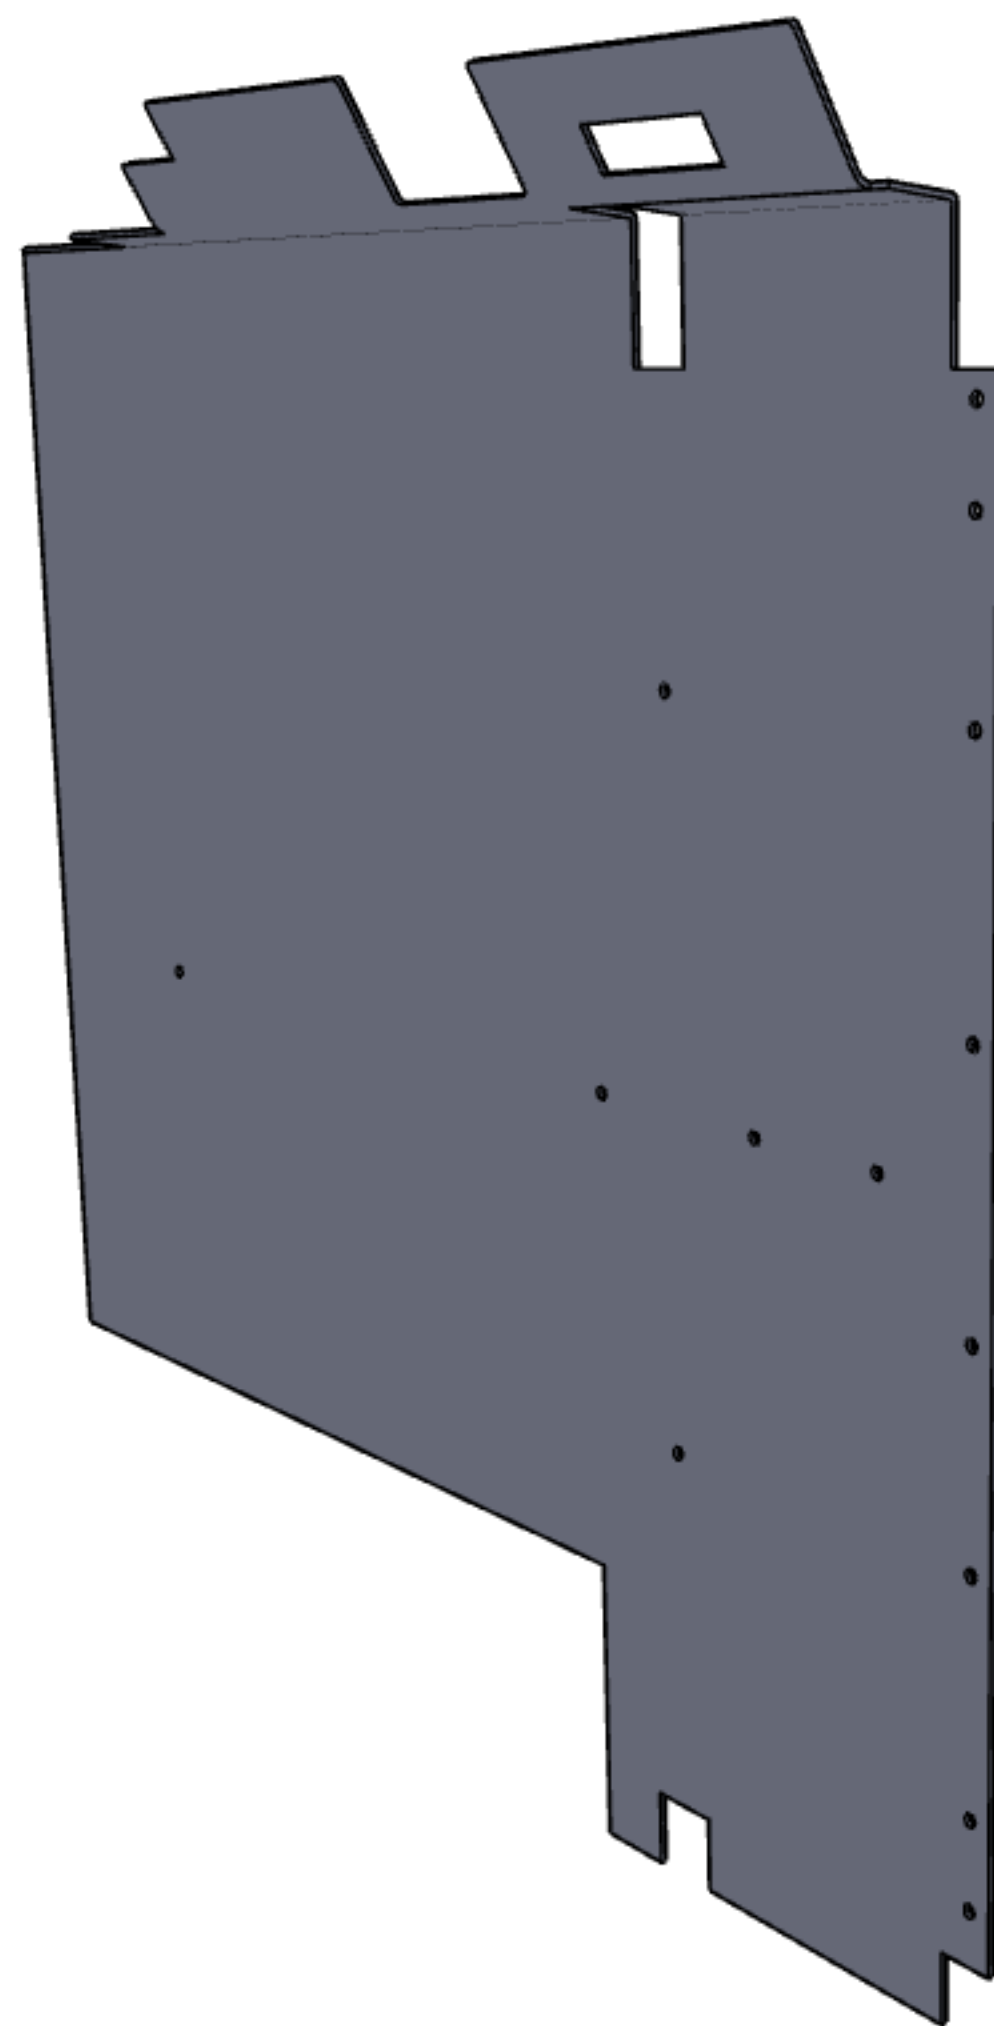


DRIVER SIDE WALL

FRONT OF VEHICLE

Align Driver Side Panel 2  
rivet holes with vehicle  
factory holes and place  
liner to the wall.




REAR OF VEHICLE

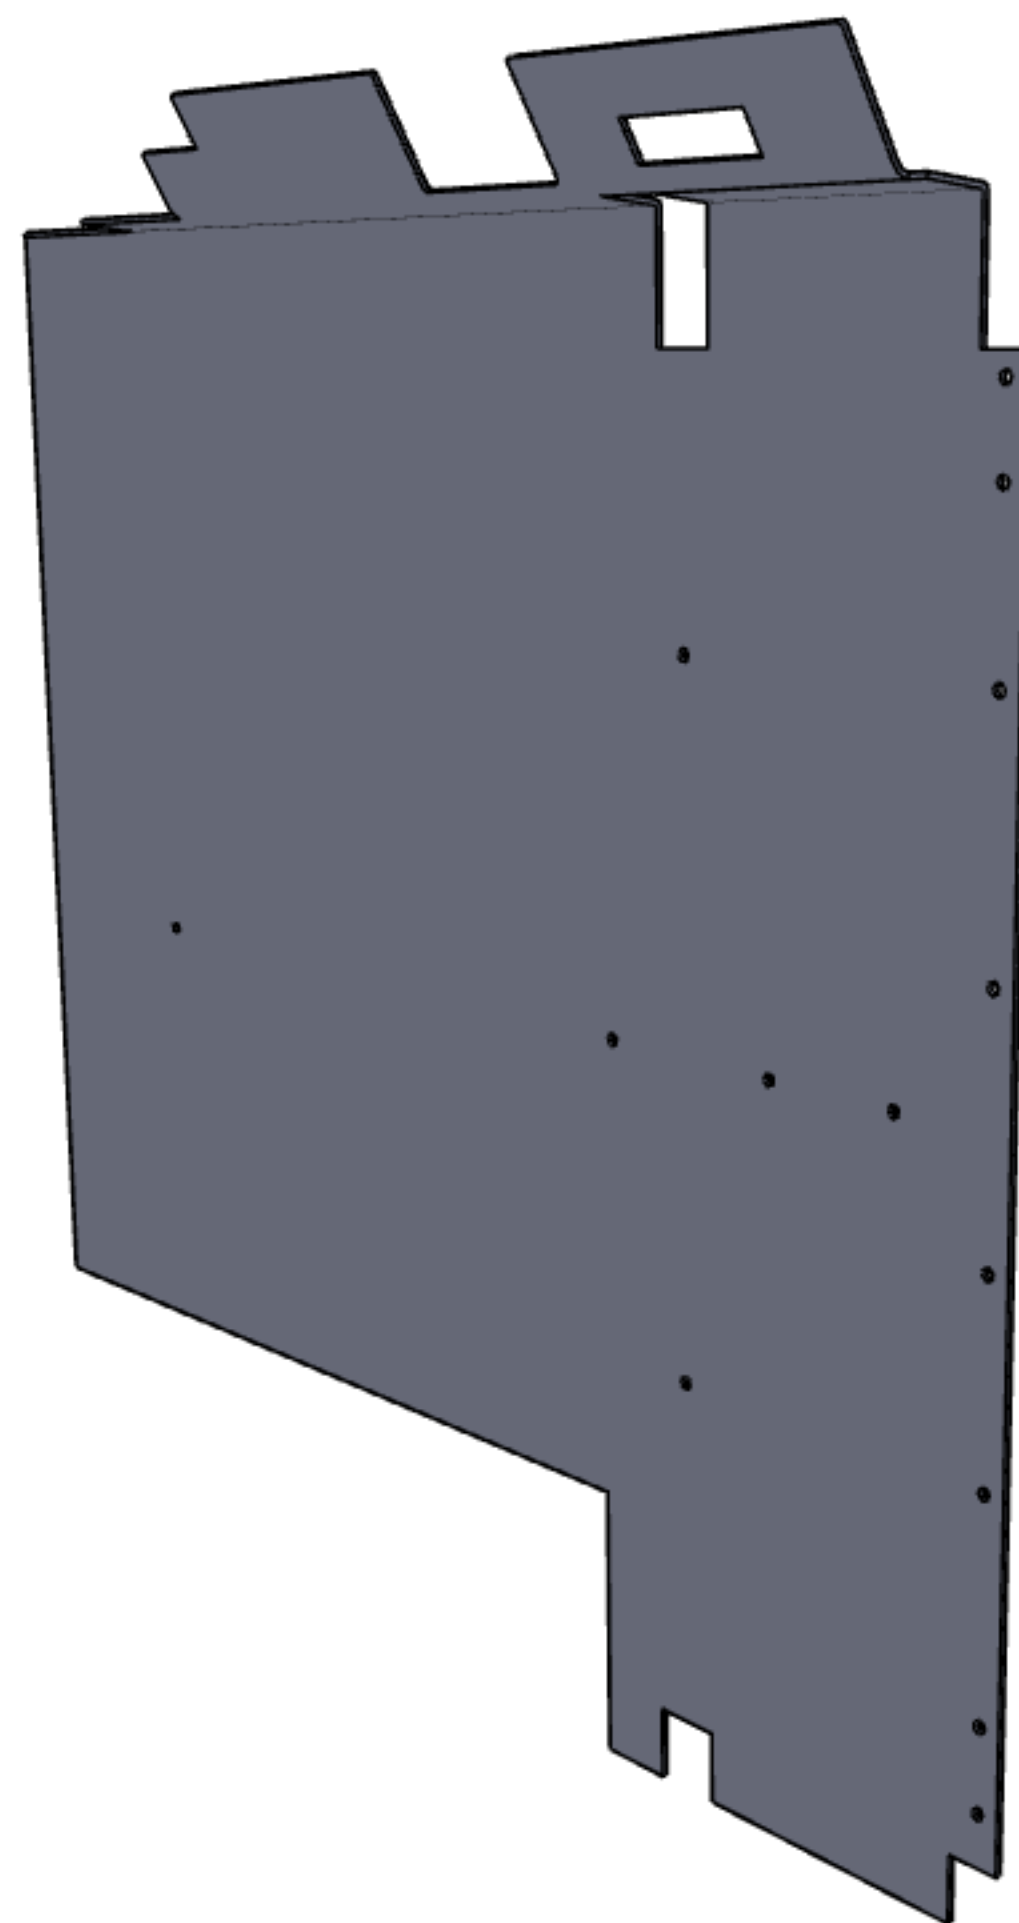

DRIVER SIDE WALL


FRONT OF VEHICLE

REAR OF VEHICLE

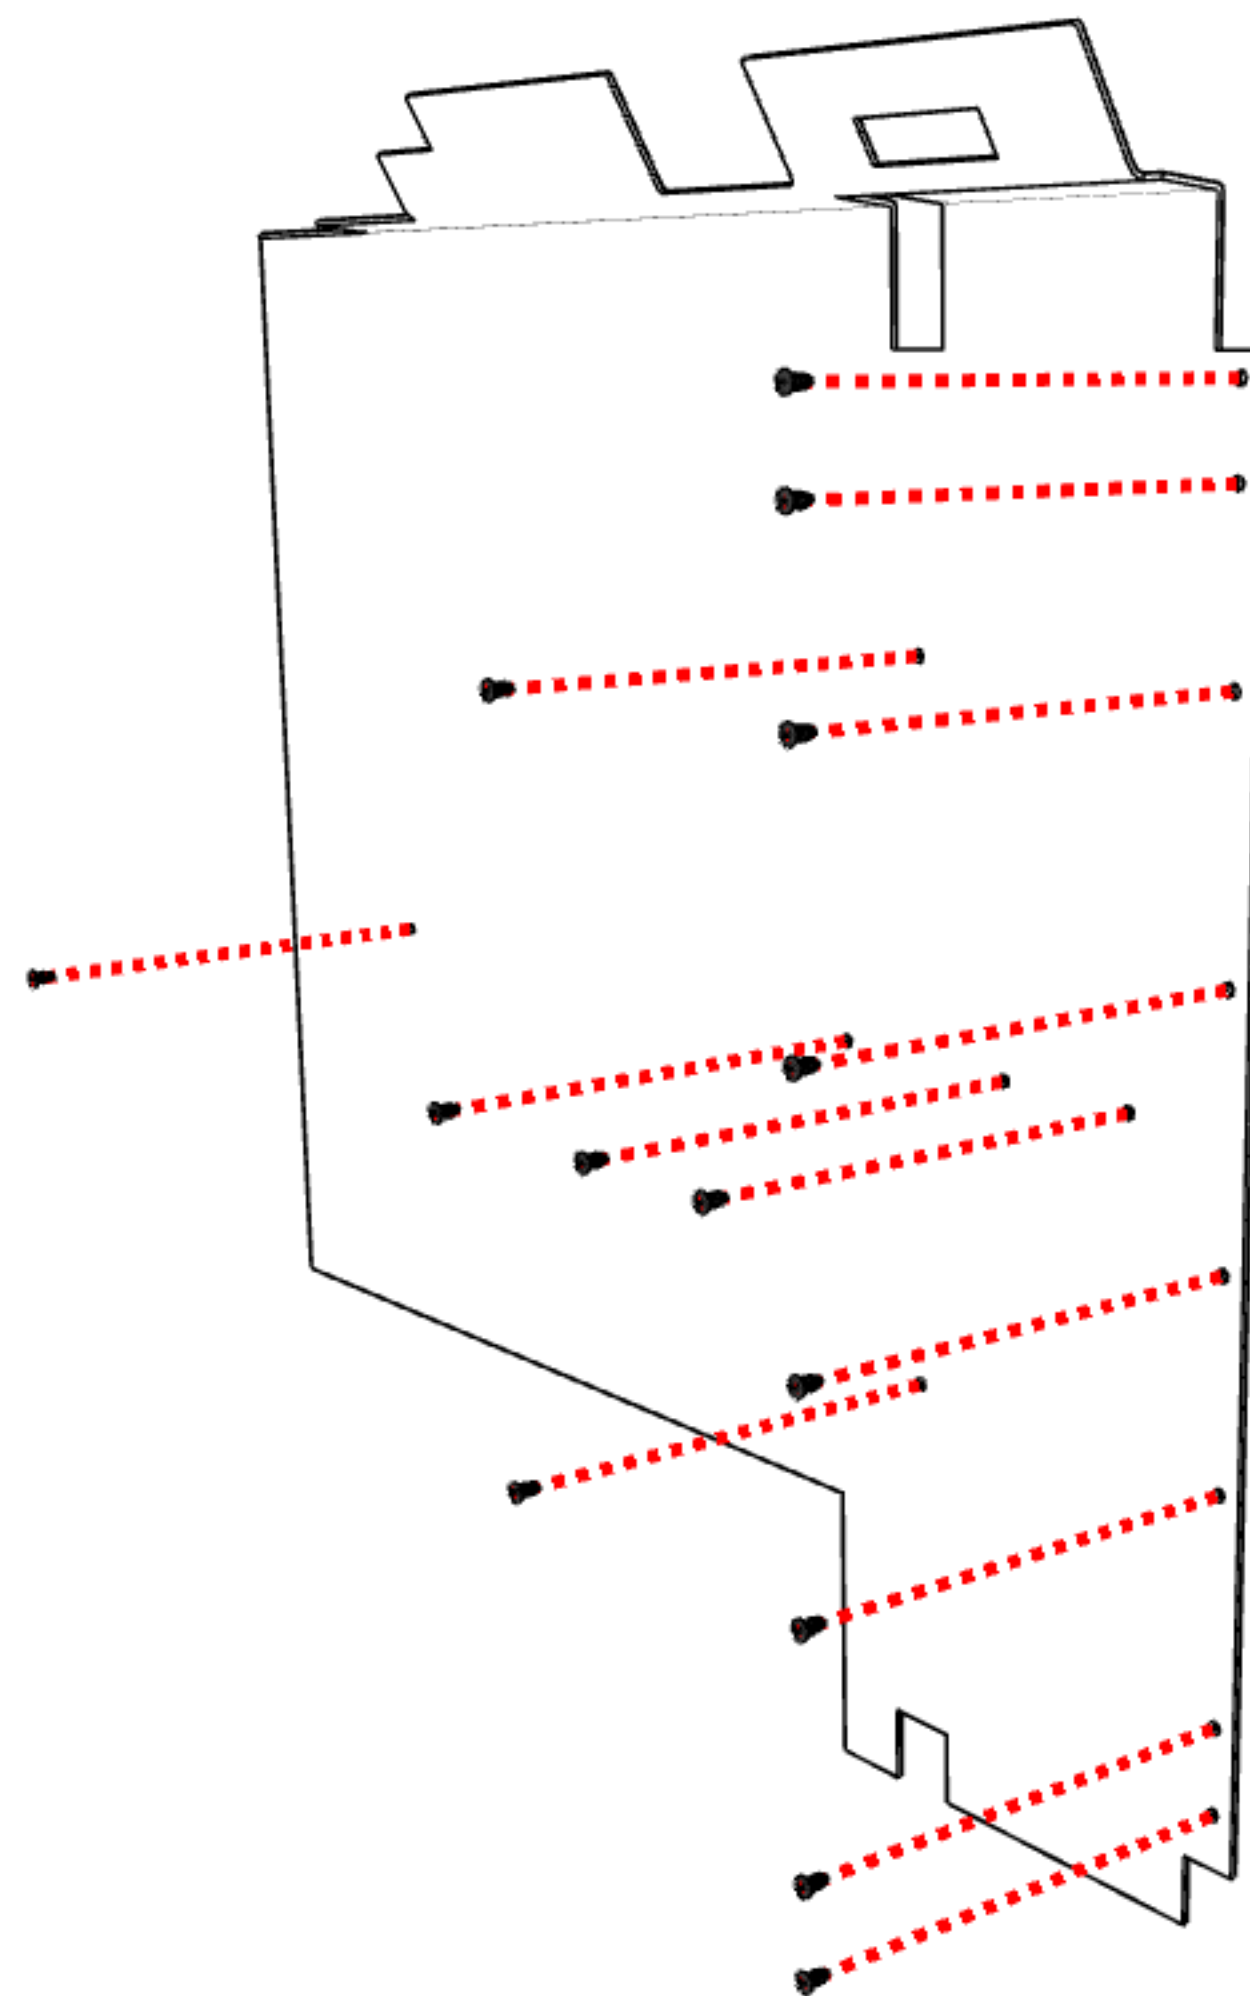


DRIVER SIDE WALL

Screw in Legend rivets.

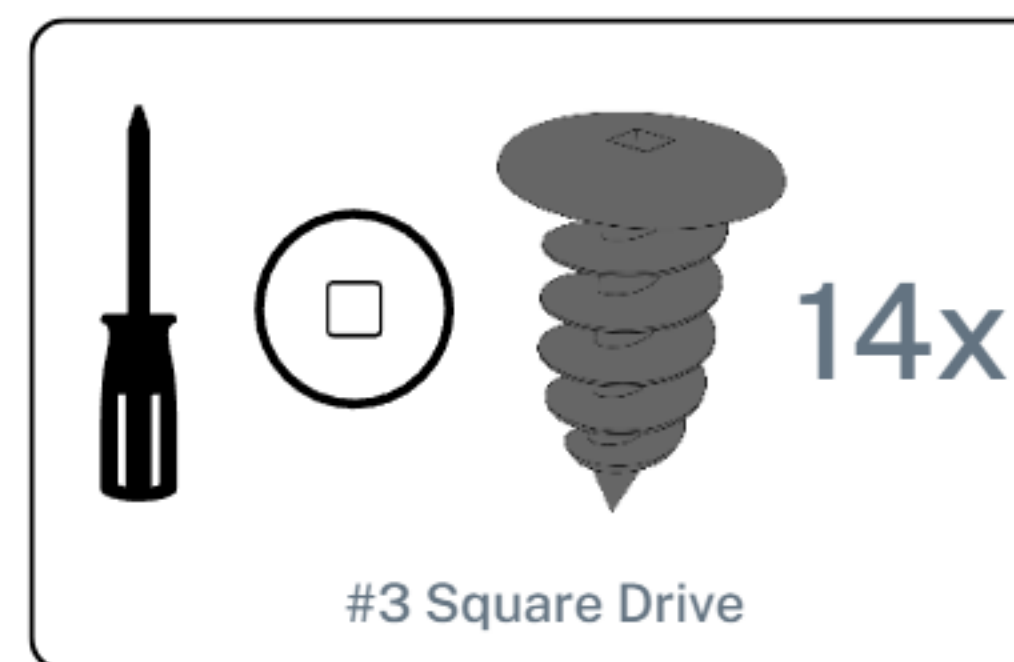

FRONT OF VEHICLE

REAR OF VEHICLE

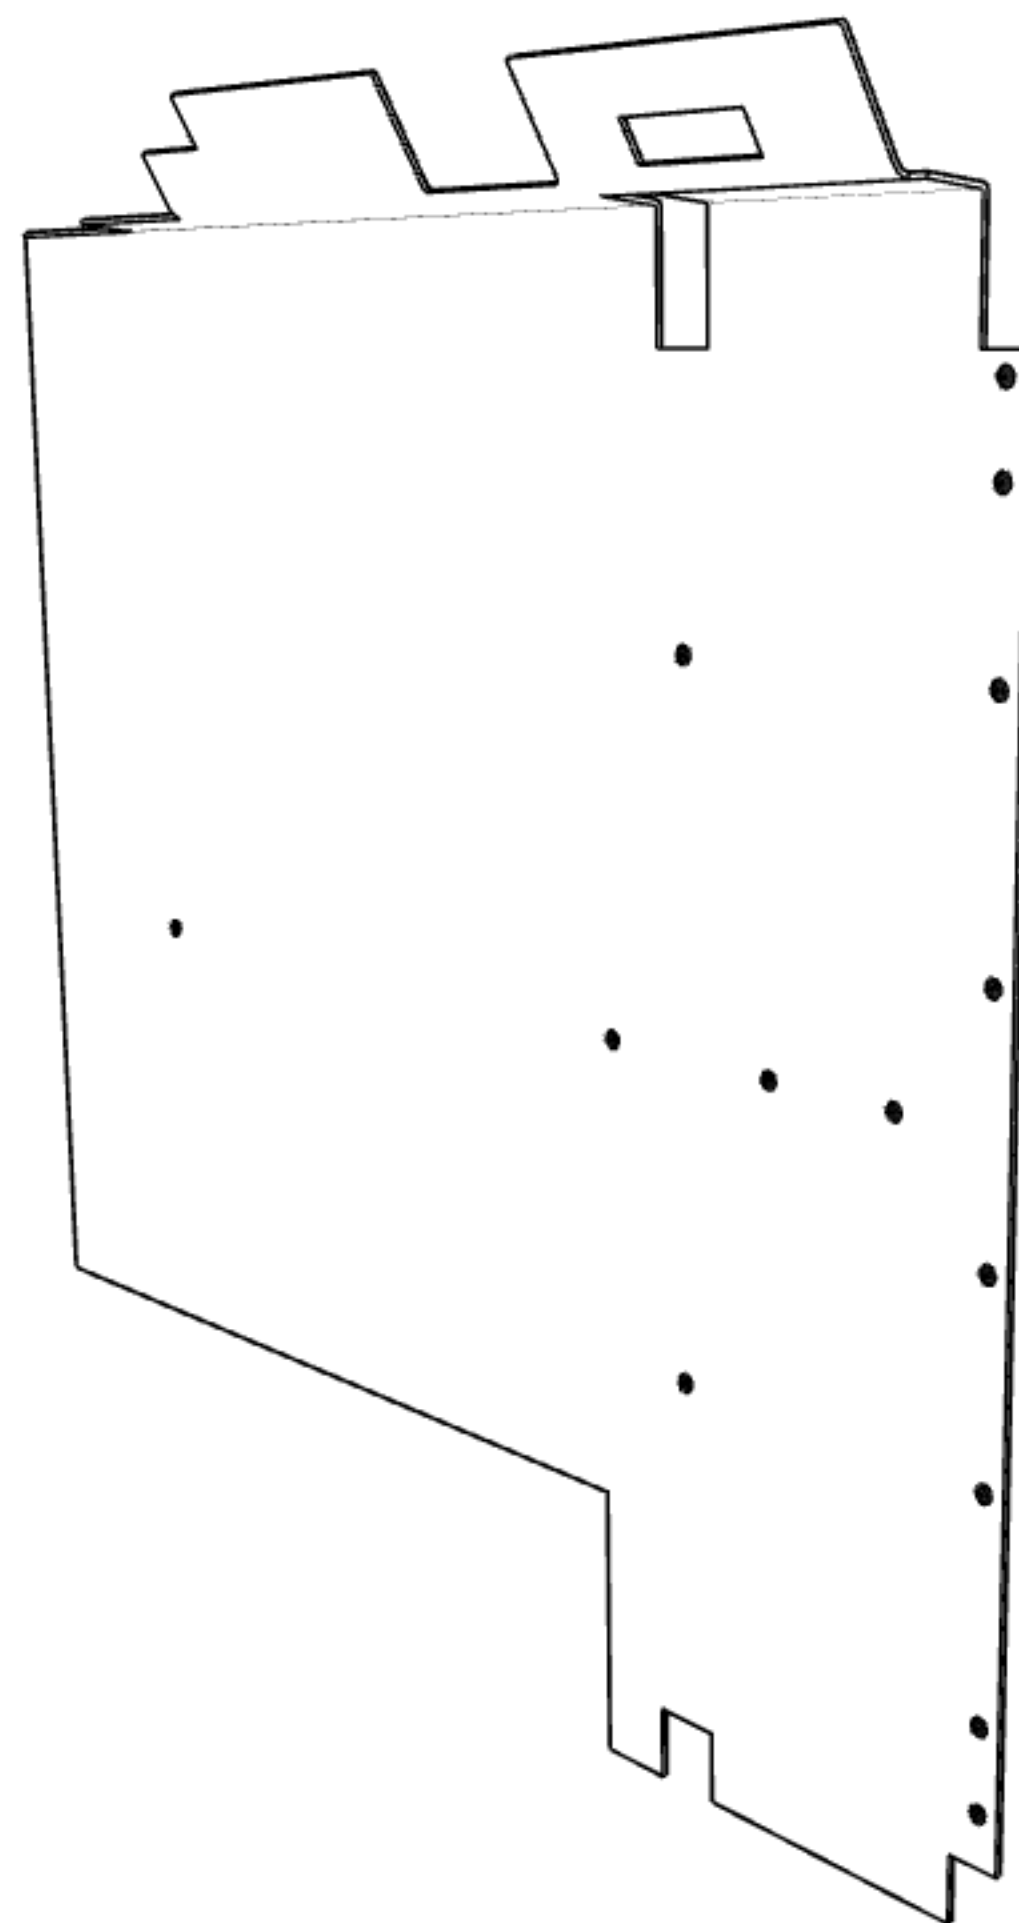



DRIVER SIDE WALL

FRONT OF VEHICLE

Evenly attach double sided  
tapes to the Wall Side of  
Driver Side Panel 1 liner  
before screwing into place.



15x

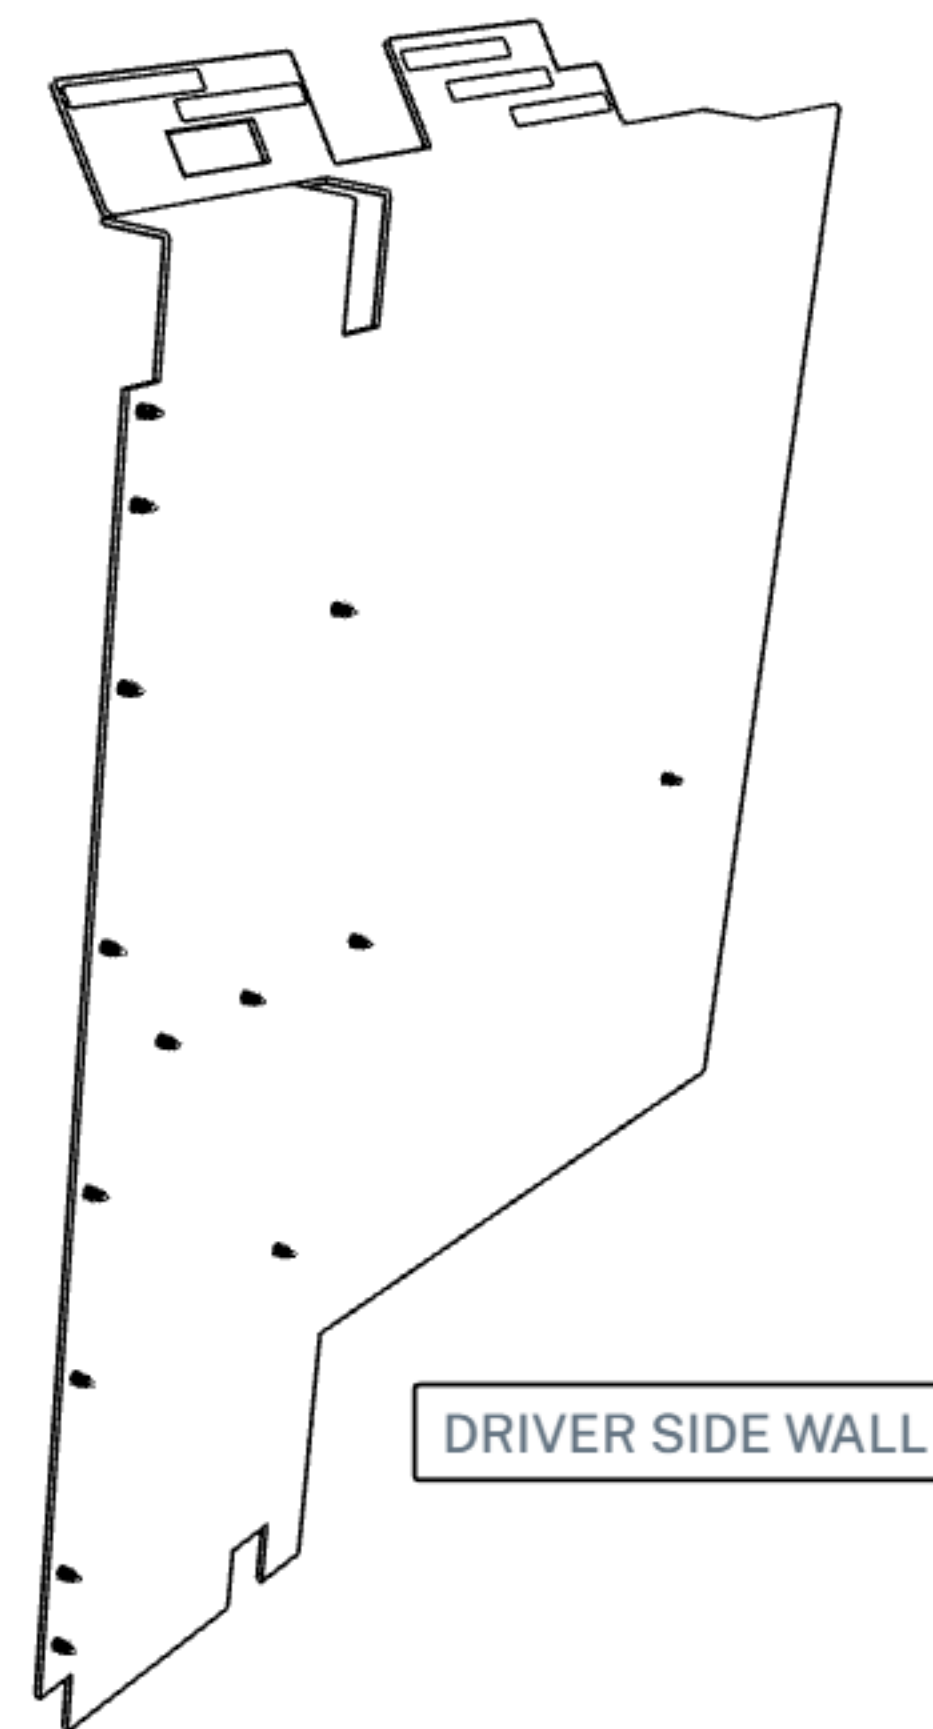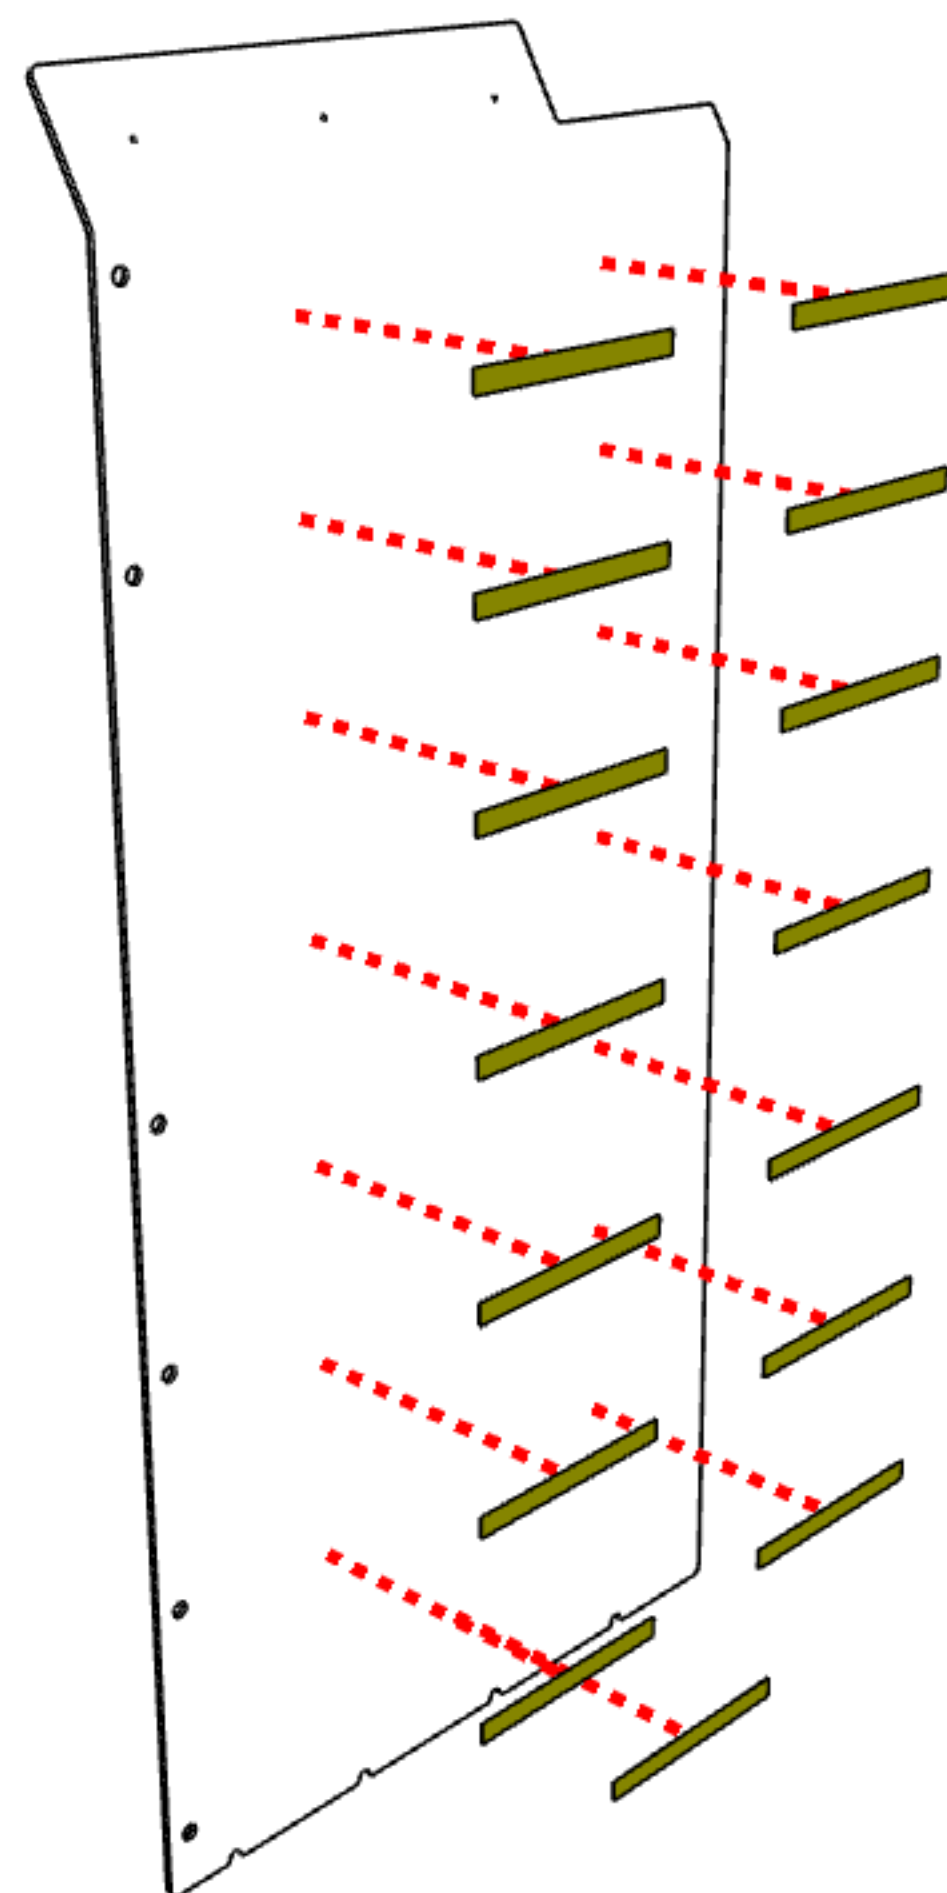


REAR OF VEHICLE


DRIVER SIDE WALL



REAR OF VEHICLE

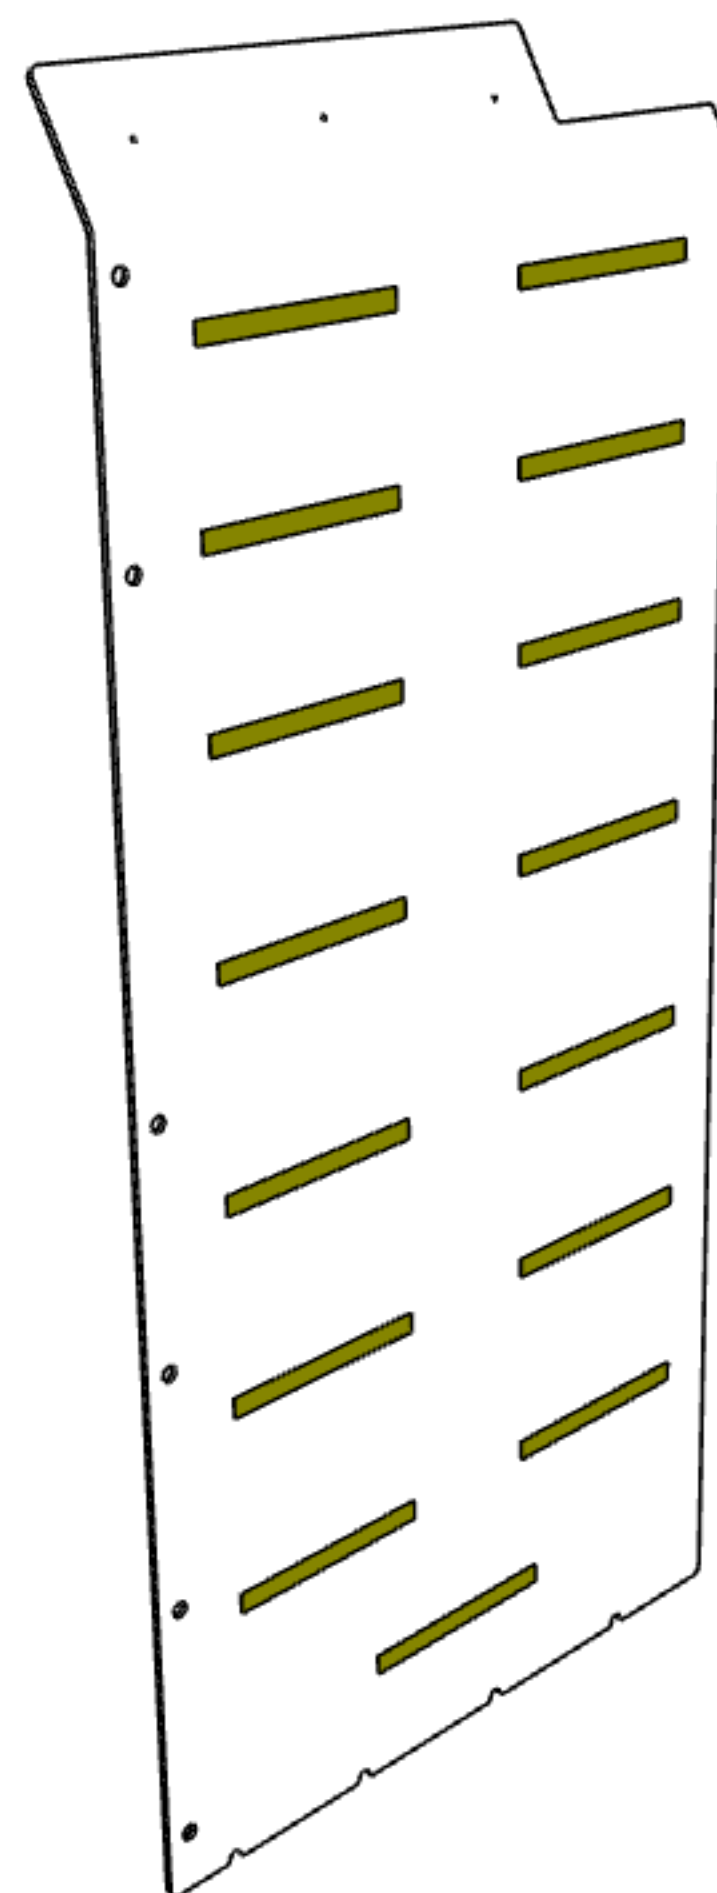


DRIVER SIDE WALL

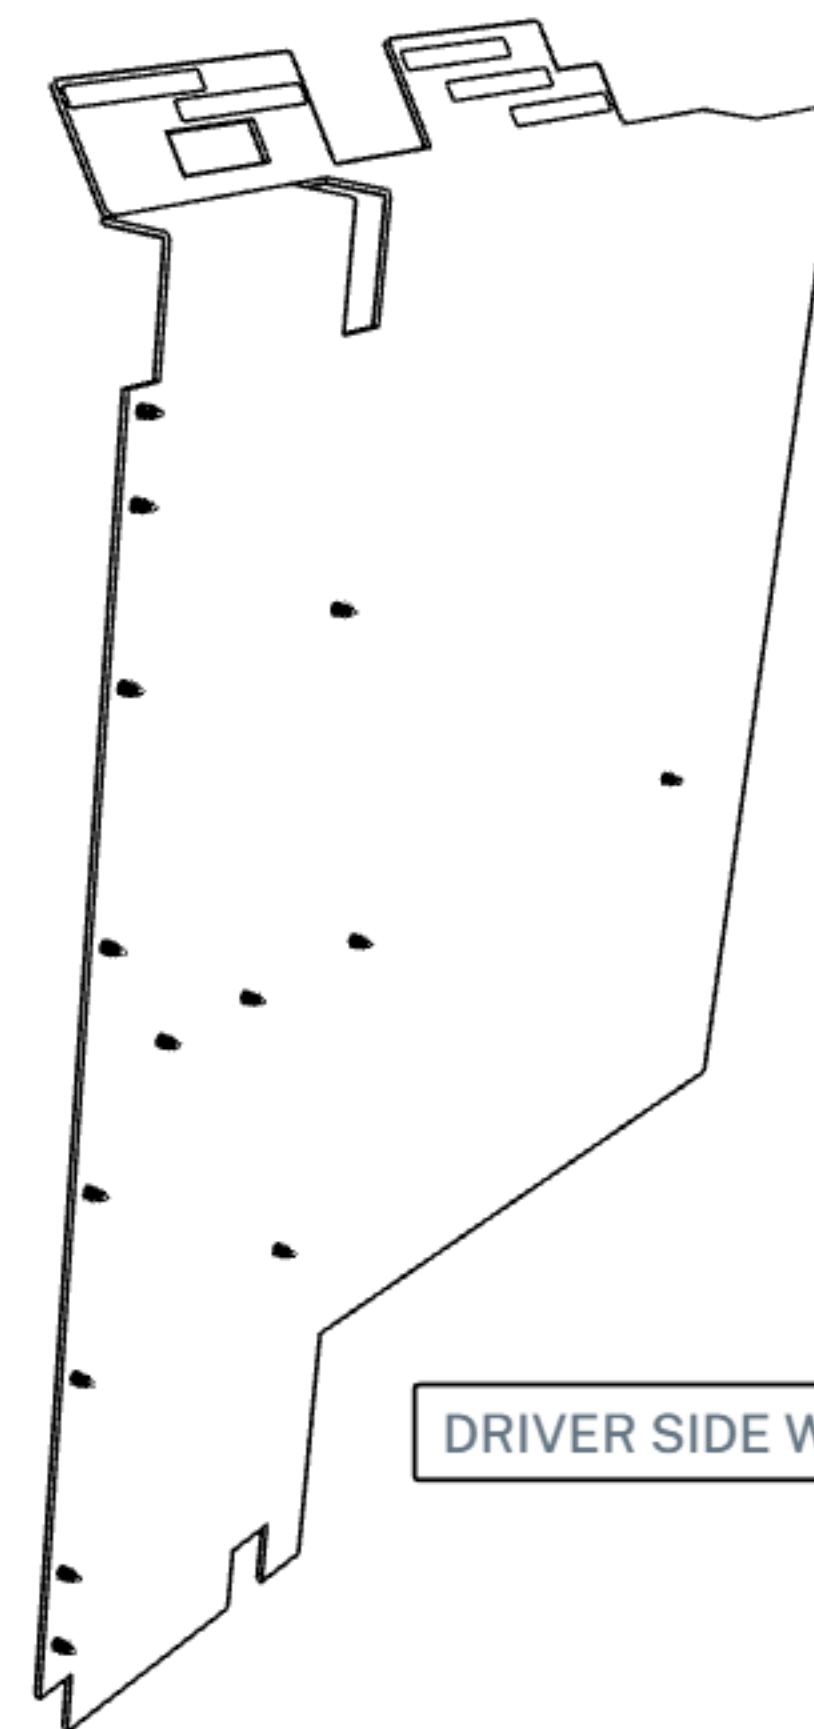






Peel off protective layer of all the double sided tapes.

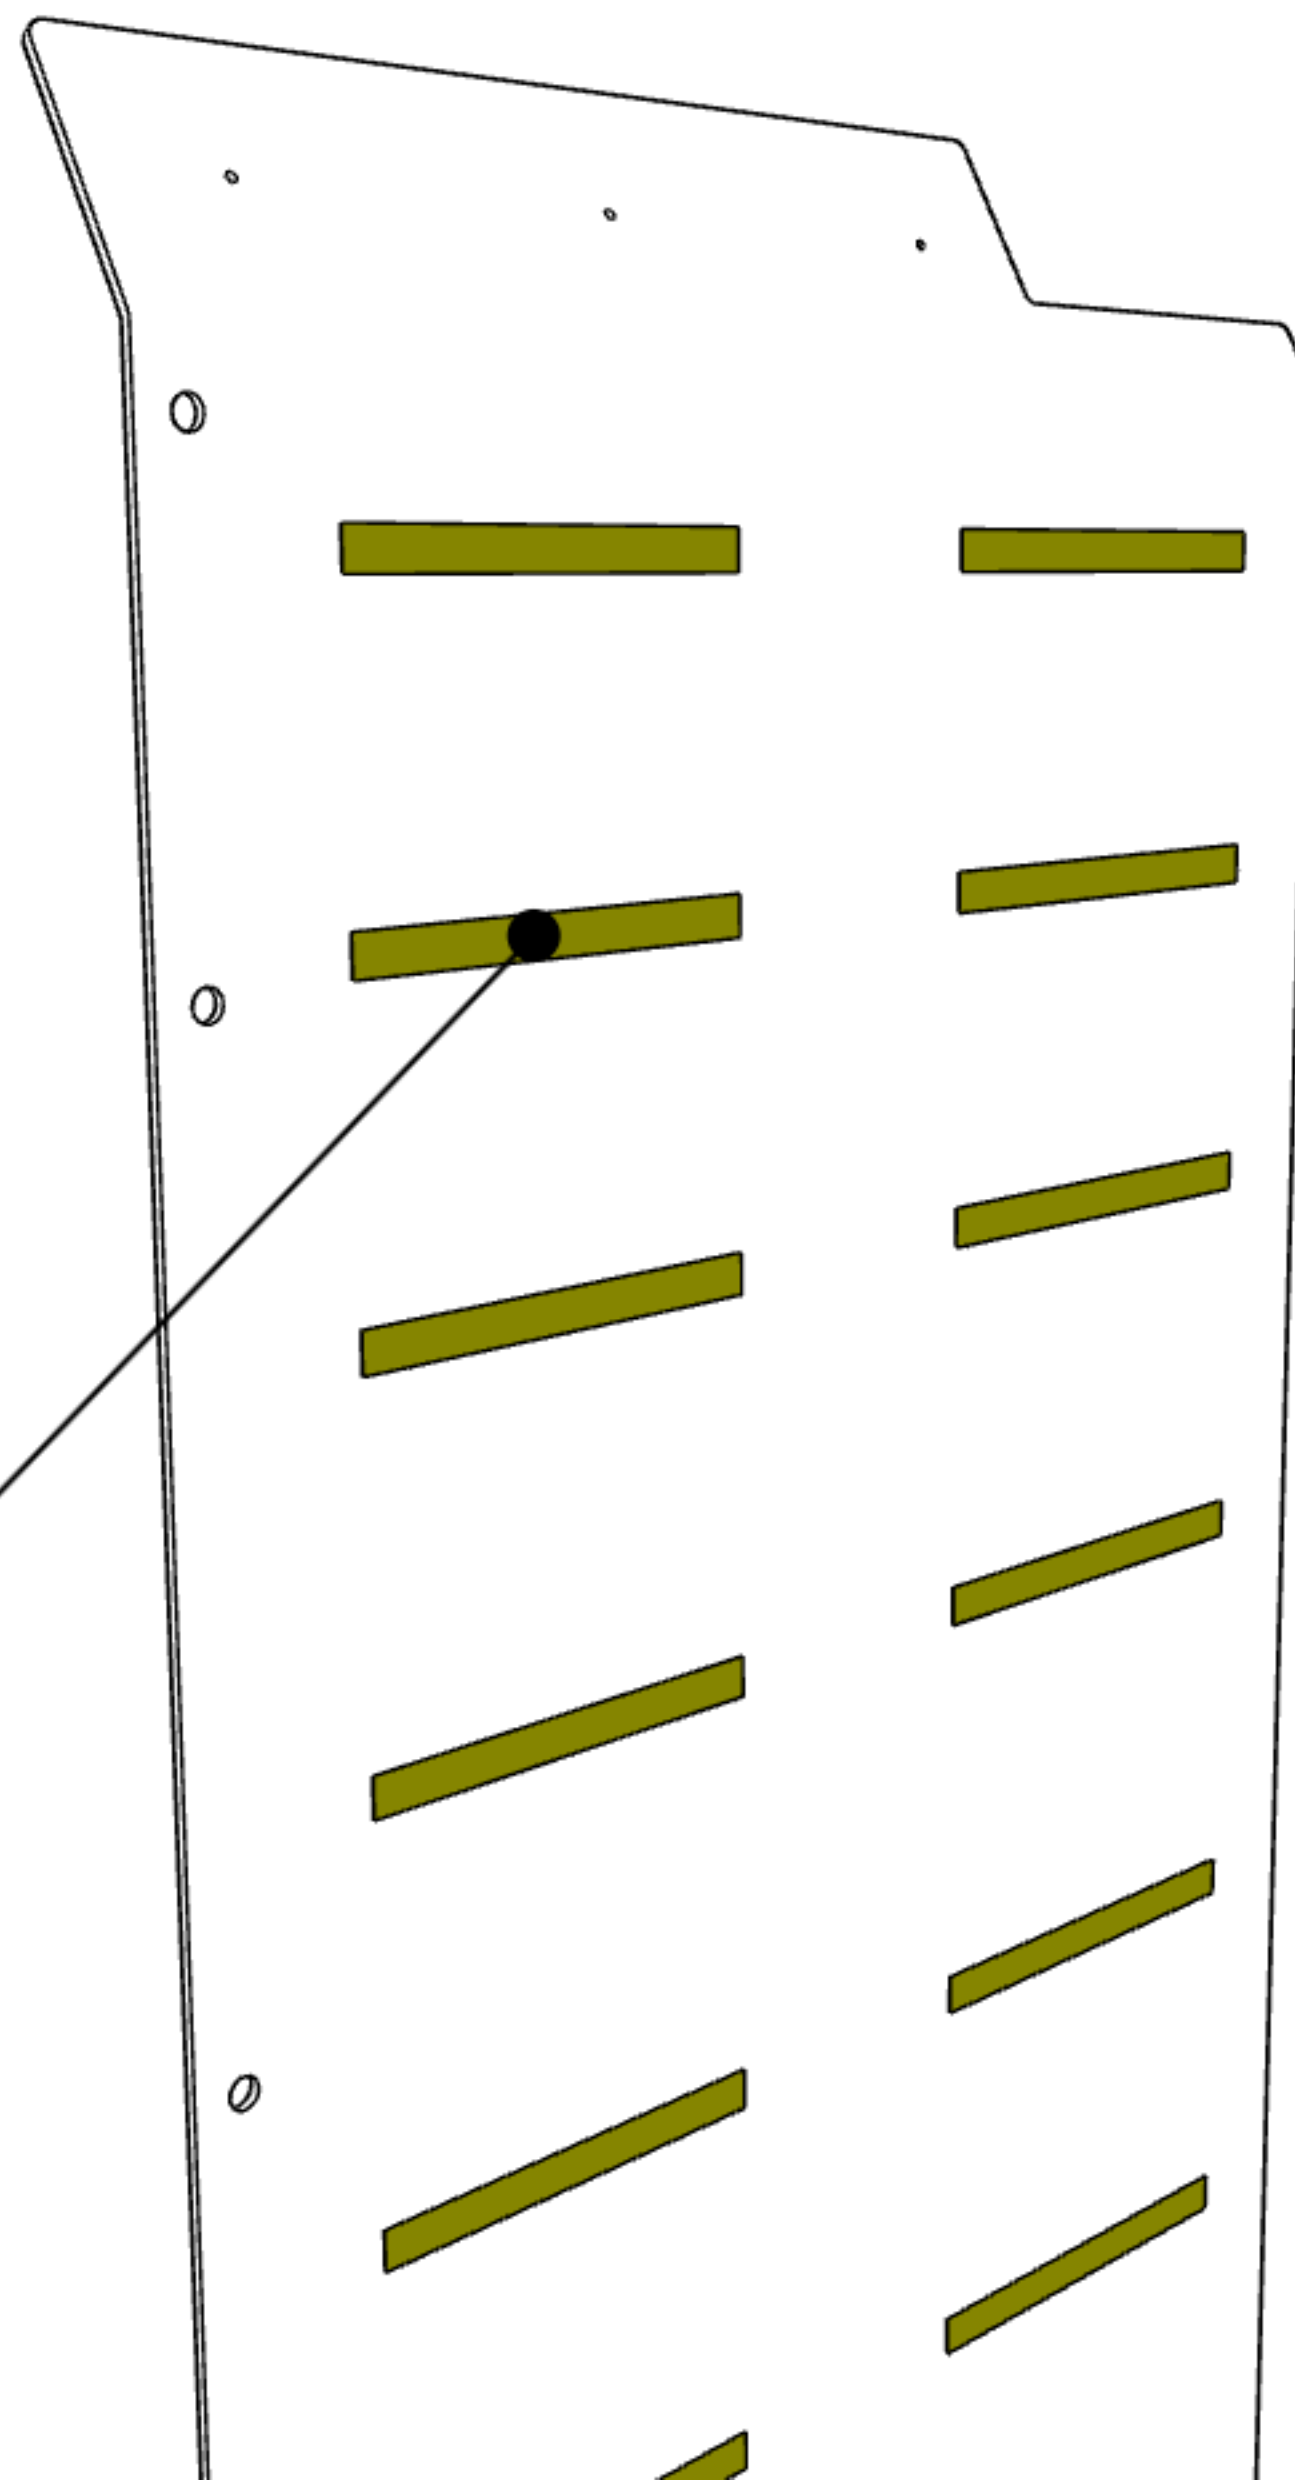

DRIVER SIDE WALL

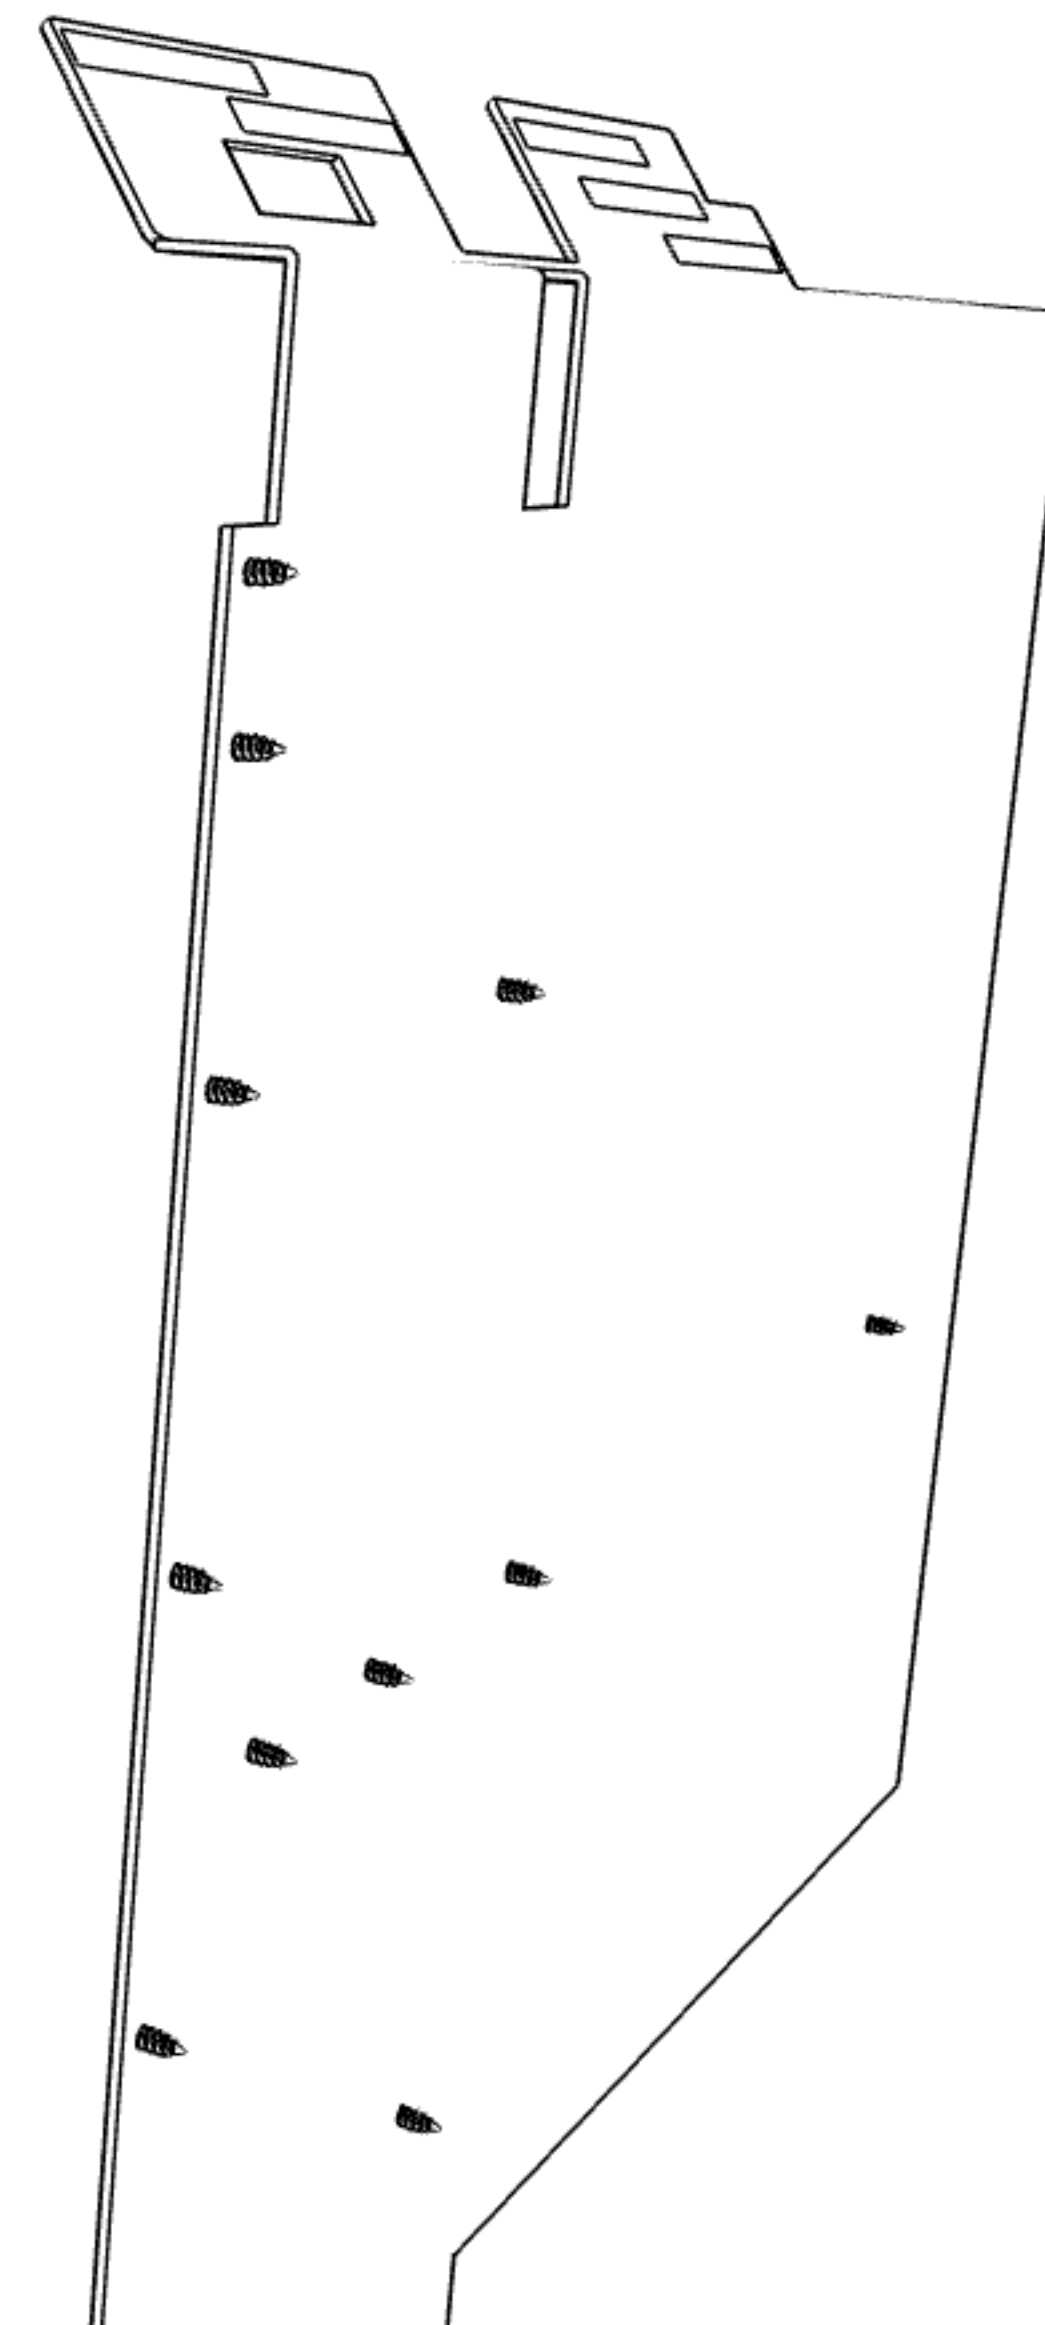

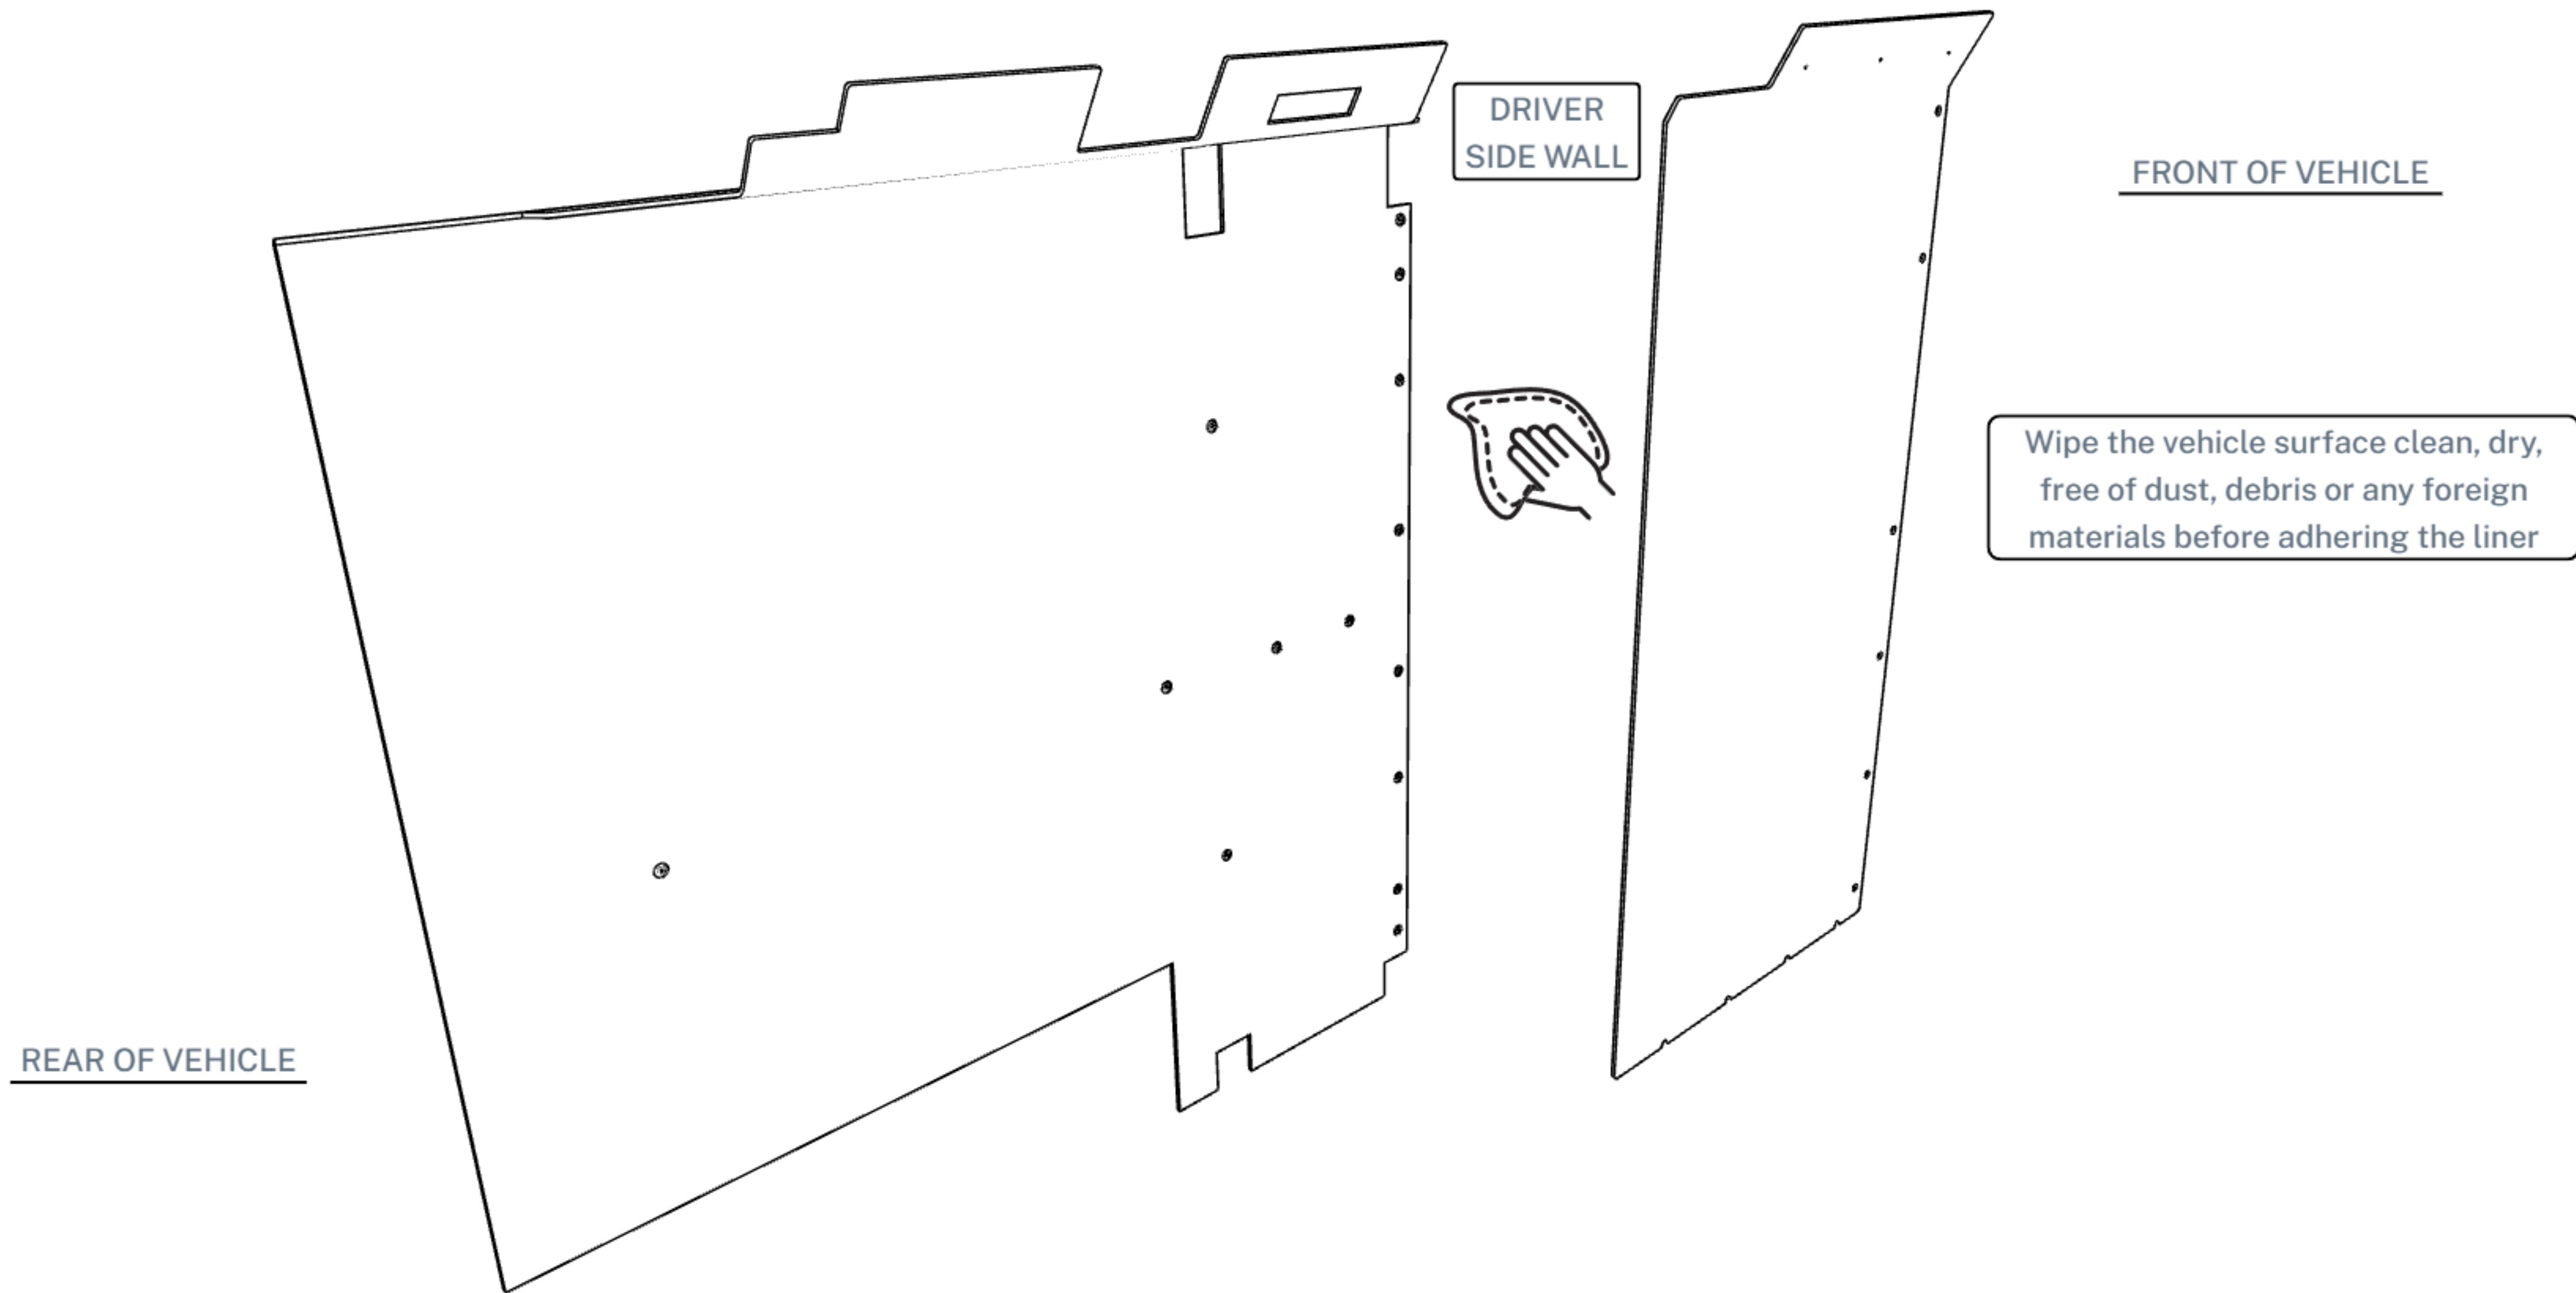

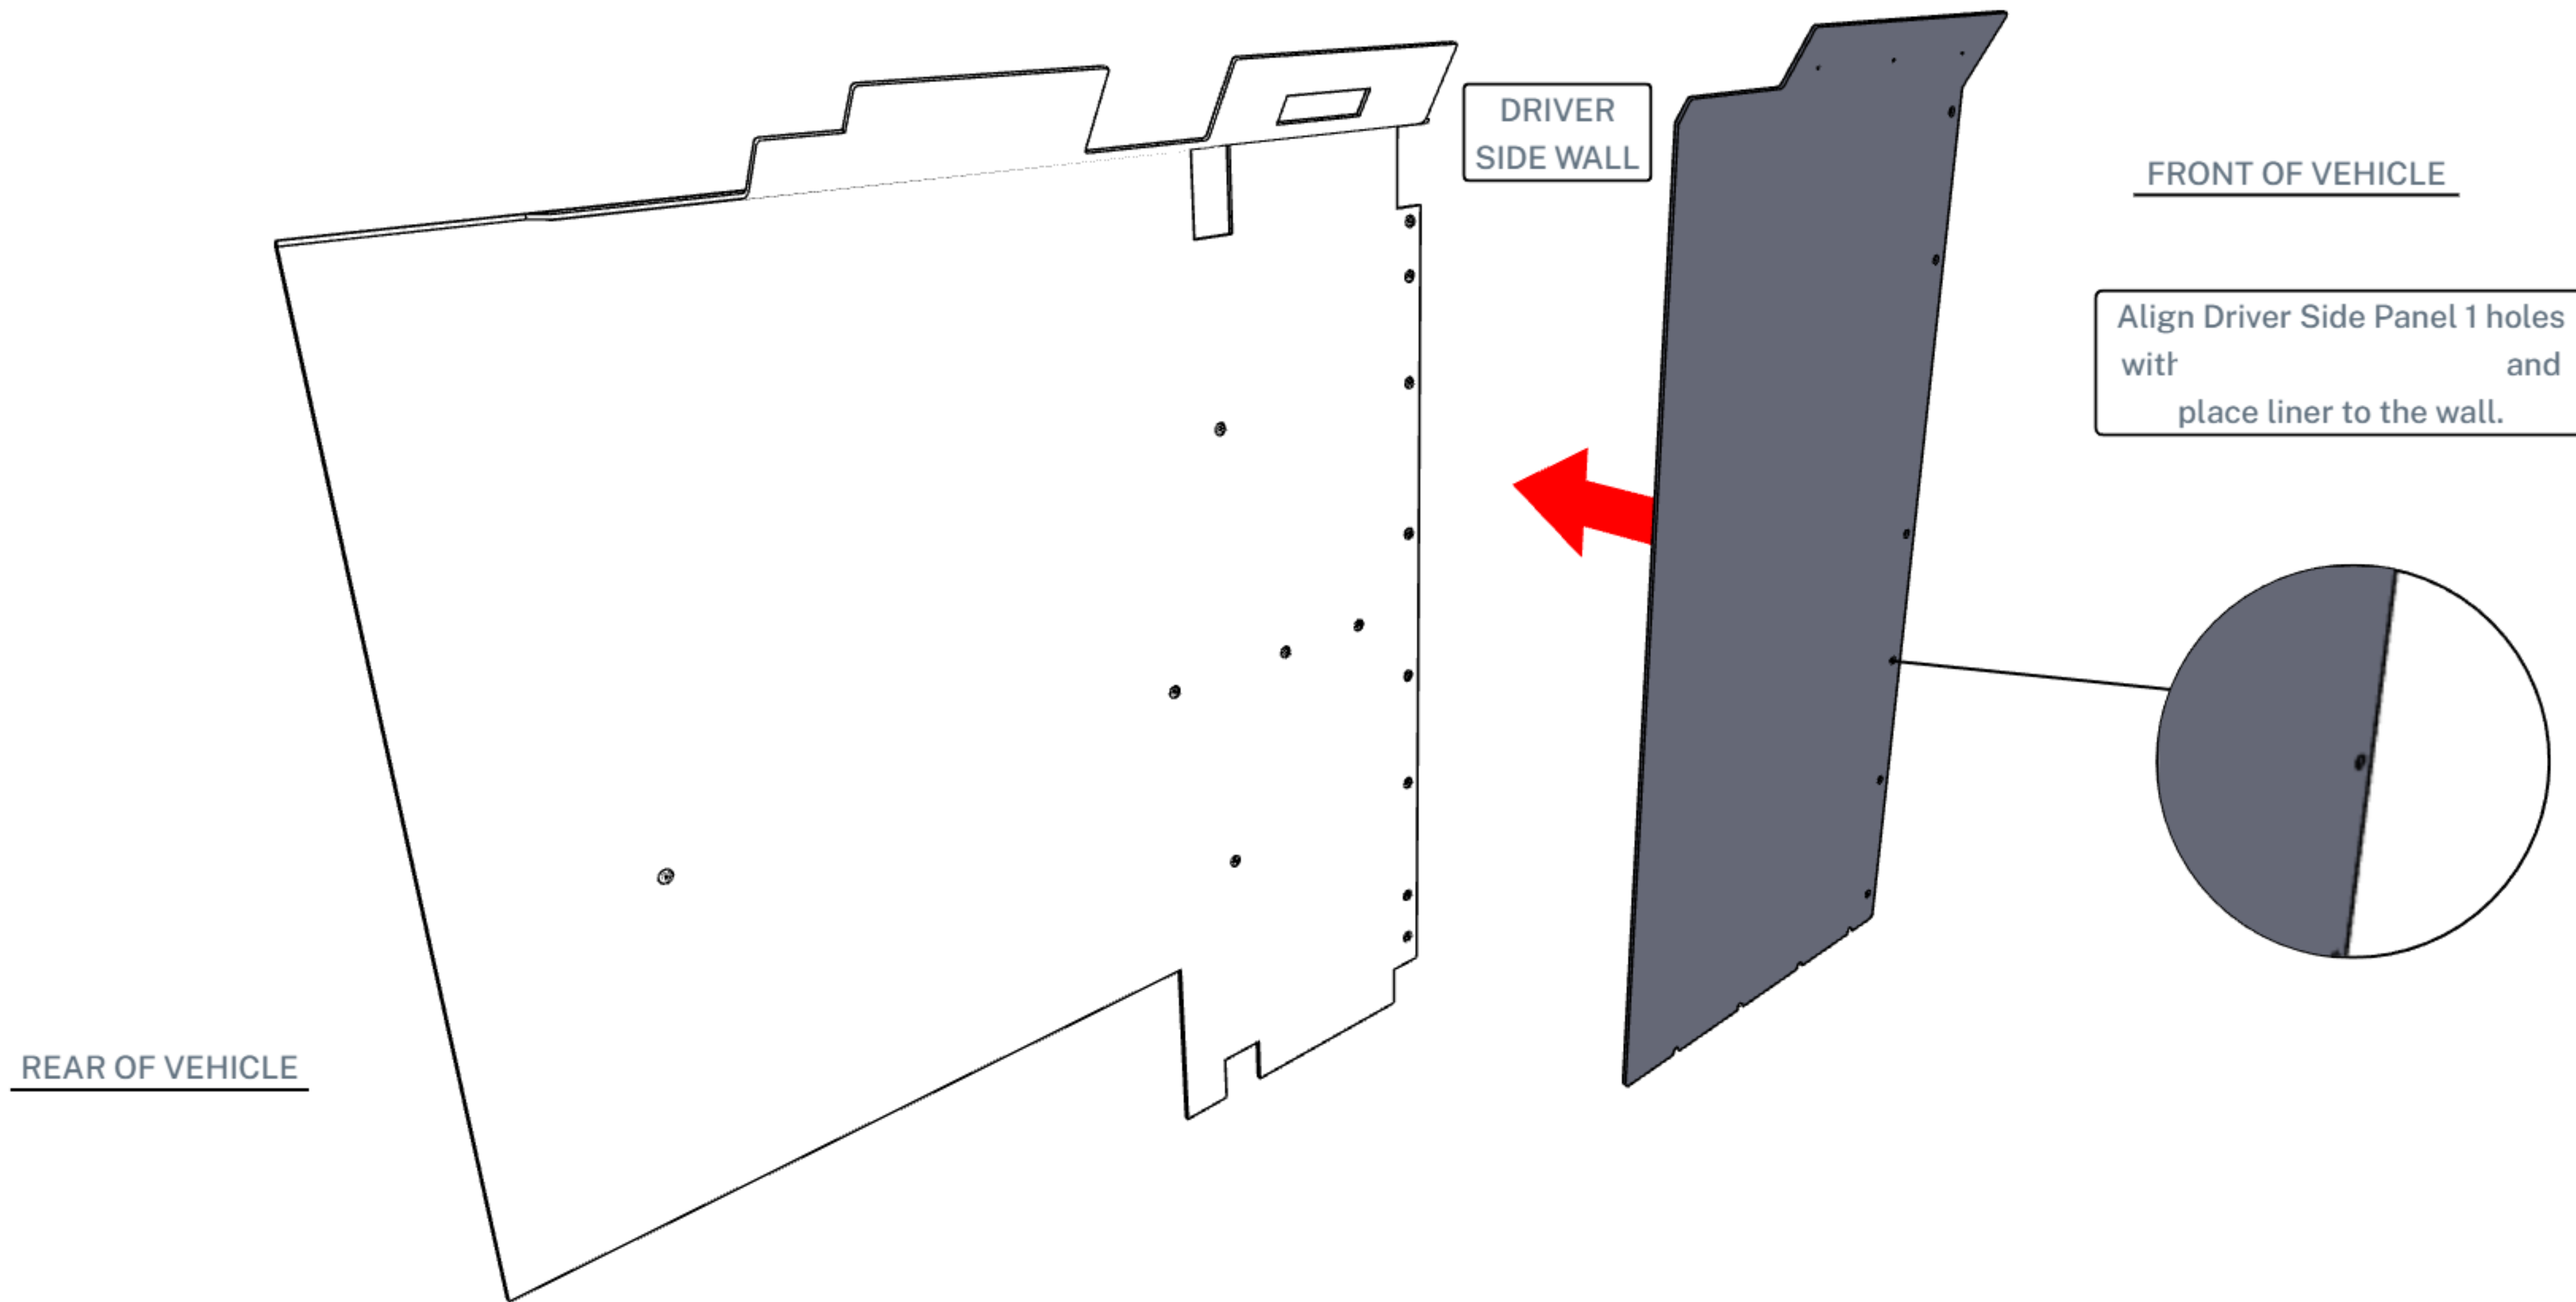





DRIVER SIDE WALL




FRONT OF VEHICLE

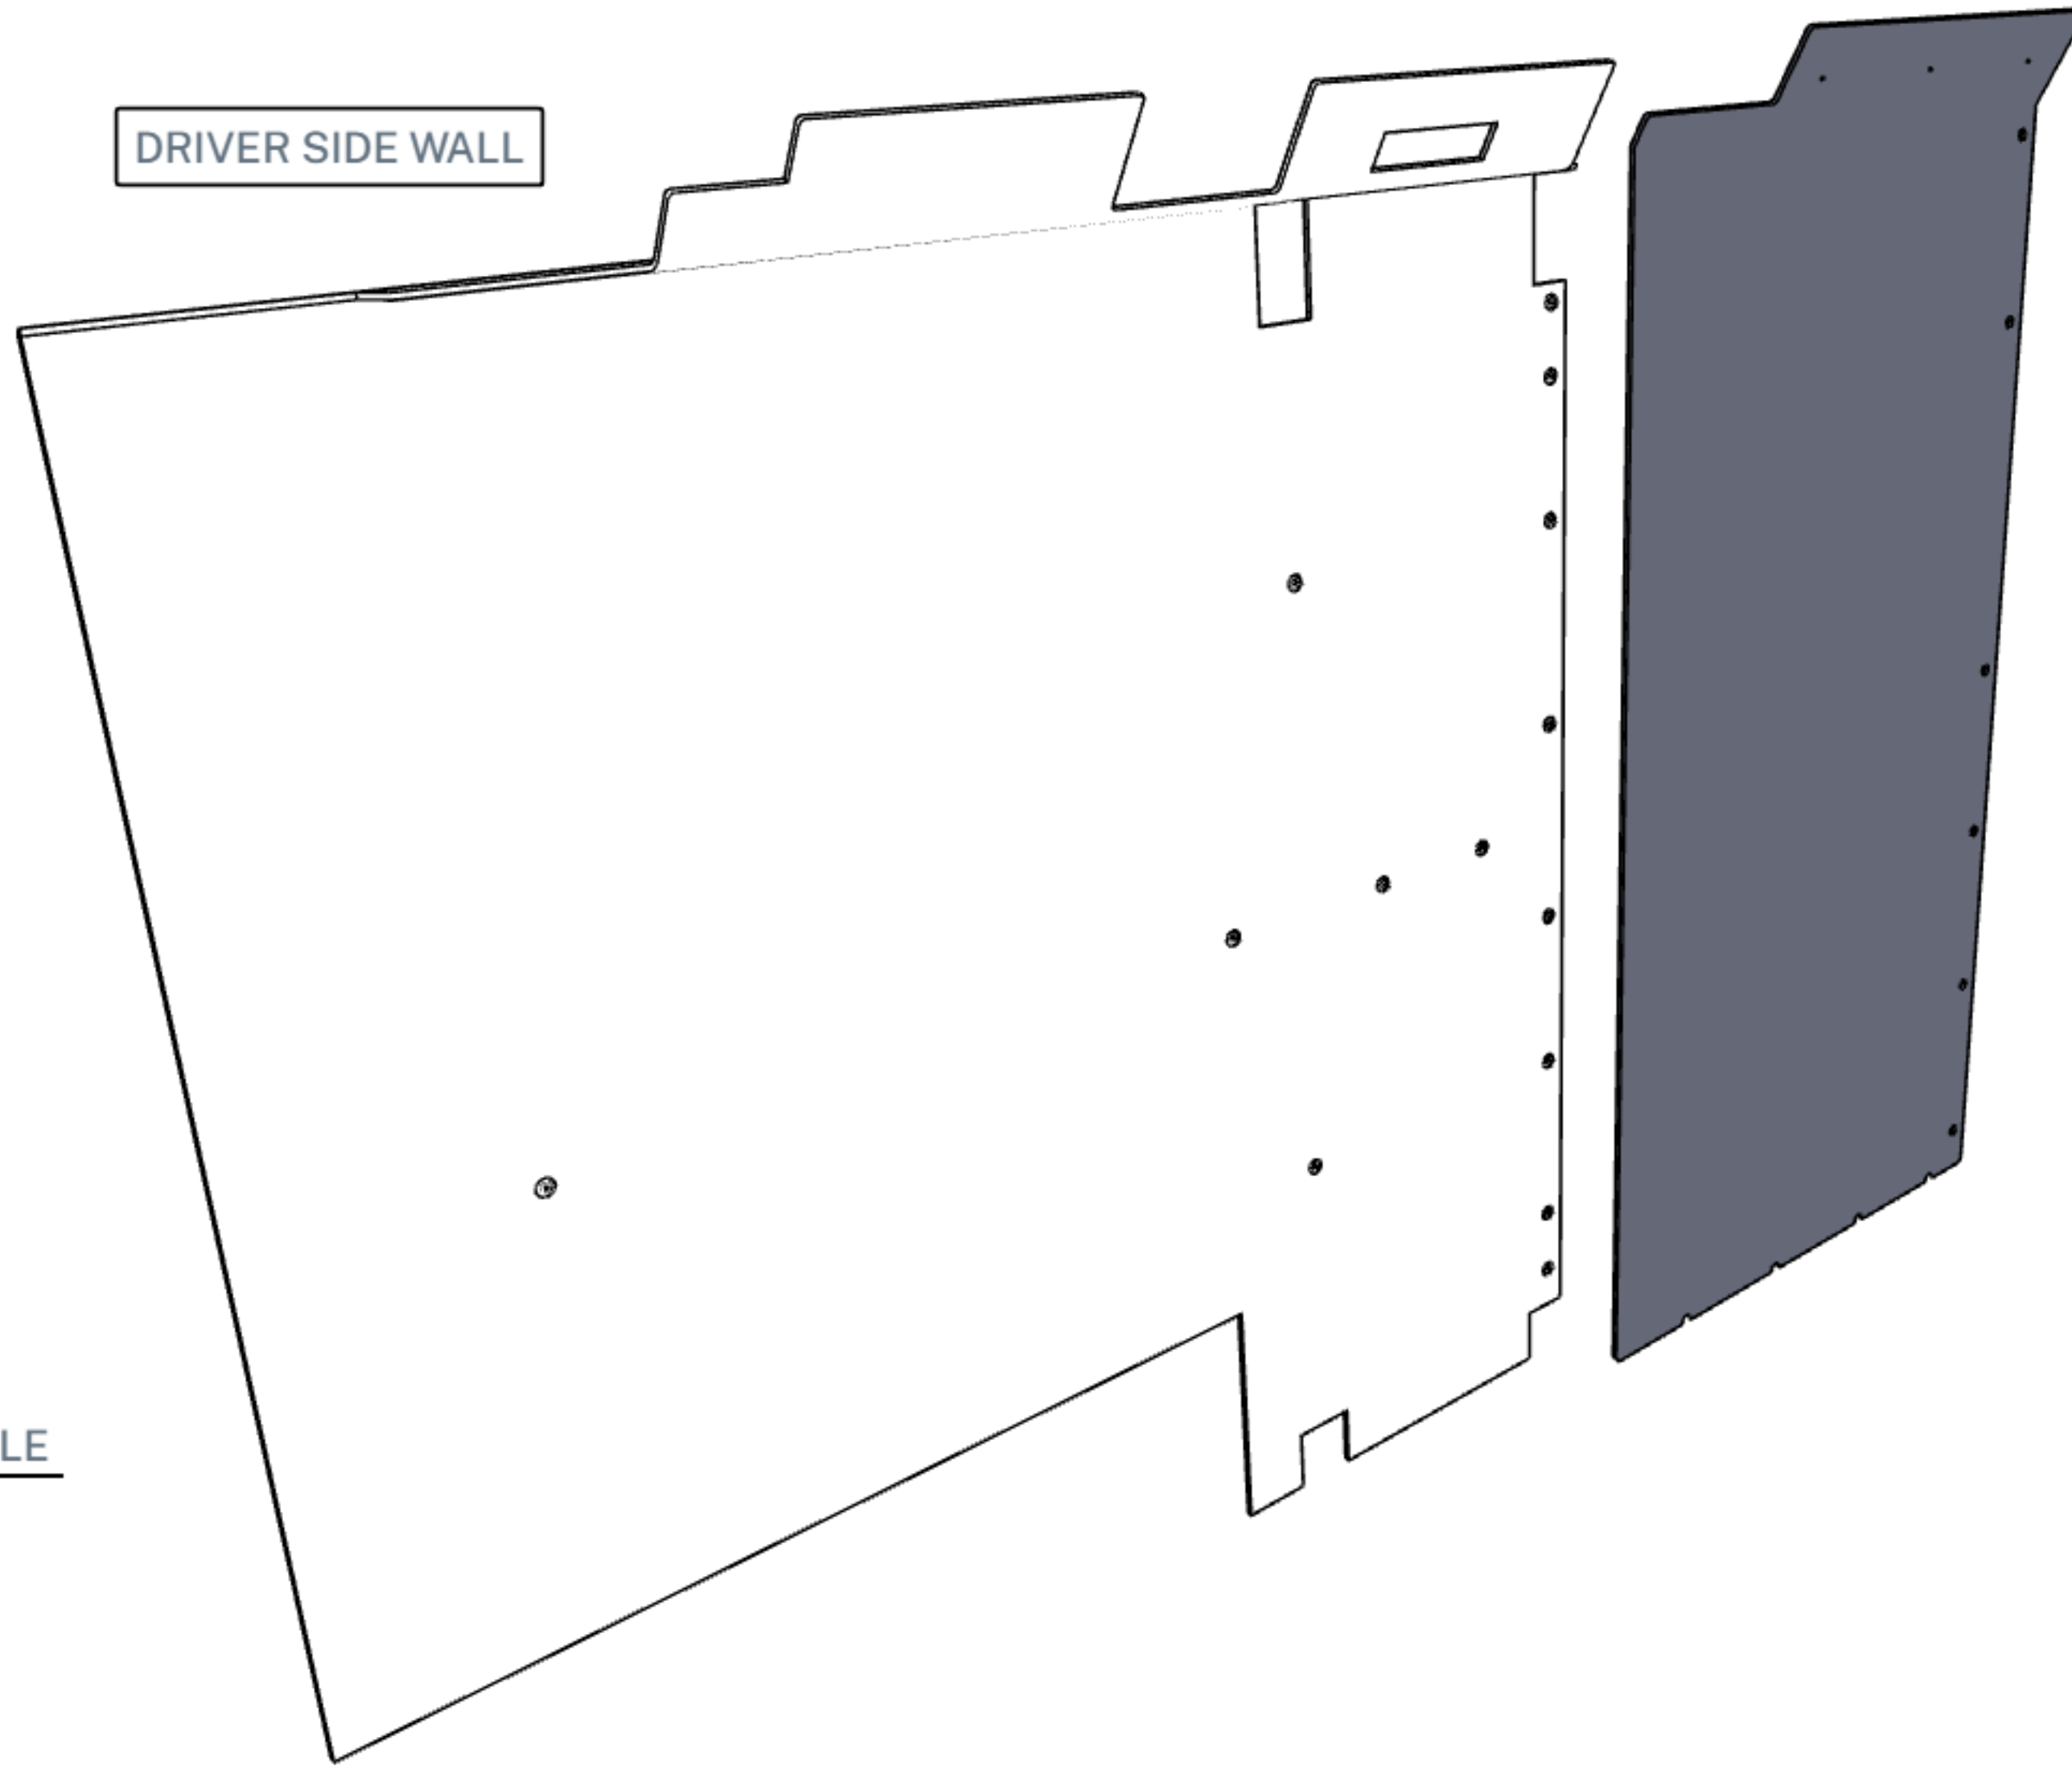REAR OF VEHICLE

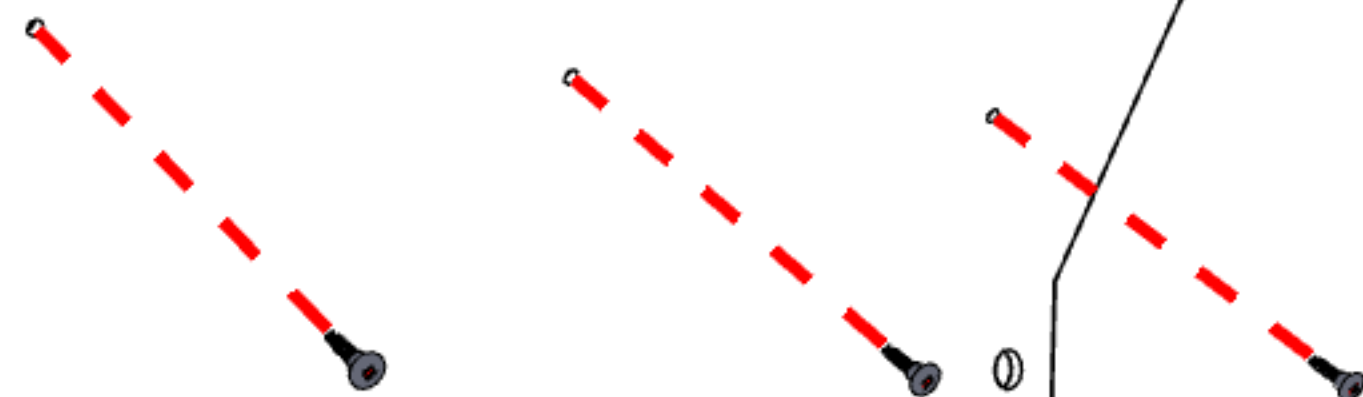

DRIVER SIDE WALL

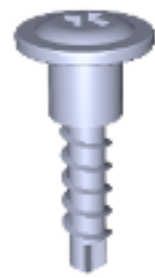


3x

Phillips




DRIVER SIDE WALL

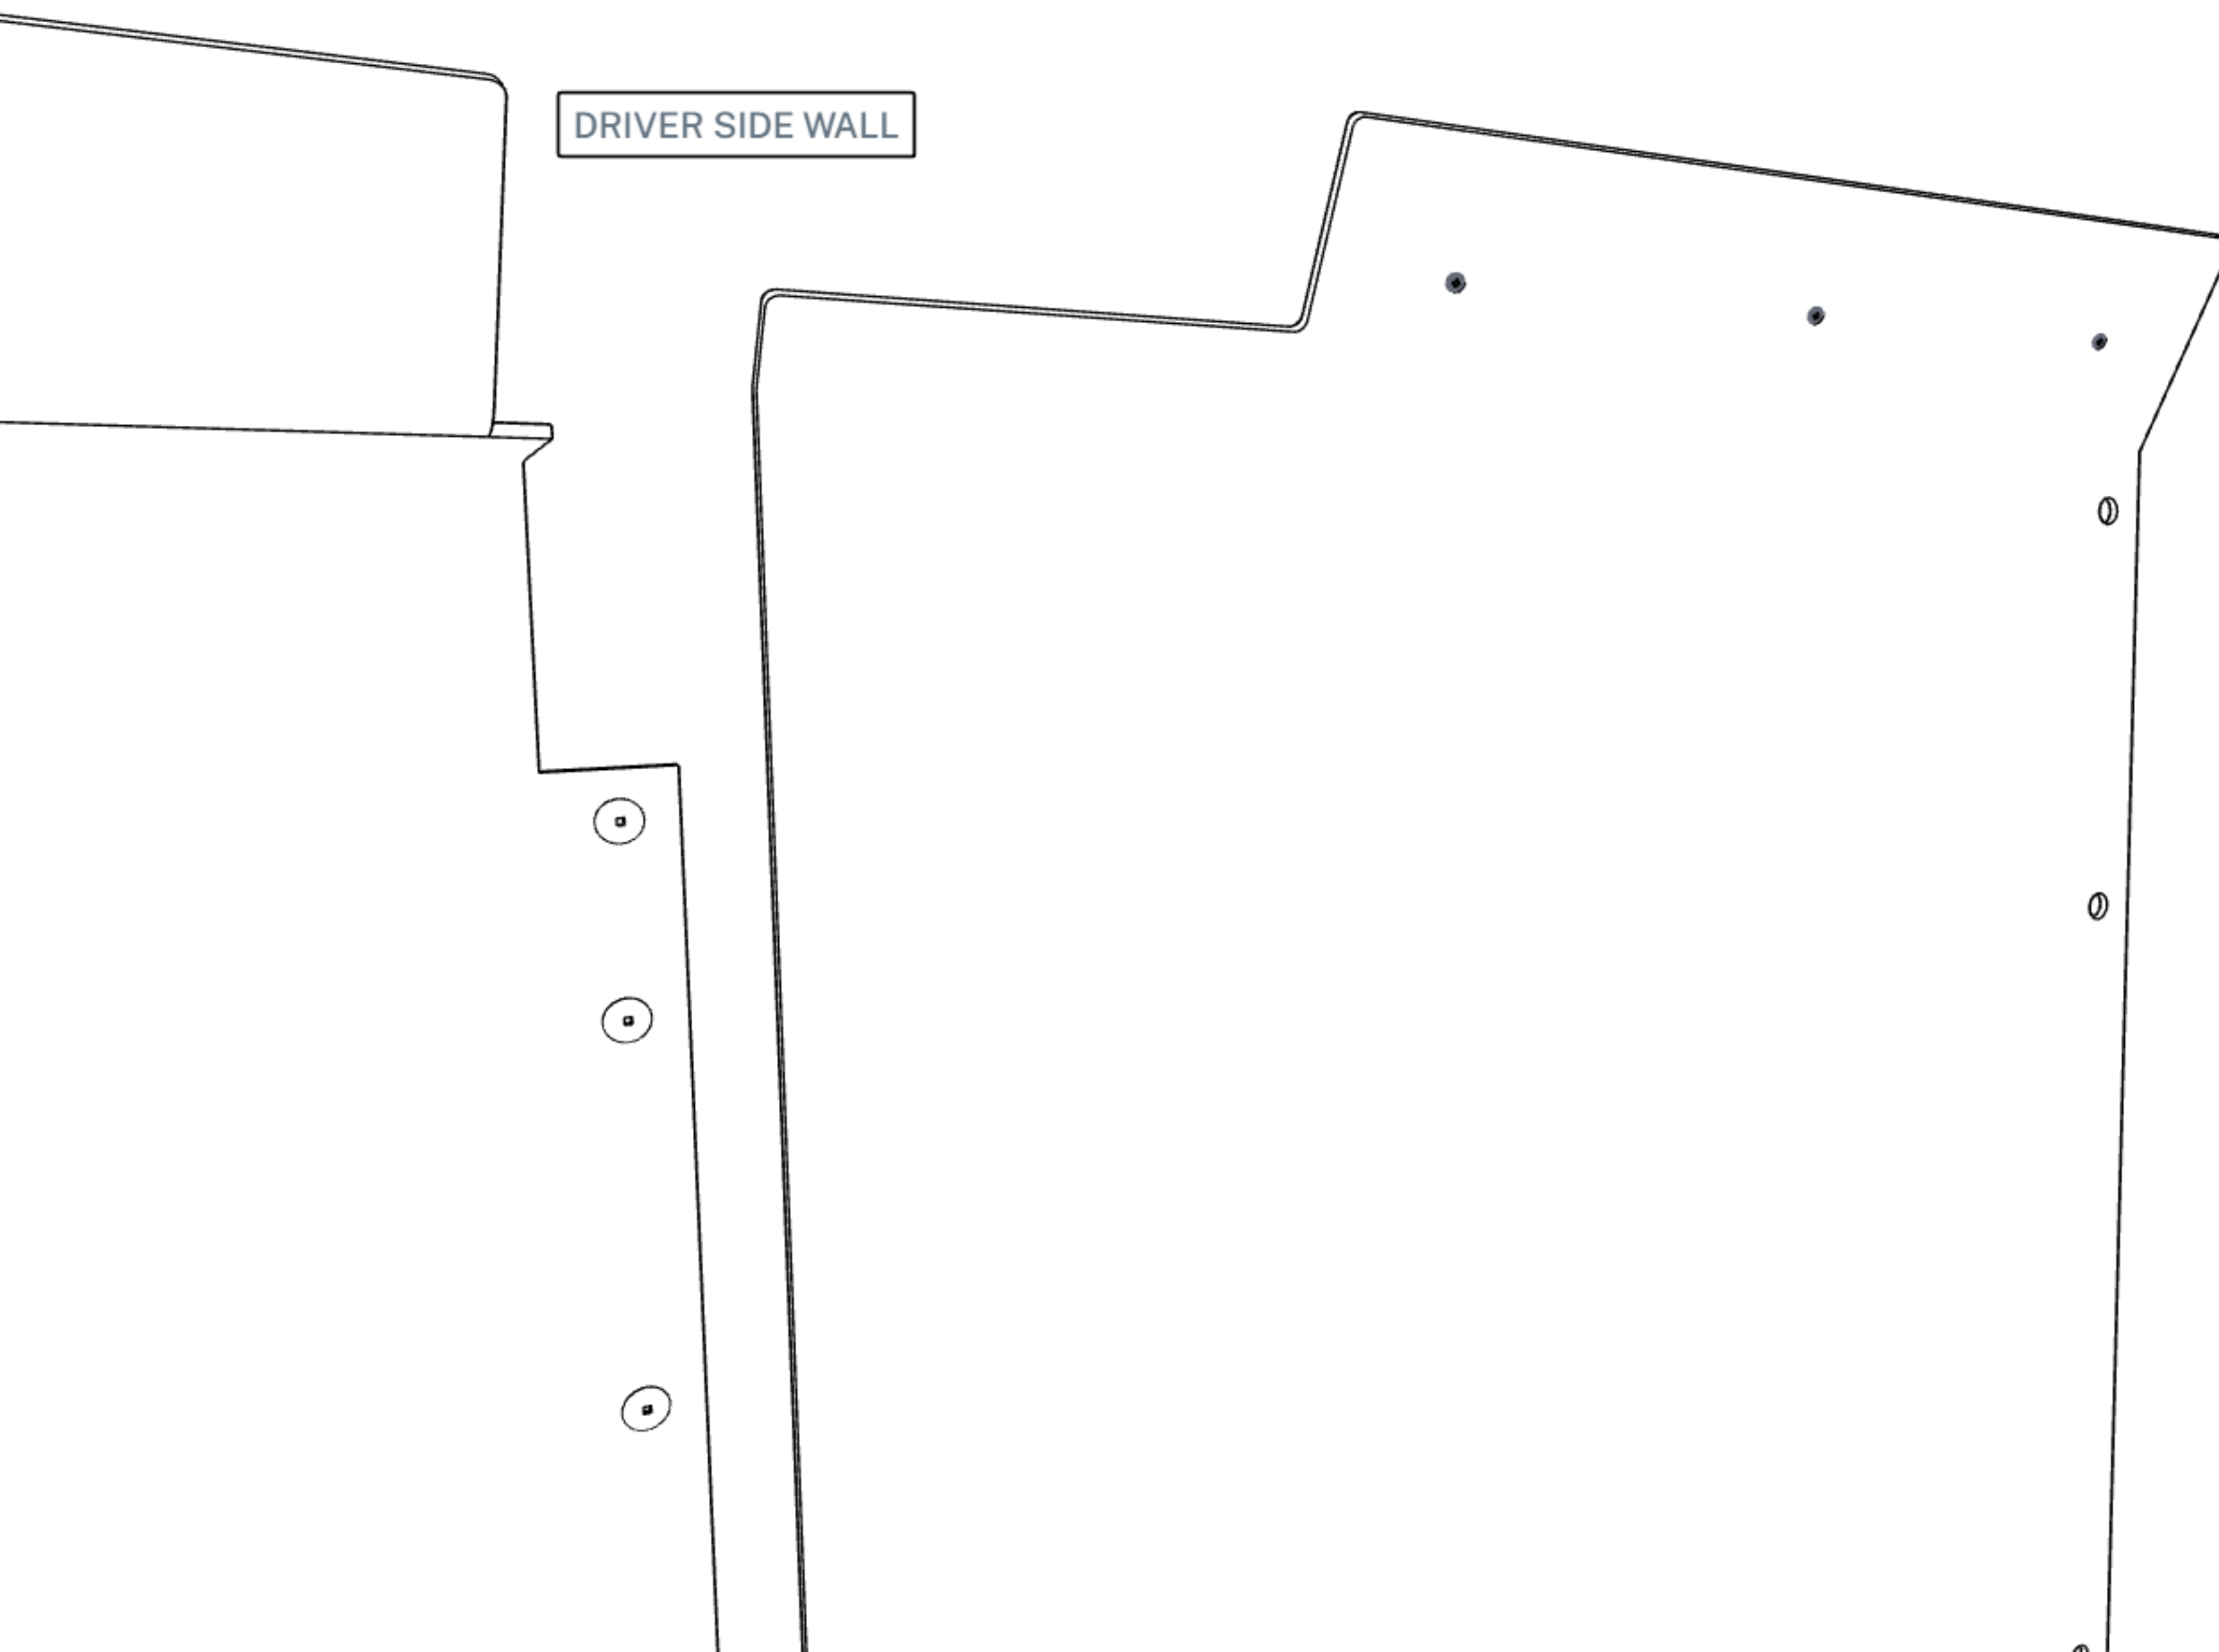



DRIVER SIDE WALL

FRONT OF VEHICLE

REAR OF VEHICLE

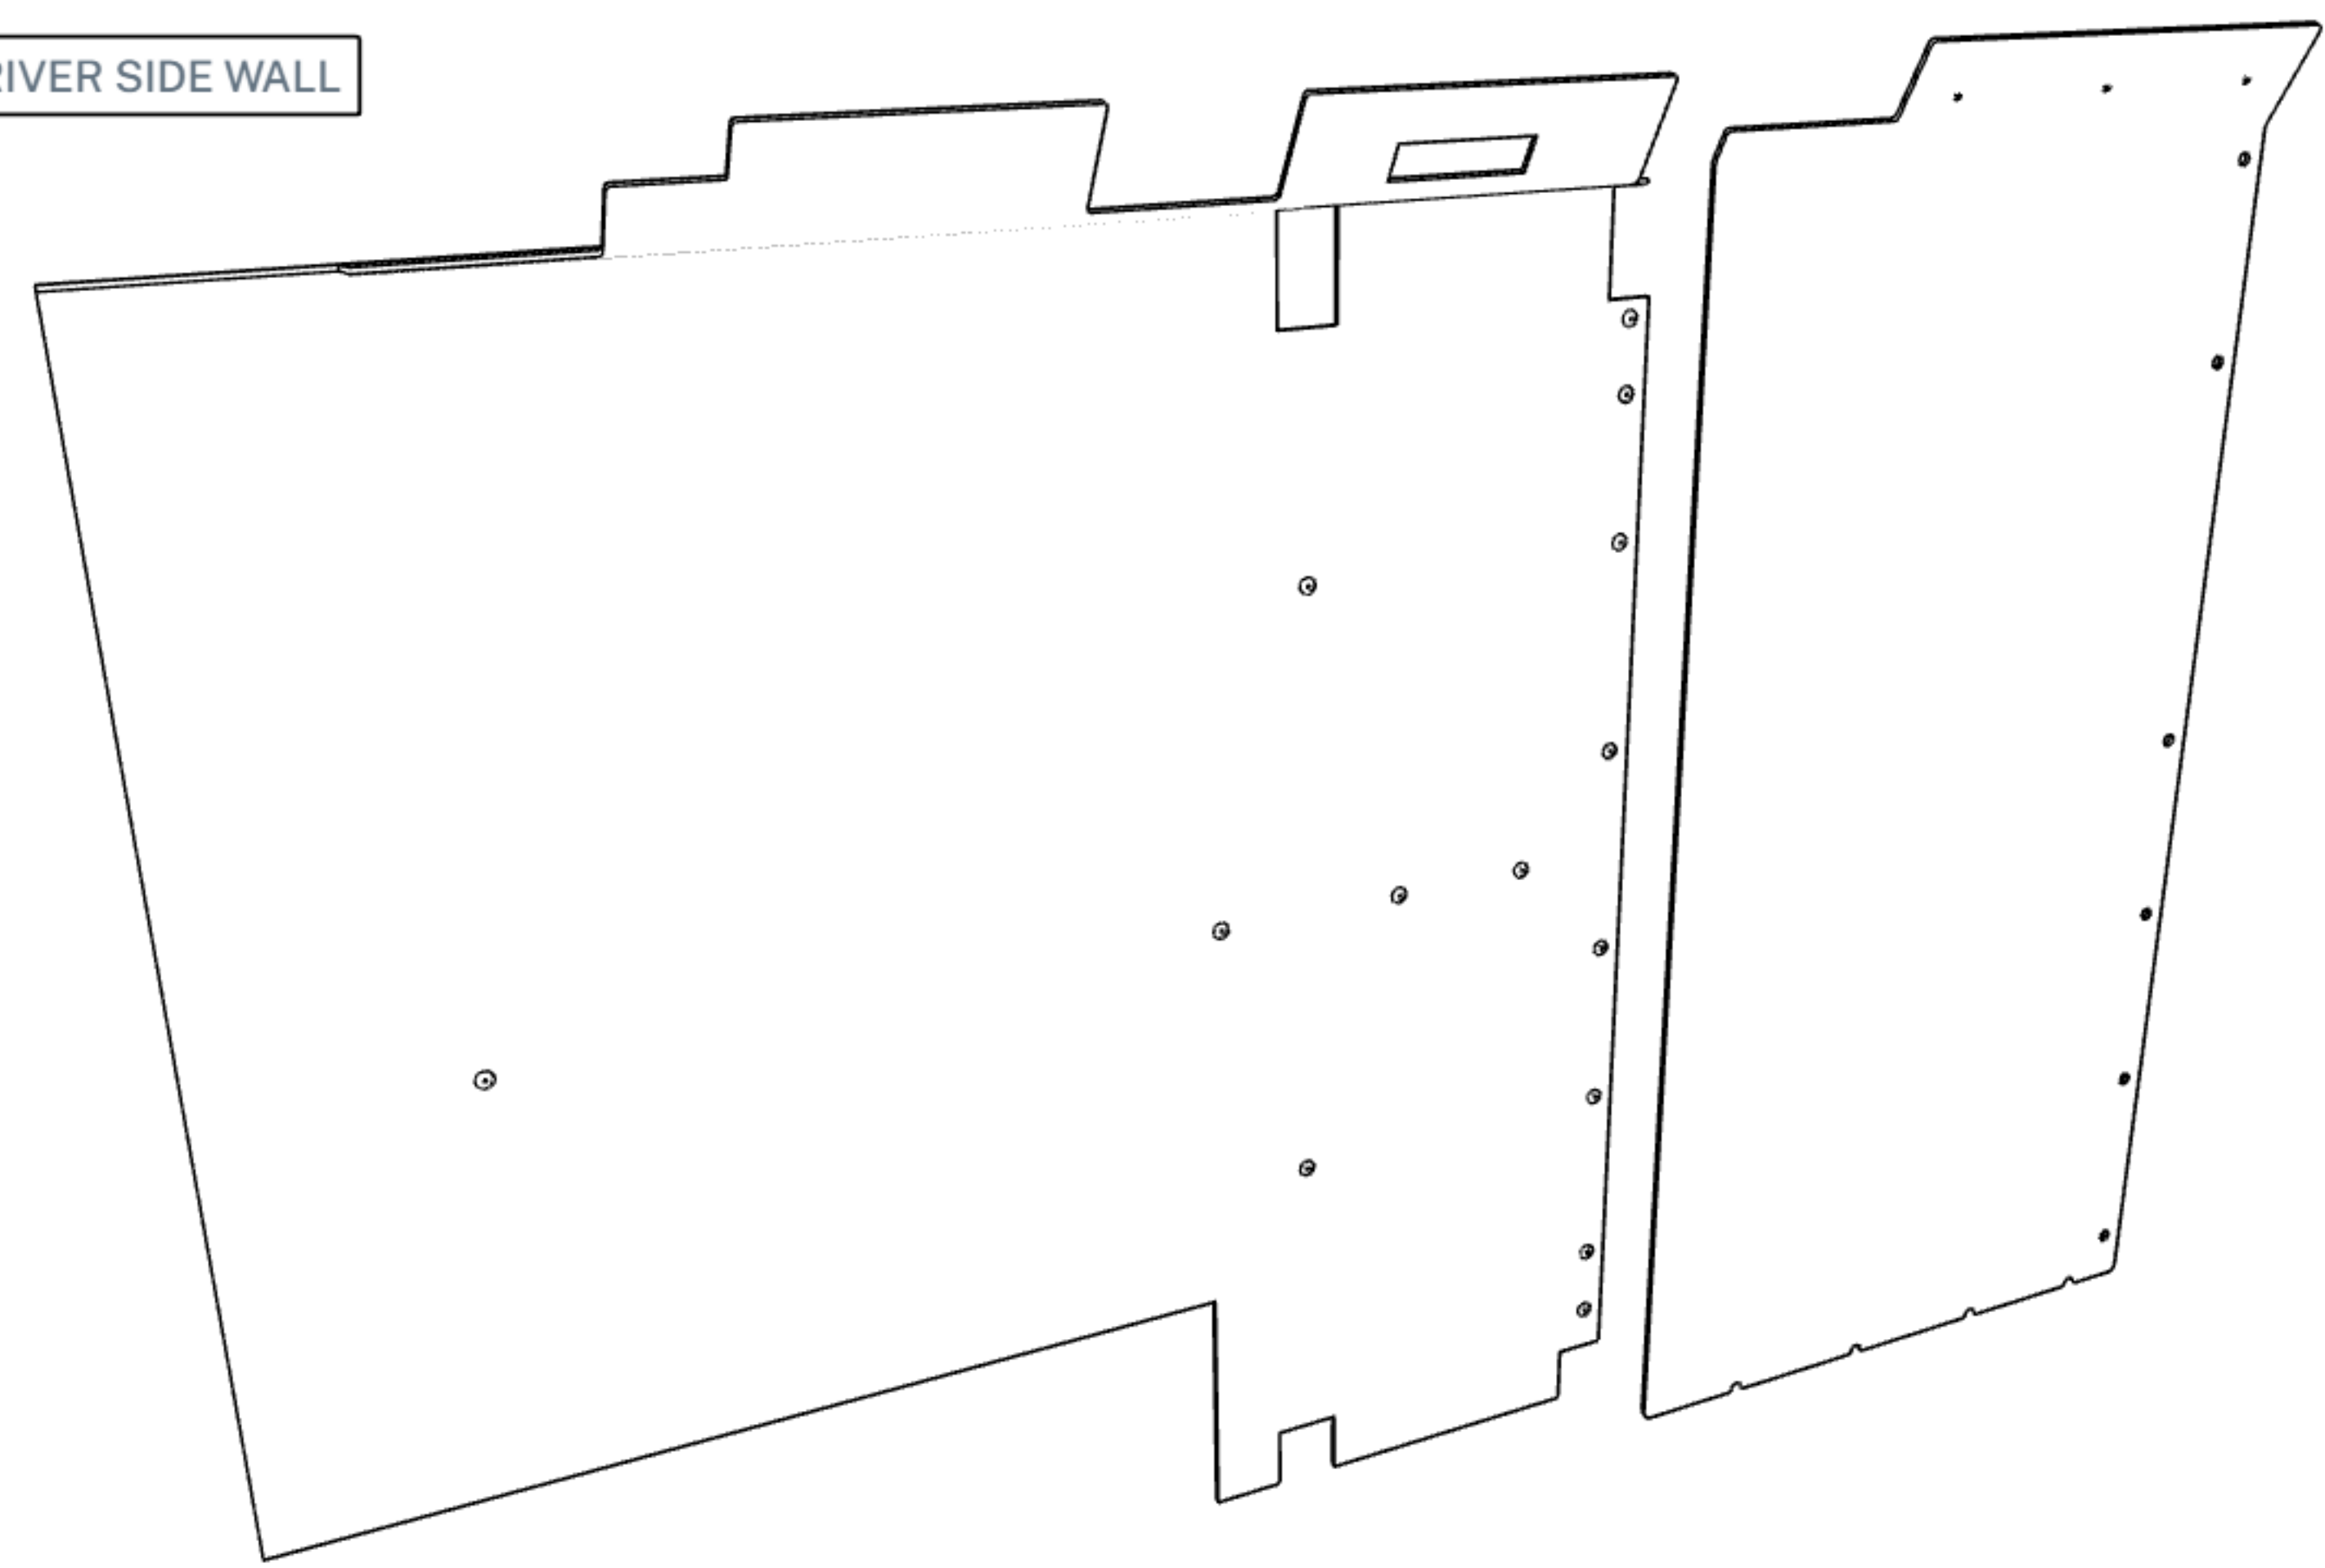



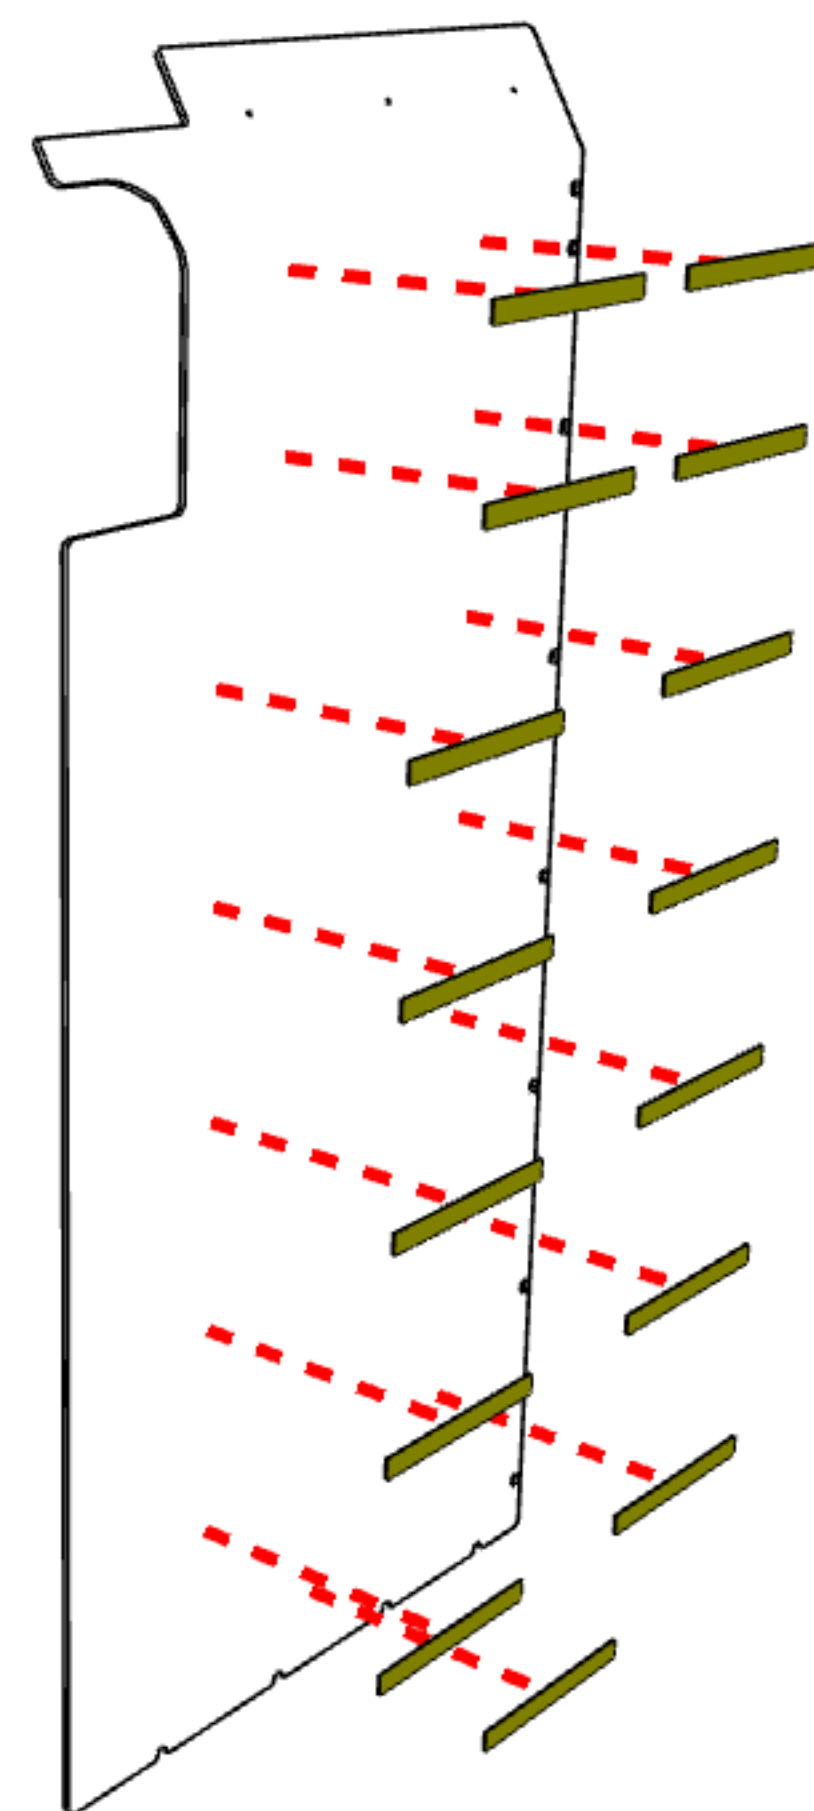
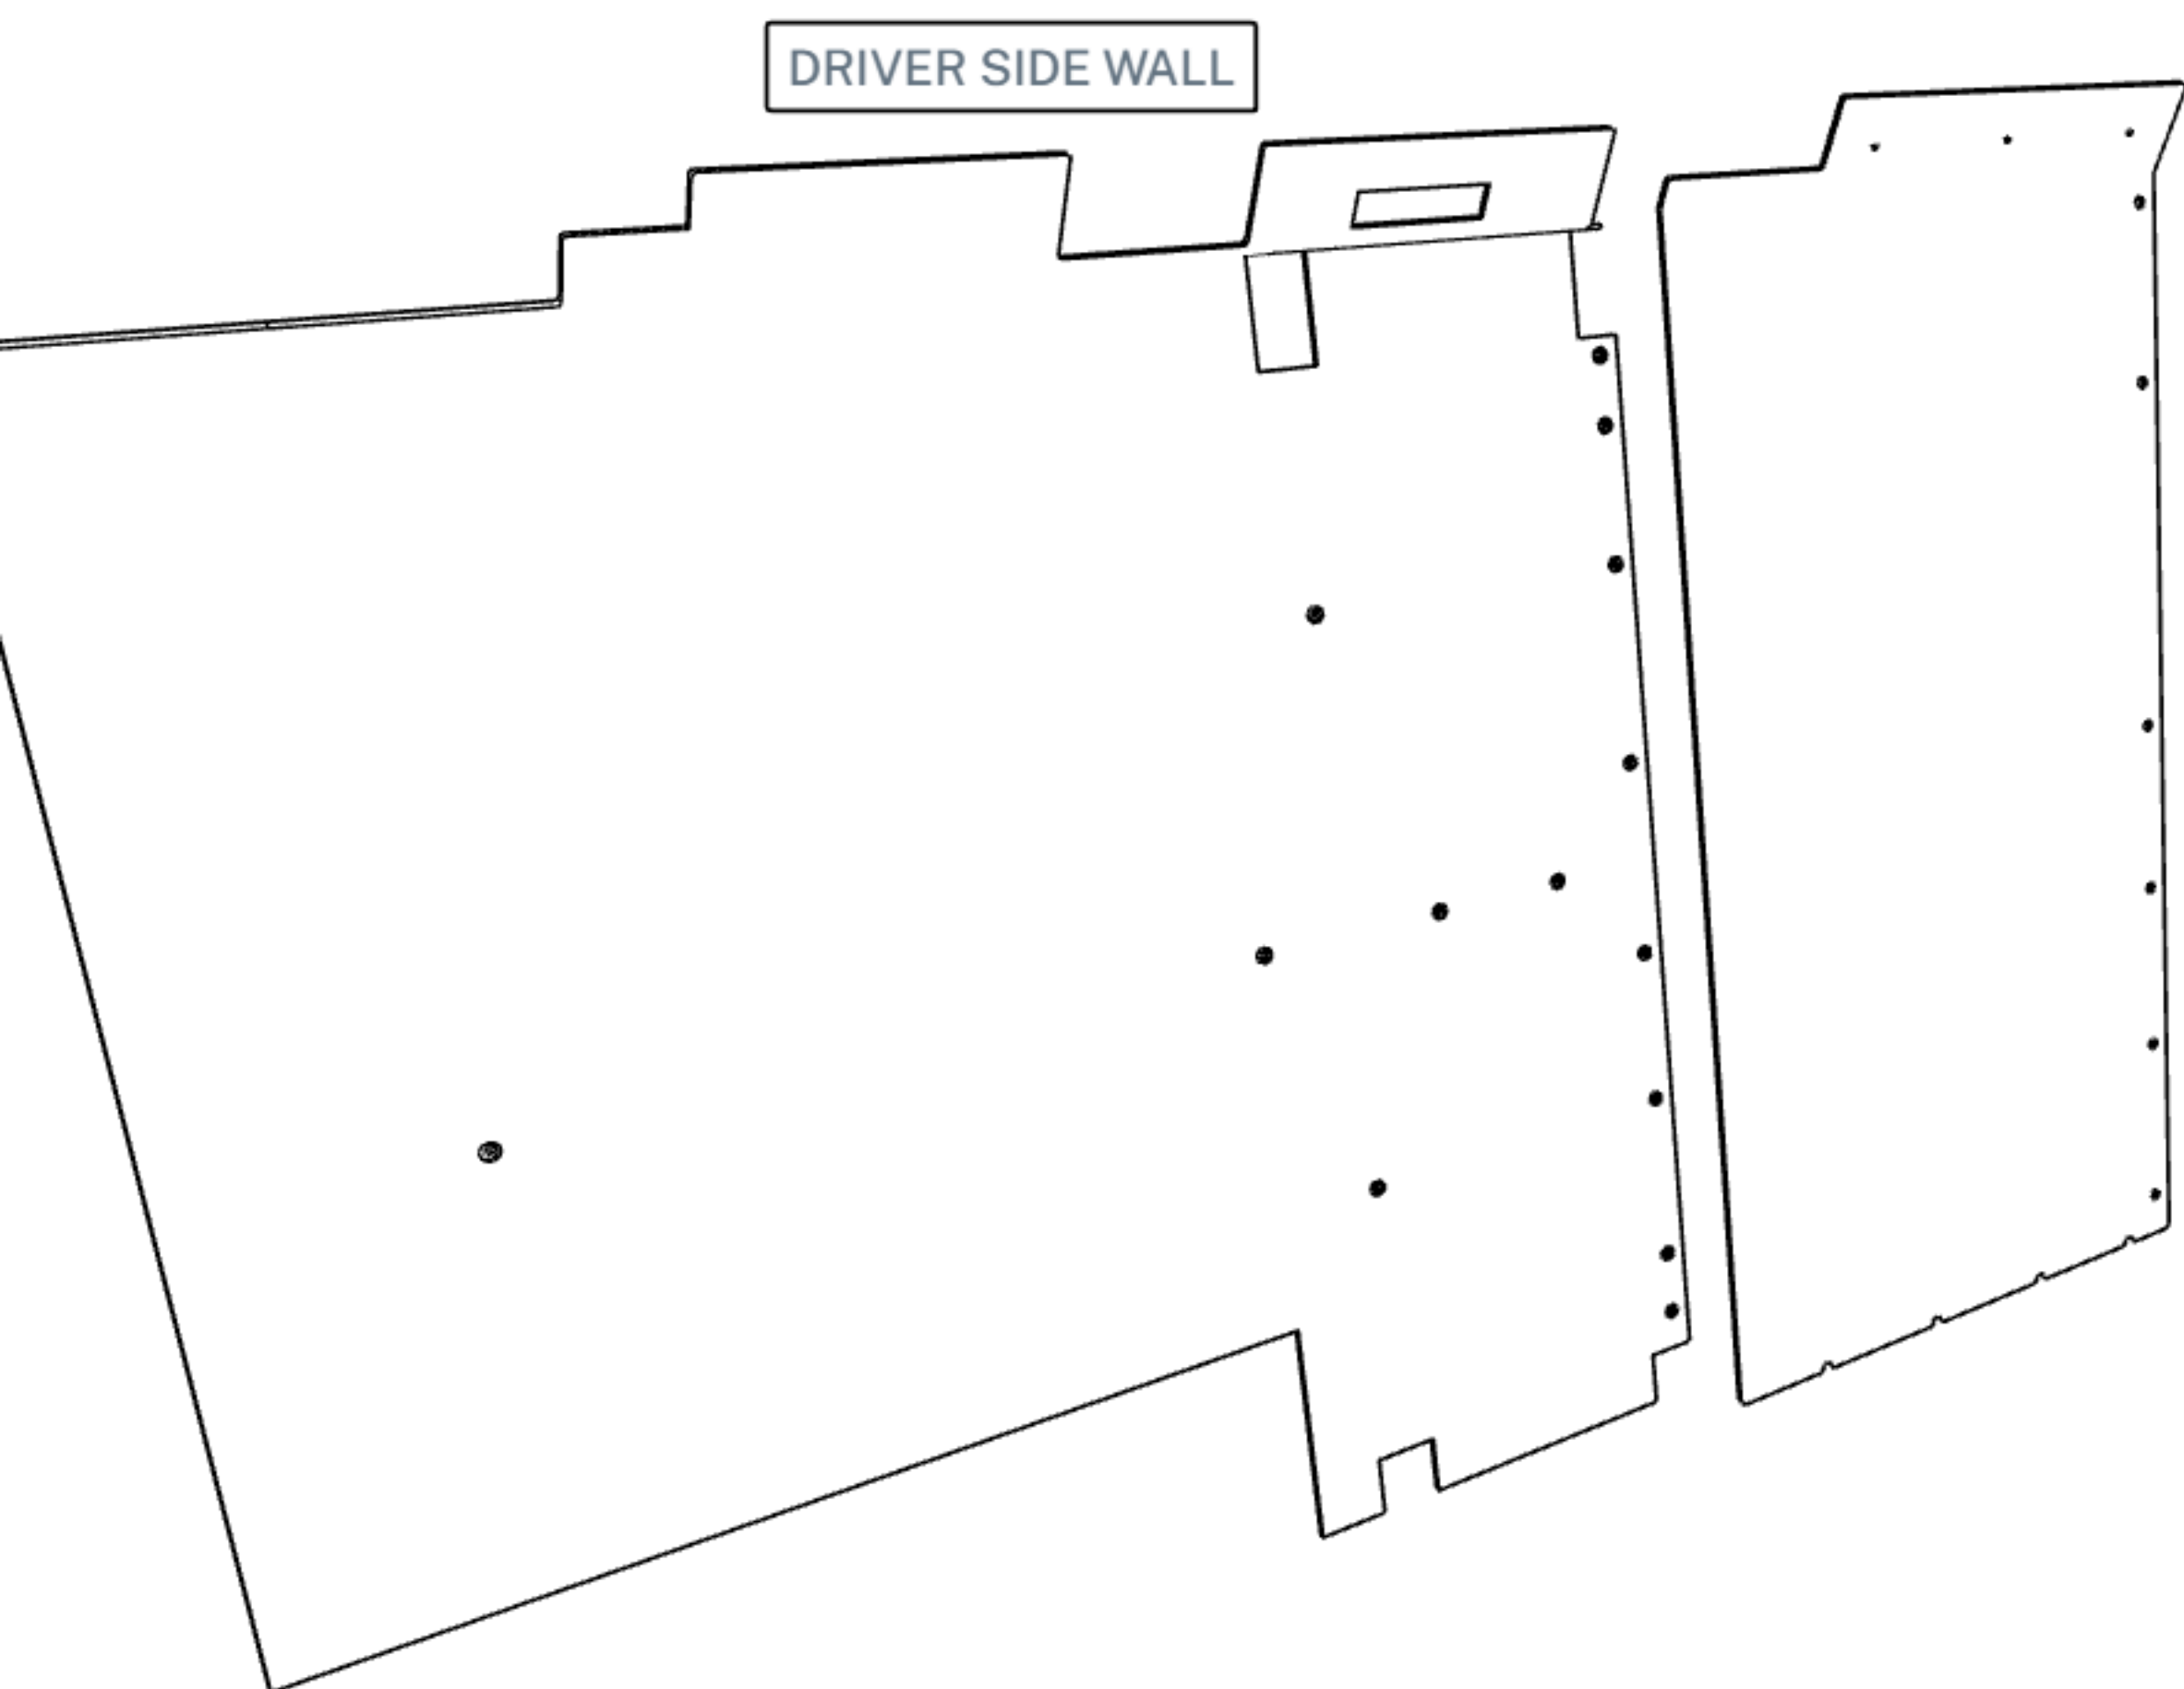


Evenly attach double sided  
tapes to the Wall Side of  
Passenger Side Panel 1 liner  
before screwing into place.



15x

DRIVER SIDE WALL

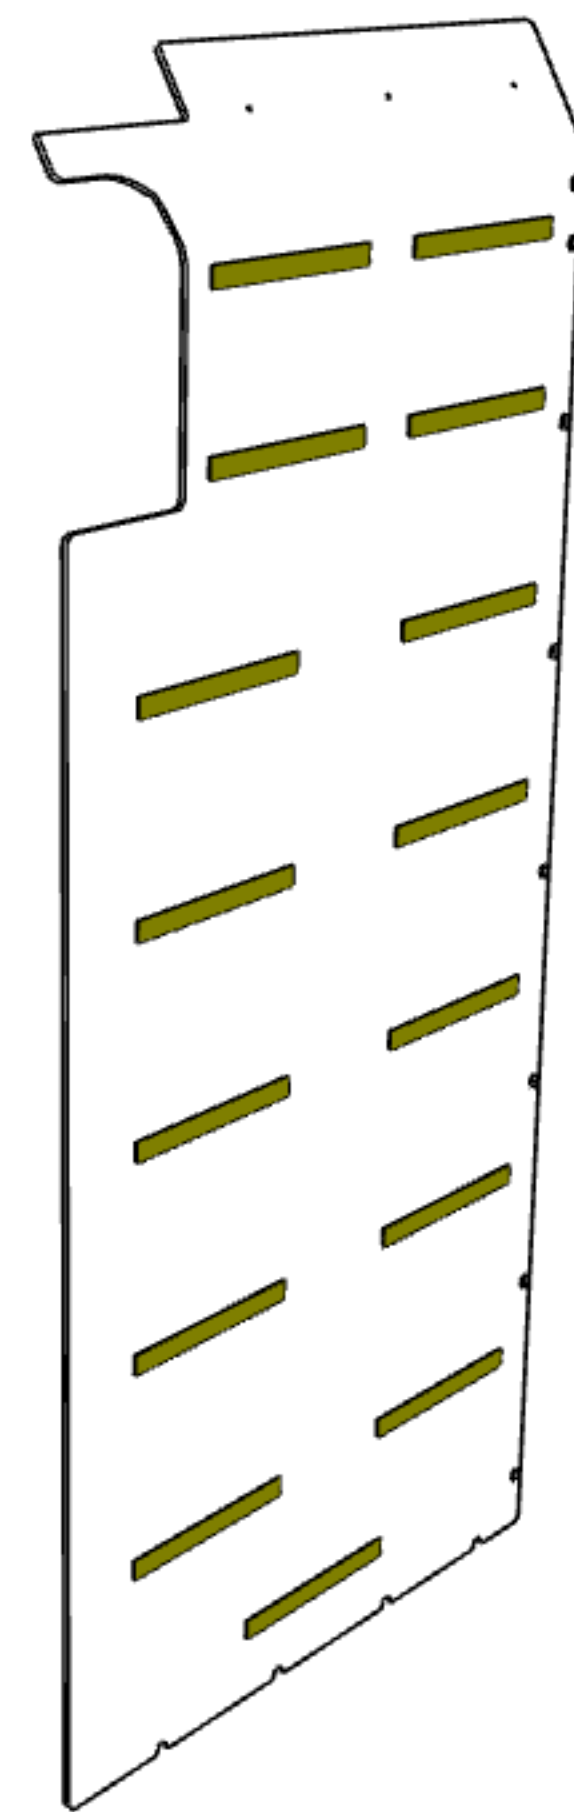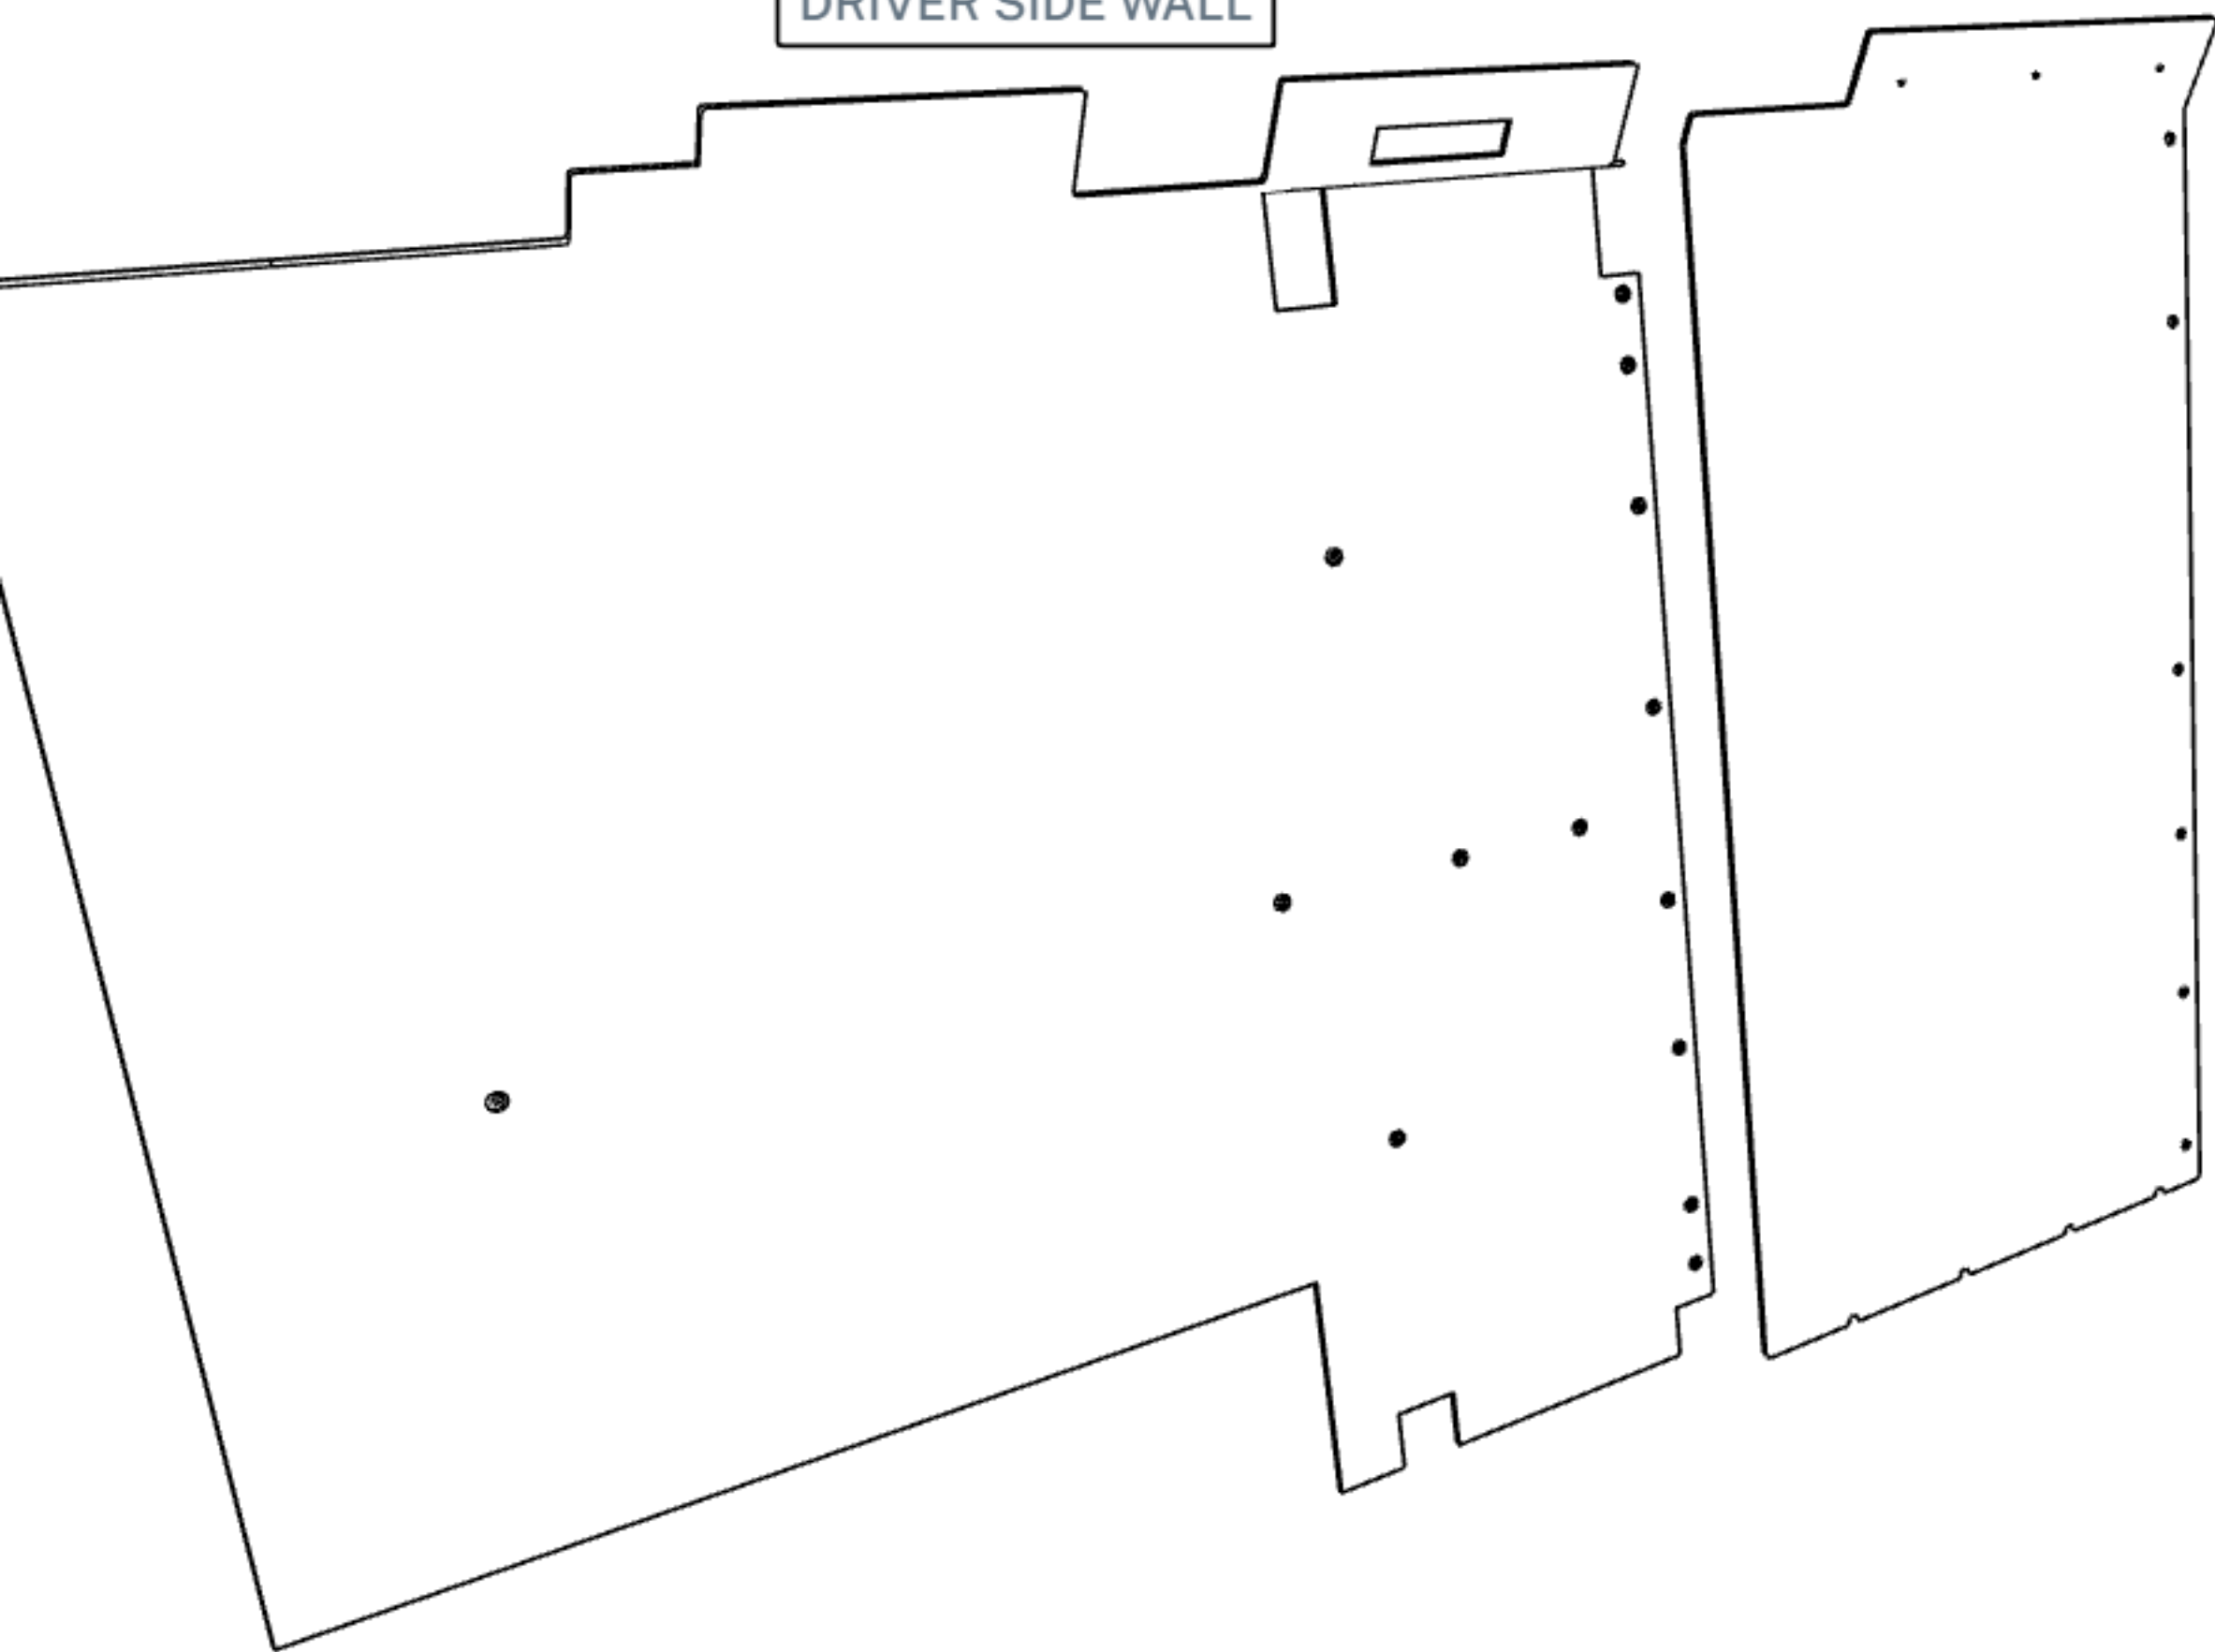

PASSENGER SIDE WALL


DRIVER SIDE WALL



Peel off protective layer of all the double sided tapes.

PASSENGER SIDE WALL


PASSENGER SIDE WALL

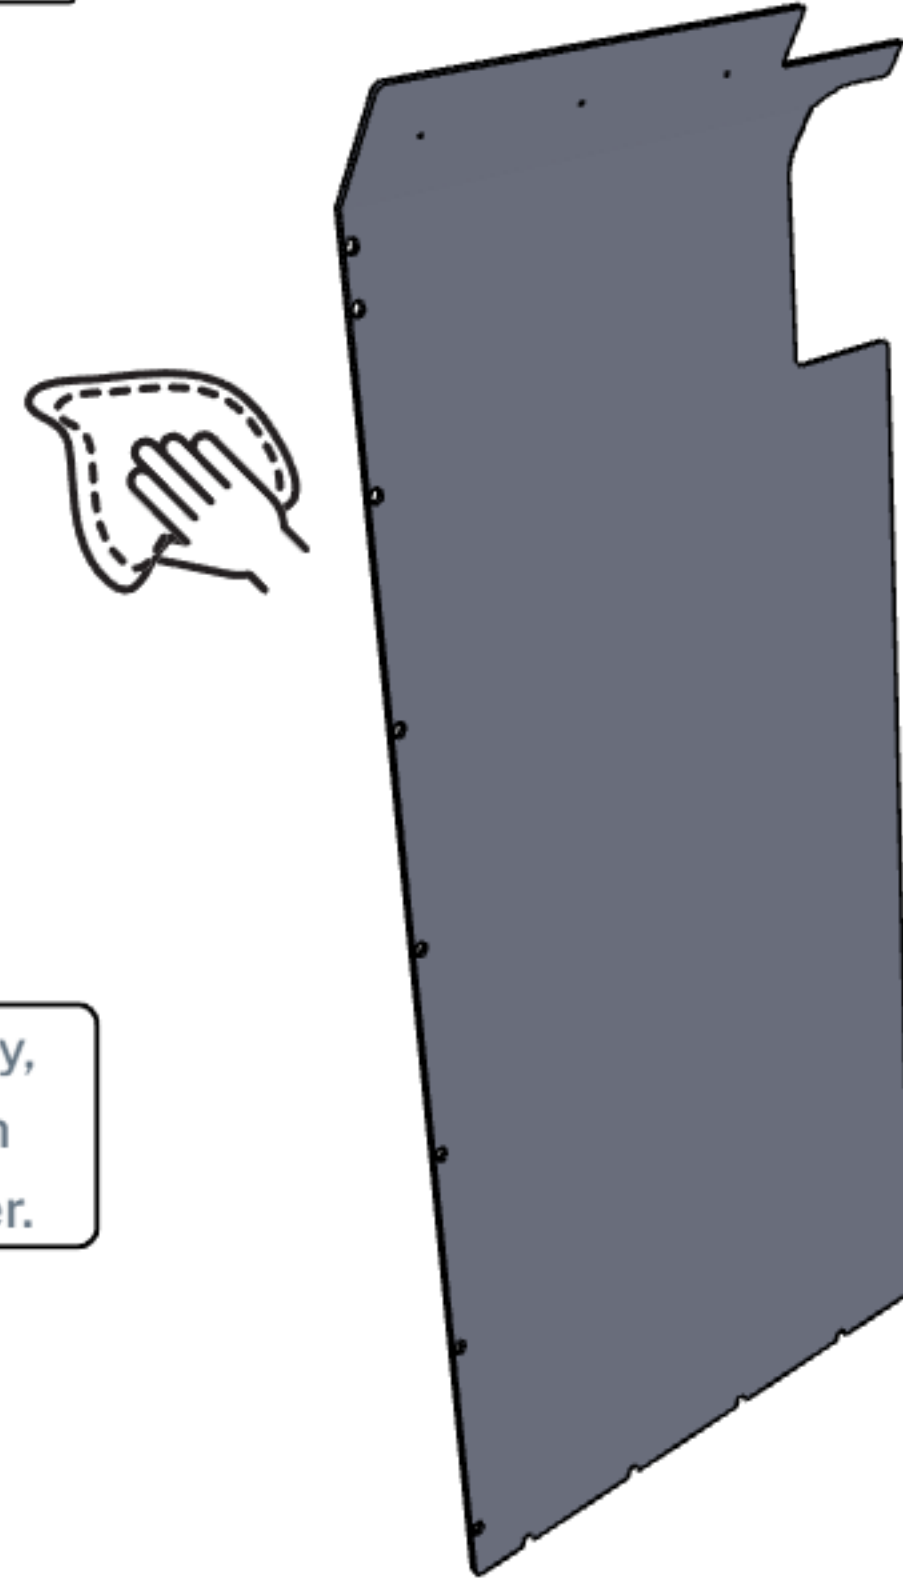

Wipe the vehicle surface clean, dry,  
free of dust, debris or any foreign  
materials before adhering the liner.

FRONT OF VEHICLE



REAR OF VEHICLE

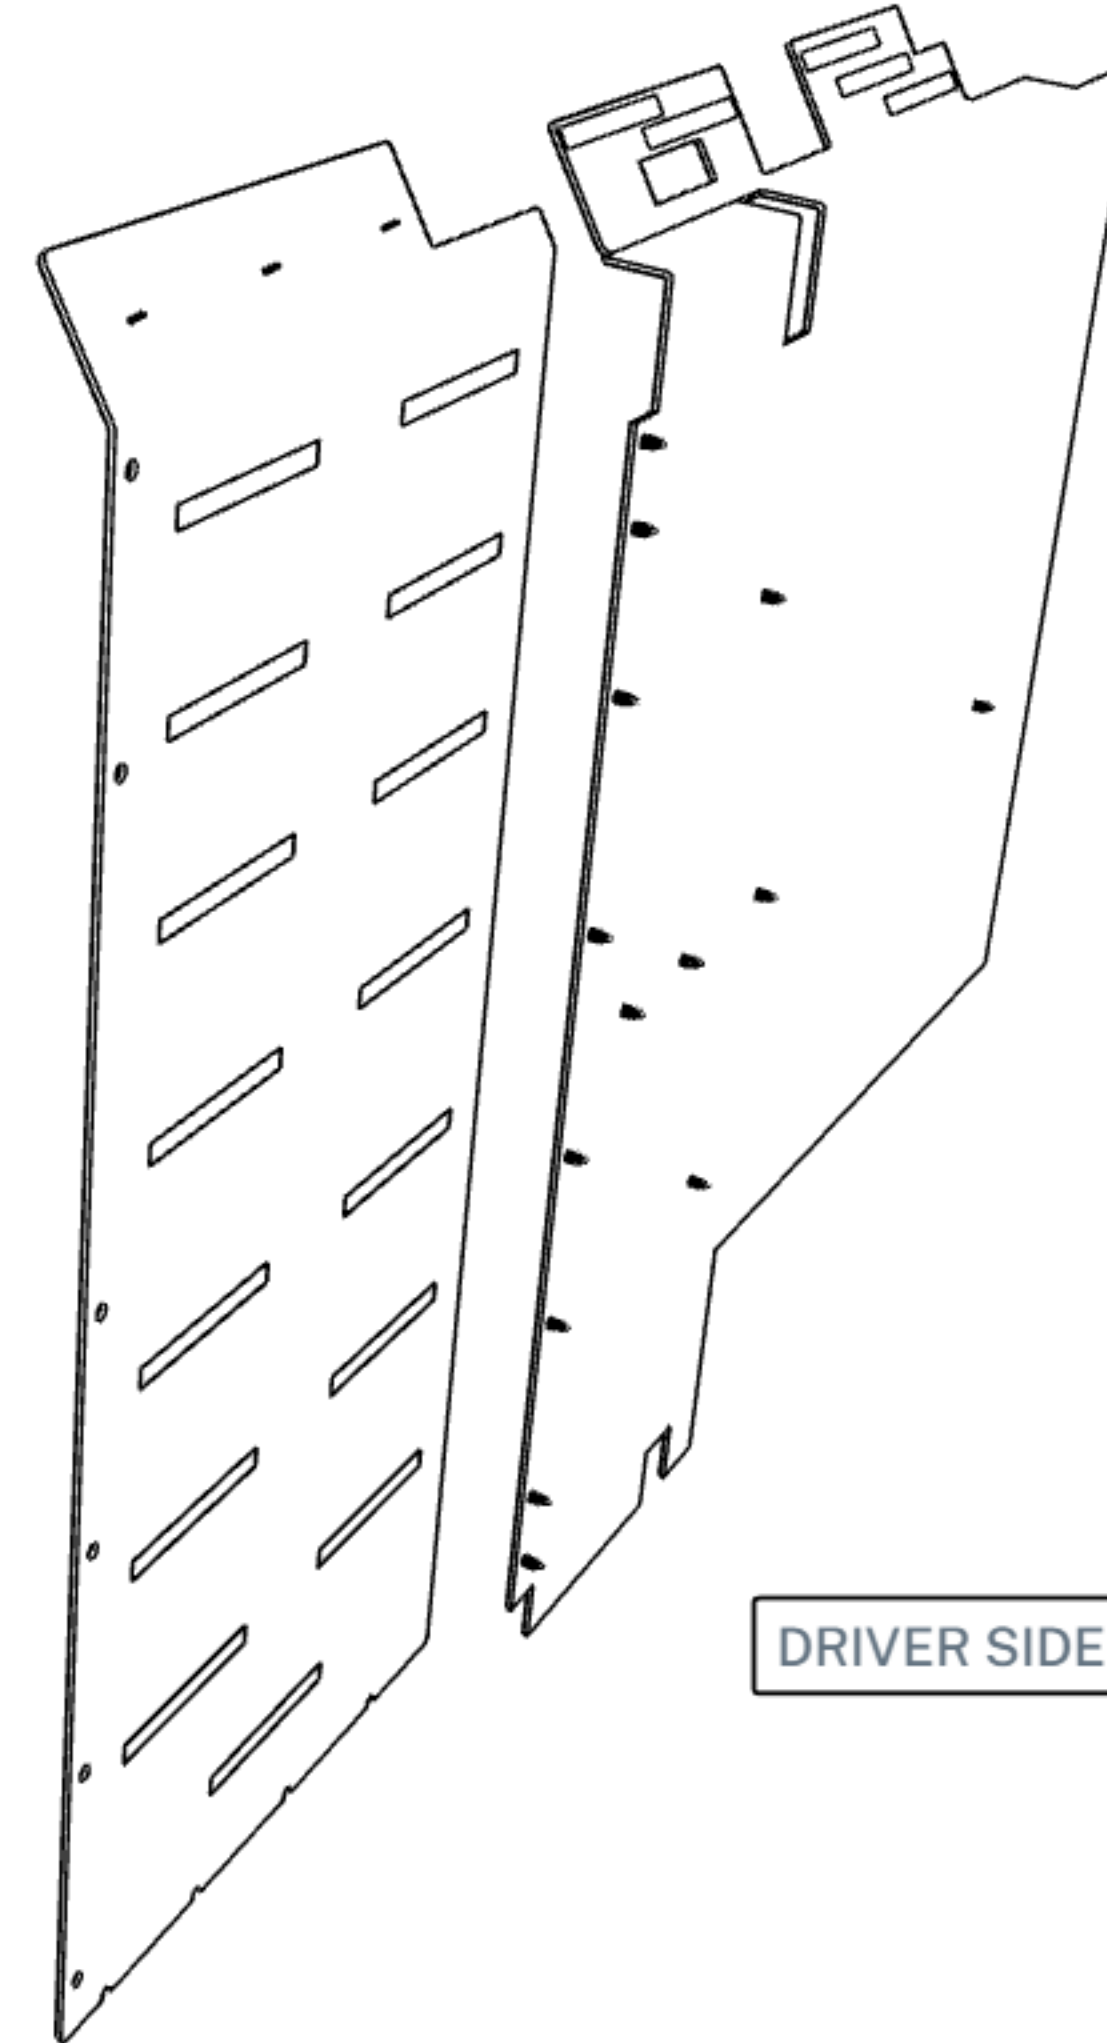

DRIVER SIDE WALL


PASSENGER SIDE WALL

Align Passenger Side  
Panel 1 rivet holes with  
vehicle factory holes and  
place liner to the wall.

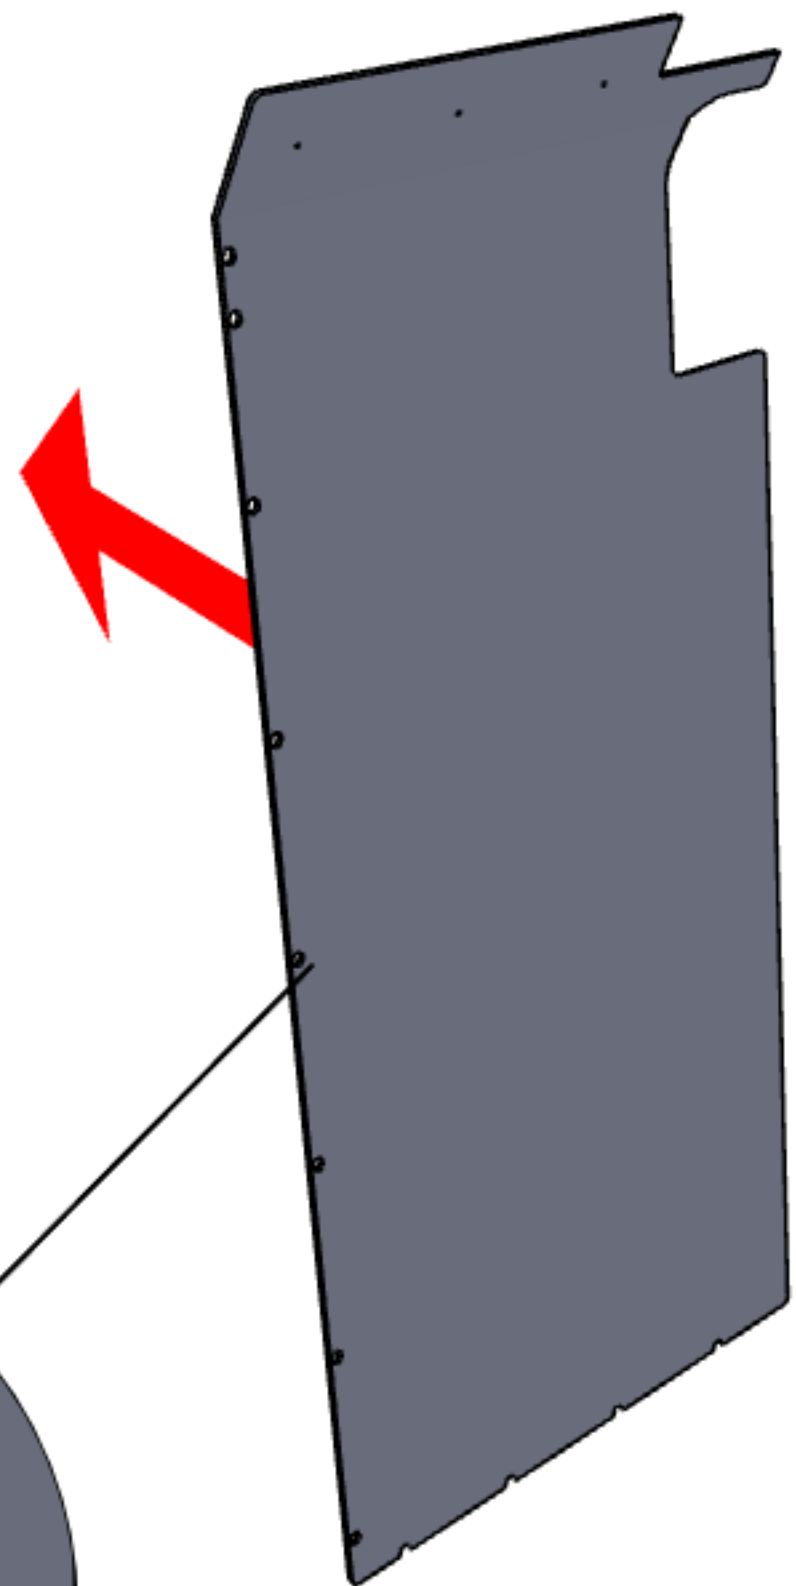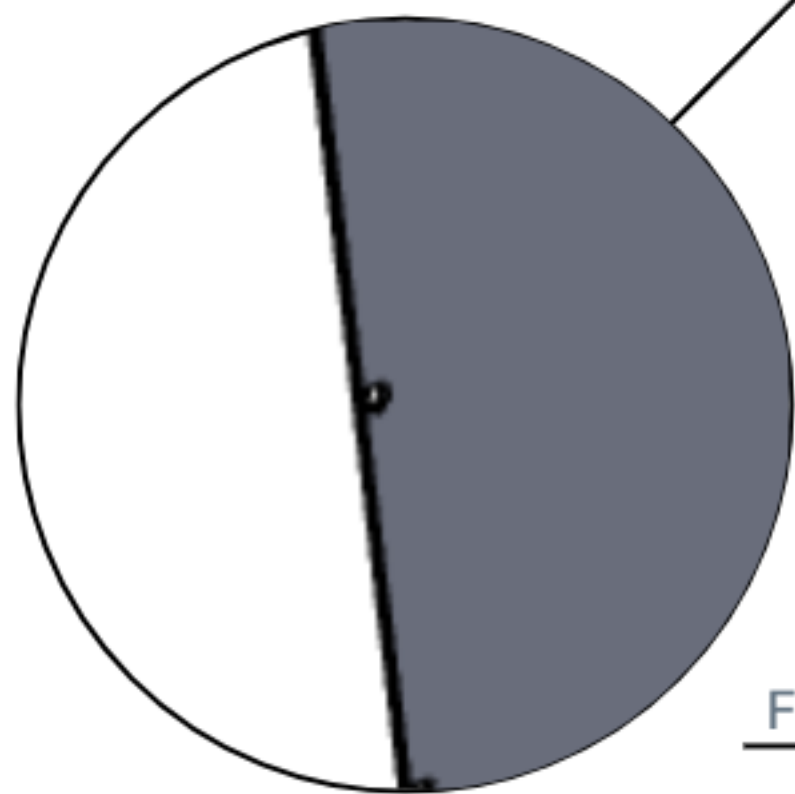


FRONT OF VEHICLE

REAR OF VEHICLE

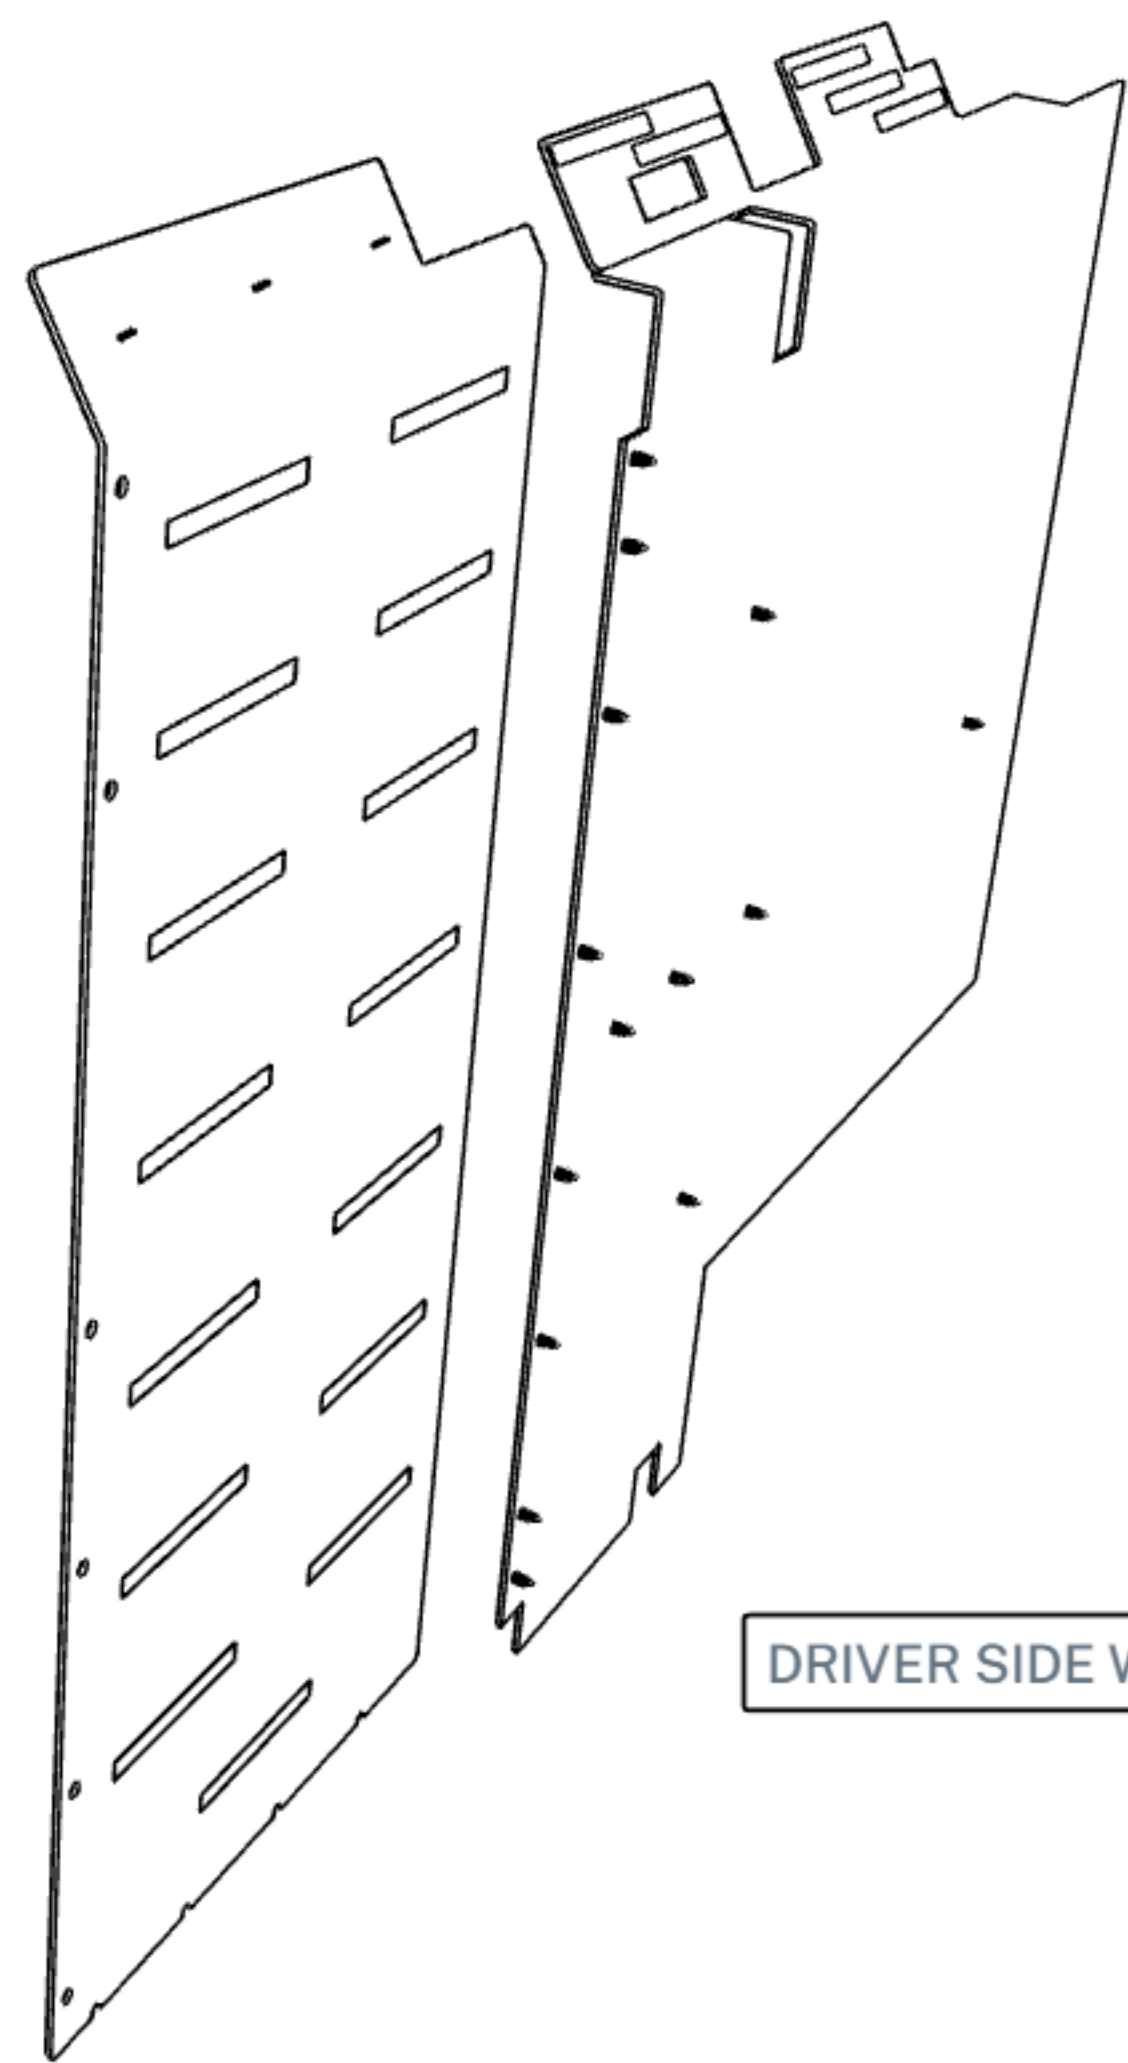


DRIVER SIDE WALL

PASSENGER SIDE WALL

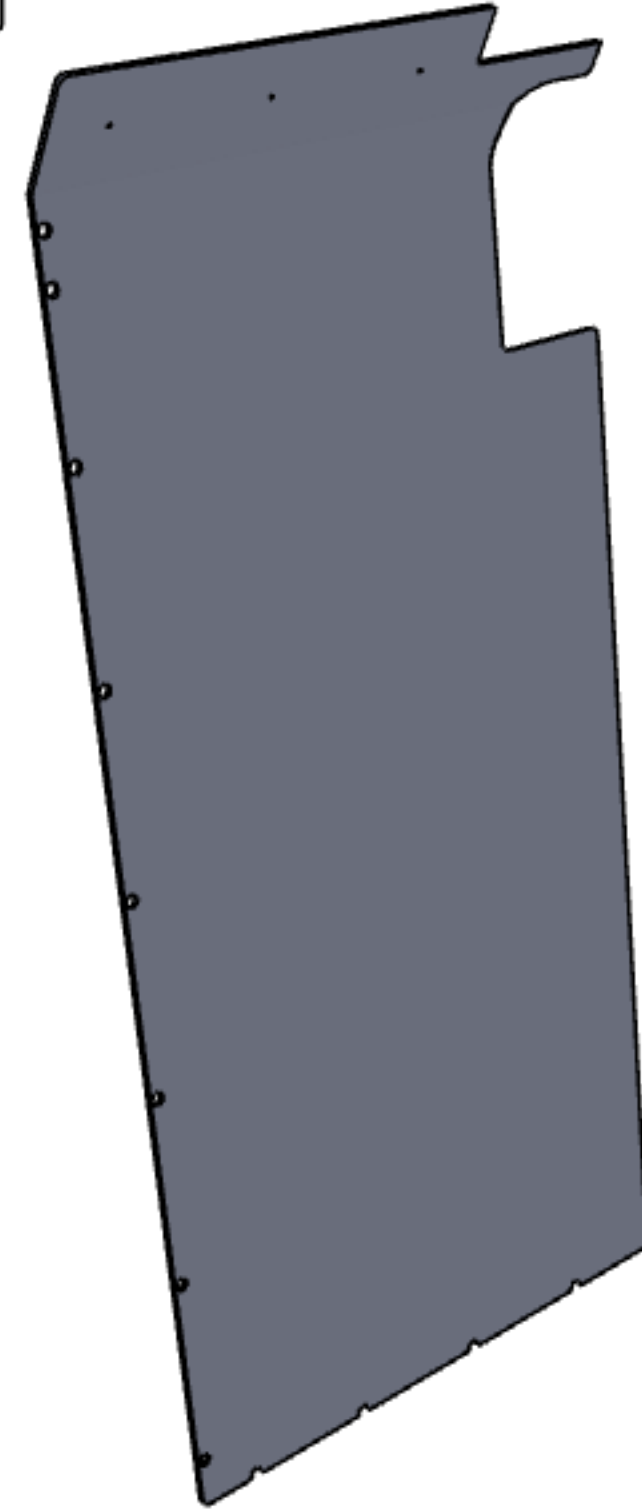

FRONT OF VEHICLE


REAR OF VEHICLE

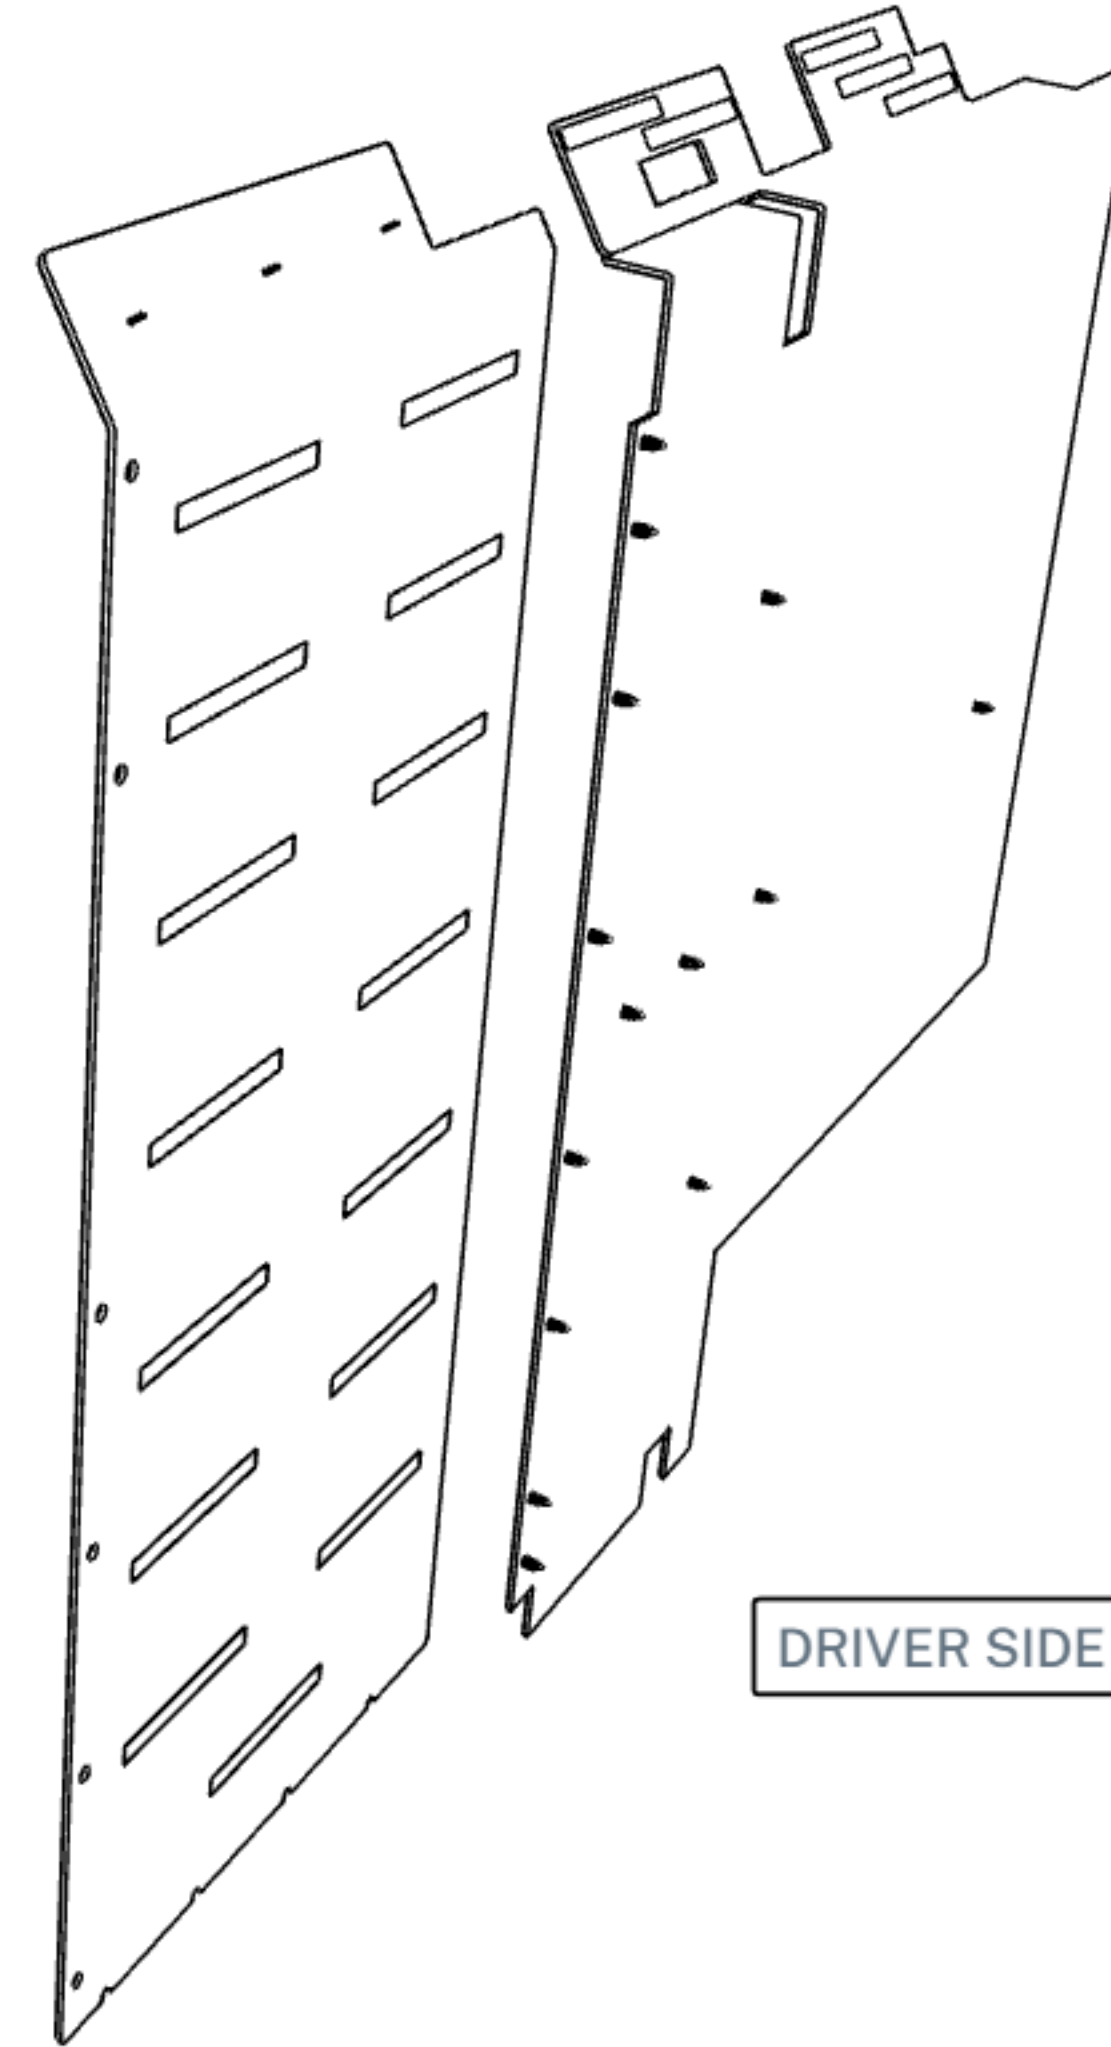

DRIVER SIDE WALL



FRONT OF VEHICLE

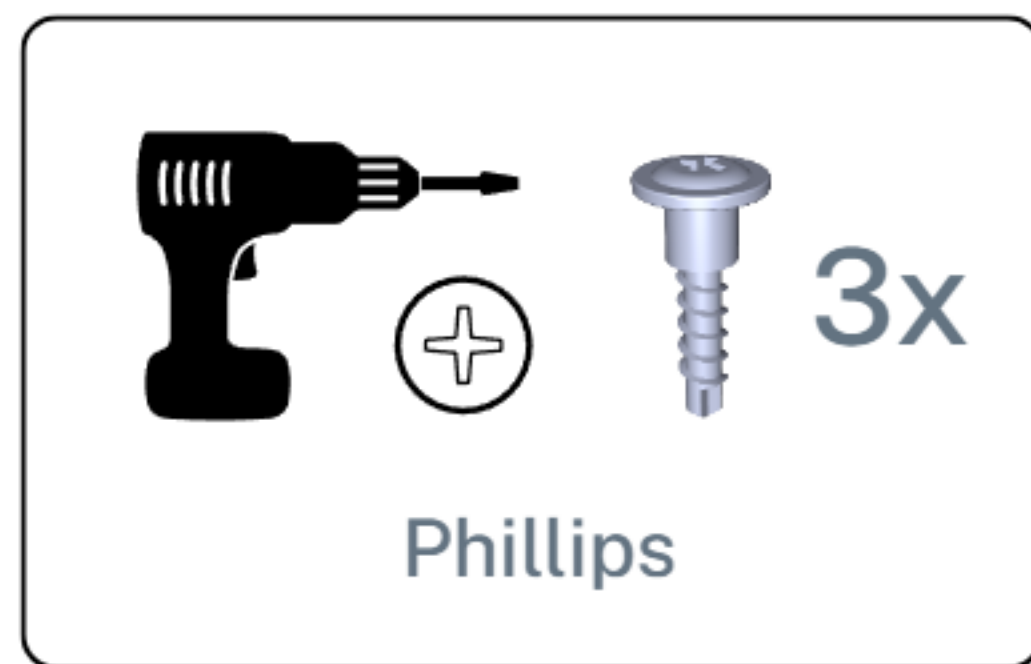


DRIVER SIDE WALL

PASSENGER SIDE WALL


REAR OF VEHICLE

FRONT OF VEHICLE


PASSENGER SIDE WALL

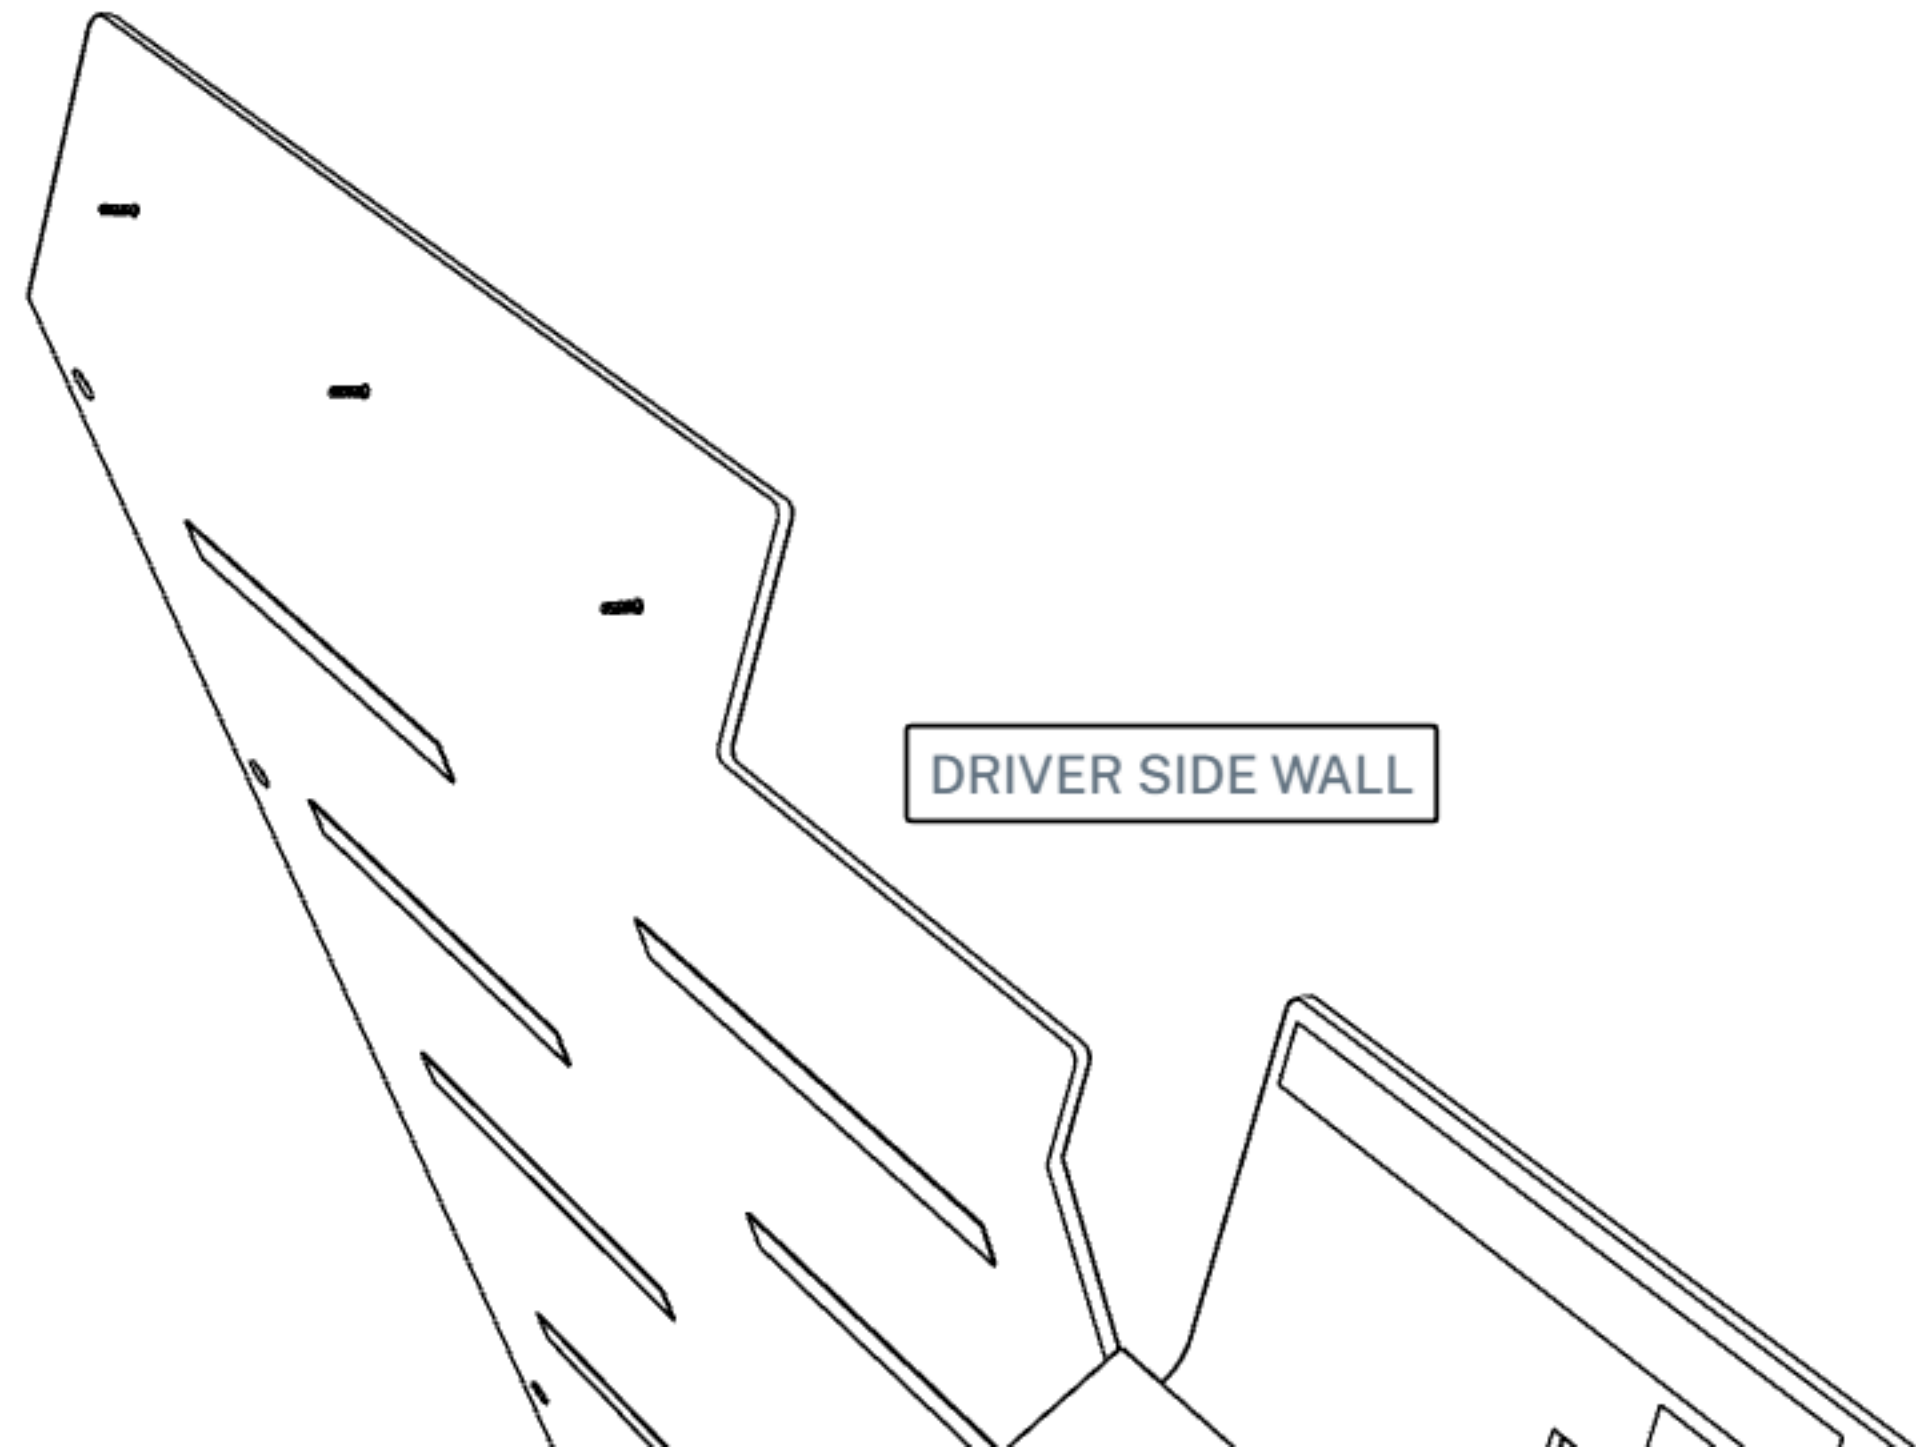


DRIVER SIDE WALL

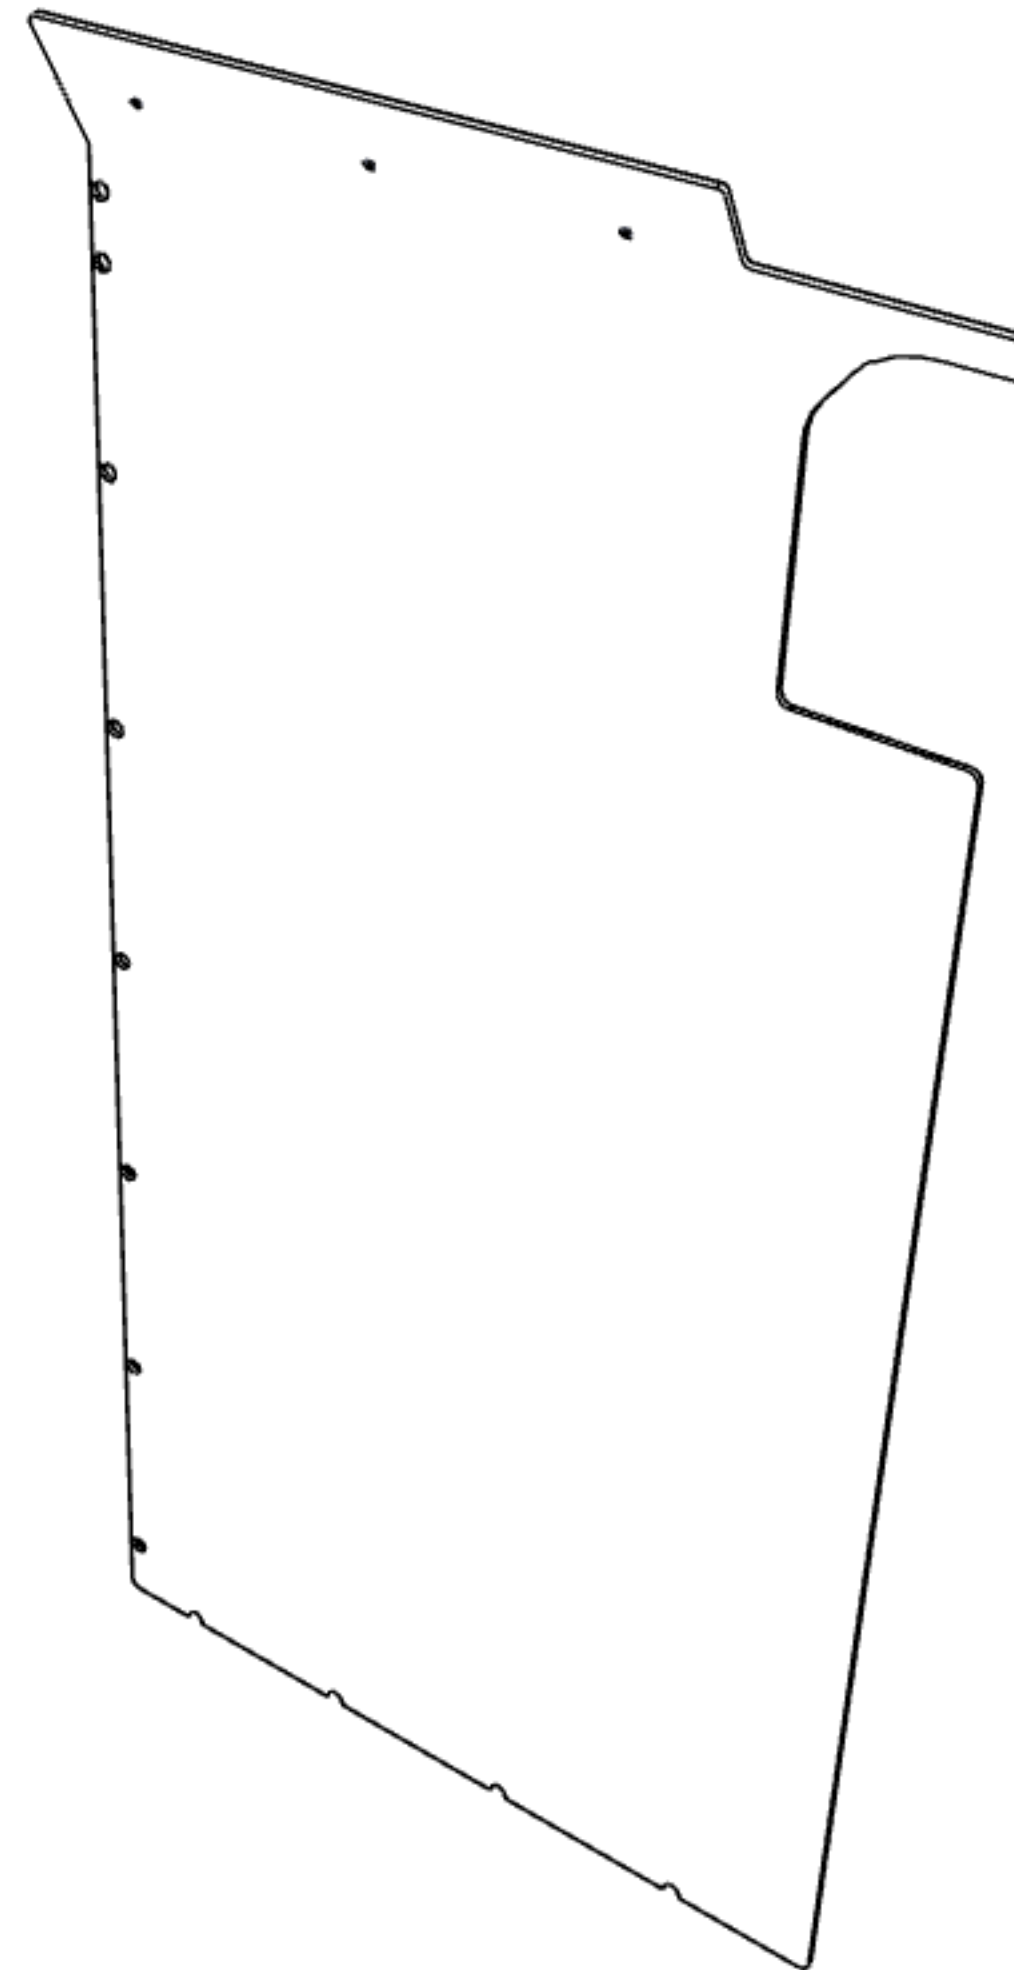


REAR OF VEHICLE

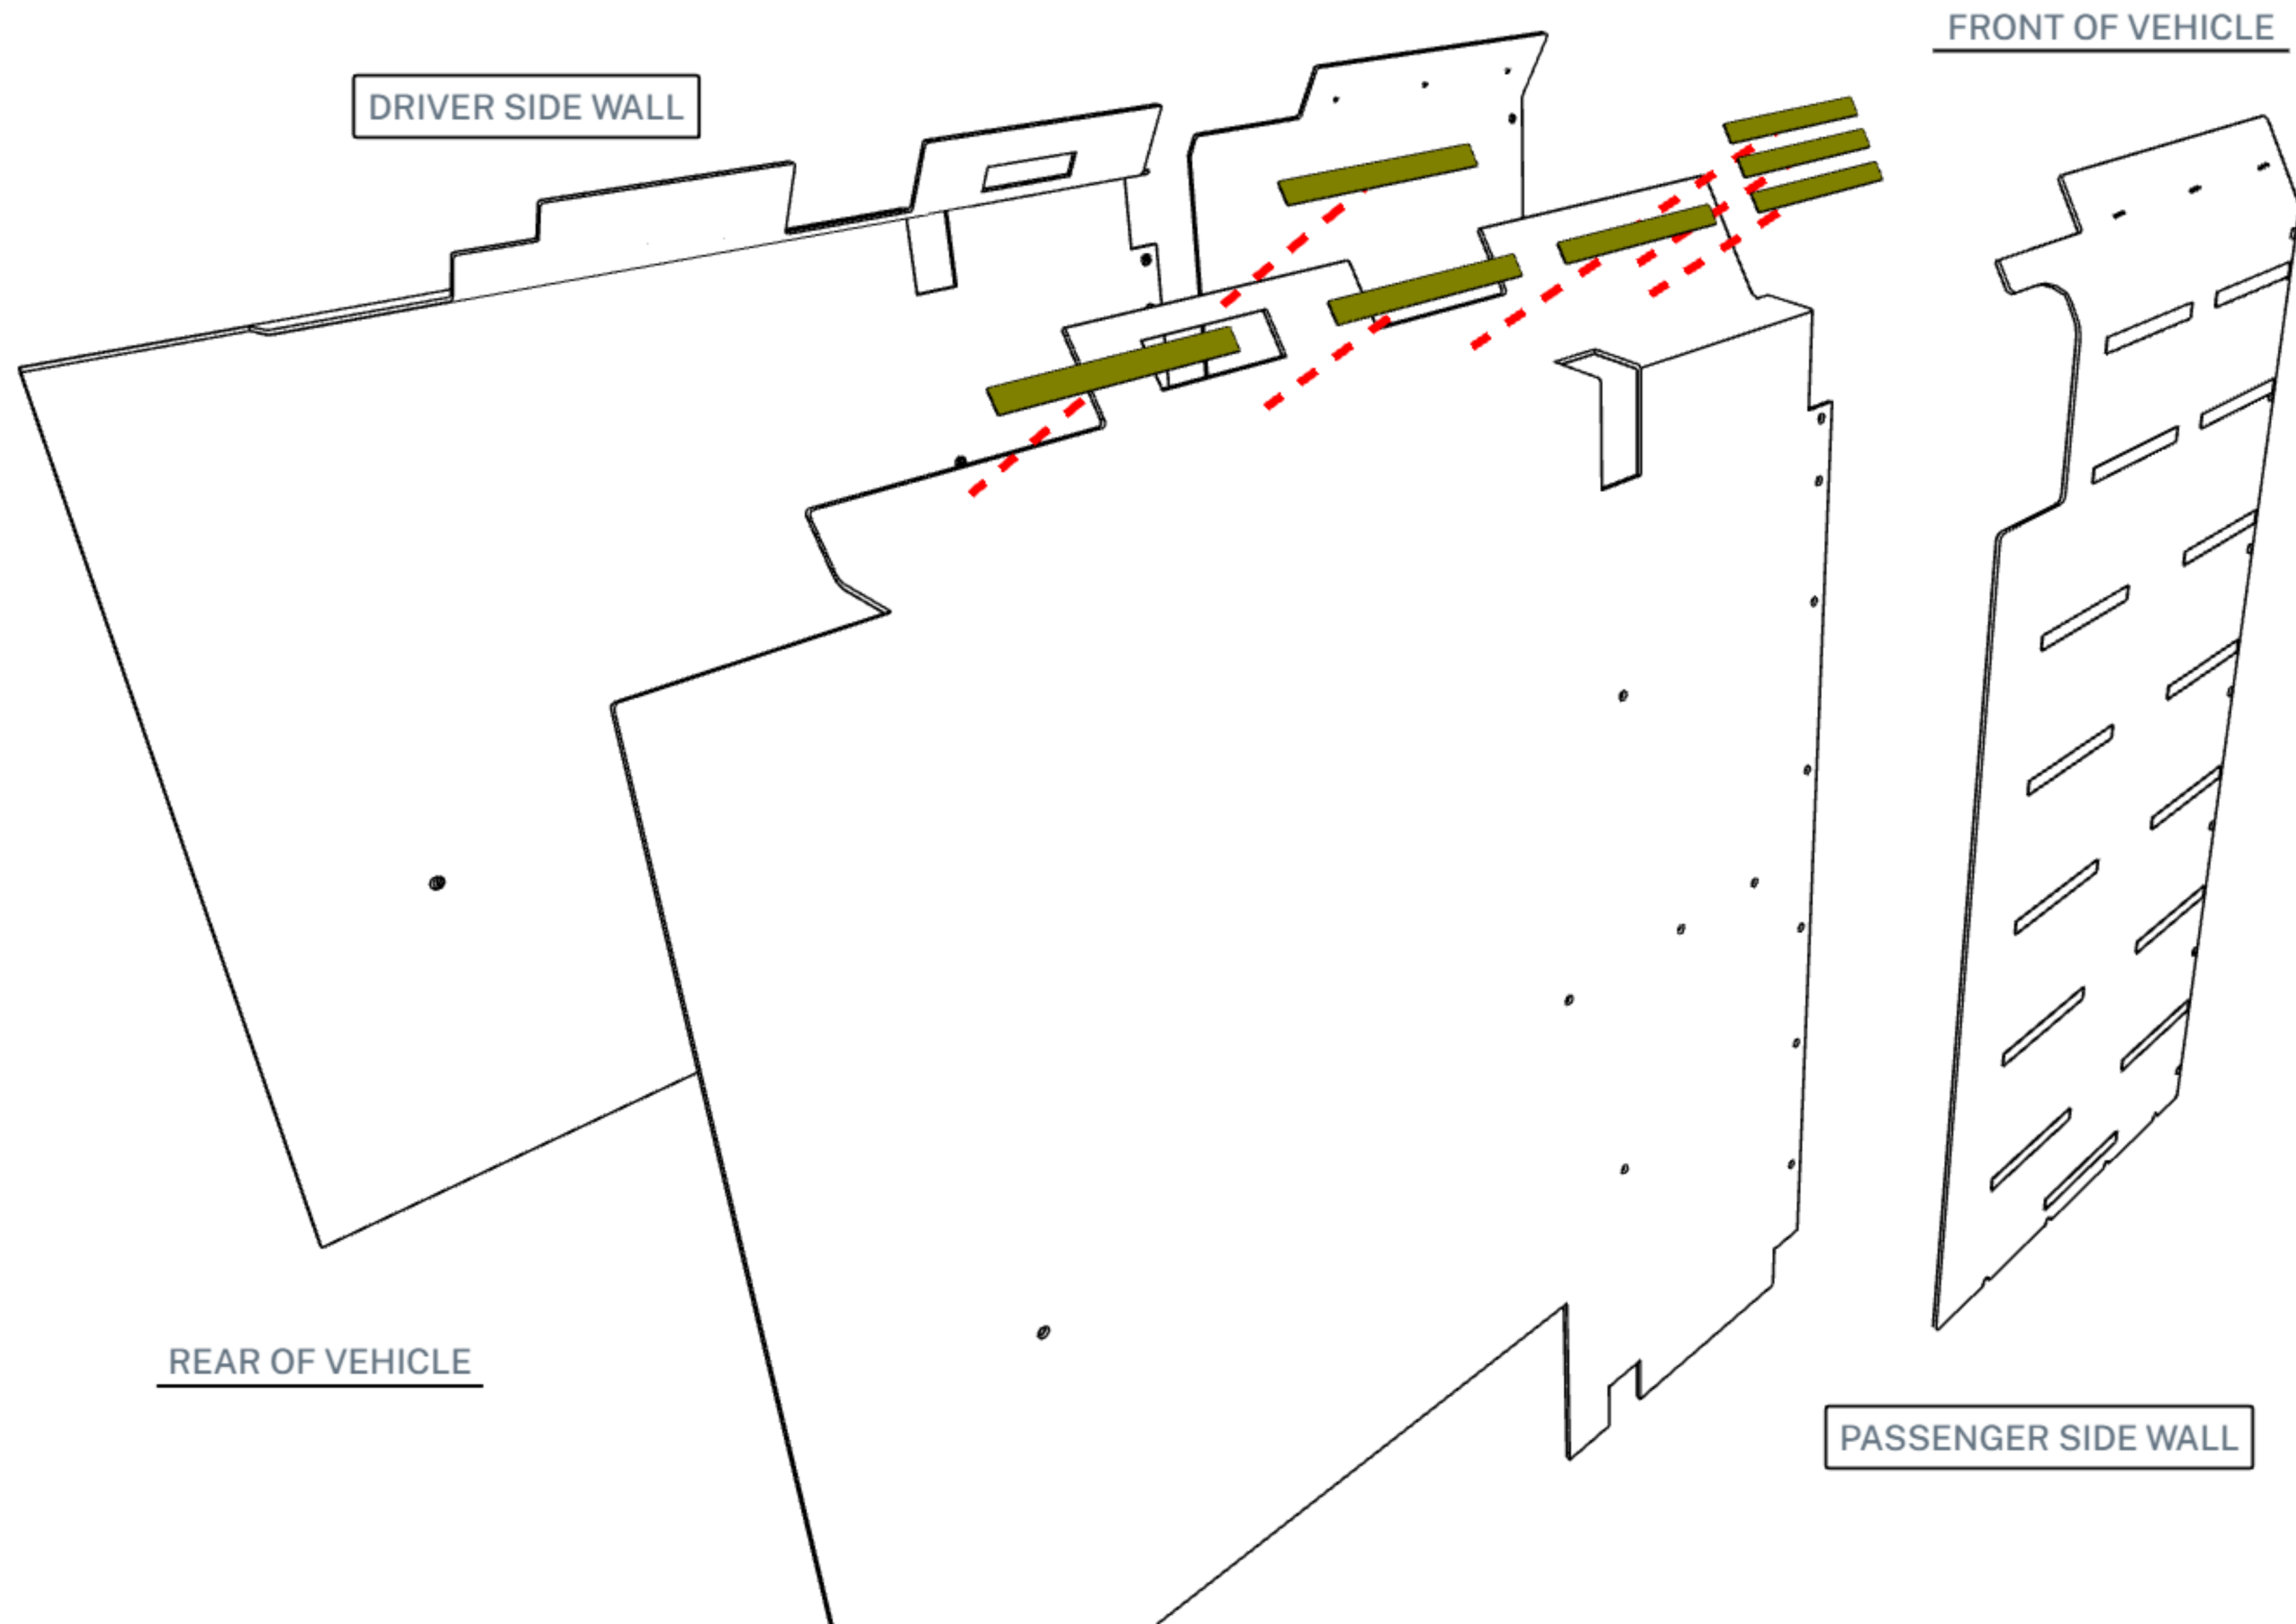

Evenly attach double sided tapes to the Wall Side of Passenger Side Panel 2 liner before screwing into place.

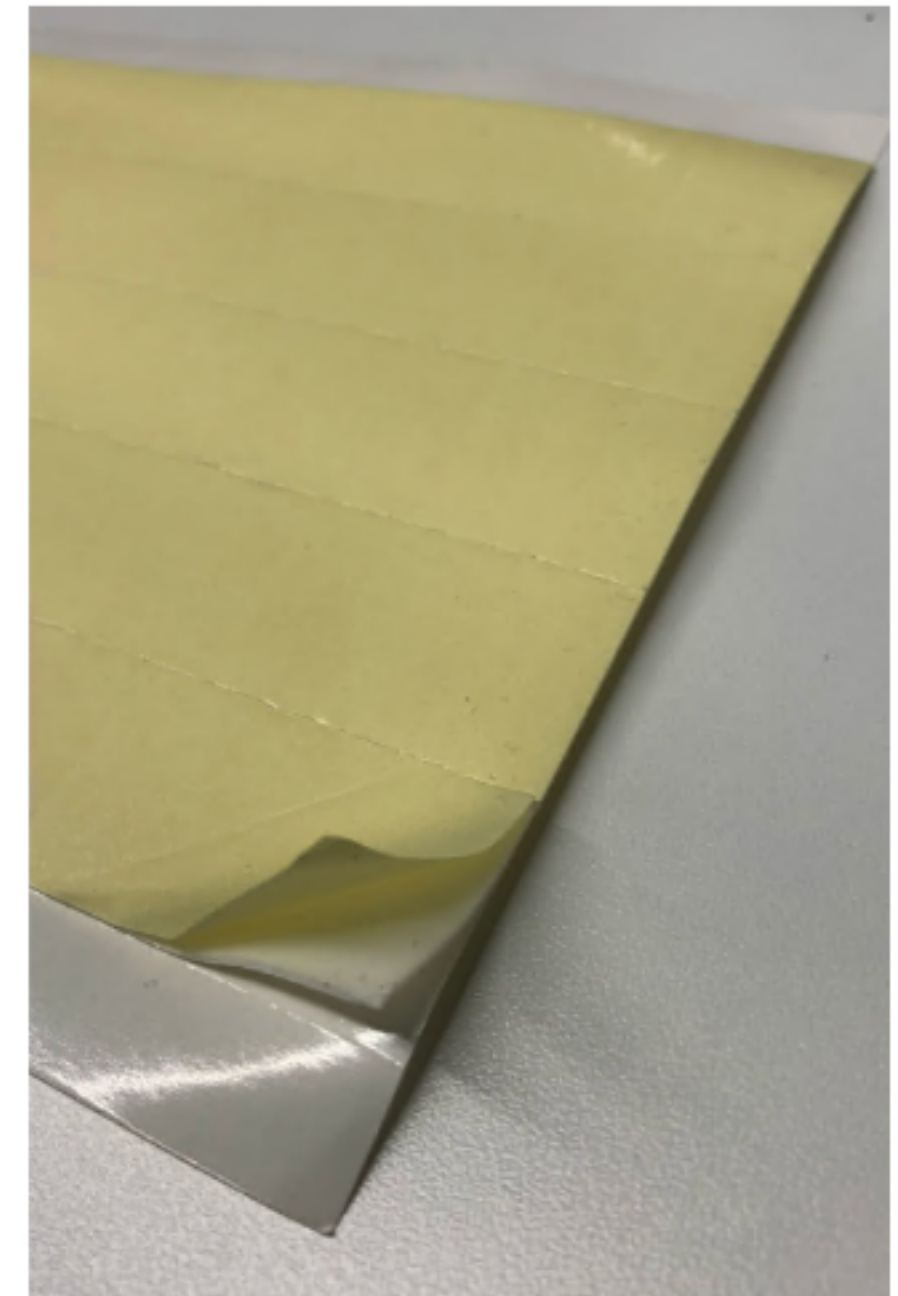

15x

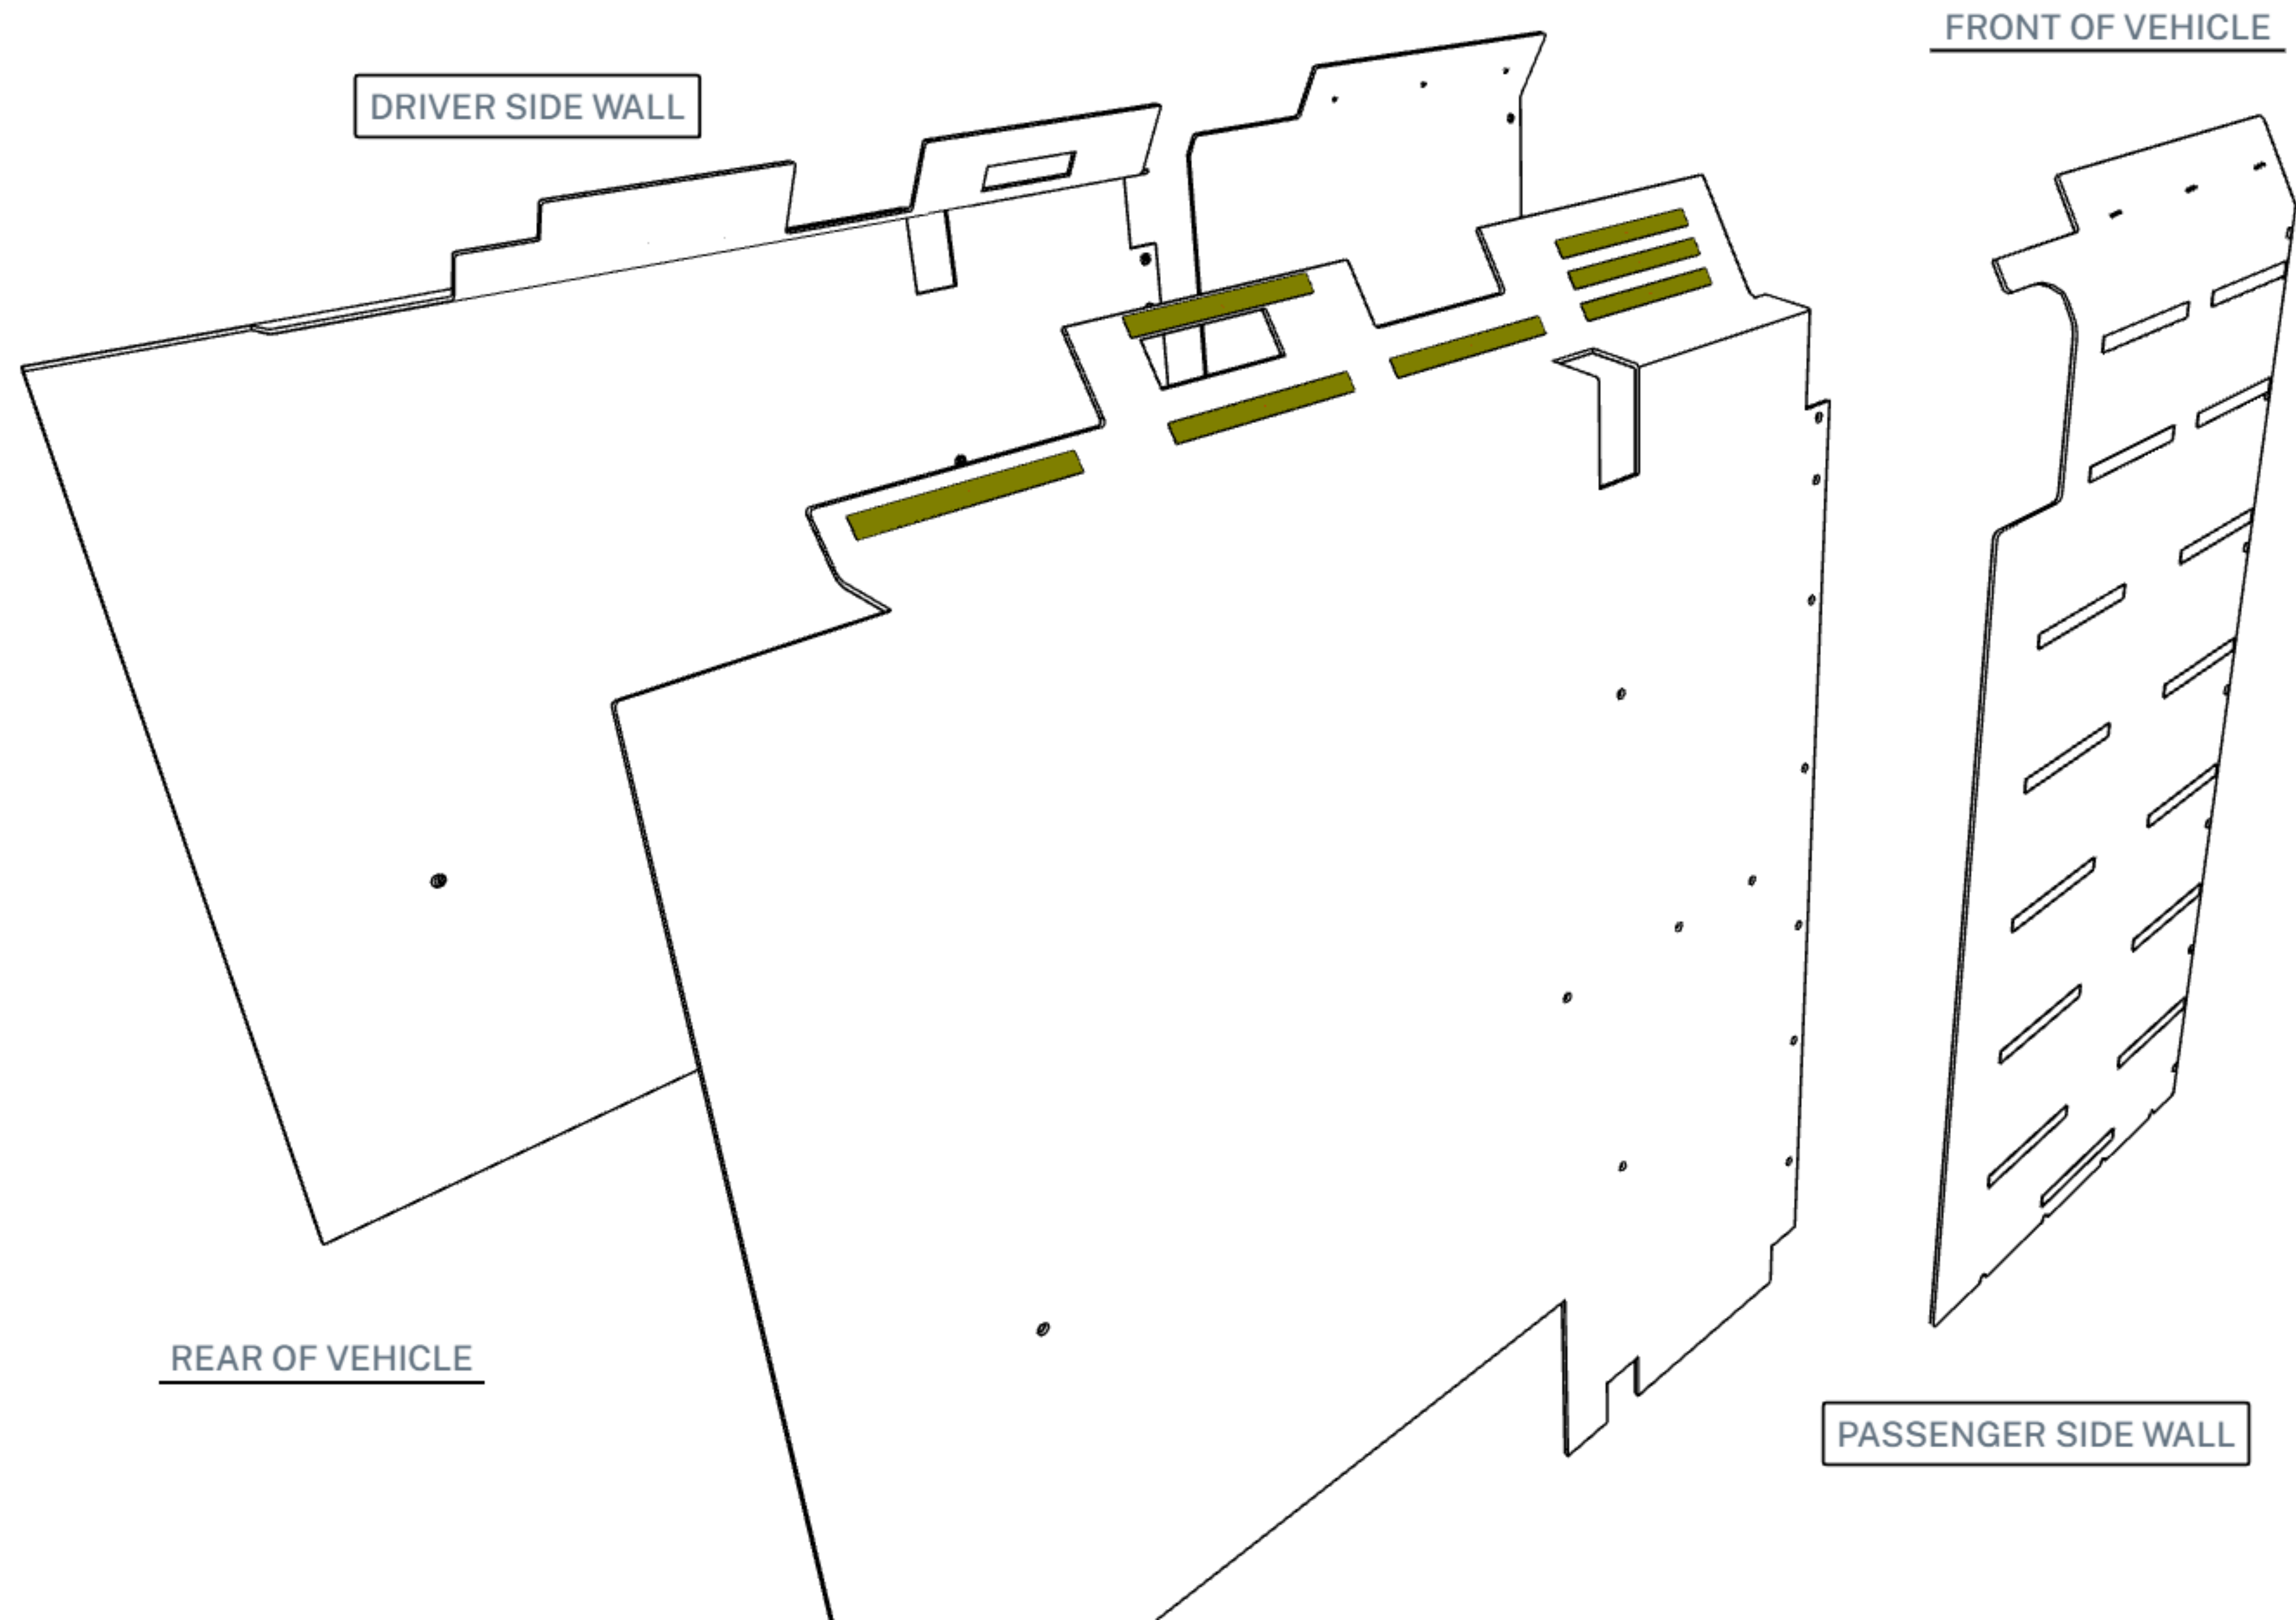




DRIVER SIDE WALL




Peel off protective layer of all the double sided tapes.

PASSENGER SIDE WALL

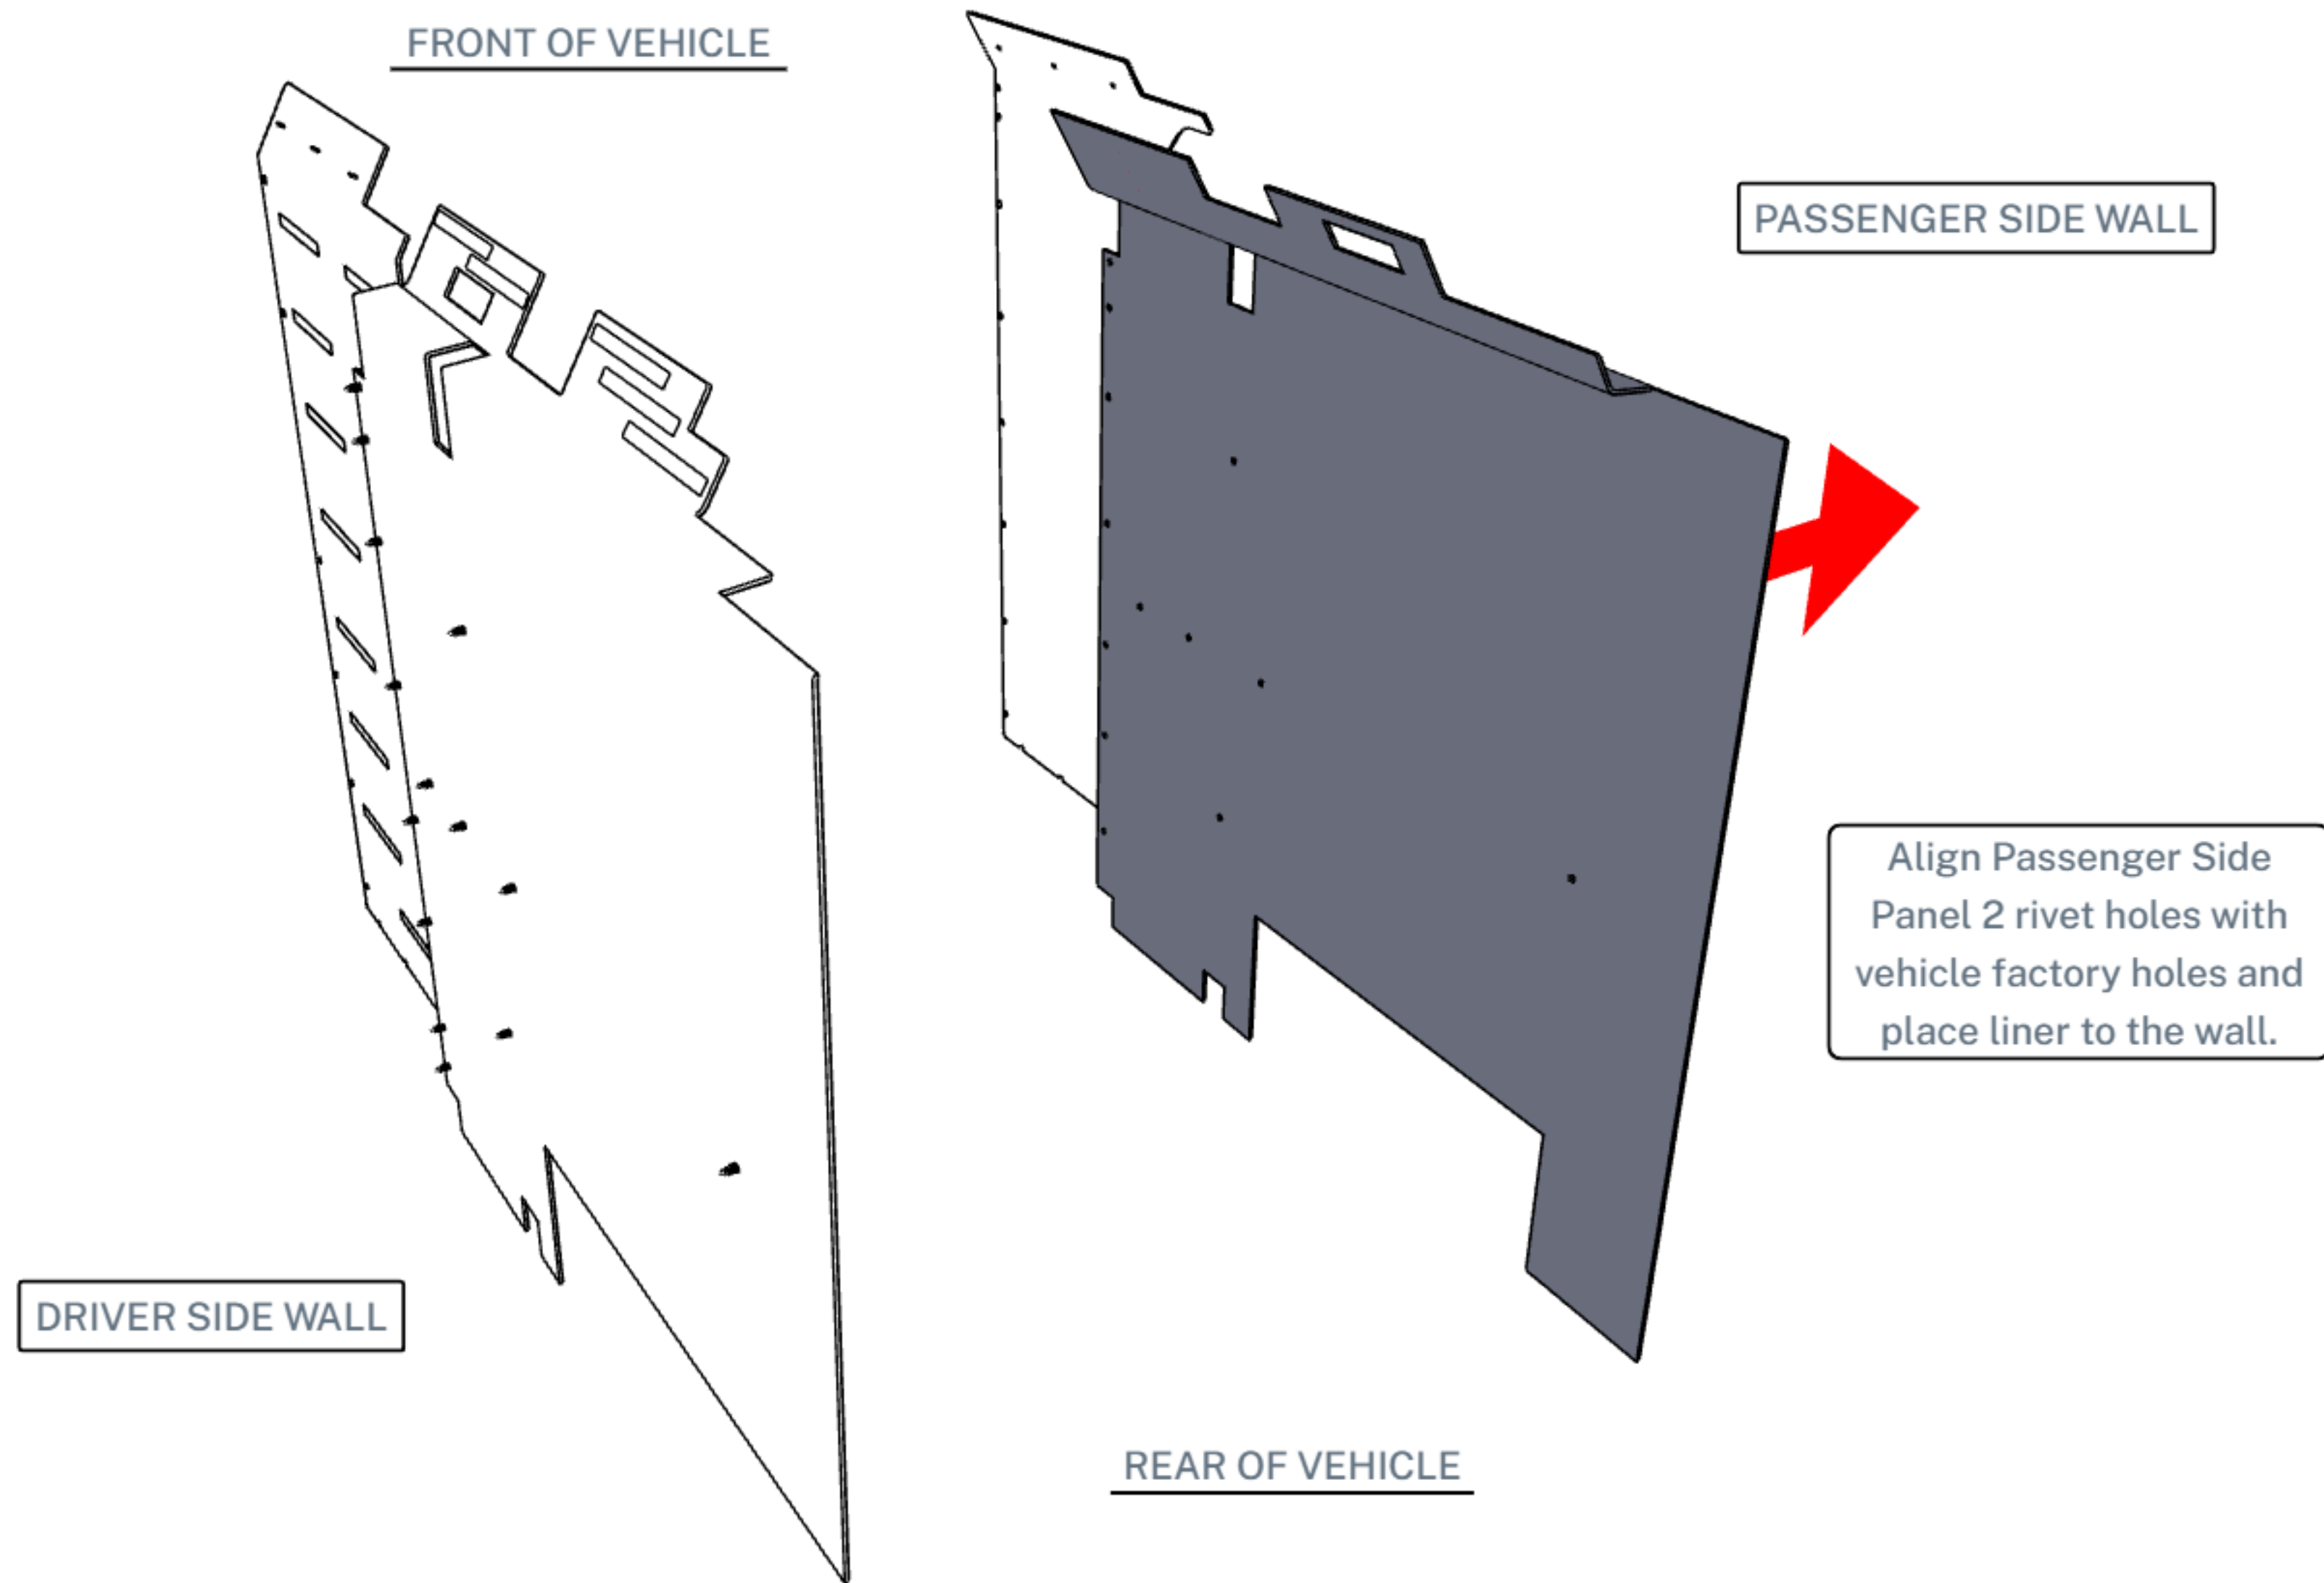




FRONT OF VEHICLE

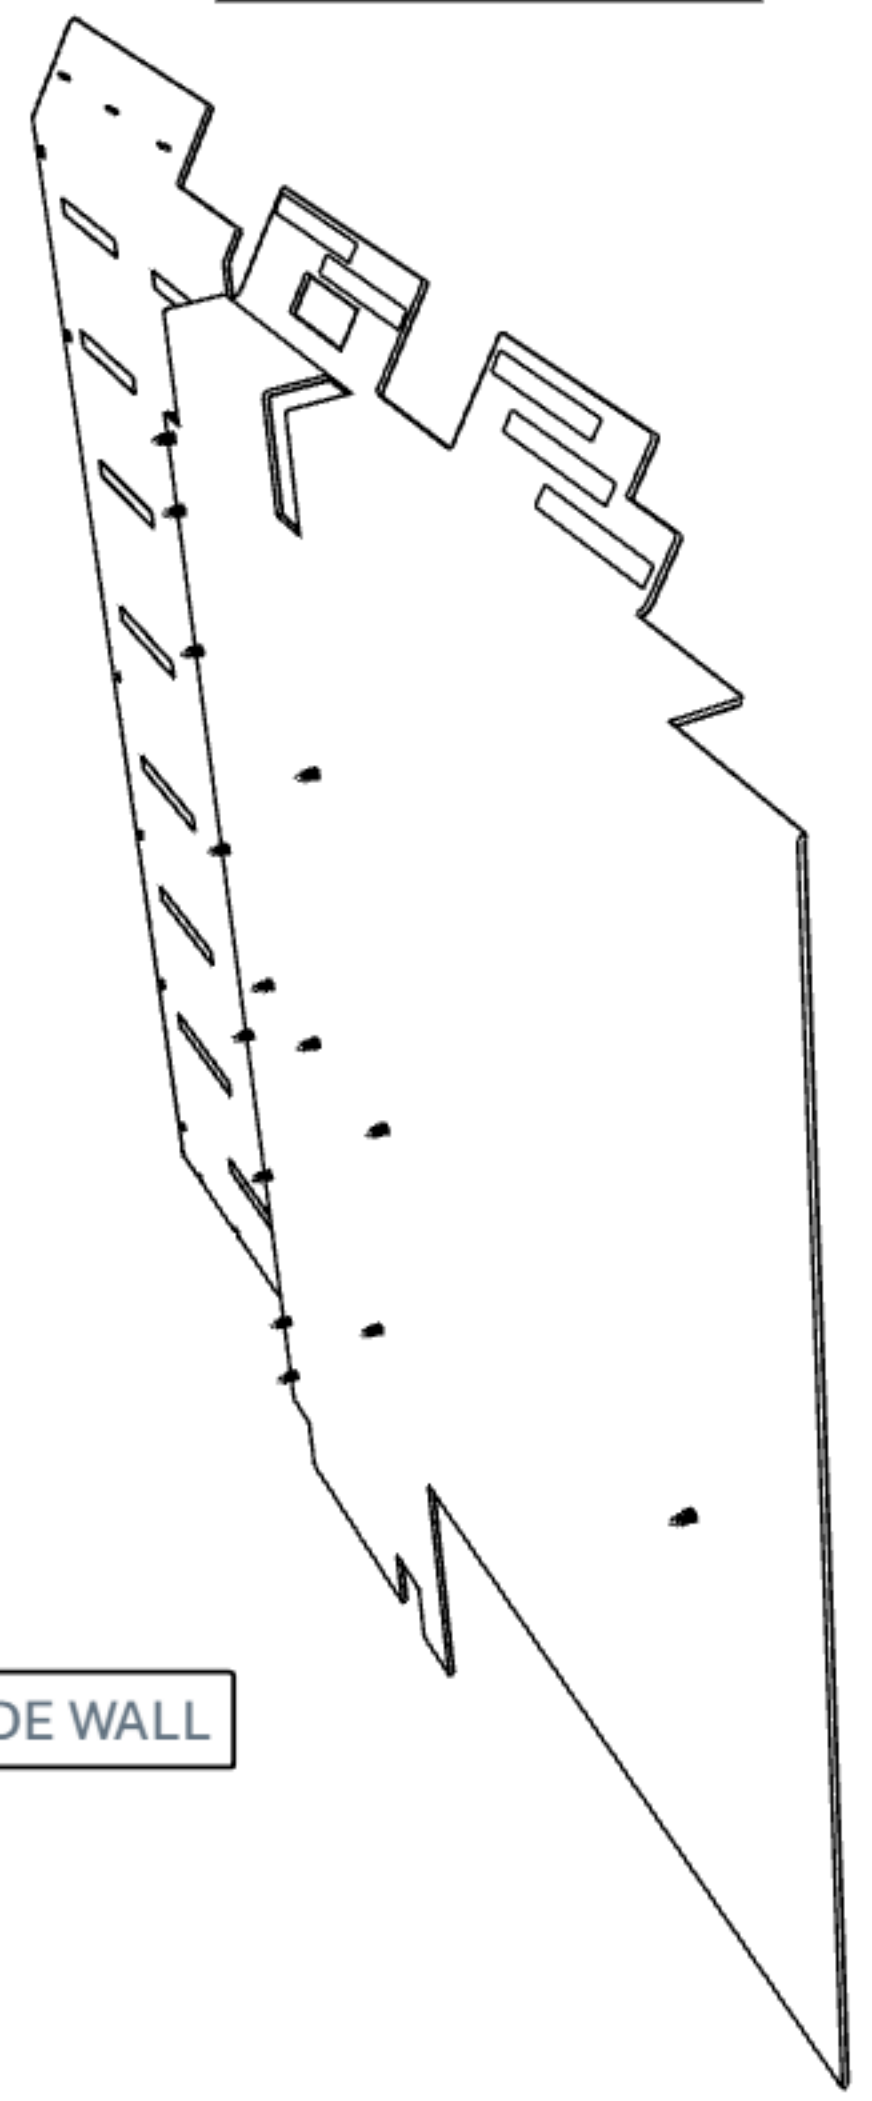

DRIVER SIDE WALL

PASSENGER SIDE WALL

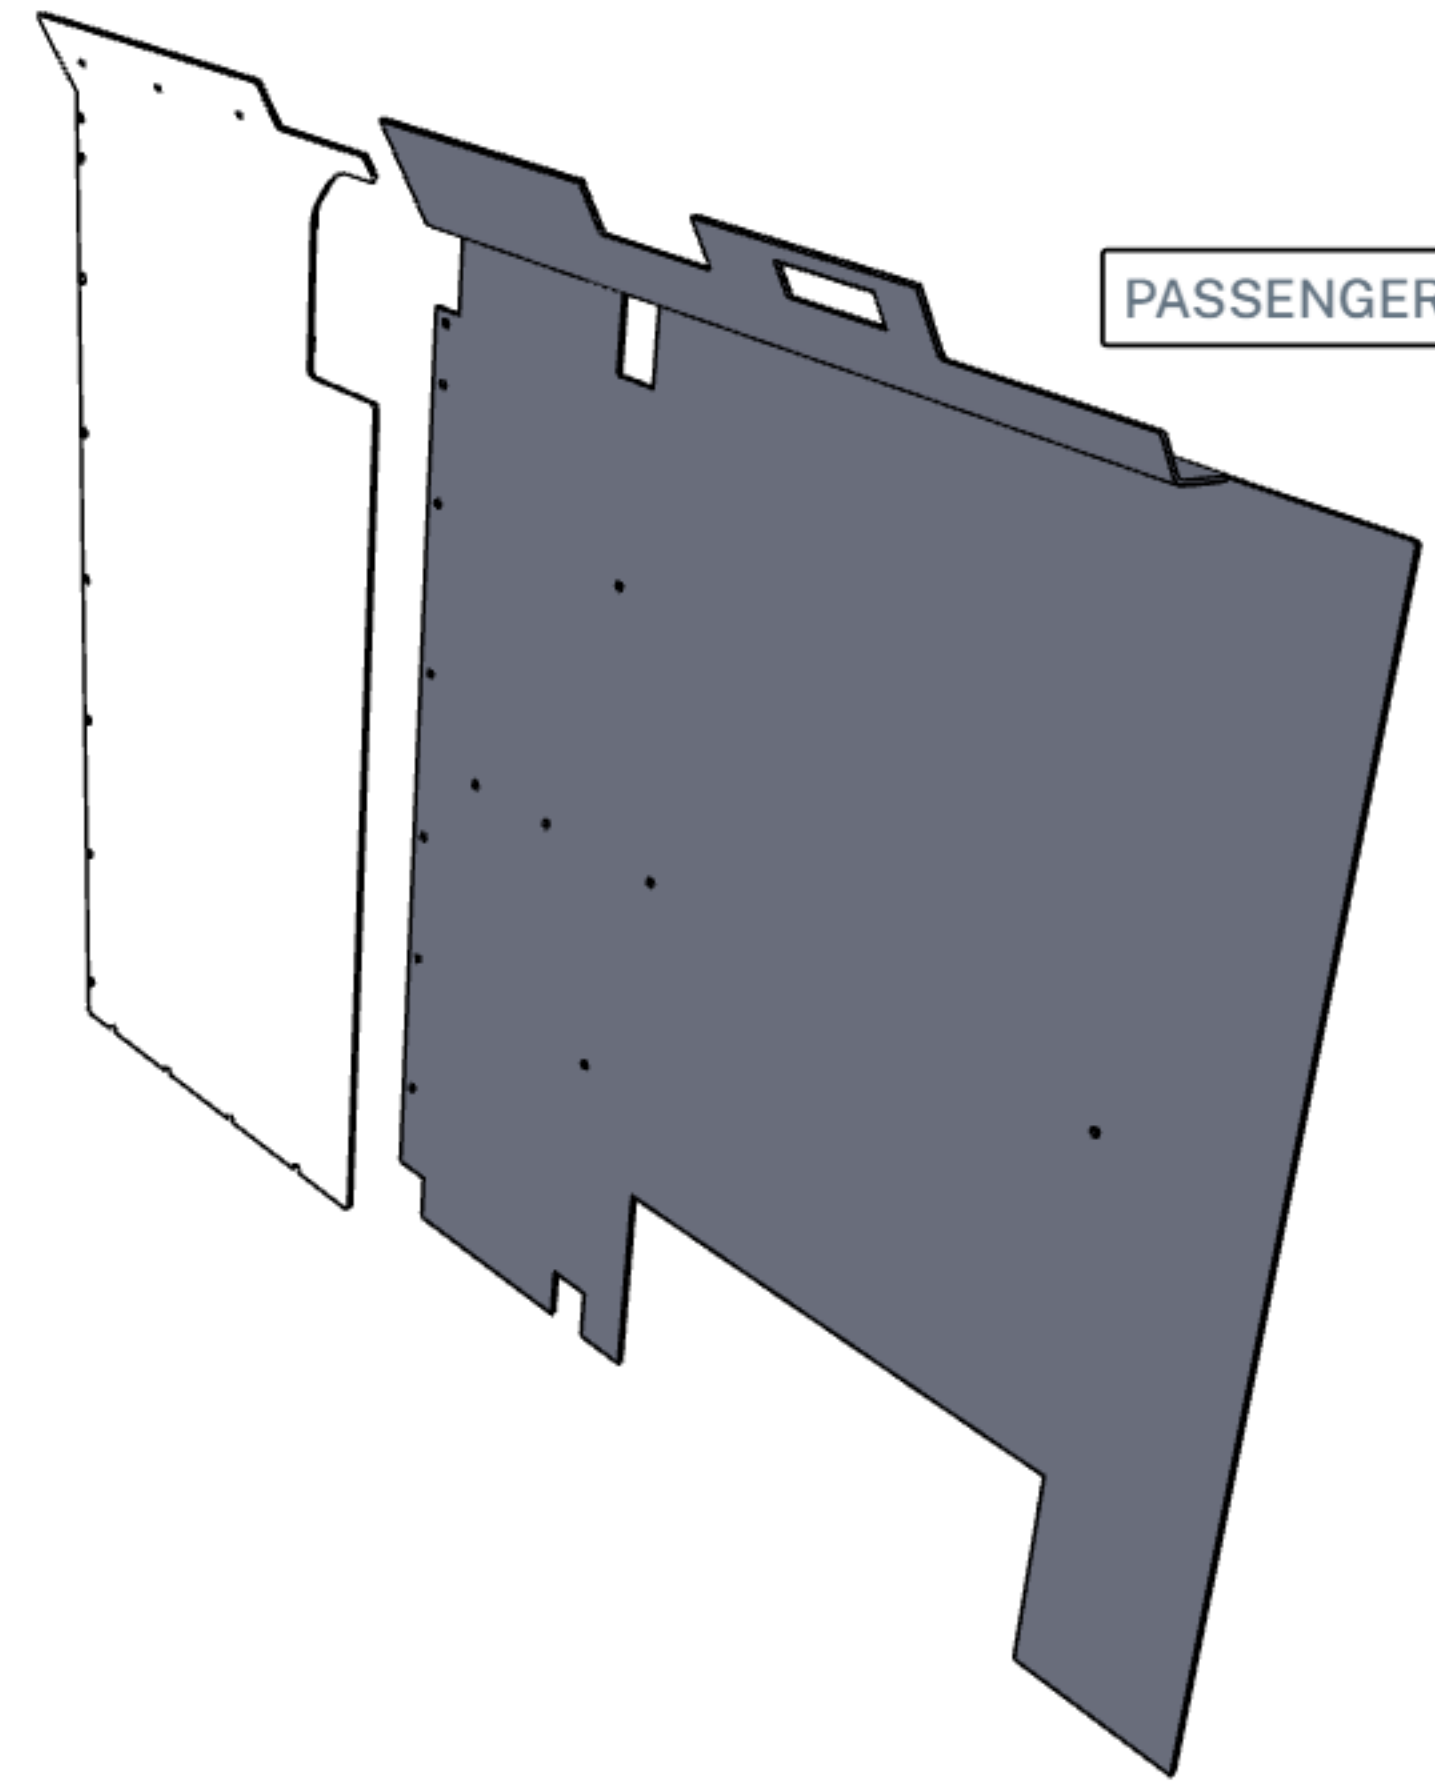


REAR OF VEHICLE

FRONT OF VEHICLE

PASSENGER SIDE WALL

Screw in Legend rivets.

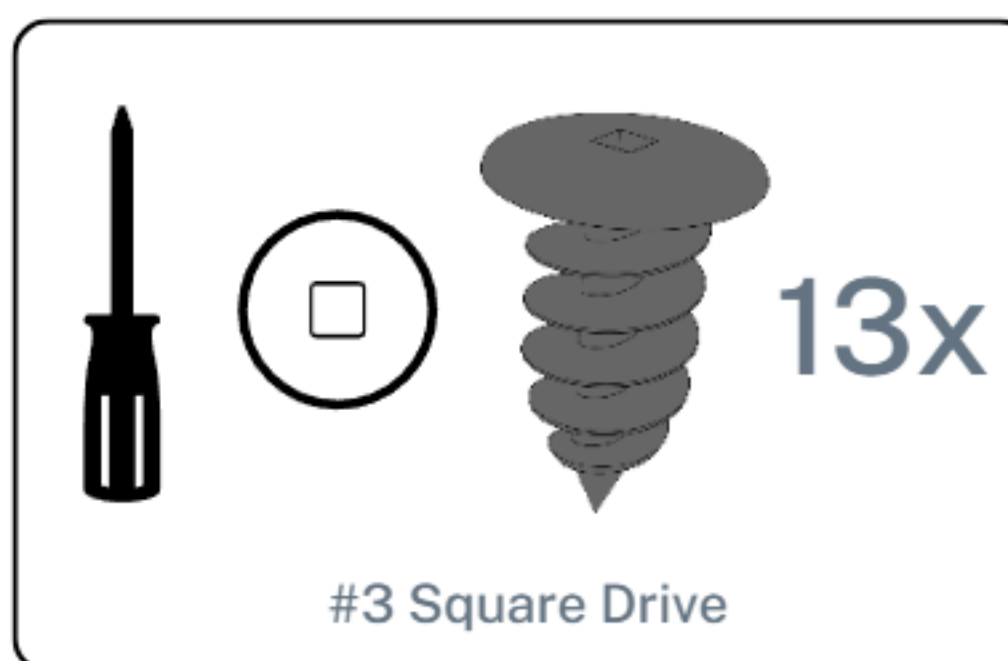


REAR OF VEHICLE

FRONT OF VEHICLE

PASSENGER SIDE WALL

REAR OF VEHICLE

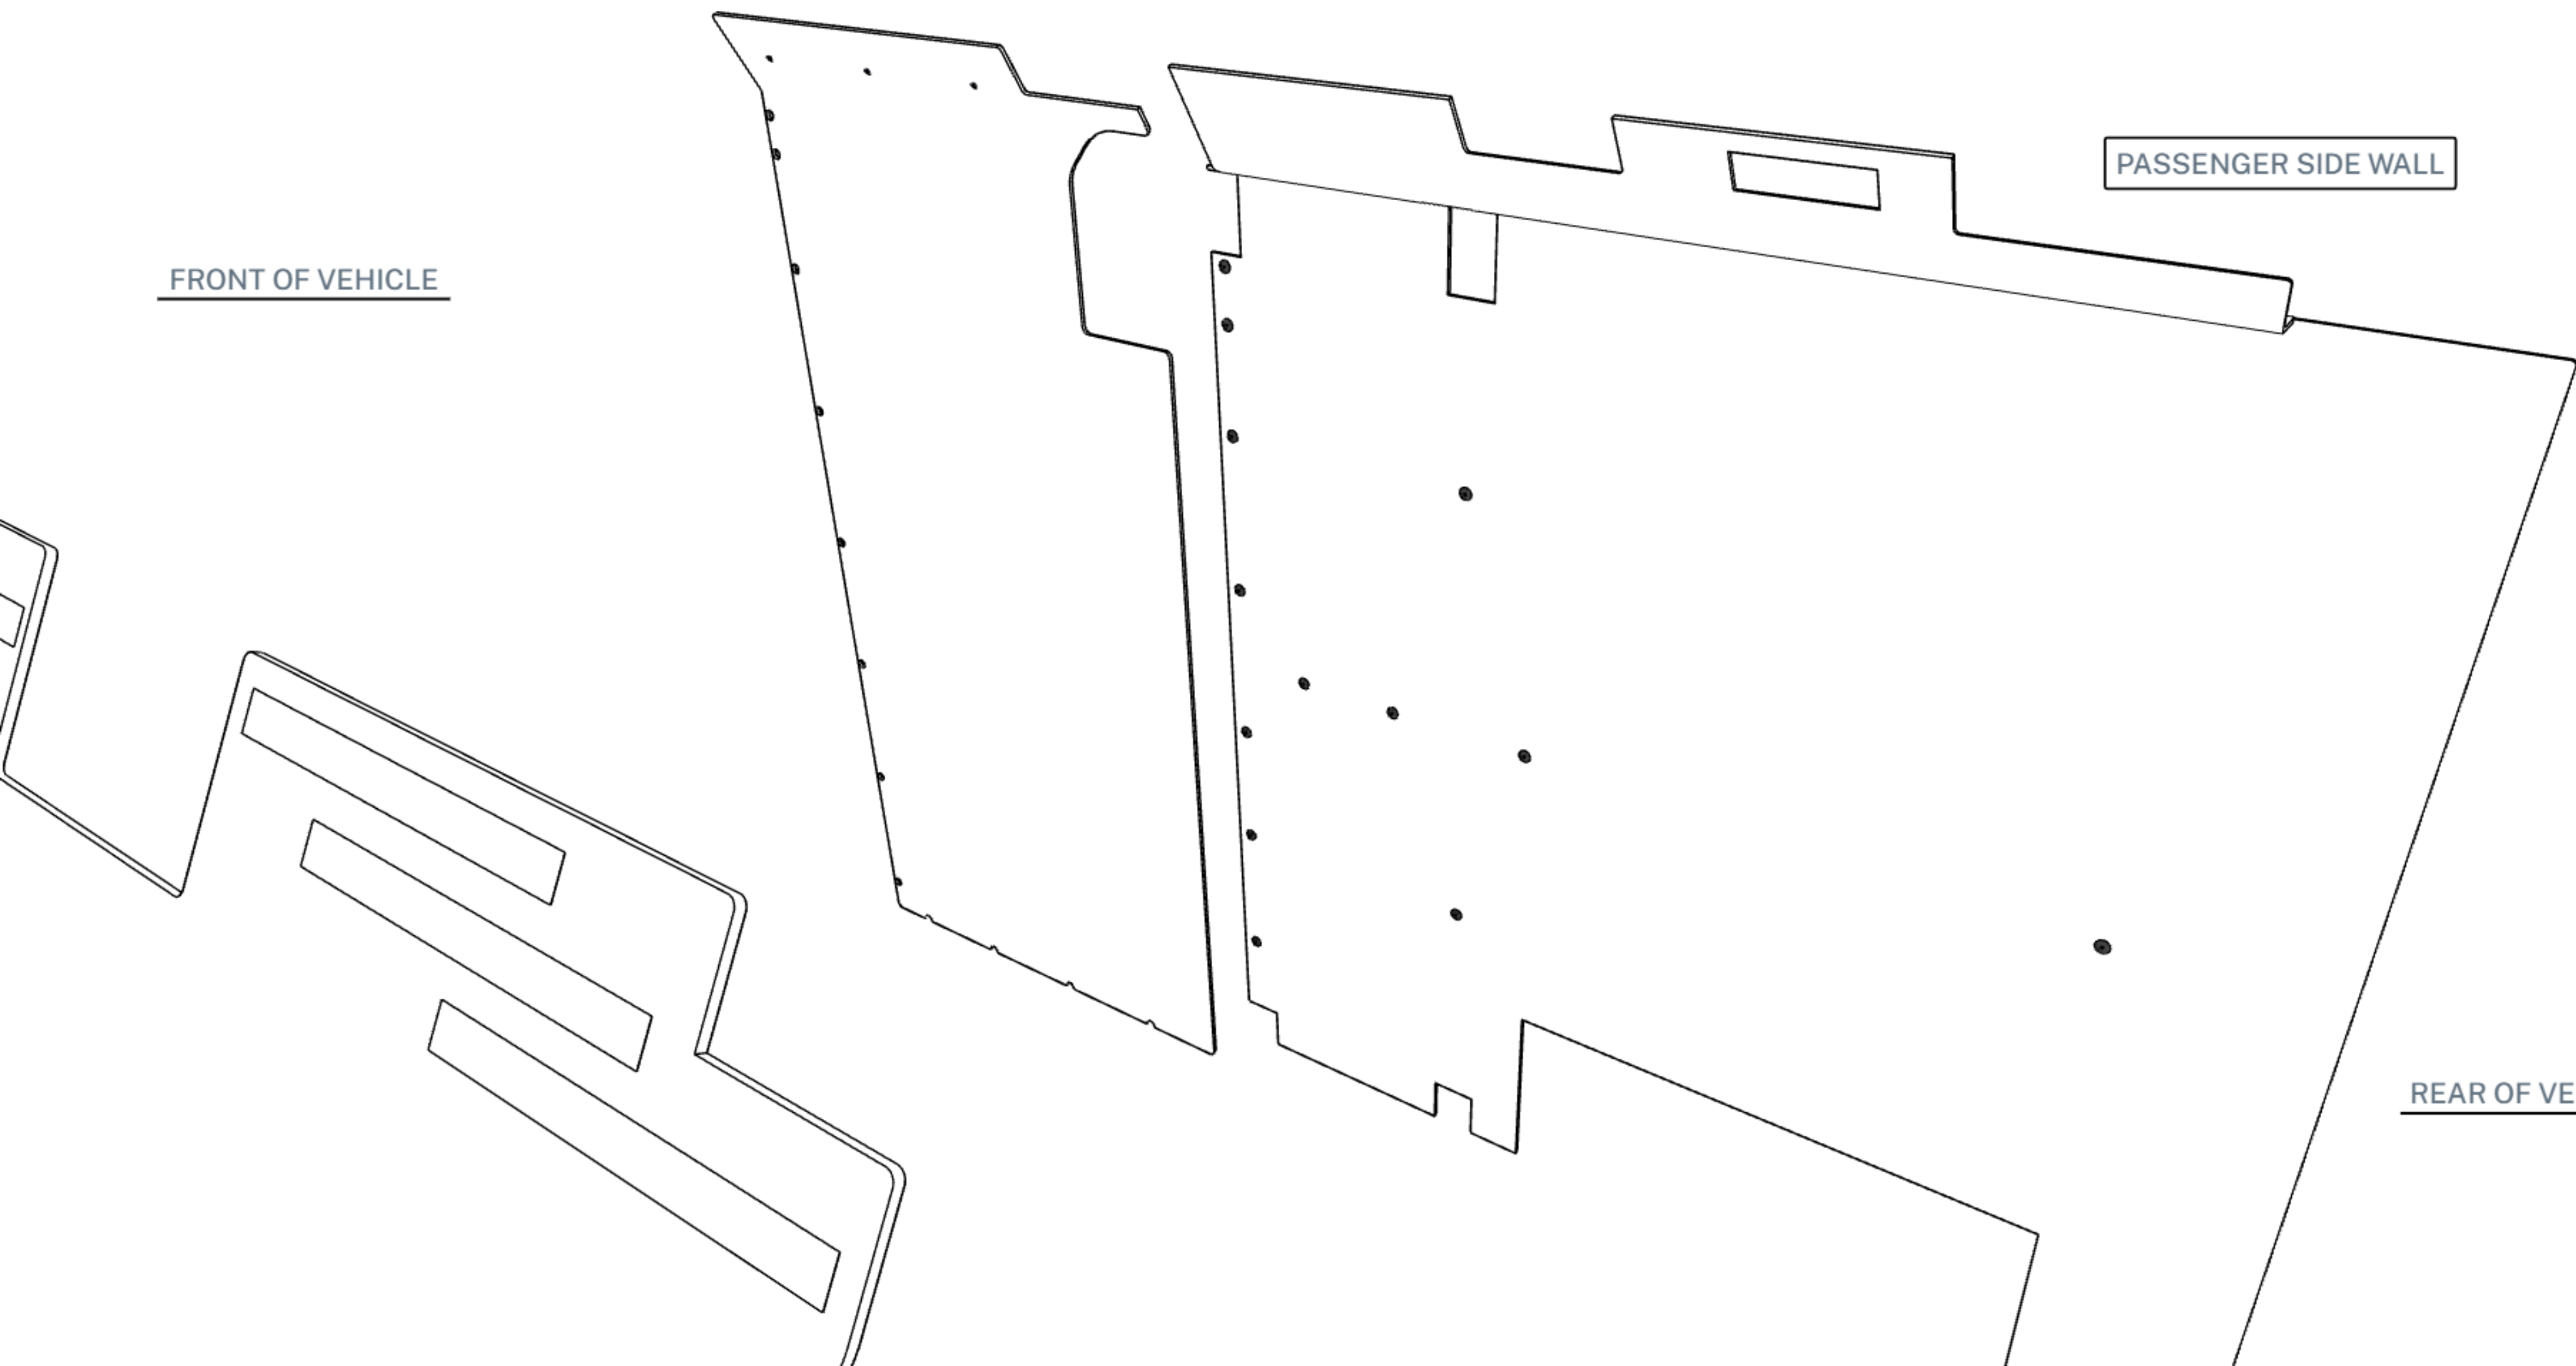





FRONT OF VEHICLE

REAR OF VEHICLE

**Brightdrop EV400  
Wall Liner KIT**

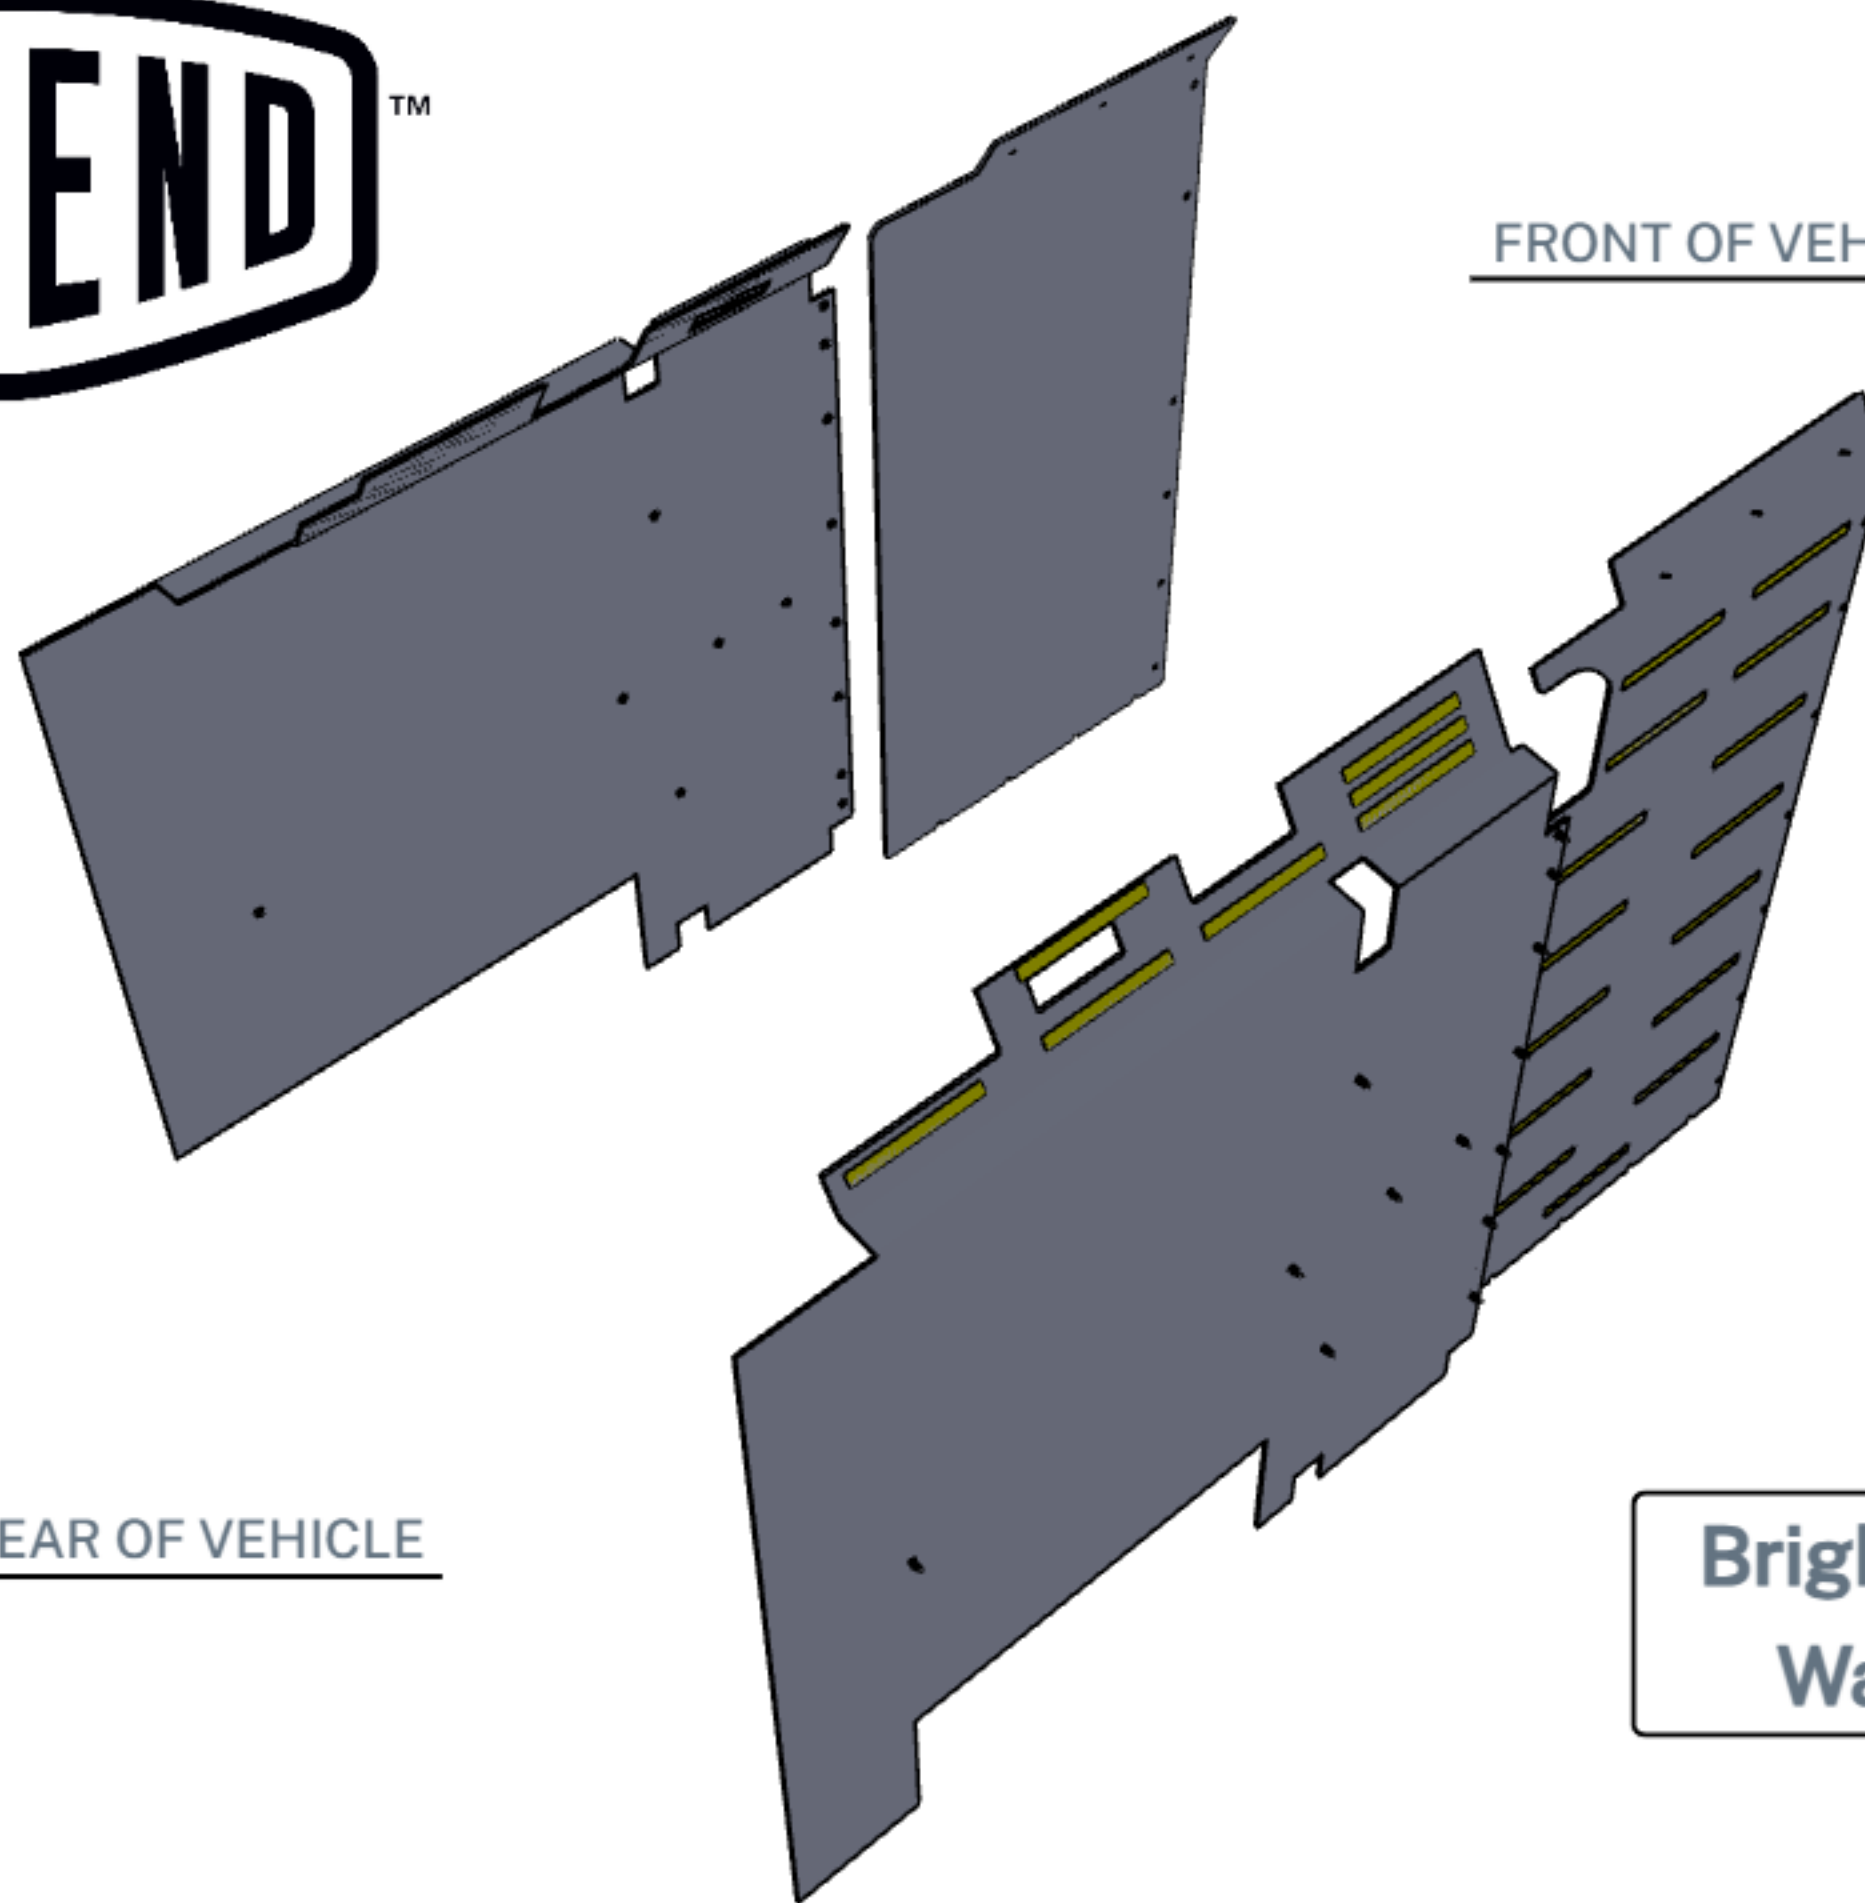

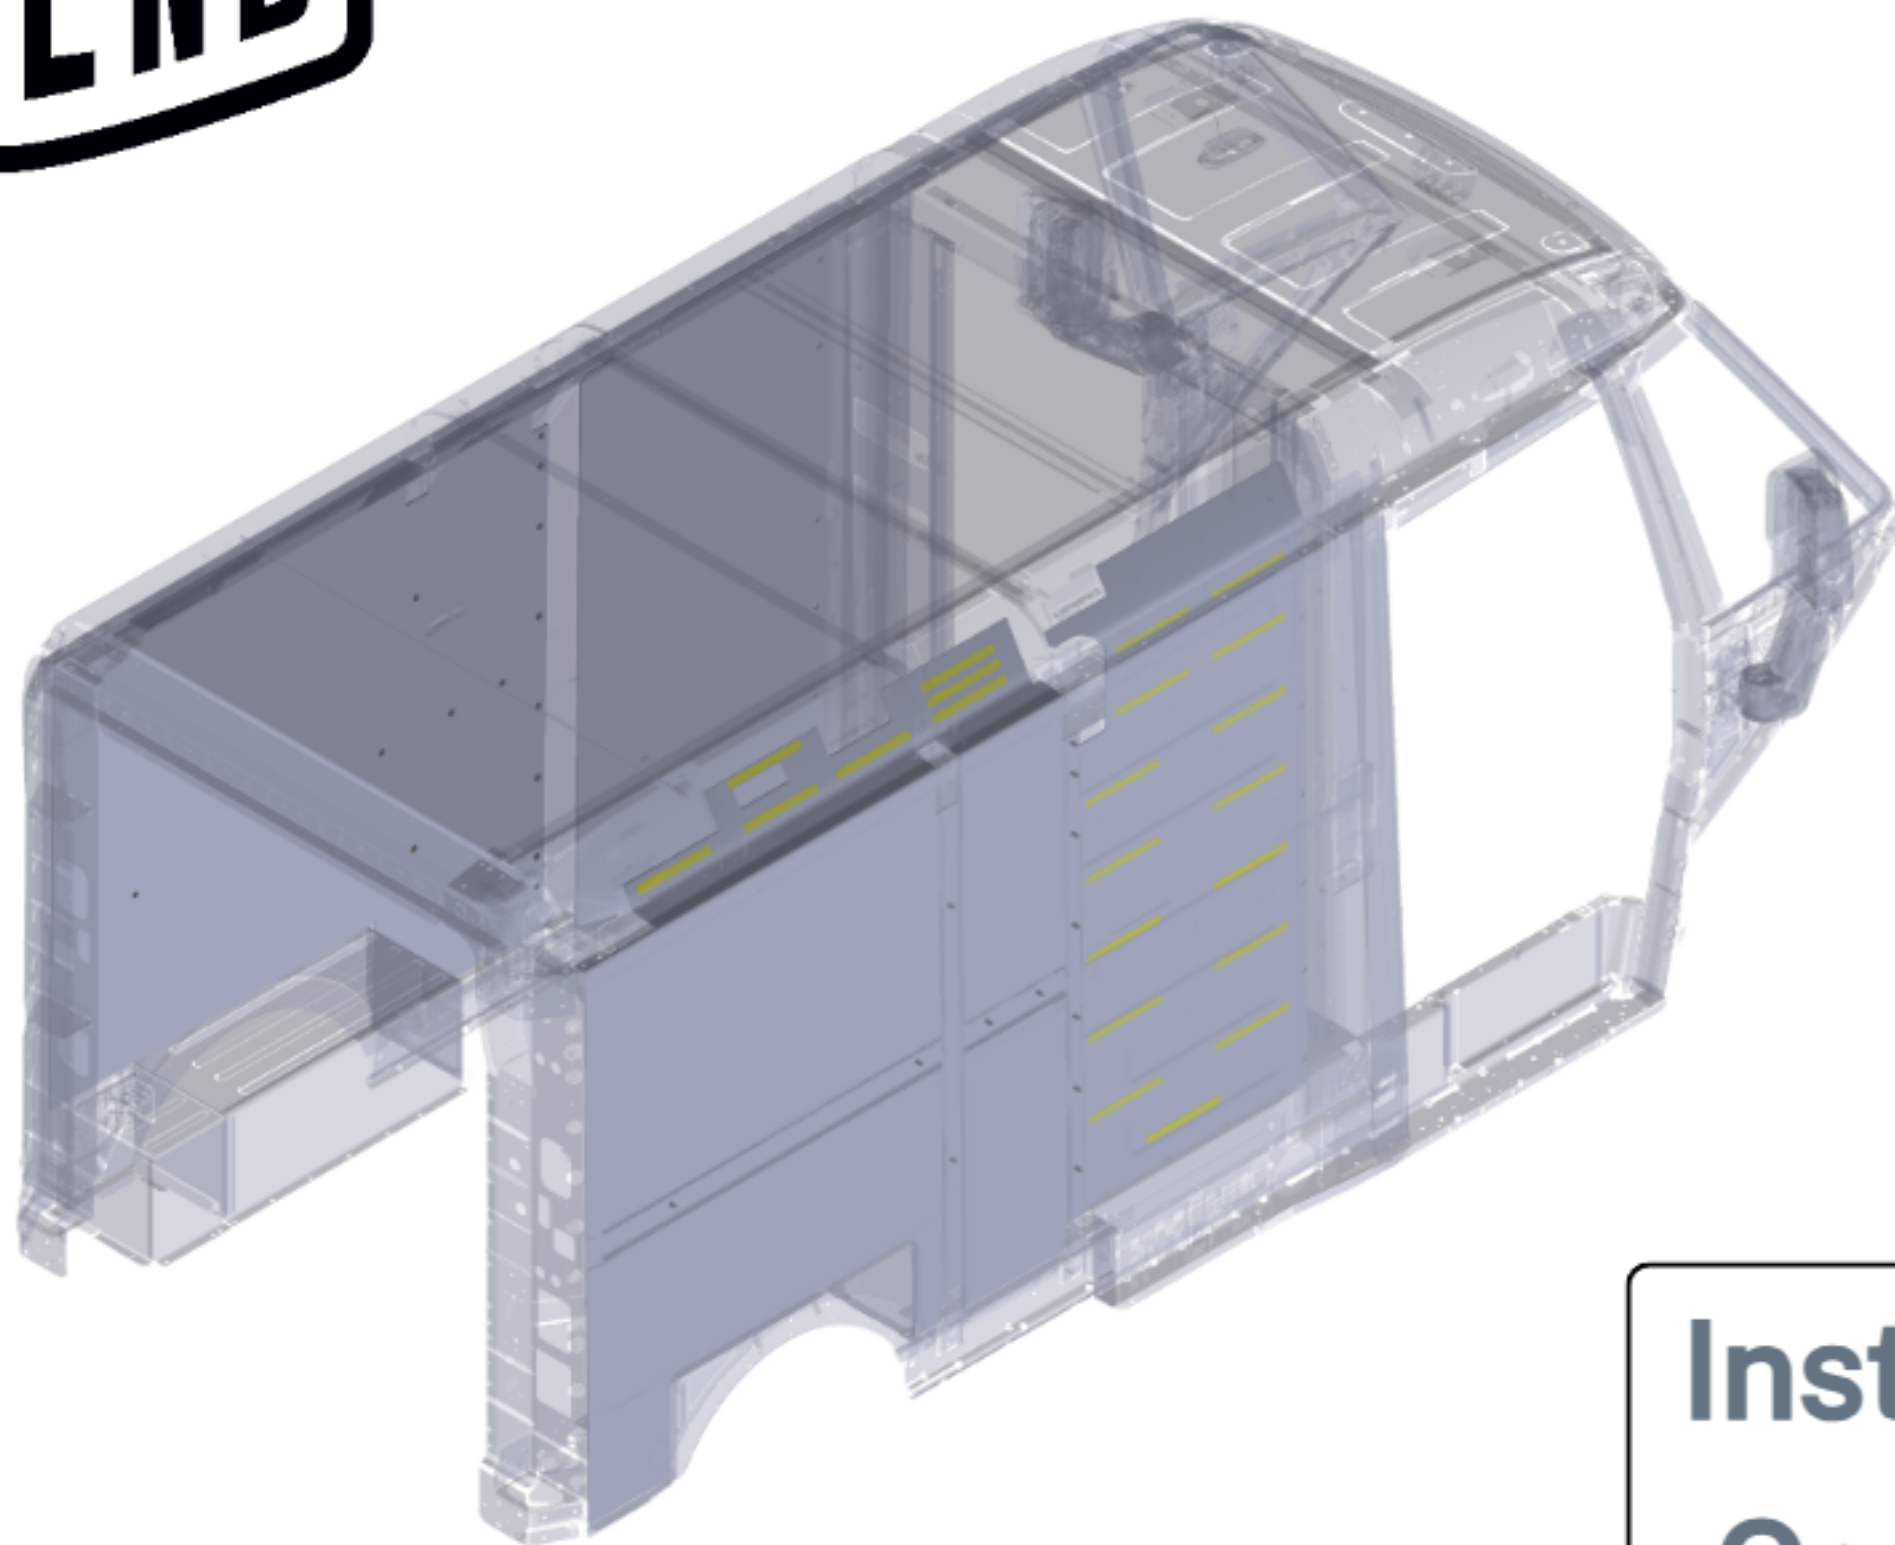

**Installation  
Complete!**