

# TEMPSHIELD ASSEMBLY INSTRUCTIONS

## FORD TRANSIT 148'' CARGO- MID ROOF

This document presents the detailed procedures for assembling Legend Fleet components and accessories.

Customers can make use these step-by-step procedures and easily assemble without major difficulty.



519 688 1043  
[customercare@legendfleet.com](mailto:customercare@legendfleet.com)

56957 HWY 3 WEST,  
TILLSONBURG,  
ON N4G 4G8.

# Table of Contents

Walls ..... 3

    Parts List – Driver Side Wall ..... 3

    Parts List – Passenger Side Wall ..... 3

    Assembly Instructions..... 4

Ceiling ..... 5

    Parts List – Ceiling..... 5

    Assembly Instructions..... 5

Doors ..... 6

    Parts List – Sliding Door ..... 6


    Parts List – Rear Door ..... 6

    Assembly Instructions..... 7


Sheet Layouts ..... 8

# Walls

## Parts List – Driver Side Wall

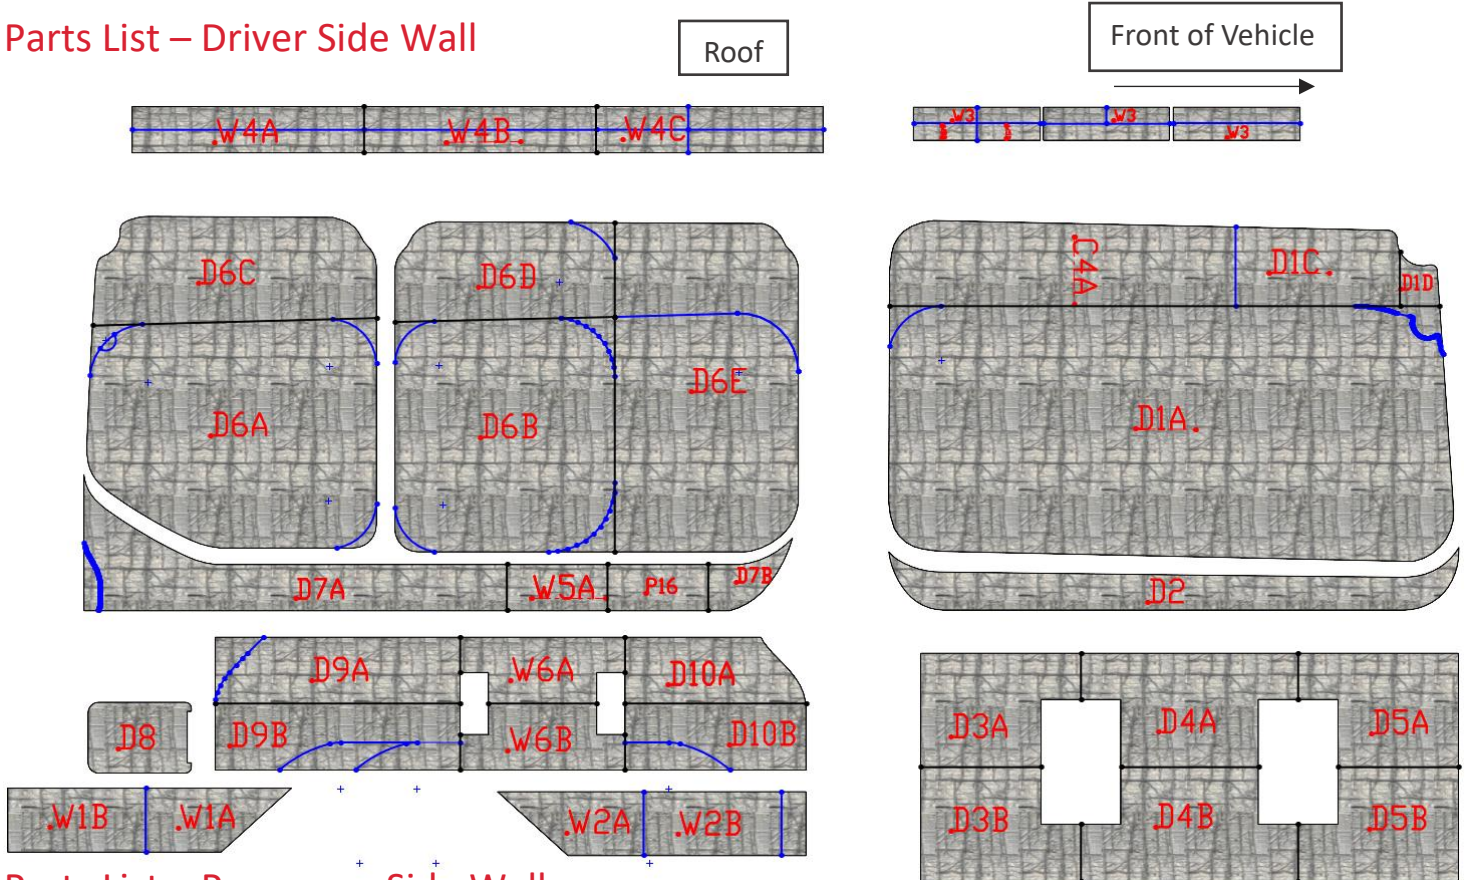

## Parts List – Passenger Side Wall

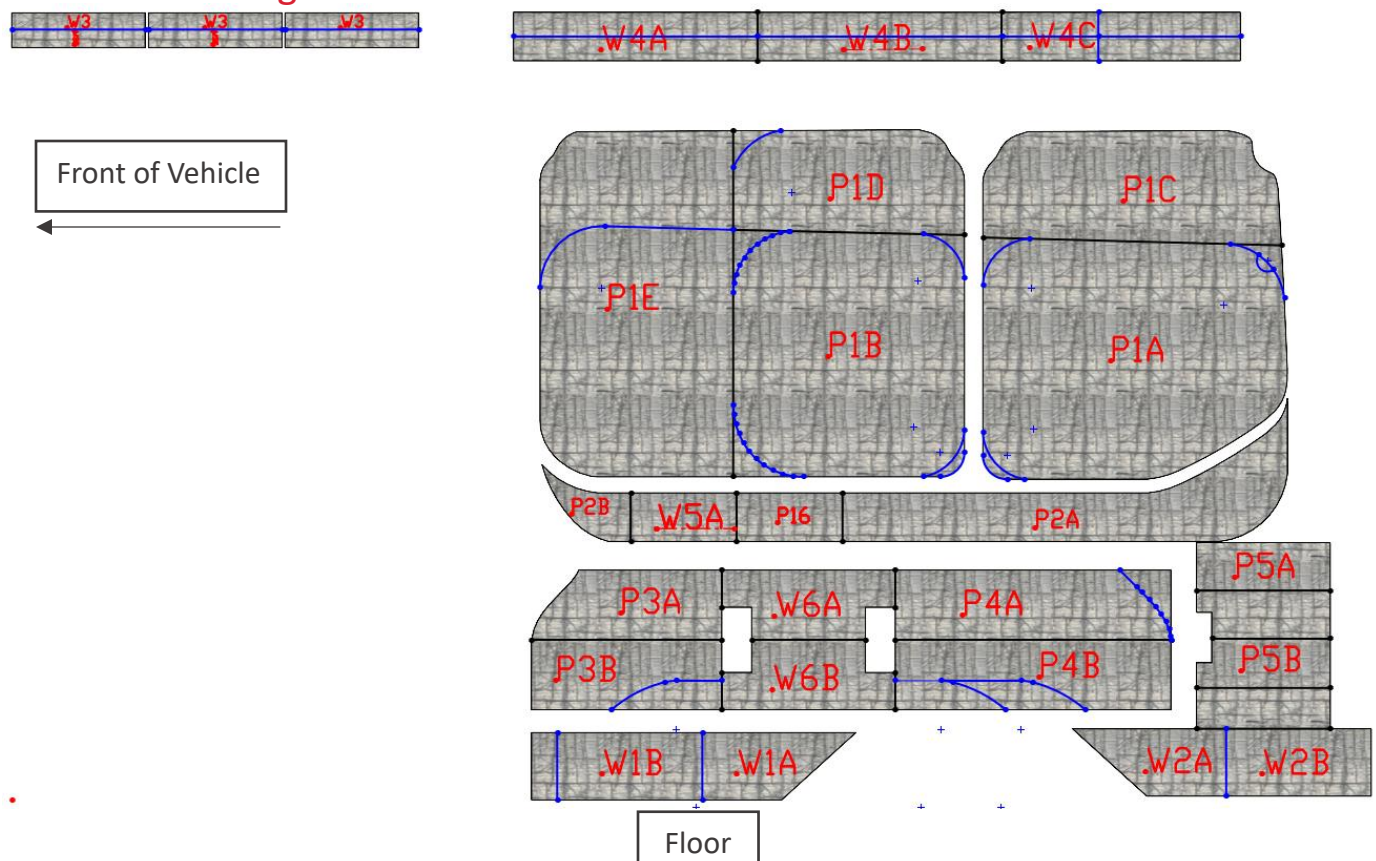



## Assembly Instructions

**Step 1:** Identify the TempShield Panels and their respective vehicle surfaces as shown below. For additional guidance, please refer to the sheet layouts found in the last page of this document.

**Step 2:** Wipe the identified surfaces of the vehicle clean, dry, free of dust, debris, or any foreign materials before adhering the TempShield panels.

**Step 3:** Peel off the protective layer of the TempShield and place its adhesive side to the Van body.

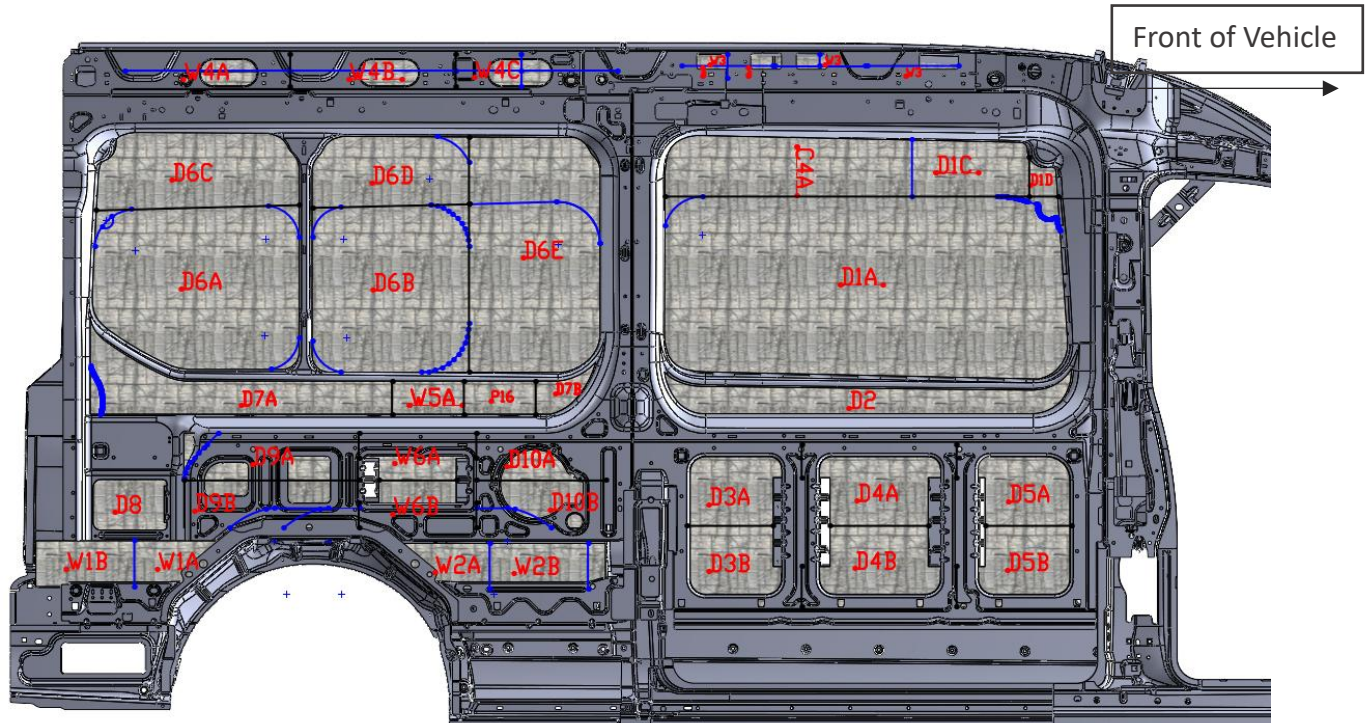


Figure 1: "Driver Side TempShield Installed" This view is from Inside of Van-Viewing from Passenger side

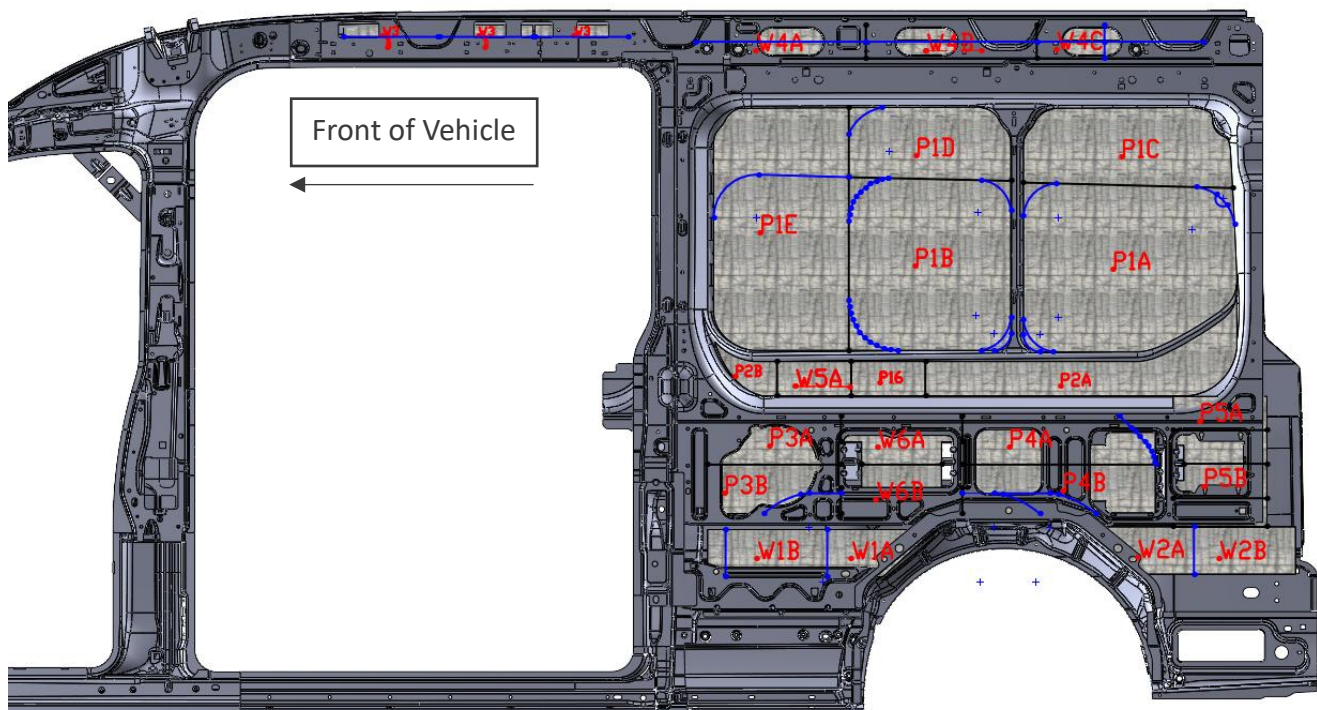


Figure 2: "Passenger Side TempShield Installed" This view is from Inside of Van-Viewing from Driver side



# Ceiling

## Parts List – Ceiling



## Assembly Instructions

**Step 1:** Identify the TempShield Panels and their respective vehicle surfaces as shown below. For additional guidance, please refer to the sheet layouts found in the last page of this document.

**Step 2:** Wipe the identified surfaces of the vehicle clean, dry, free of dust, debris, or any foreign materials before adhering the TempShield panels.

**Step 3:** Peel off the protective layer of the TempShield and place its adhesive side to the Van body.


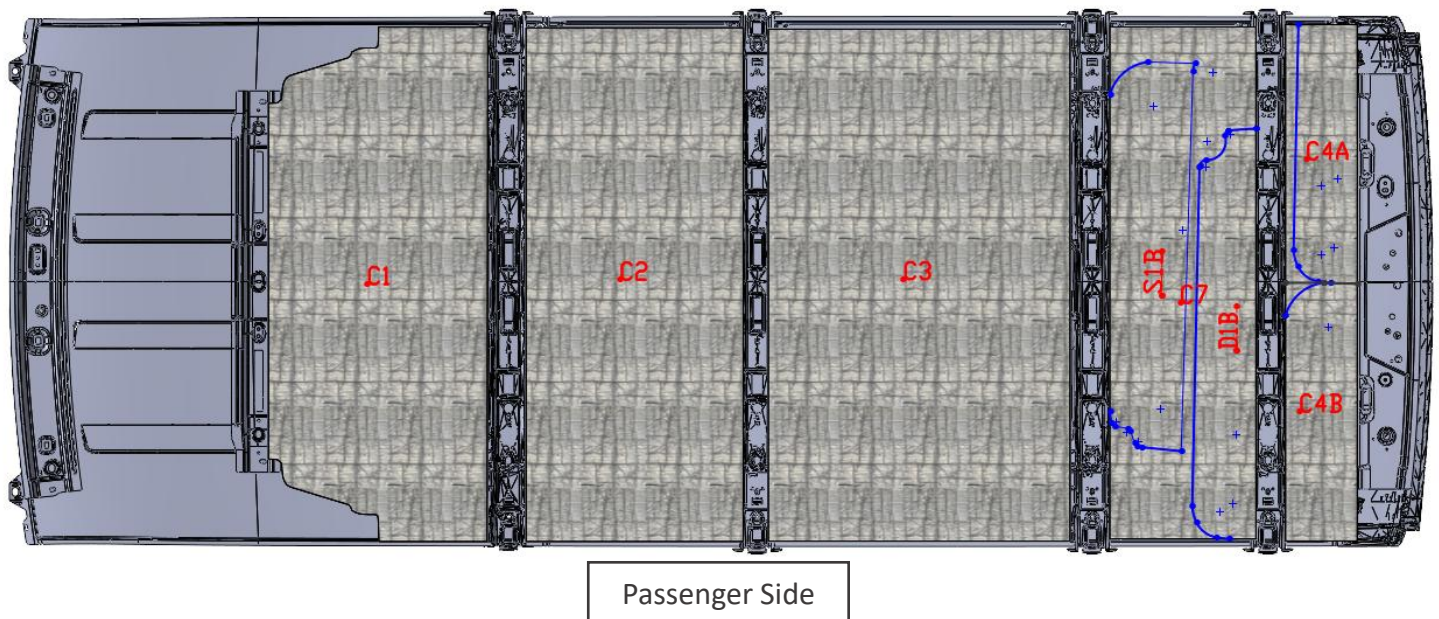



Figure 3: "Ceiling TempShield Installed" This view is from Inside of Van

# Doors

## Parts List – Sliding Door

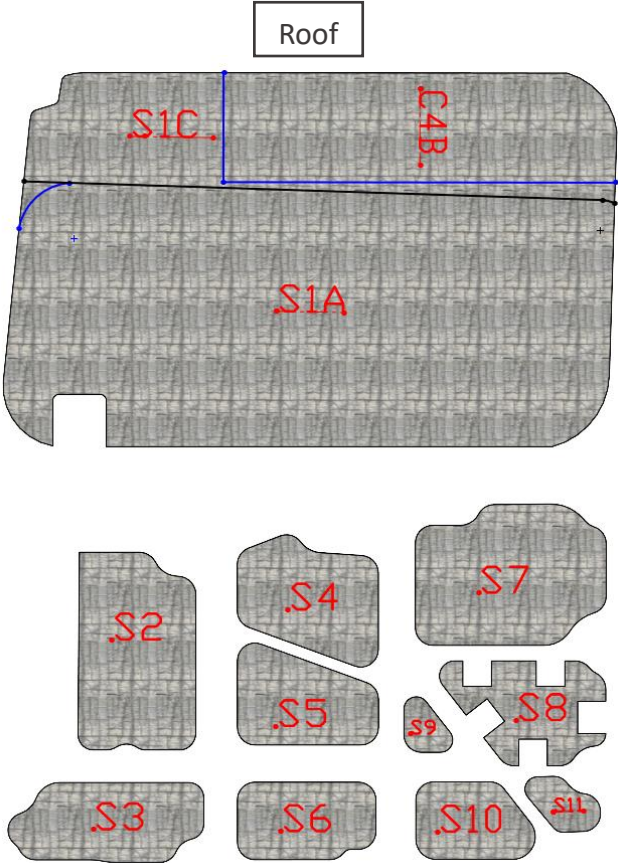

## Parts List – Rear Door

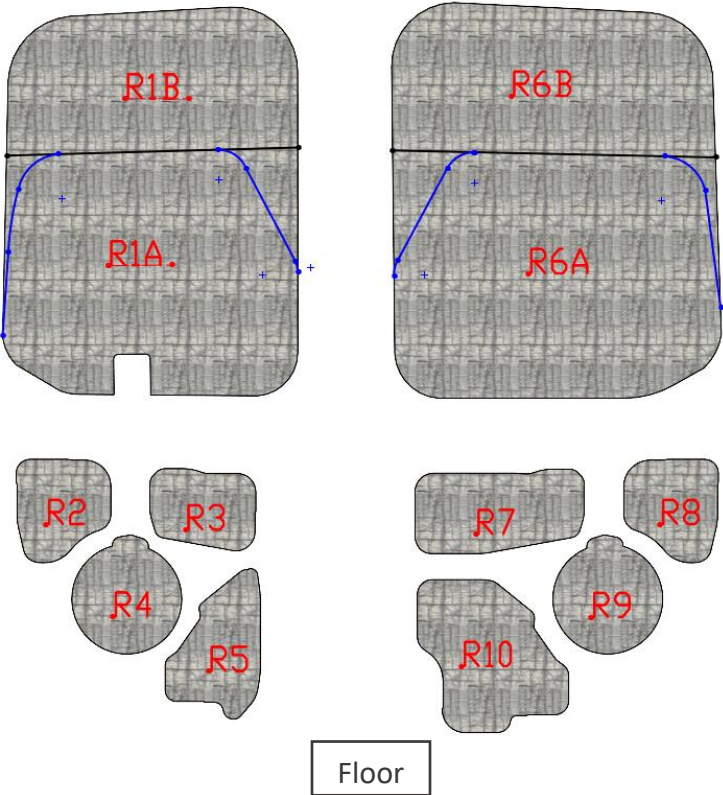




## Assembly Instructions


**Step 1:** Identify the TempShield Panels and their respective vehicle surfaces as shown below. For additional guidance, please refer to the sheet layouts found in the last page of this document.

**Step 2:** Wipe the identified surfaces of the vehicle clean, dry, free of dust, debris, or any foreign materials before adhering the TempShield panels.

**Step 3:** Peel off the protective layer of the TempShield and place its adhesive side to the Van body.

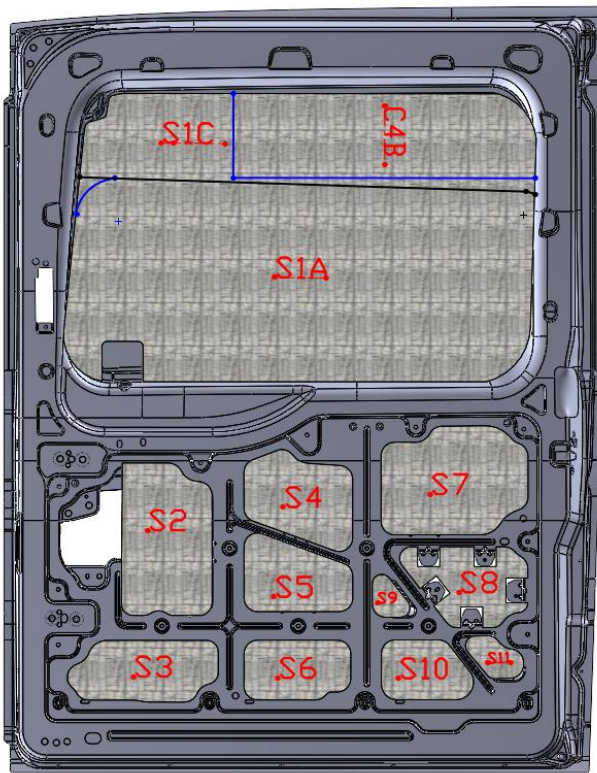

Passenger Side Sliding Door TempShield

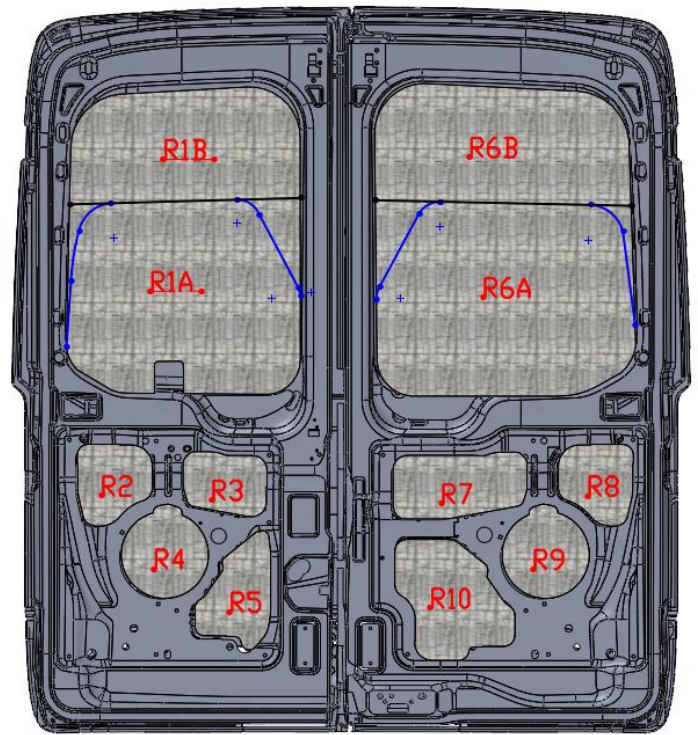

Rear Door TempShield

# Sheet Layouts

Sections highlighted in red are not required.

