

## ASSEMBLY INSTRUCTIONS

# FORD TRANSIT 148'' EXTENDED CARGO- HIGH ROOF

This document presents the detailed procedures for assembling Legend Fleet components and accessories.

Customers can make use these step-by-step procedures and easily assemble without major difficulty.



**519 688 1043**  
[customercare@legendfleet.com](mailto:customercare@legendfleet.com)


56957 HWY 3 WEST,  
TILLSONBURG,  
ON N4G 4G8.

# Table of Contents


- Walls ..... 3
  - Parts List – Driver Side Wall ..... 3
  - Parts List – Passenger Side Wall ..... 3
  - Assembly Instructions..... 4
- Ceiling ..... 5
  - Parts List – Ceiling..... 5
  - Assembly Instructions..... 5
- Doors ..... 6
  - Parts List – Sliding Door ..... 6
  - Parts List – Rear Door ..... 6
  - Assembly Instructions..... 7
- Sheet Layouts ..... 8

## Walls

## Parts List – Driver Side Wall

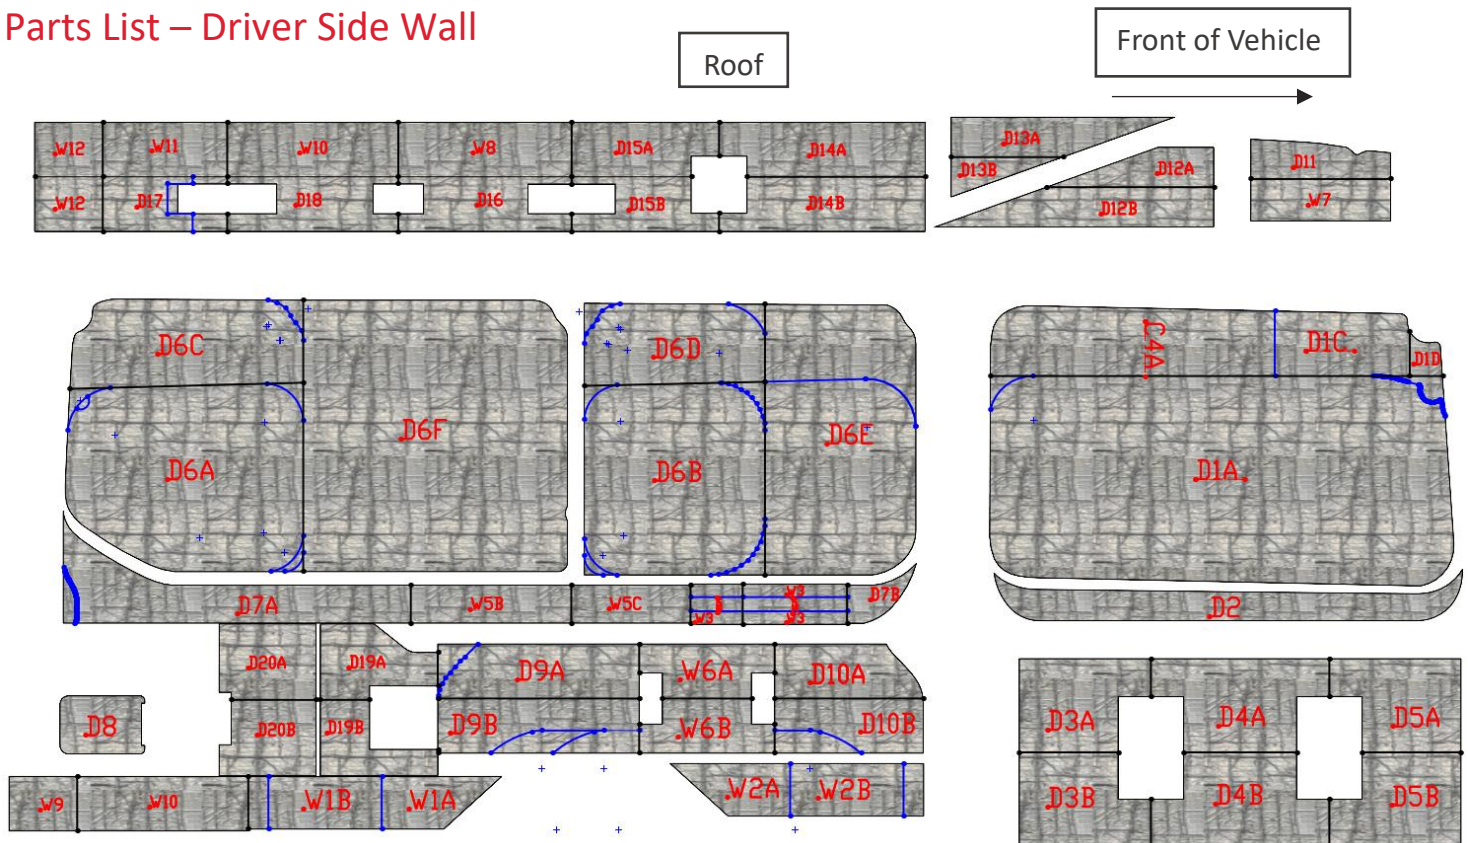

## Parts List – Passenger Side Wall

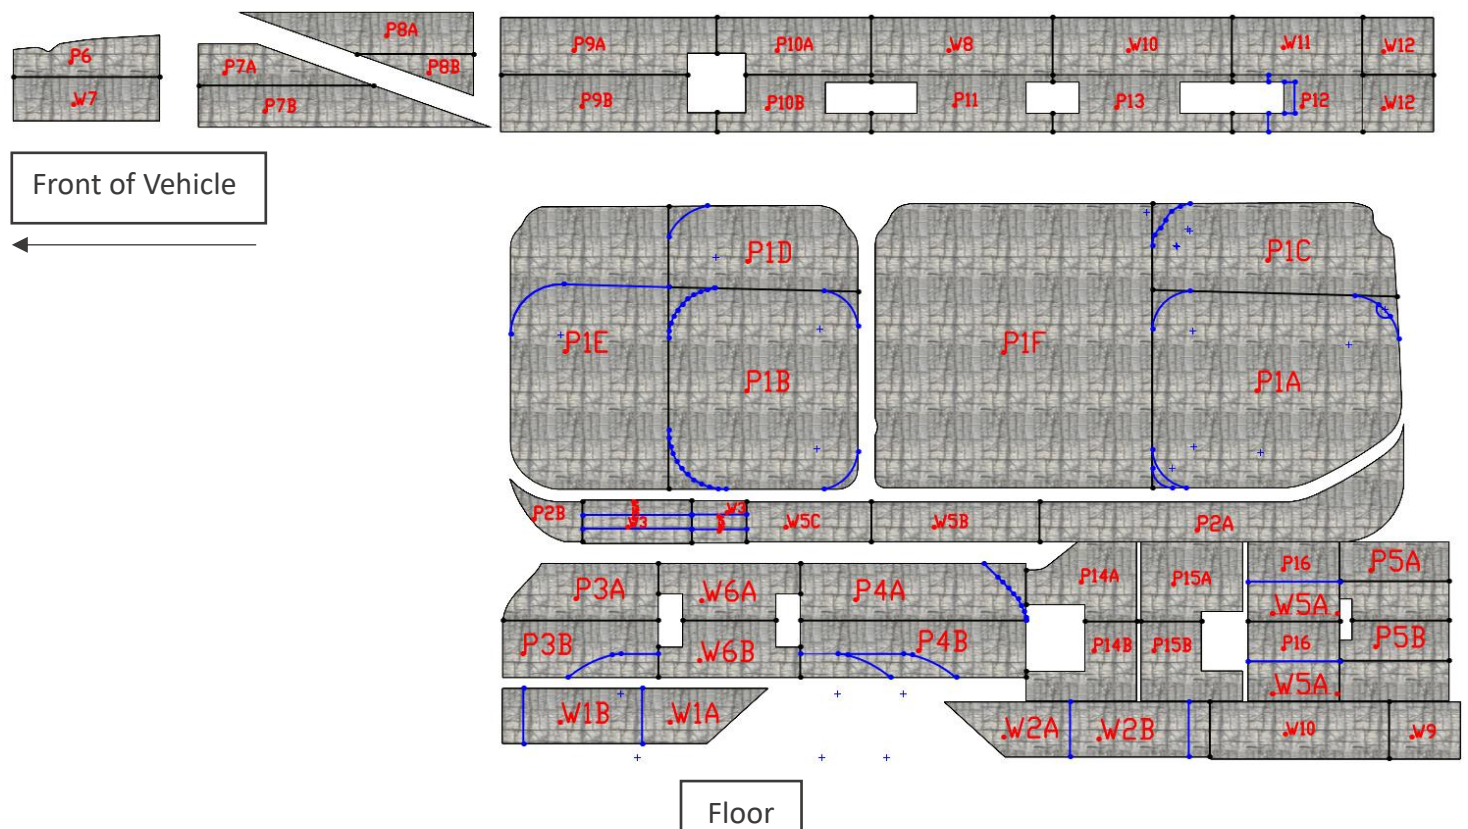








# Ceiling

## Parts List – Ceiling

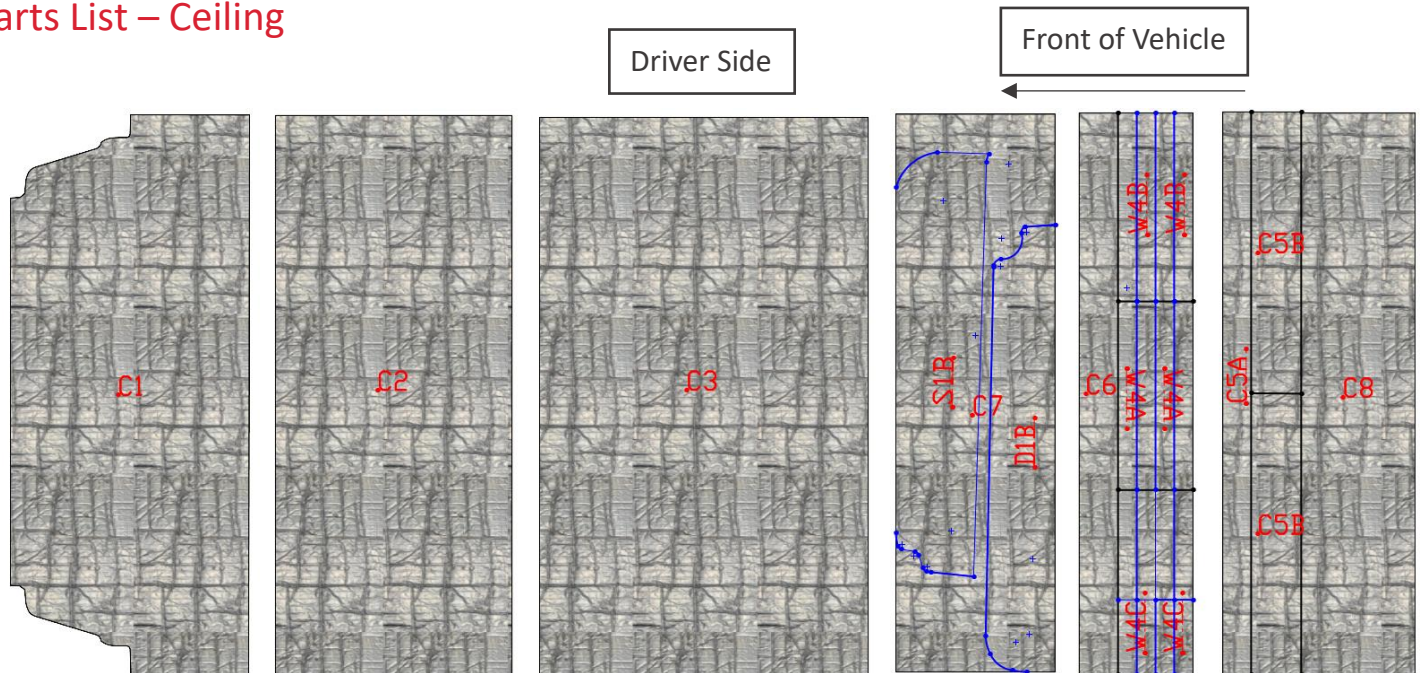

## Assembly Instructions

**Step 1:** Identify the TempShield Panels and their respective vehicle surfaces as shown below. For additional guidance, please refer to the sheet layouts found in the last page of this document.

**Step 2:** Wipe the identified surfaces of the vehicle clean, dry, free of dust, debris, or any foreign materials before adhering the TempShield panels.

**Step 3:** Peel off the protective layer of the TempShield and place its adhesive side to the Van body.


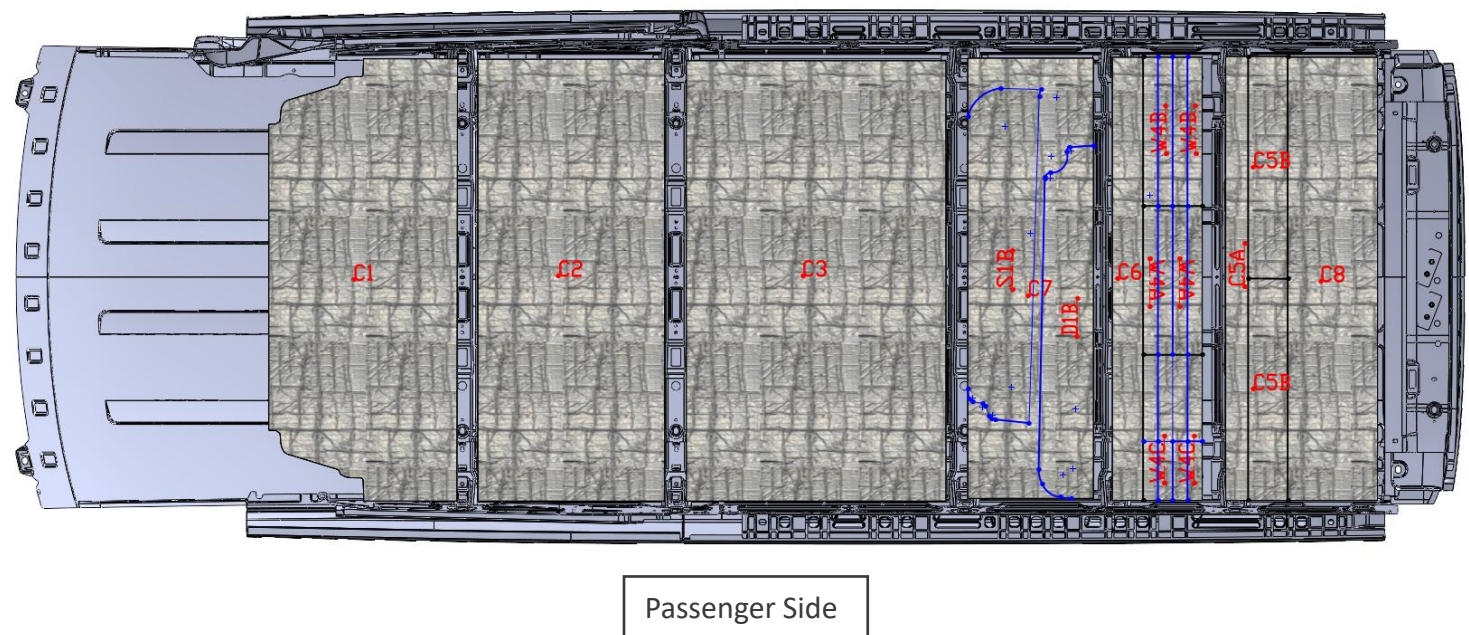


Figure 3: "Ceiling TempShield Installed" This view is from Inside of Van


# Doors

## Parts List – Sliding Door

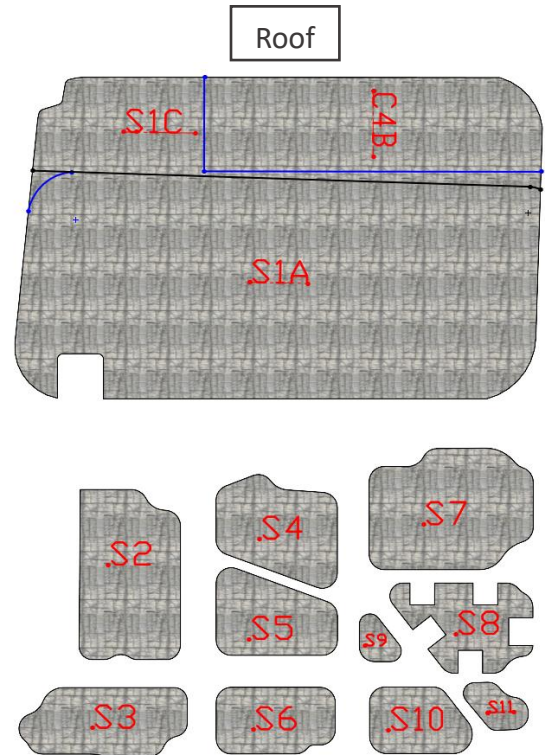

## Parts List – Rear Door

**Panels R13 and R14 are not required when installing Legend Door Liners.**

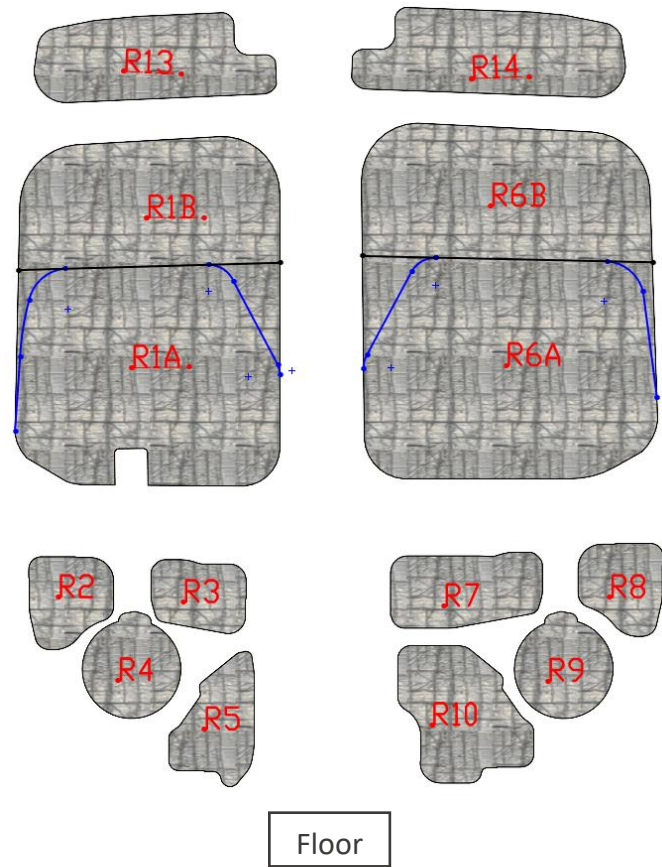




## Assembly Instructions


**Step 1:** Identify the TempShield Panels and their respective vehicle surfaces as shown below. For additional guidance, please refer to the sheet layouts found in the last page of this document.

**Step 2:** Wipe the identified surfaces of the vehicle clean, dry, free of dust, debris, or any foreign materials before adhering the TempShield panels.

**Step 3:** Peel off the protective layer of the TempShield and place its adhesive side to the Van body.

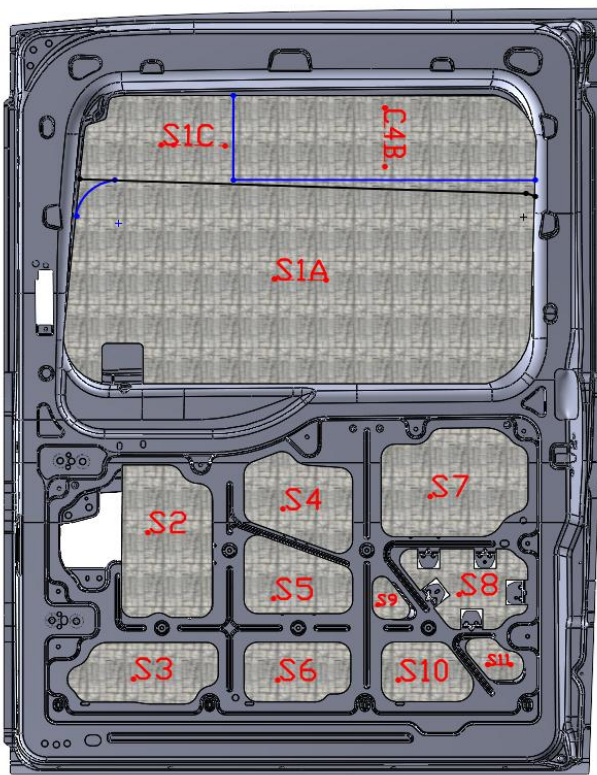

Passenger Side Sliding Door TempShield

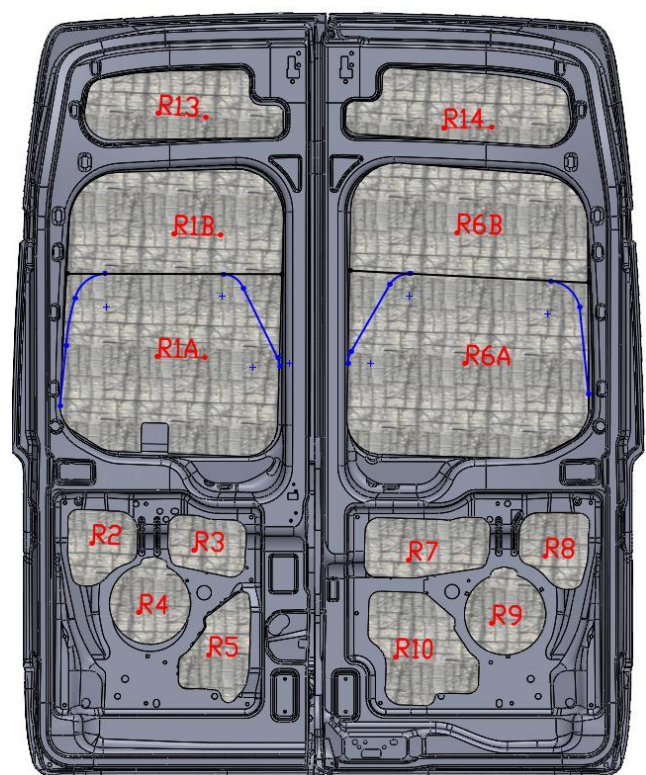

Rear Door TempShield

