

No Drill Ford Transit Hardware Kit – Installation Guide




Materials Needed:

- Legend Flooring
- Legend Floor Bracket Hardware Kit:
 - o 6x D-Ring Floor Brackets
 - o 32x M6 Threaded Inserts
 - o 32x M6 Bolts
 - o 32x M6 Washers
 - o 6x M10 Bolts
- Electric Drill
- 23/64" Drill bit
- 6mm Allen Key
- 10mm Hex driver bit
- Driver bit to fit OEM Bolt


IMPORTANT: If installing shelving, follow steps 3 and 4 in this guide, and use the extra hardware included in the hardware kit.

Step 1: Remove OEM D-Ring and Bolt. Save the bolt for Step 5.

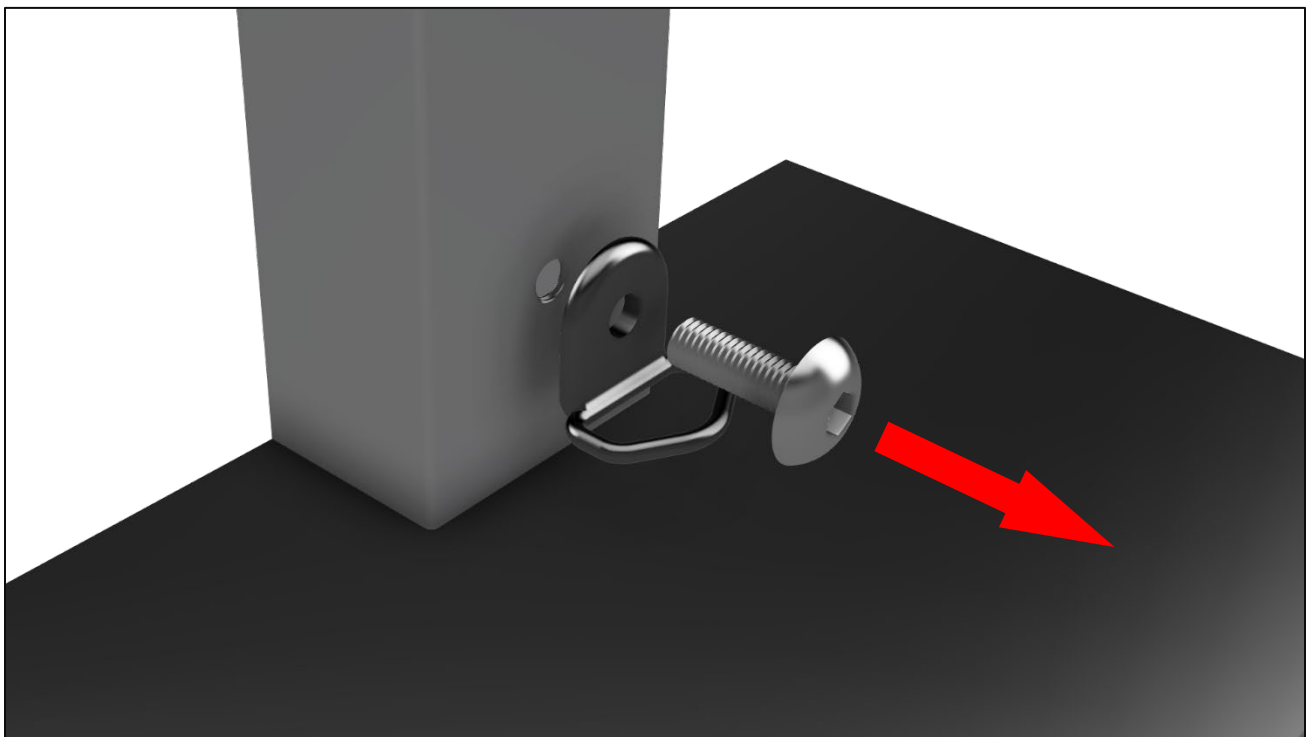




Step 2: Dry fit the flooring and bracket and mark the locations of the bolt holes.

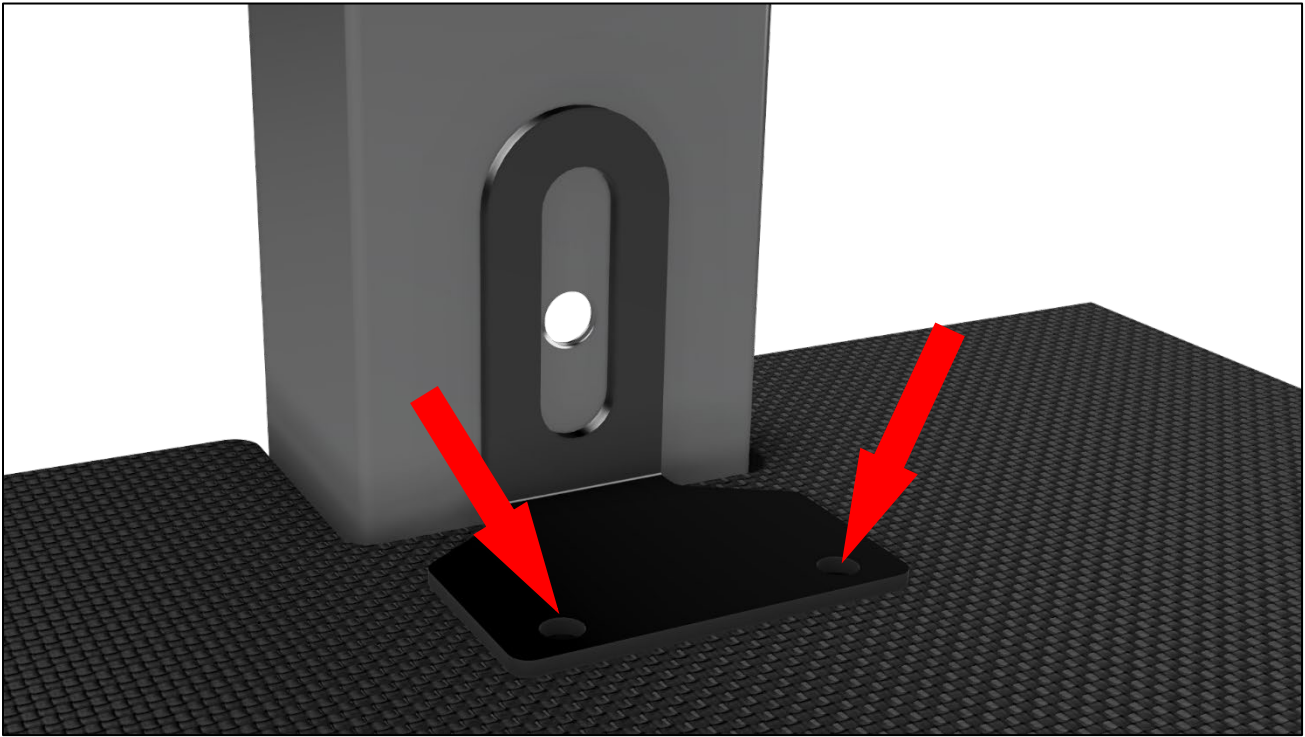


Step 3: Drill two $\frac{23}{64}$ " holes through the flooring, using the markings from step 2, and screw the provided M6 threaded inserts into the top side of the flooring, using the 6mm Allen key.

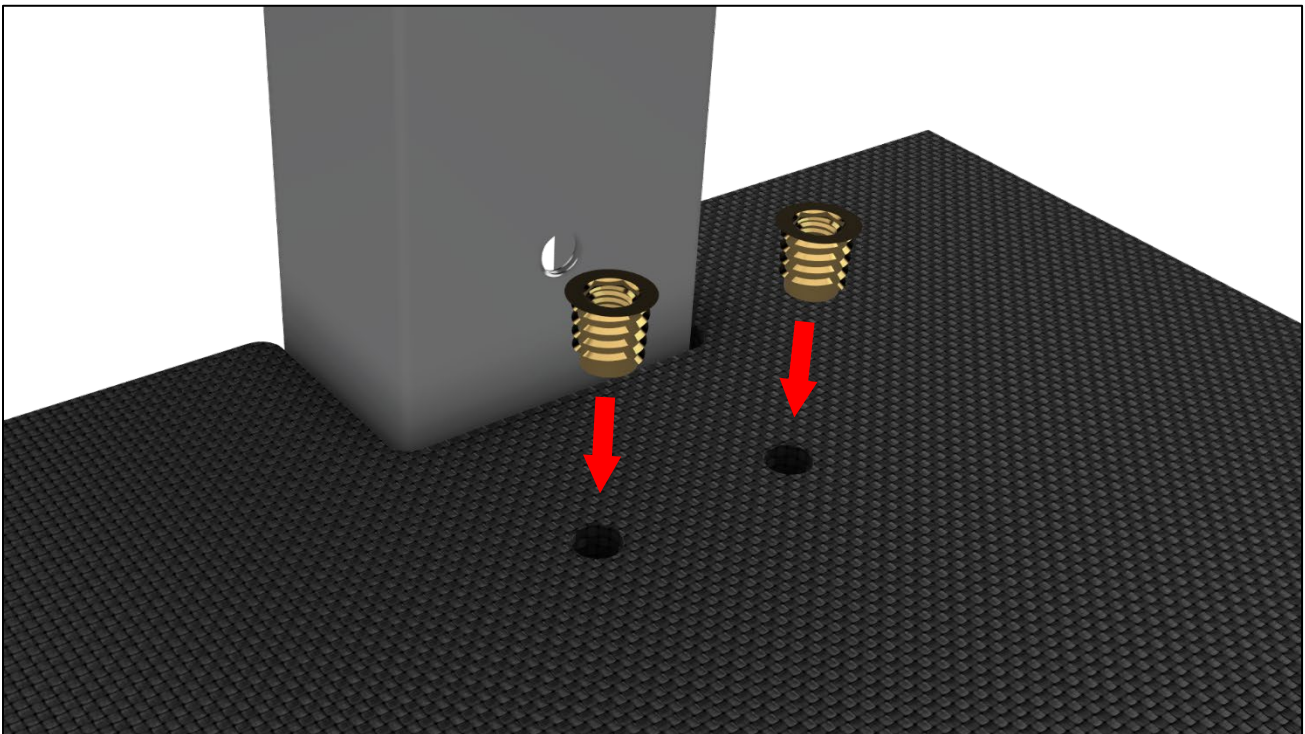



Step 4: Attach bracket to flooring using provided M6 bolts, using the 10mm Hex driver bit.

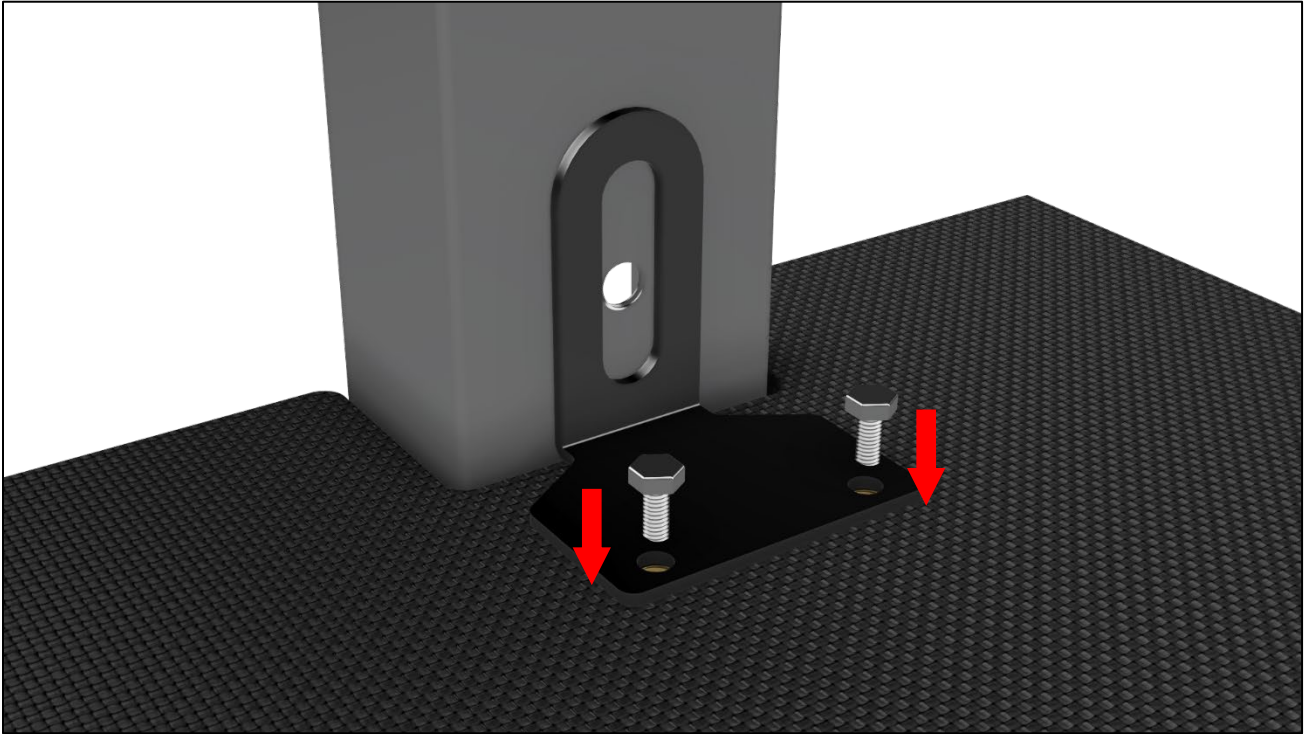

Step 5: Attach Bracket to vehicle frame using the OEM bolt from Step 1.

