

TEMPSHIELD ASSEMBLY INSTRUCTIONS

MERCEDES SPRINTER 170'' EXTENDED CARGO - HIGH ROOF

This document presents the detailed procedures for assembling Legend Fleet components and accessories.

Customers can make use these step-by-step procedures and easily assemble without major difficulty.



519 688 1043
customercare@legendfleet.com


56957 HWY 3 WEST,
TILLSONBURG,
ON N4G 4G8.

Table of Contents


- Walls 3
 - Parts List – Driver Side Wall.....3
 - Parts List – Passenger Side Wall3
 - Assembly Instructions.....4
- Ceiling 5
 - Parts List – Ceiling.....5
 - Assembly Instructions.....5
- Doors 6
 - Parts List – Sliding Door6
 - Parts List – Rear Door6
 - Assembly Instructions.....7
- Sheet Layouts 8

Walls

Parts List – Driver Side Wall

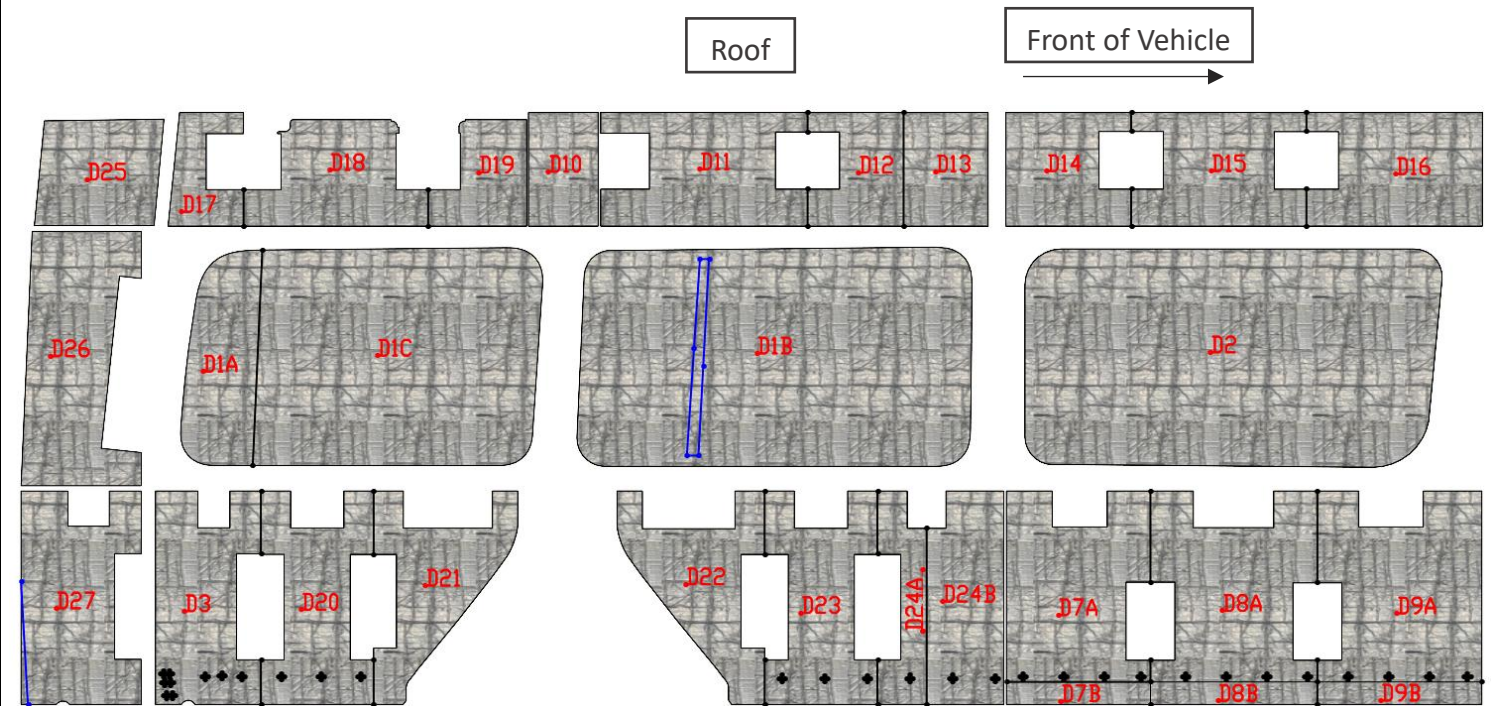

Parts List – Passenger Side Wall

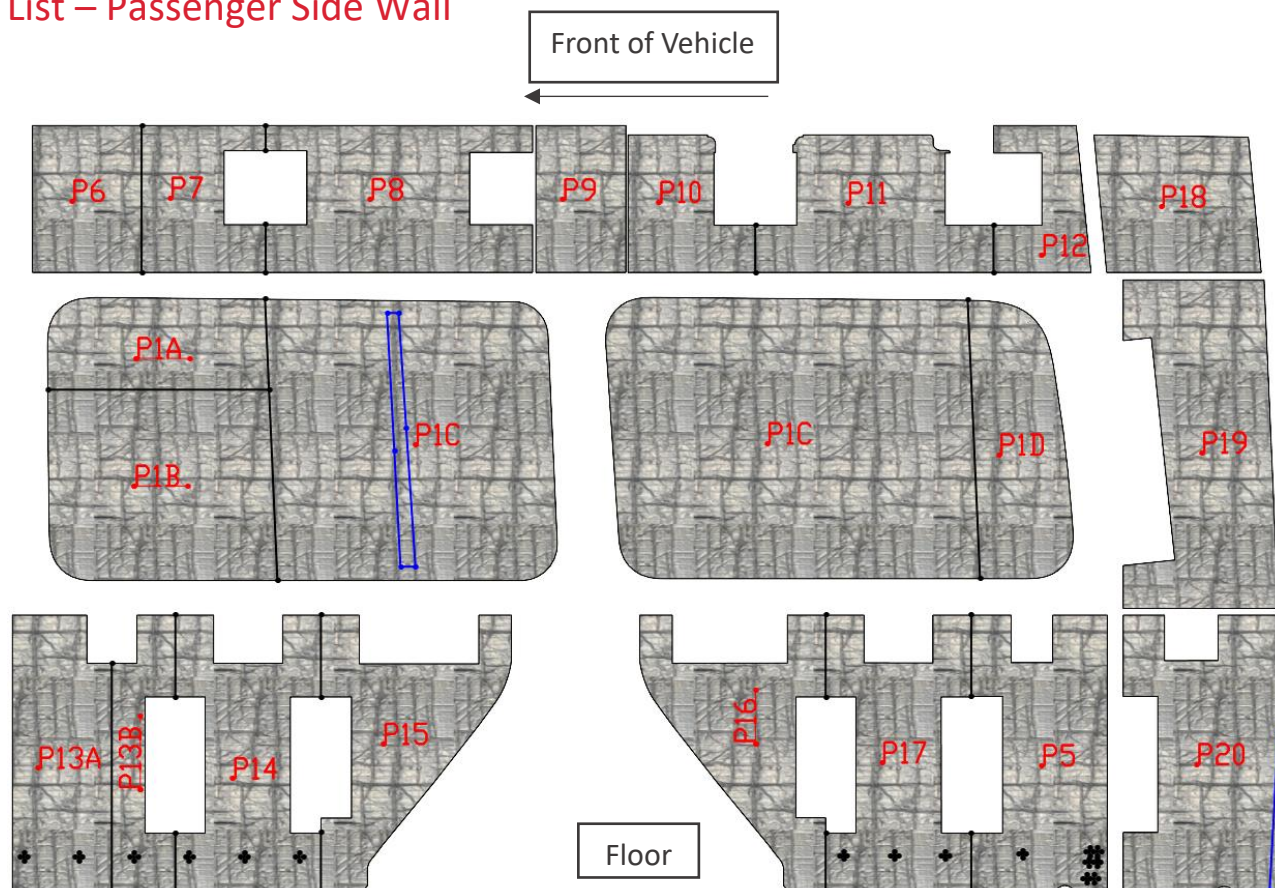

Assembly Instructions

Step 1: Identify the TempShield Panels and their respective vehicle surfaces as shown below. For additional guidance, please refer to the sheet layouts found in the last page of this document.

Step 2: Wipe the identified surfaces of the vehicle clean, dry, free of dust, debris, or any foreign materials before adhering the TempShield panels.

Step 3: Peel off the protective layer of the TempShield and place its adhesive side to the Van body.

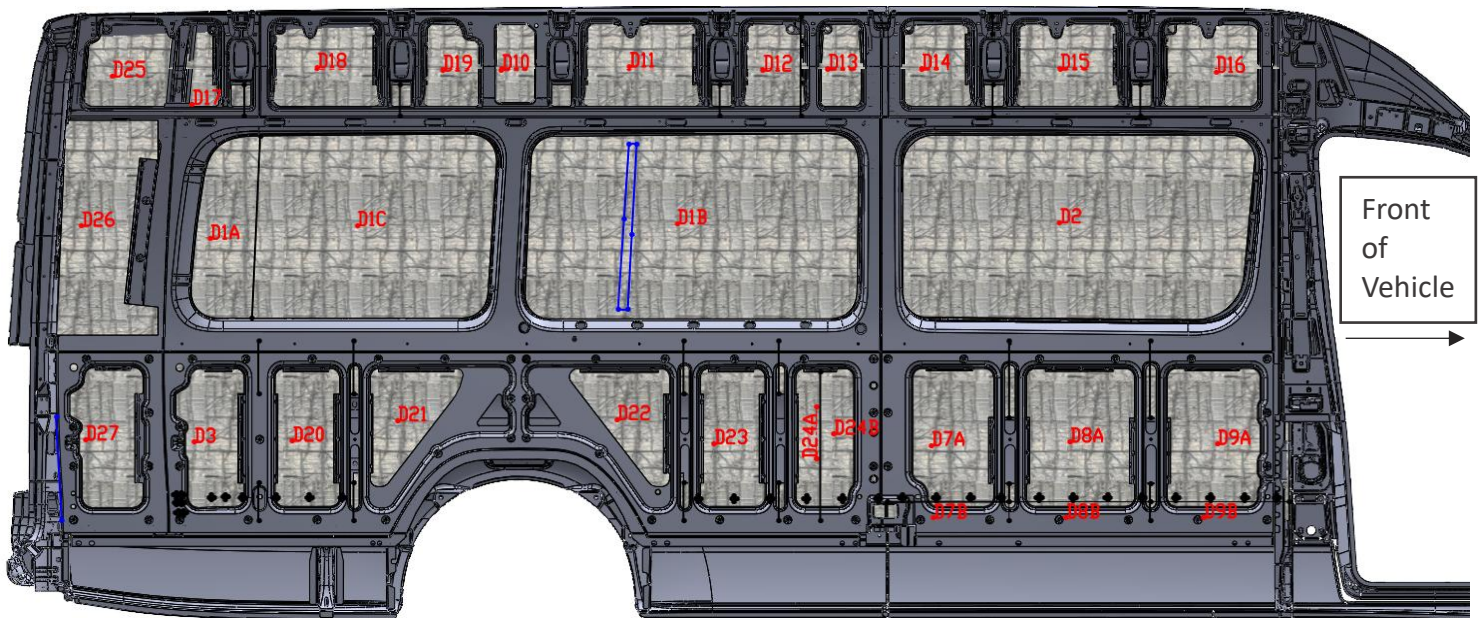


Figure 1: "Driver Side TempShield Installed" This view is from Inside of Van-Viewing from Passenger side

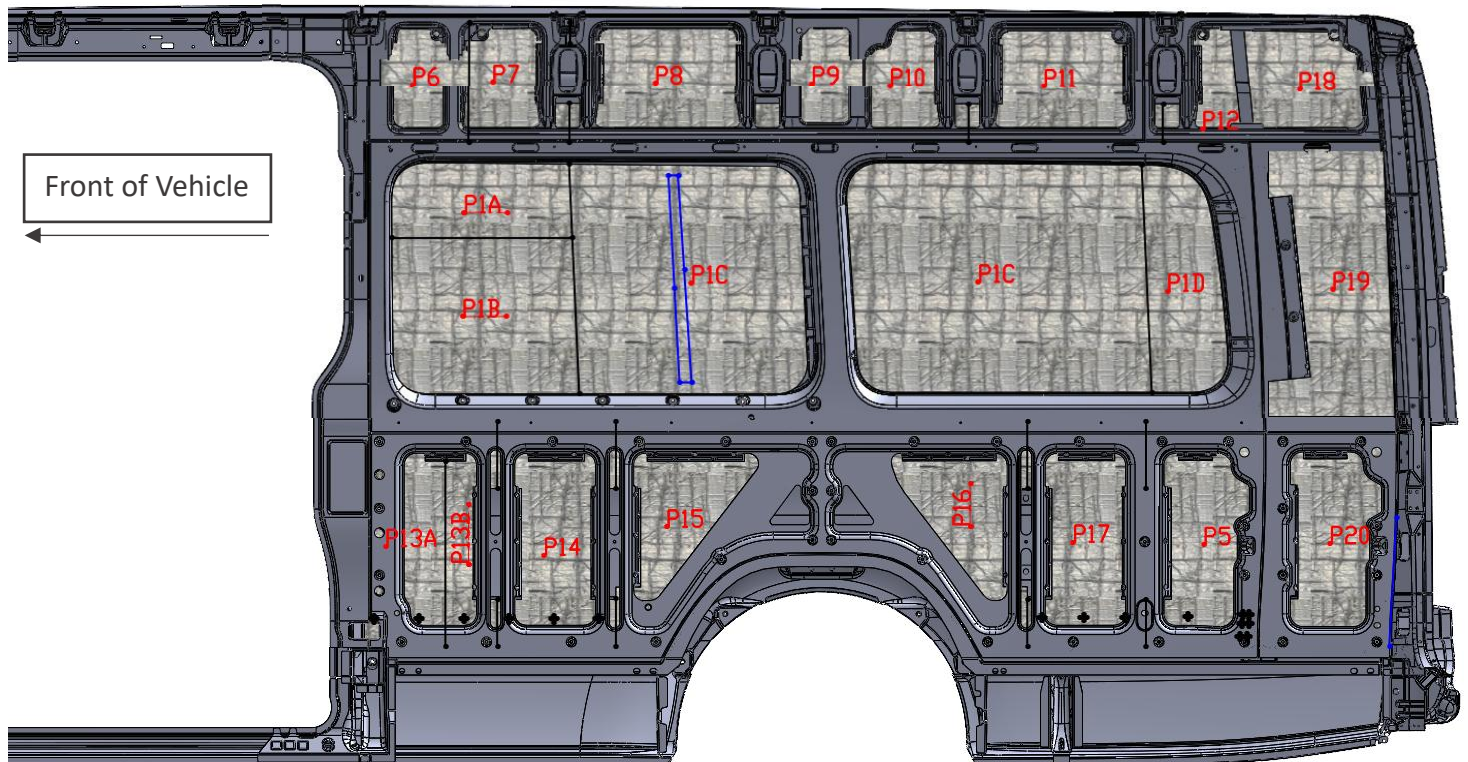


Figure 2: "Passenger Side TempShield Installed" This view is from Inside of Van-Viewing from Driver side

Ceiling

Parts List – Ceiling



Assembly Instructions

Step 1: Identify the TempShield Panels and their respective vehicle surfaces as shown below. For additional guidance, please refer to the sheet layouts found in the last page of this document.

Step 2: Wipe the identified surfaces of the vehicle clean, dry, free of dust, debris, or any foreign materials before adhering the TempShield panels.

Step 3: Peel off the protective layer of the TempShield and place its adhesive side to the Van body.


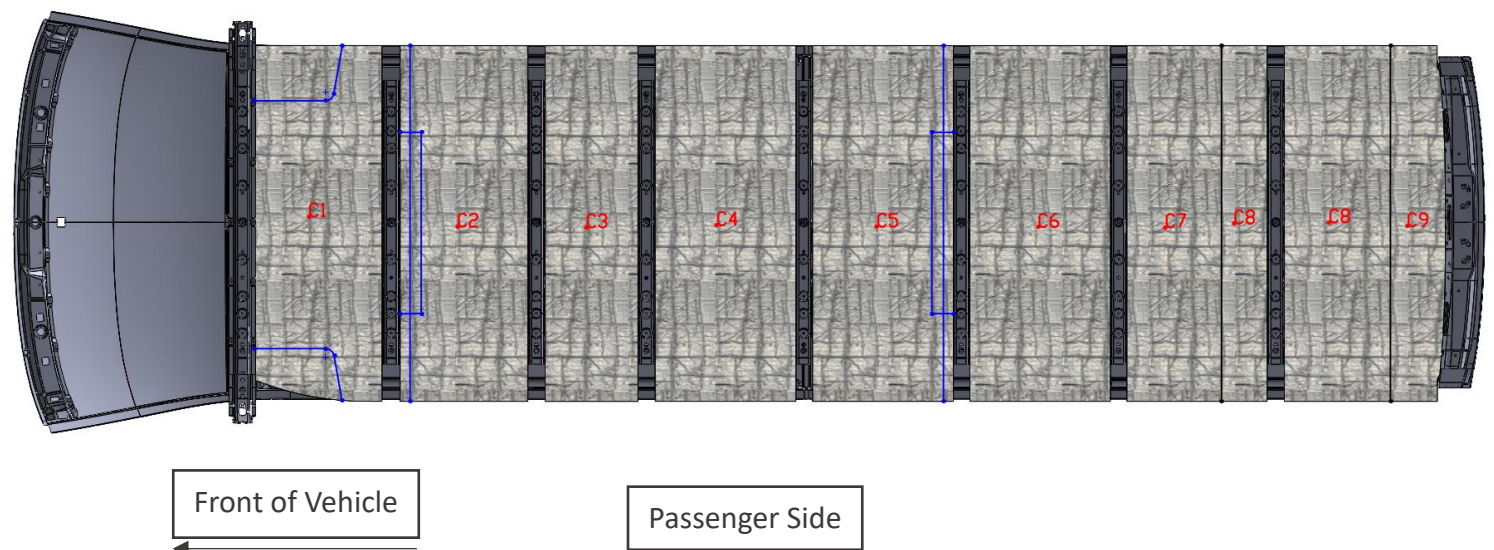



Figure 3: "Ceiling TempShield Installed" This view is from Inside of Van

Doors

Parts List – Sliding Door

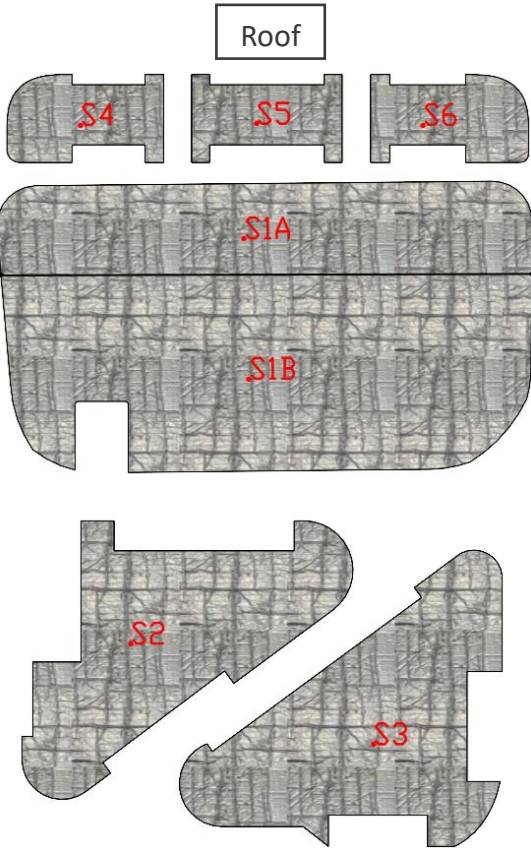

Parts List – Rear Door

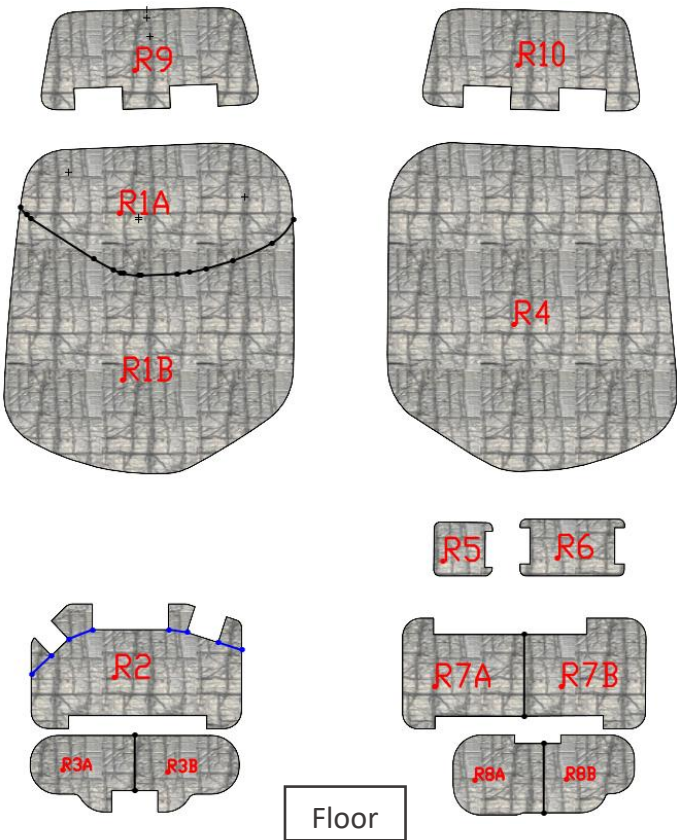


Assembly Instructions


Step 1: Identify the TempShield Panels and their respective vehicle surfaces as shown below. For additional guidance, please refer to the sheet layouts found in the last page of this document.

Step 2: Wipe the identified surfaces of the vehicle clean, dry, free of dust, debris, or any foreign materials before adhering the TempShield panels.

Step 3: Peel off the protective layer of the TempShield and place its adhesive side to the Van body.

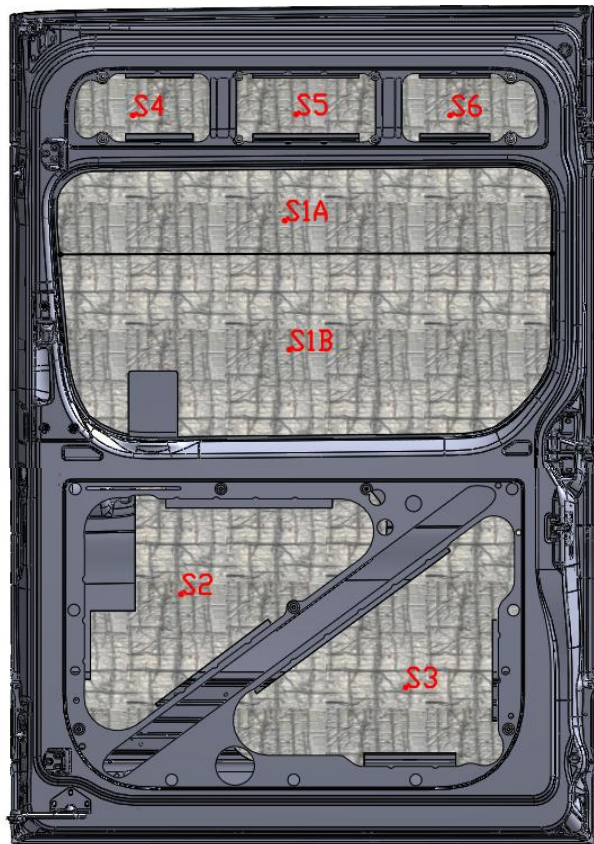

Sliding Door TempShield

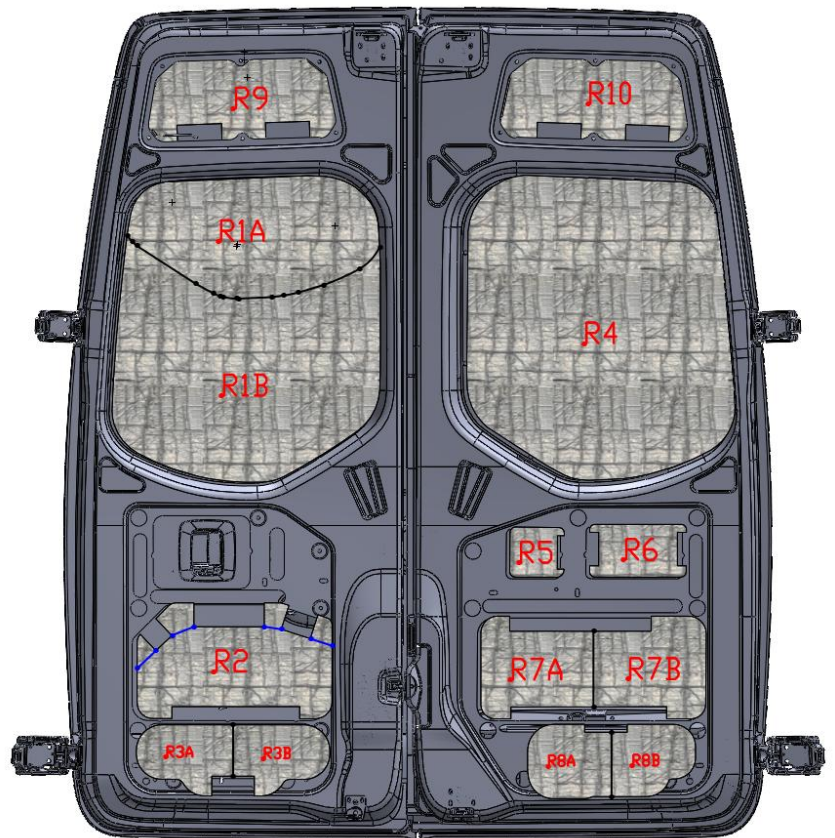

Rear Door TempShield

Sheet Layouts

*Sections highlighted in **red** are not required. Sheet layouts in **green** are the window panels.*

