


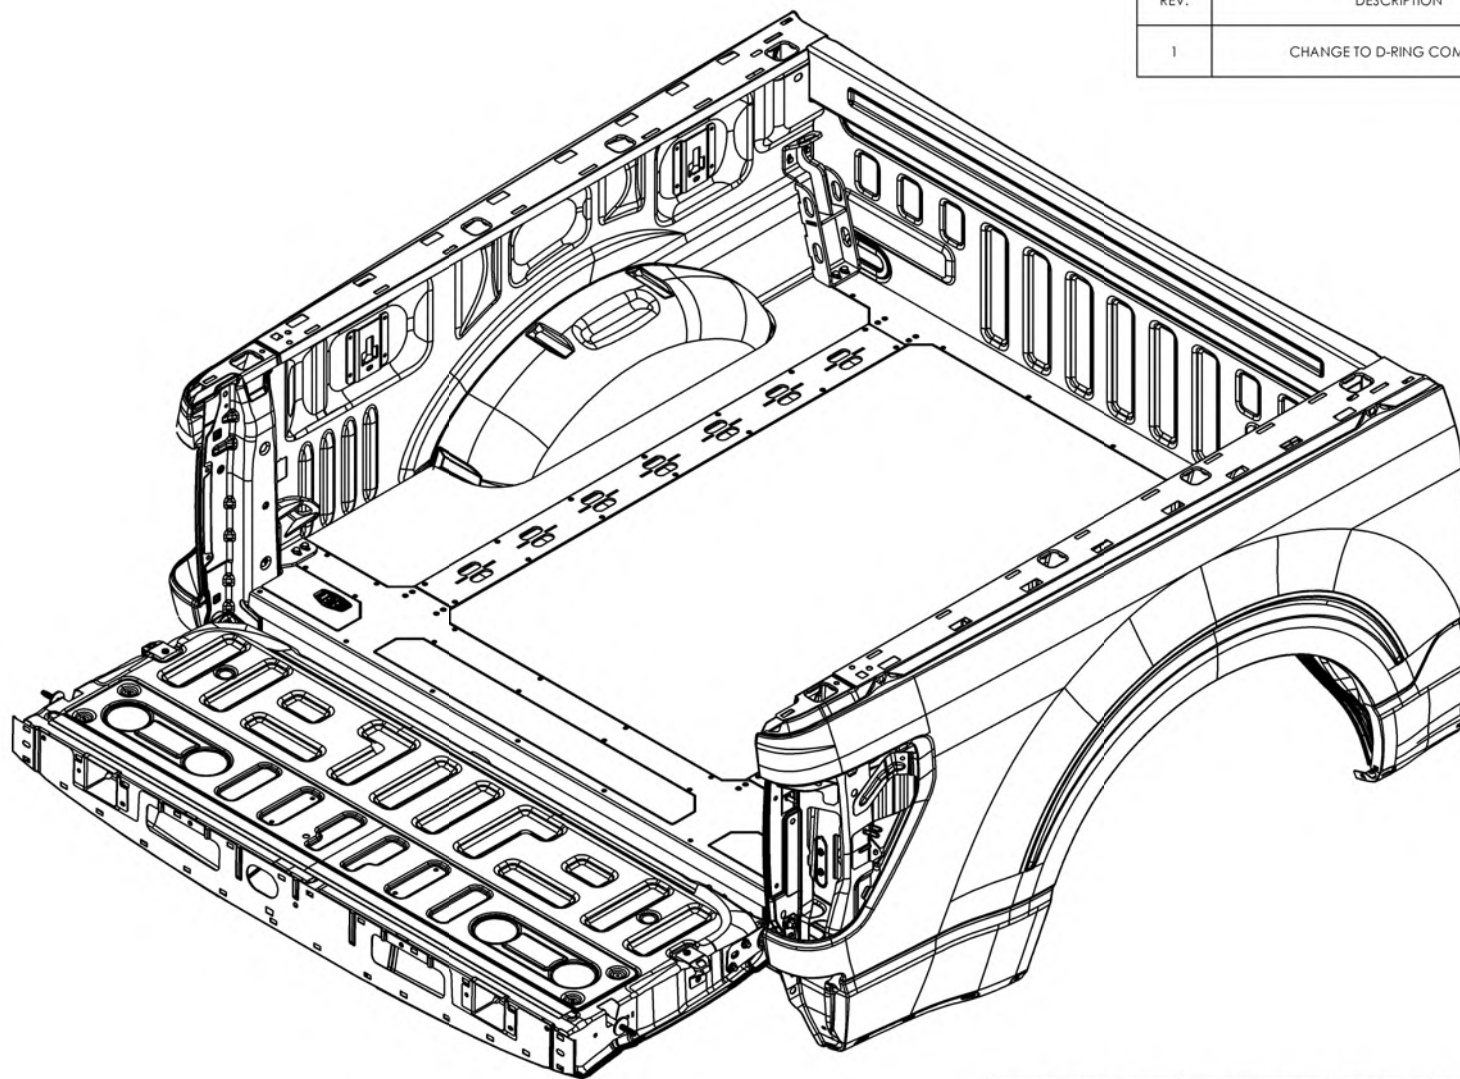

REVISIONS			
REV.	DESCRIPTION	DATE	APPROVED
1	CHANGE TO D-RING COMMENTS	30/MAY/2025	SMM

PART NO:	PP1605_00_INSTALL
VEHICLE:	FORD F-150 - 5.5
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet:	14 OF 14
Revision:	1



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

HARDWARE PARTS LIST



8x M8 x 1.25 - 20mm - HHCS



8x M8 - LOCK WASHER




8x M6 x 1.0 - 18mm - HHCS



8x M6 - LOCK WASHER




16x M6 x 1.0 - 30mm - FHS

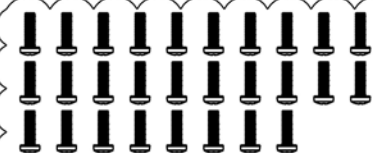

28x M4 x 0.7 - 14mm BHCS



28x M4 - LOCK WASHER

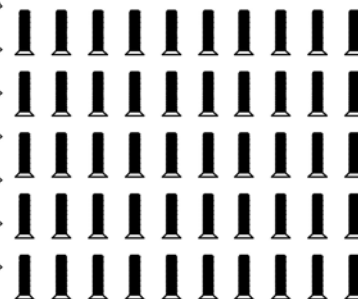

50x M4 x 0.7 - 18mm FHS



30" - 0.75" x 0.06" PEEL AND STICK PAD





112" - 1.5" x 0.06" PEEL AND STICK PAD

PART NO:	PP1605_00_INSTALL
VEHICLE:	FORD F-150 - 5.5
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 2 OF 14	Revision: 1



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

PARTS LIST

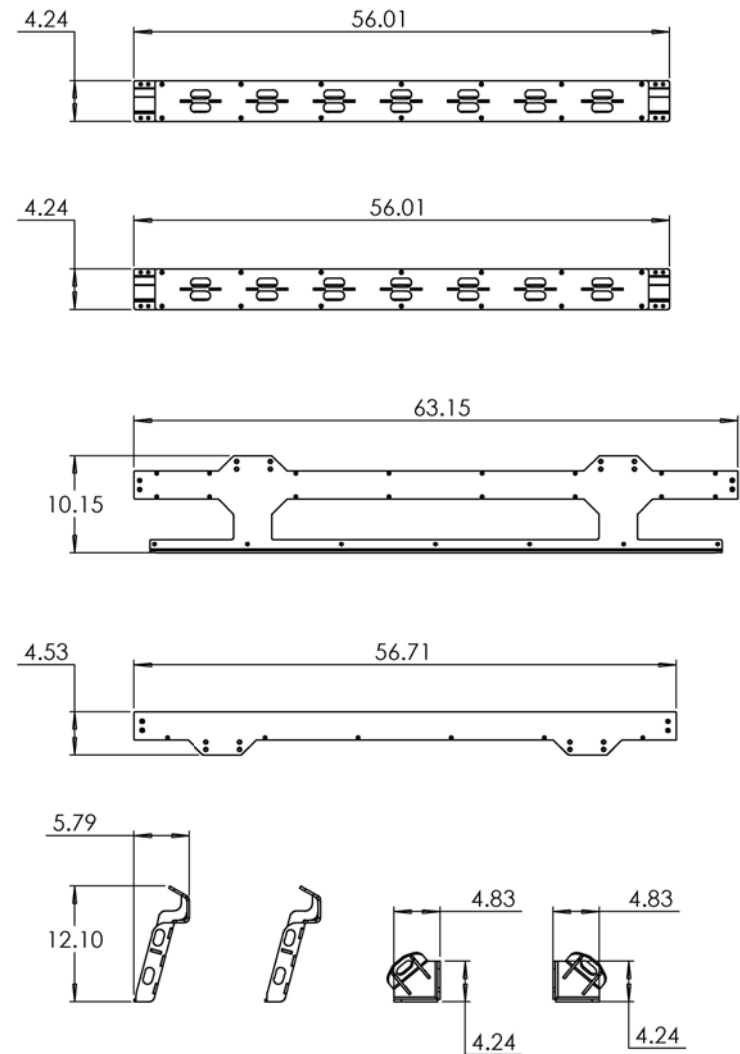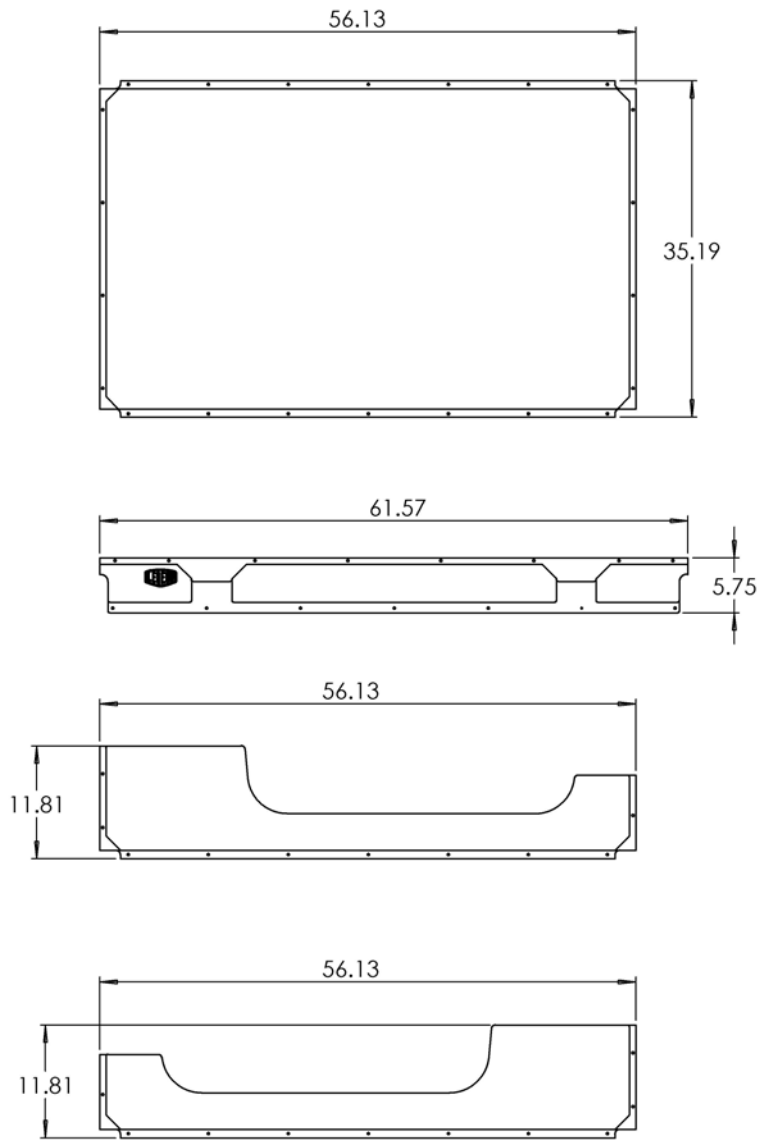


PART NO:	PP1605_00_INSTALL
VEHICLE:	FORD F-150 - 5.5
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 3 OF 14	Revision: 1



LEGEND FLEET SOLUTIONS
 56957 HWY 3, TILLSONBURG, ON
 519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #1

- PLACE THE PEEL AND STICK NEOPRENE TO THE UNDER SIDE OF RAILS (x2) AS SHOWN

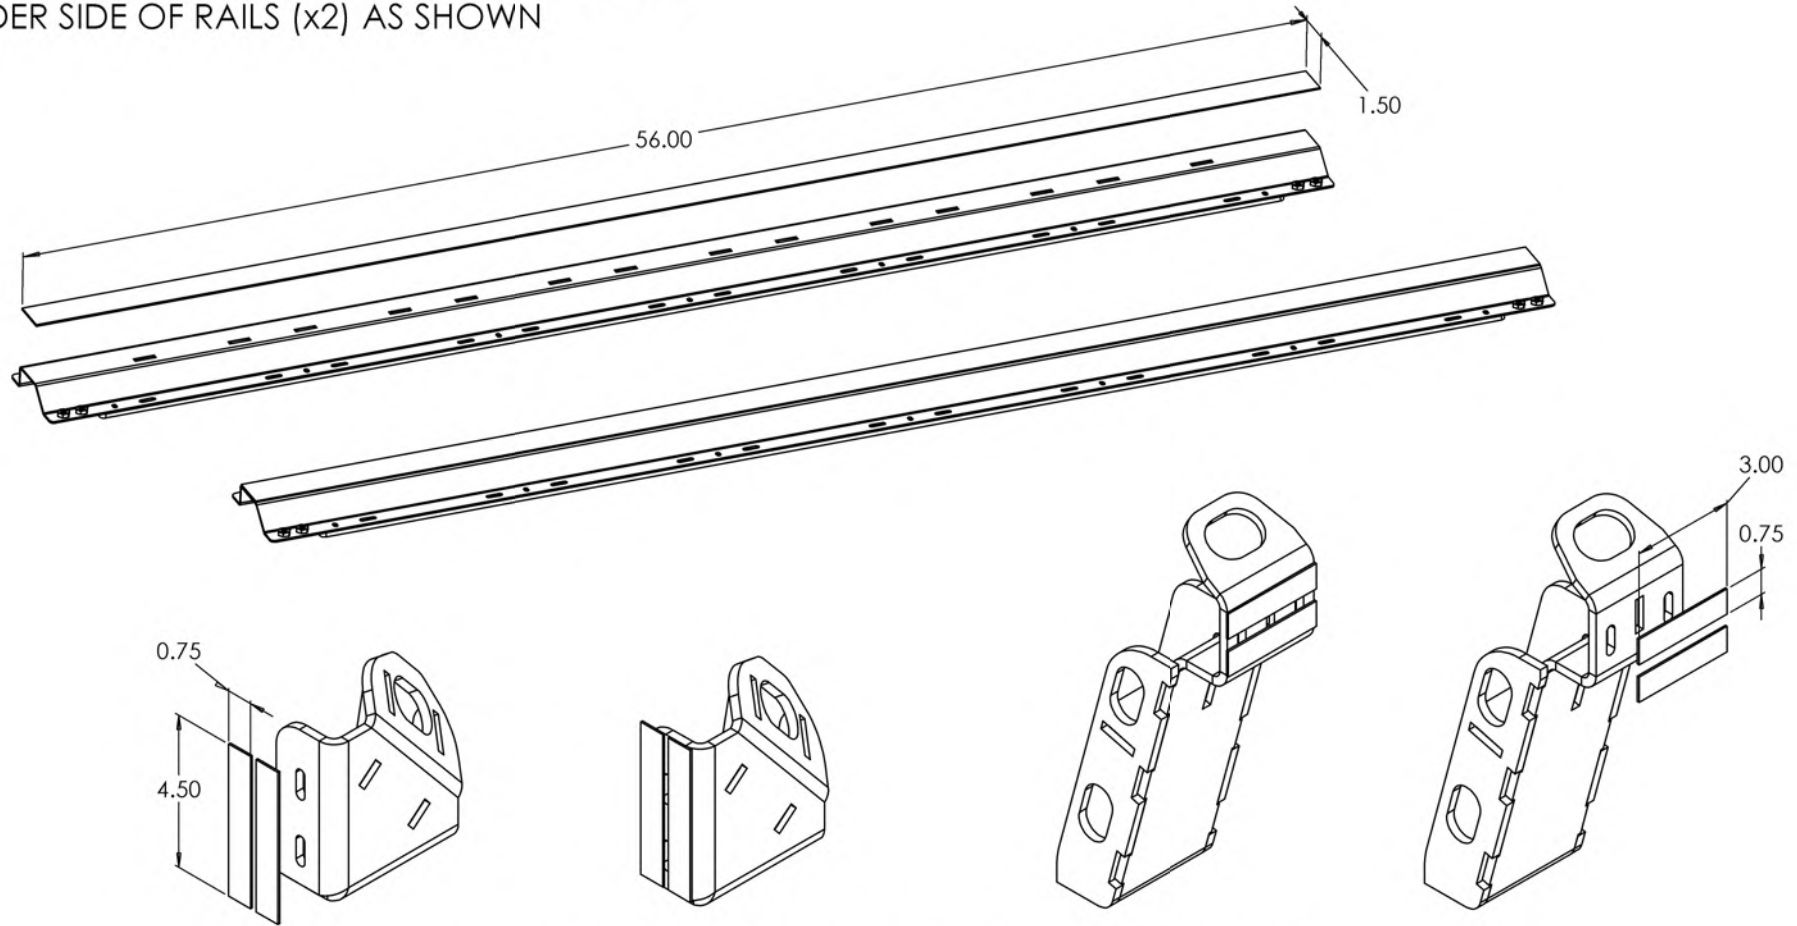

- PLACE THE PEEL AND STICK NEOPRENE TO THE D-RING BRACKETS (x2 & x2) AS SHOWN

PART NO:	PP1605_00_INSTALL
VEHICLE:	FORD F-150 - 5.5
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 4 OF 14	Revision: 1




LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #2



- FASTEN THE FOUR FRAME SECTIONS TOGETHER AS SHOWN USING THE 16x M6 x 1.0 - 30mm FHS

NOTE PROFILE ORIENTATION

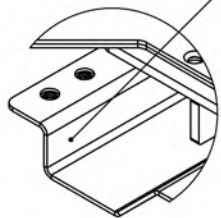


DETAIL I

SCALE 1:2

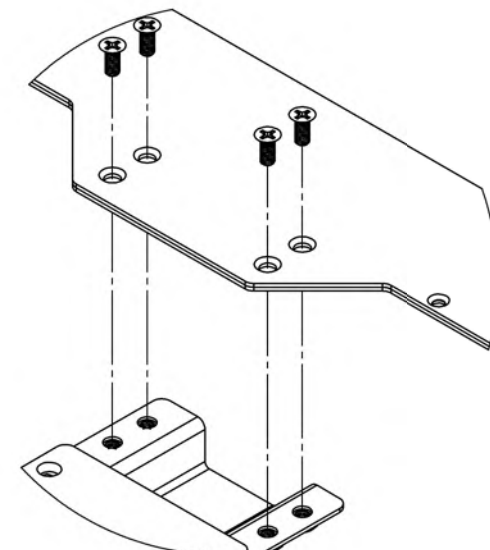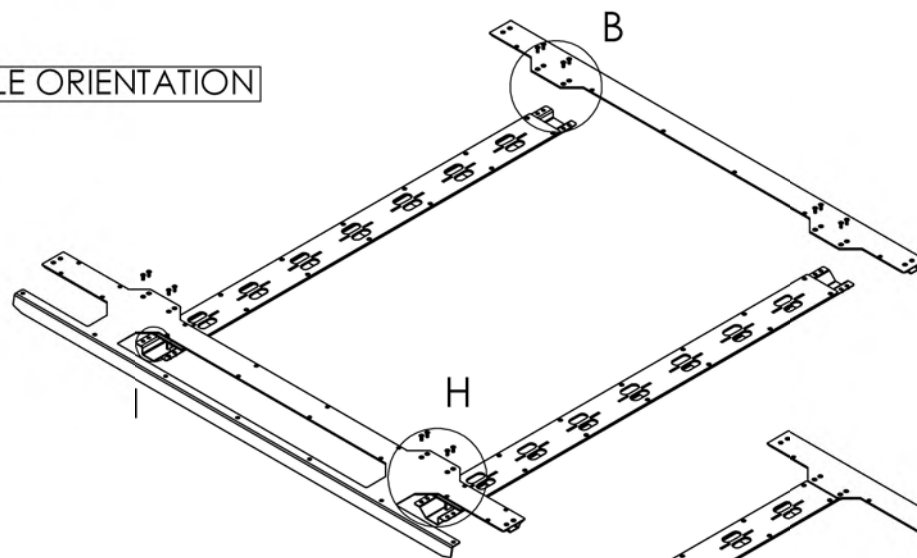

DETAIL B

SCALE 1:2

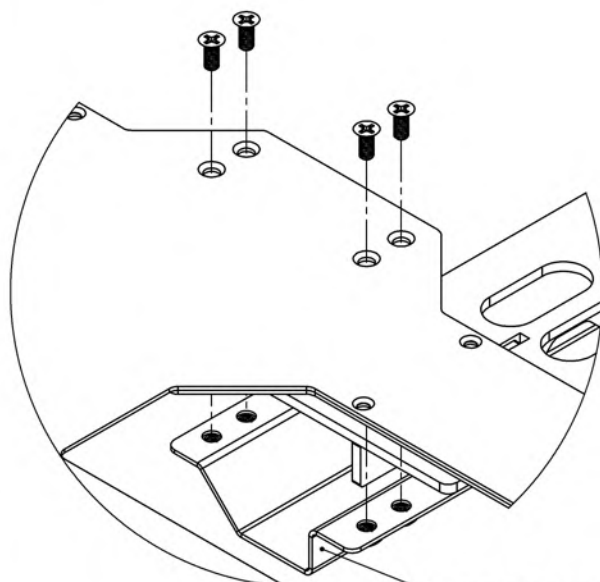

DETAIL H

SCALE 1:2

NOTE PROFILE ORIENTATION




PART NO:	PP1605_00_INSTALL
VEHICLE:	FORD F-150 - 5.5
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 5 OF 14	Revision: 1



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #3

- USE M4 FASTENERS AS SHOWN TO SECURE MIDDLE BED SURFACE TO THE FRAME

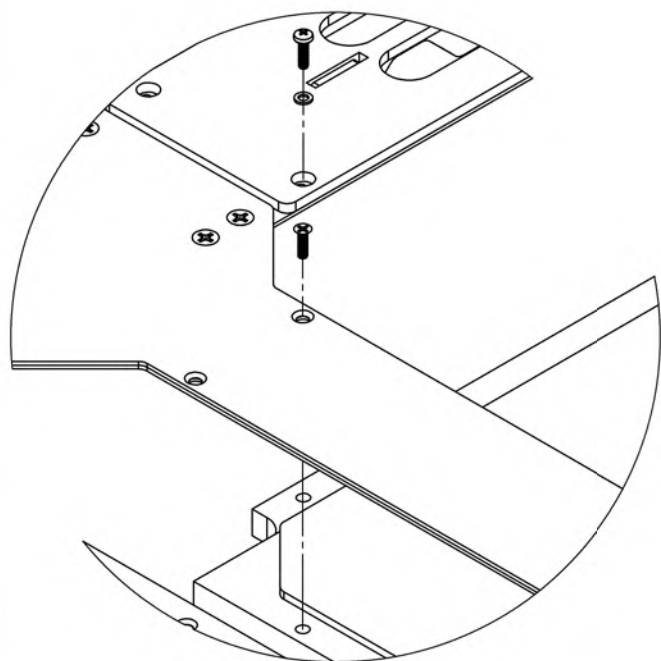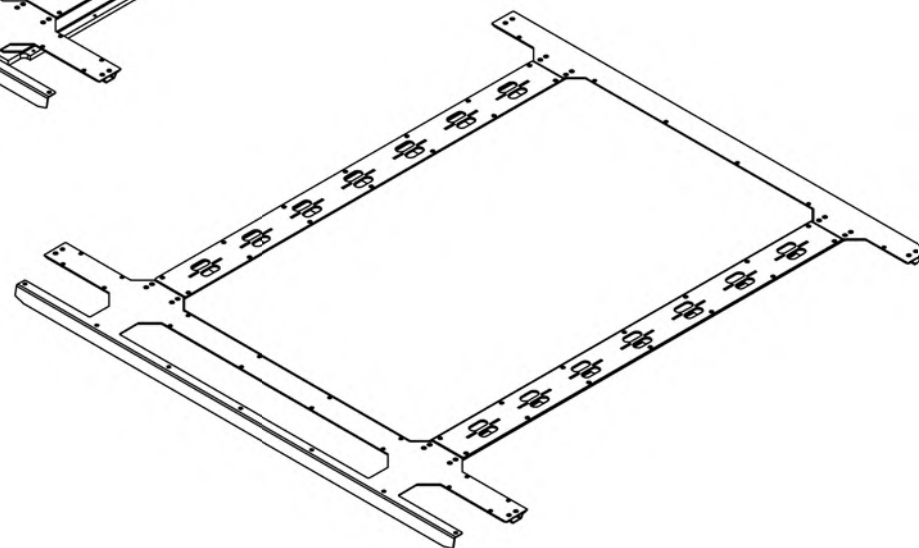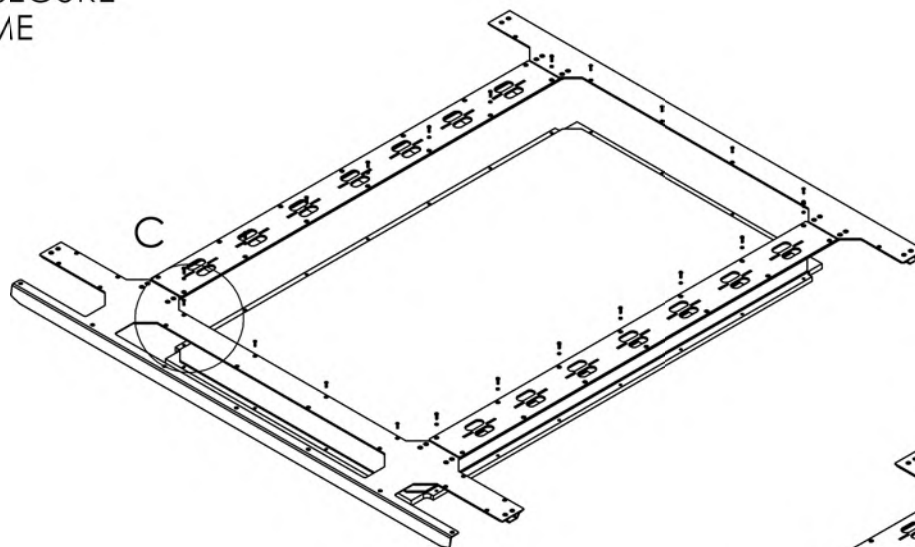

DETAIL C

SCALE 1 : 2


PART NO:	PP1605_00_INSTALL
VEHICLE:	FORD F-150 - 5.5
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 6 OF 14	Revision: 1



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #4


- USE M4 FASTENERS AS SHOWN TO SECURE OUTER BED SURFACES TO THE FRAME

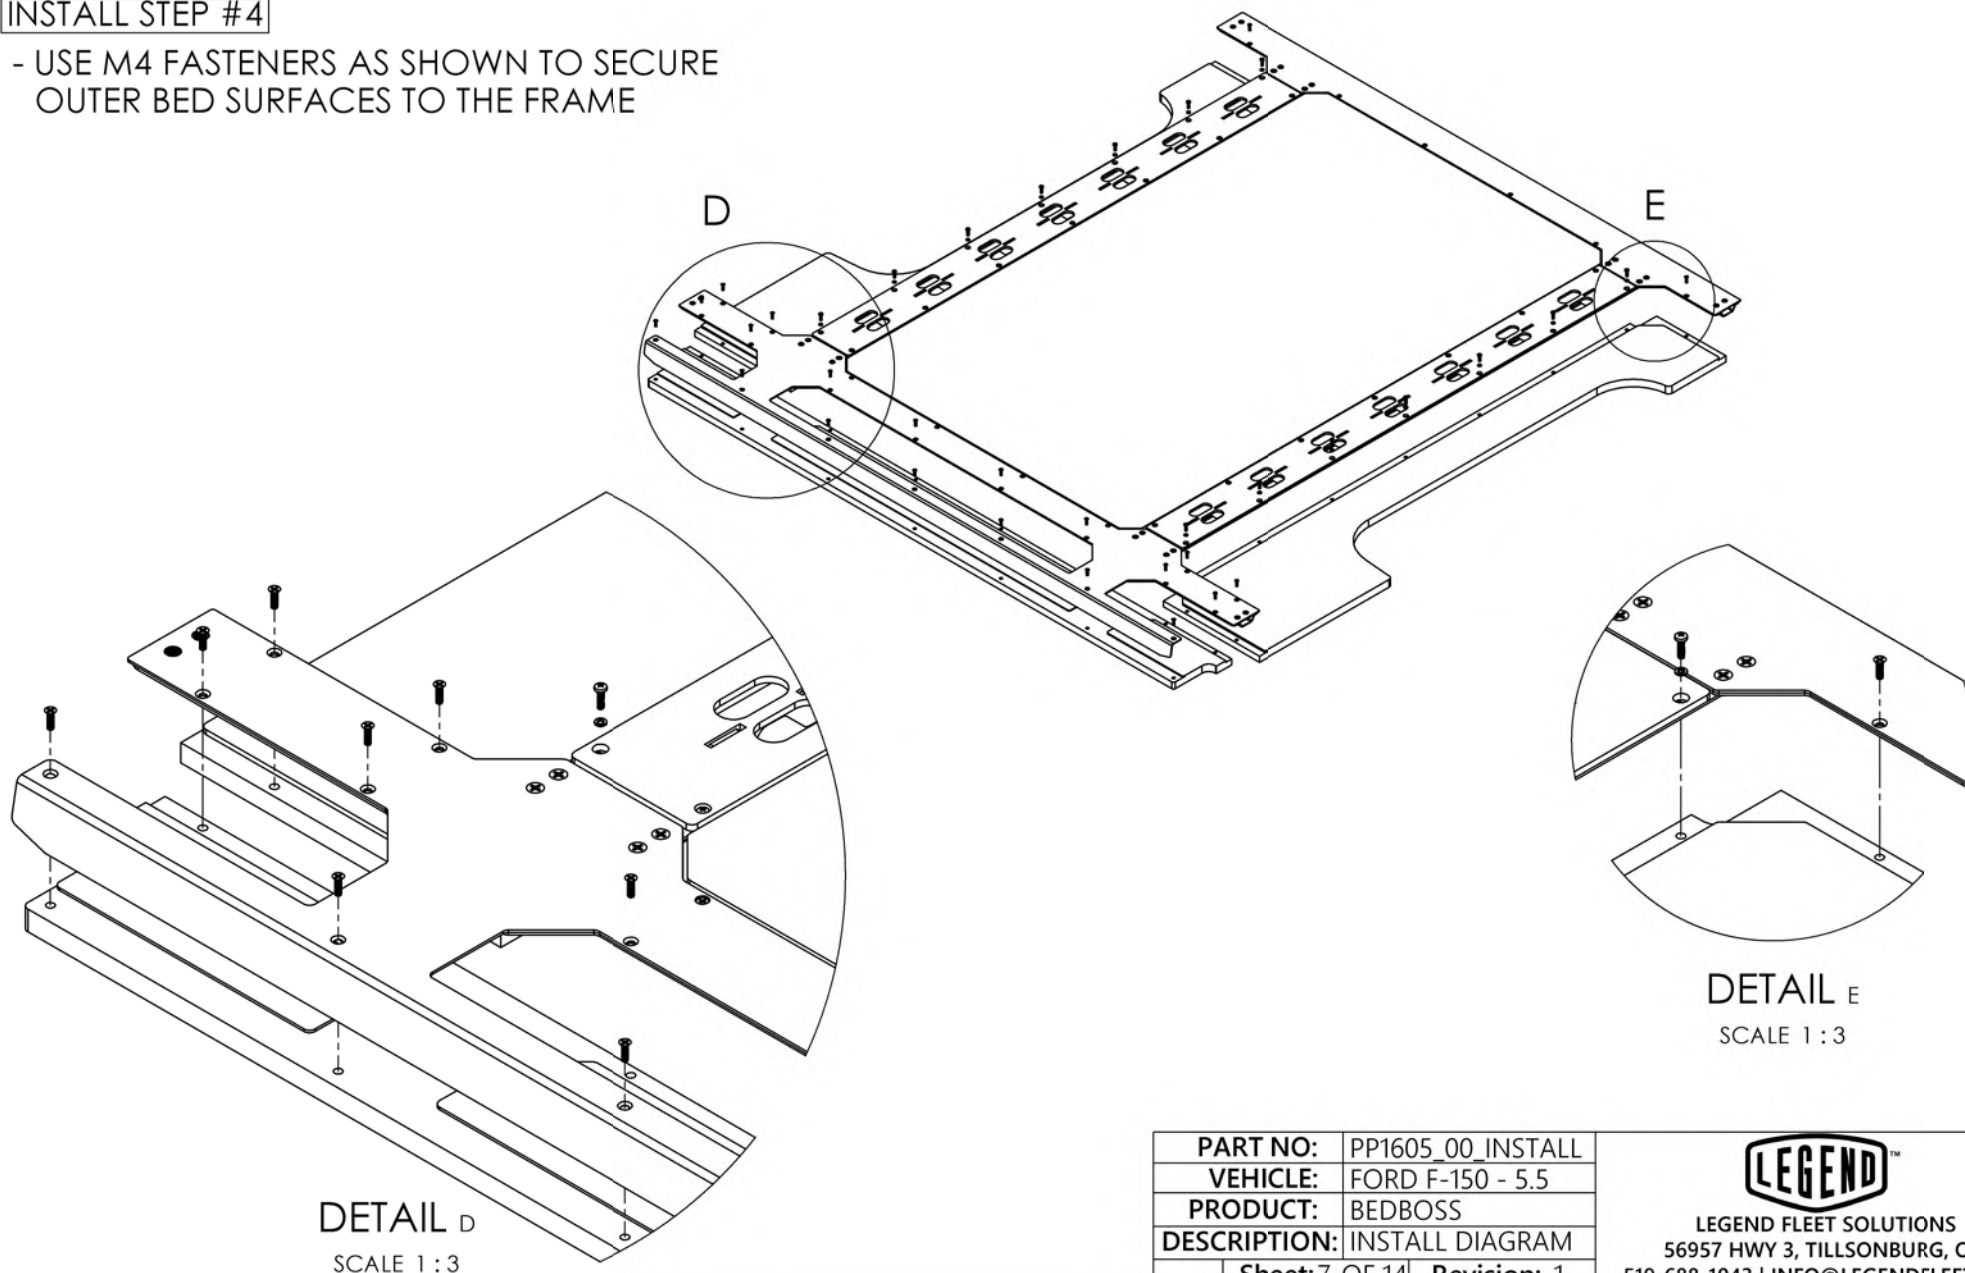

PART NO:	PP1605_00_INSTALL
VEHICLE:	FORD F-150 - 5.5
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 7 OF 14	Revision: 1



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

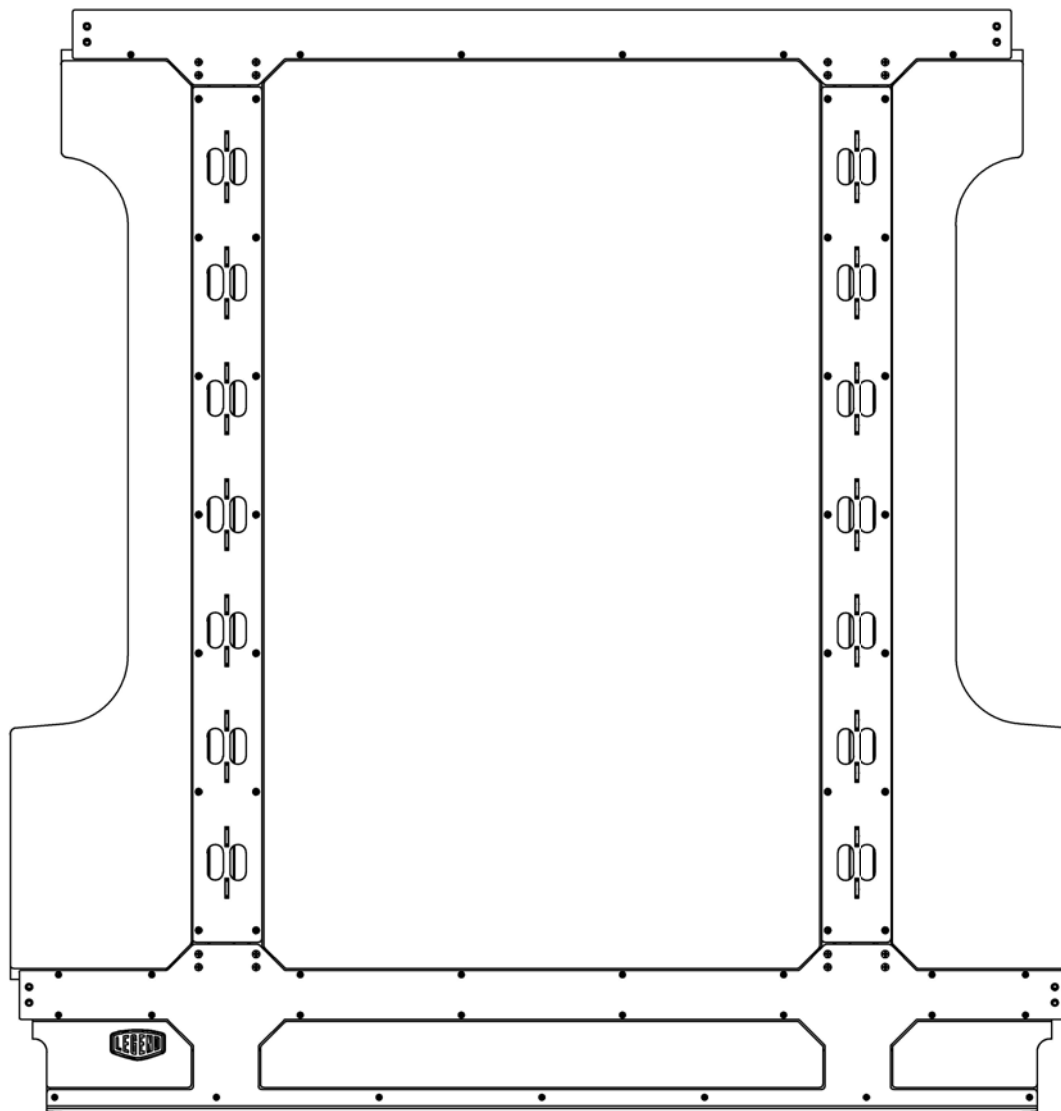


PART NO:	PP1605_00_INSTALL
VEHICLE:	FORD F-150 - 5.5
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 8 OF 14	Revision: 1



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #5

- REMOVE ALL FOUR OEM D-RINGS, KEEP IN A SAFE PLACE

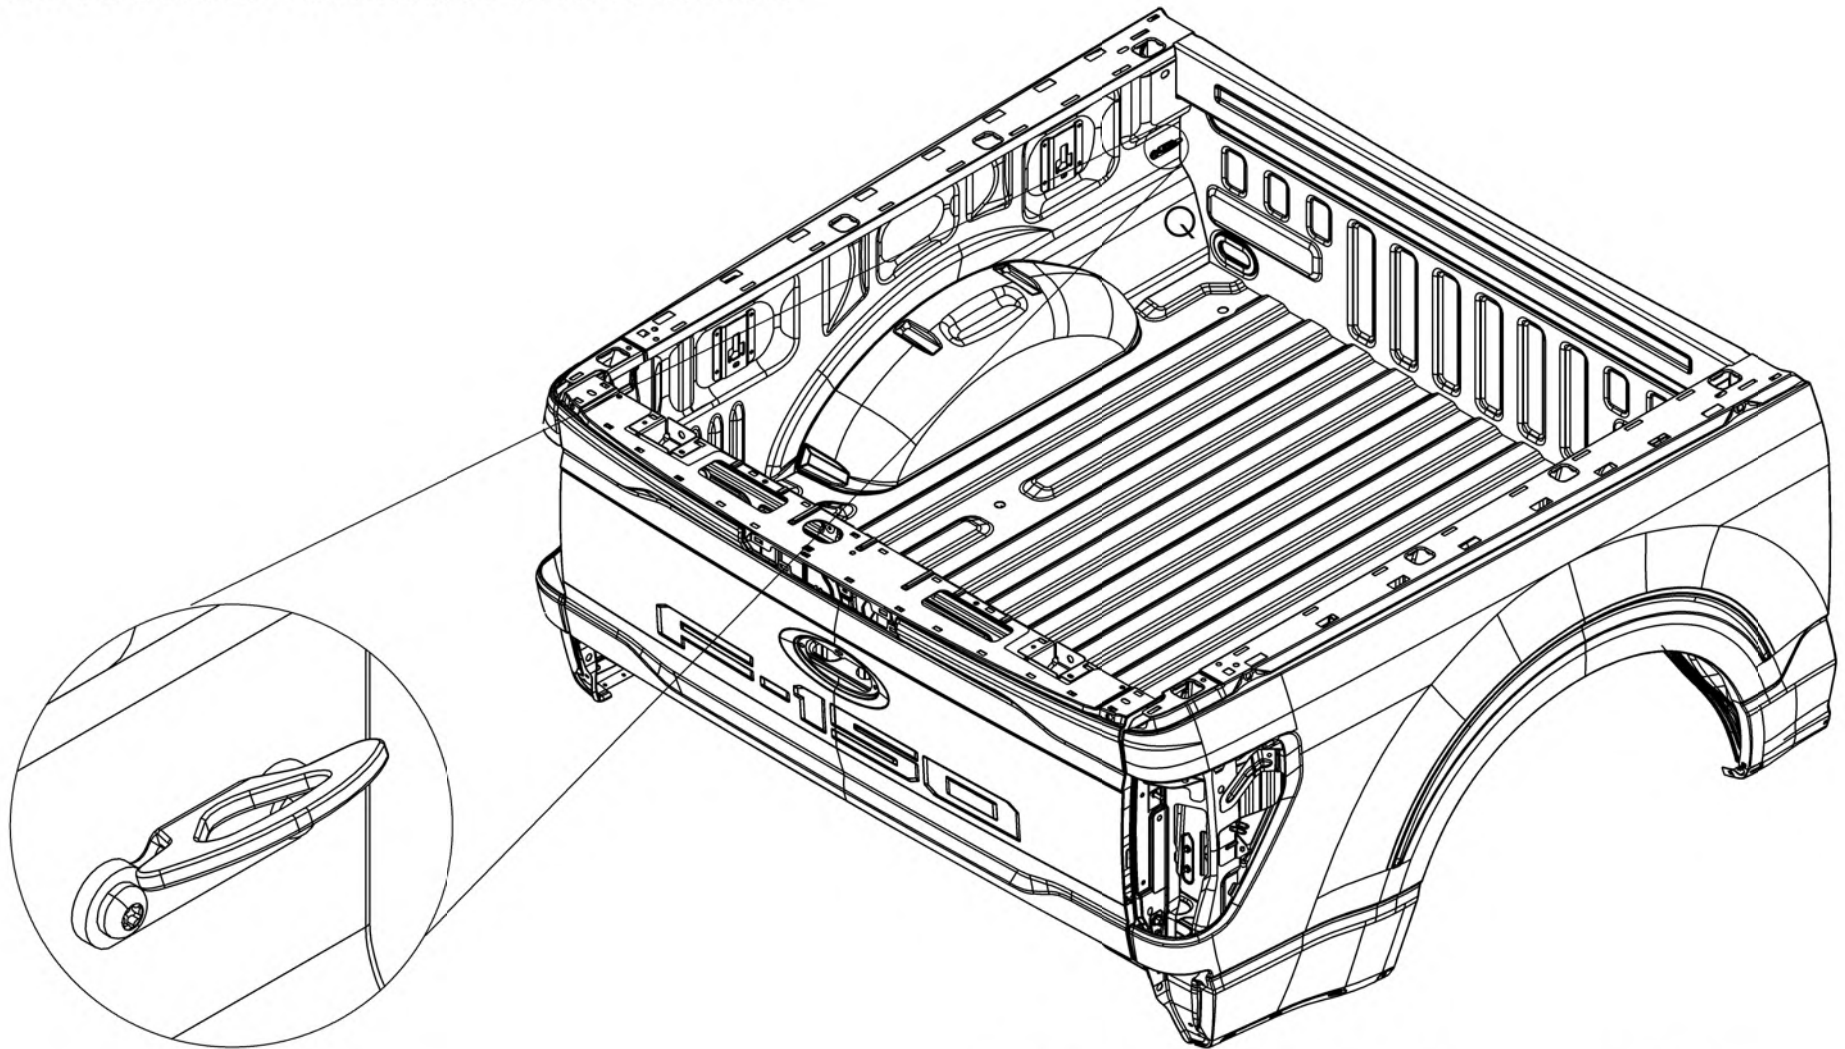

DETAIL Q
SCALE 1 : 1


PART NO:	PP1605_00_INSTALL
VEHICLE:	FORD F-150 - 5.5
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet:	9 OF 14
Revision:	1



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #6

- GET A FEW FRIENDS TO HELP YOU LOAD YOUR BEDBOSS INTO YOUR TRUCK BED.

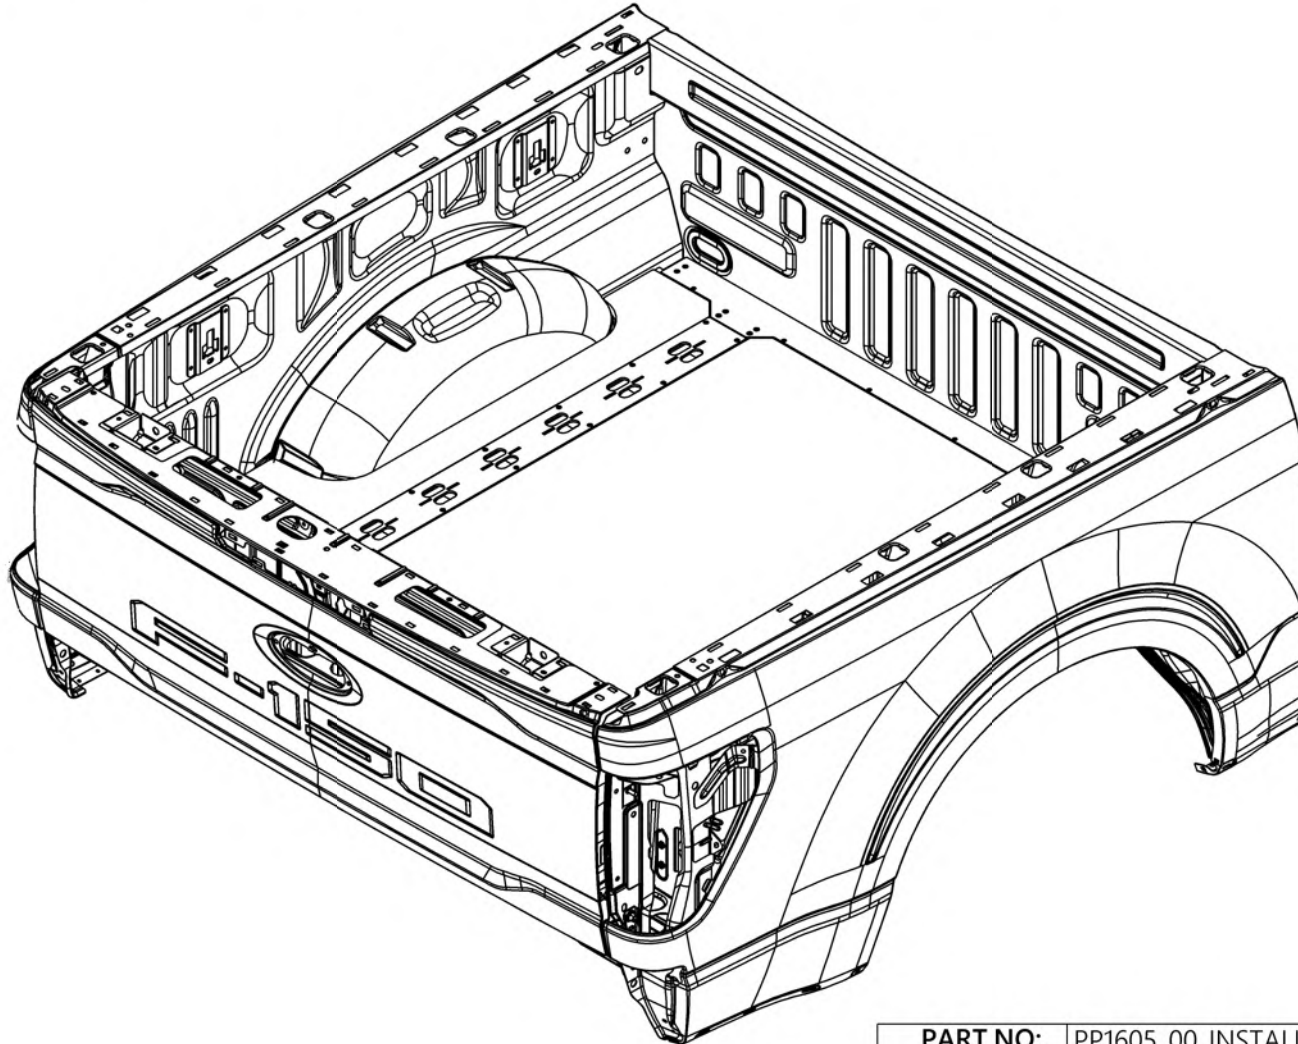


PART NO:	PP1605_00_INSTALL
VEHICLE:	FORD F-150 - 5.5
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet:	10 OF 14
Revision:	1



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #7

-USE M8 FASTENERS AS SHOWN TO ATTACH
D-RING BRACKETS (x2) TO BEDBOSS FRAME
(HAND TIGHTEN ONLY)

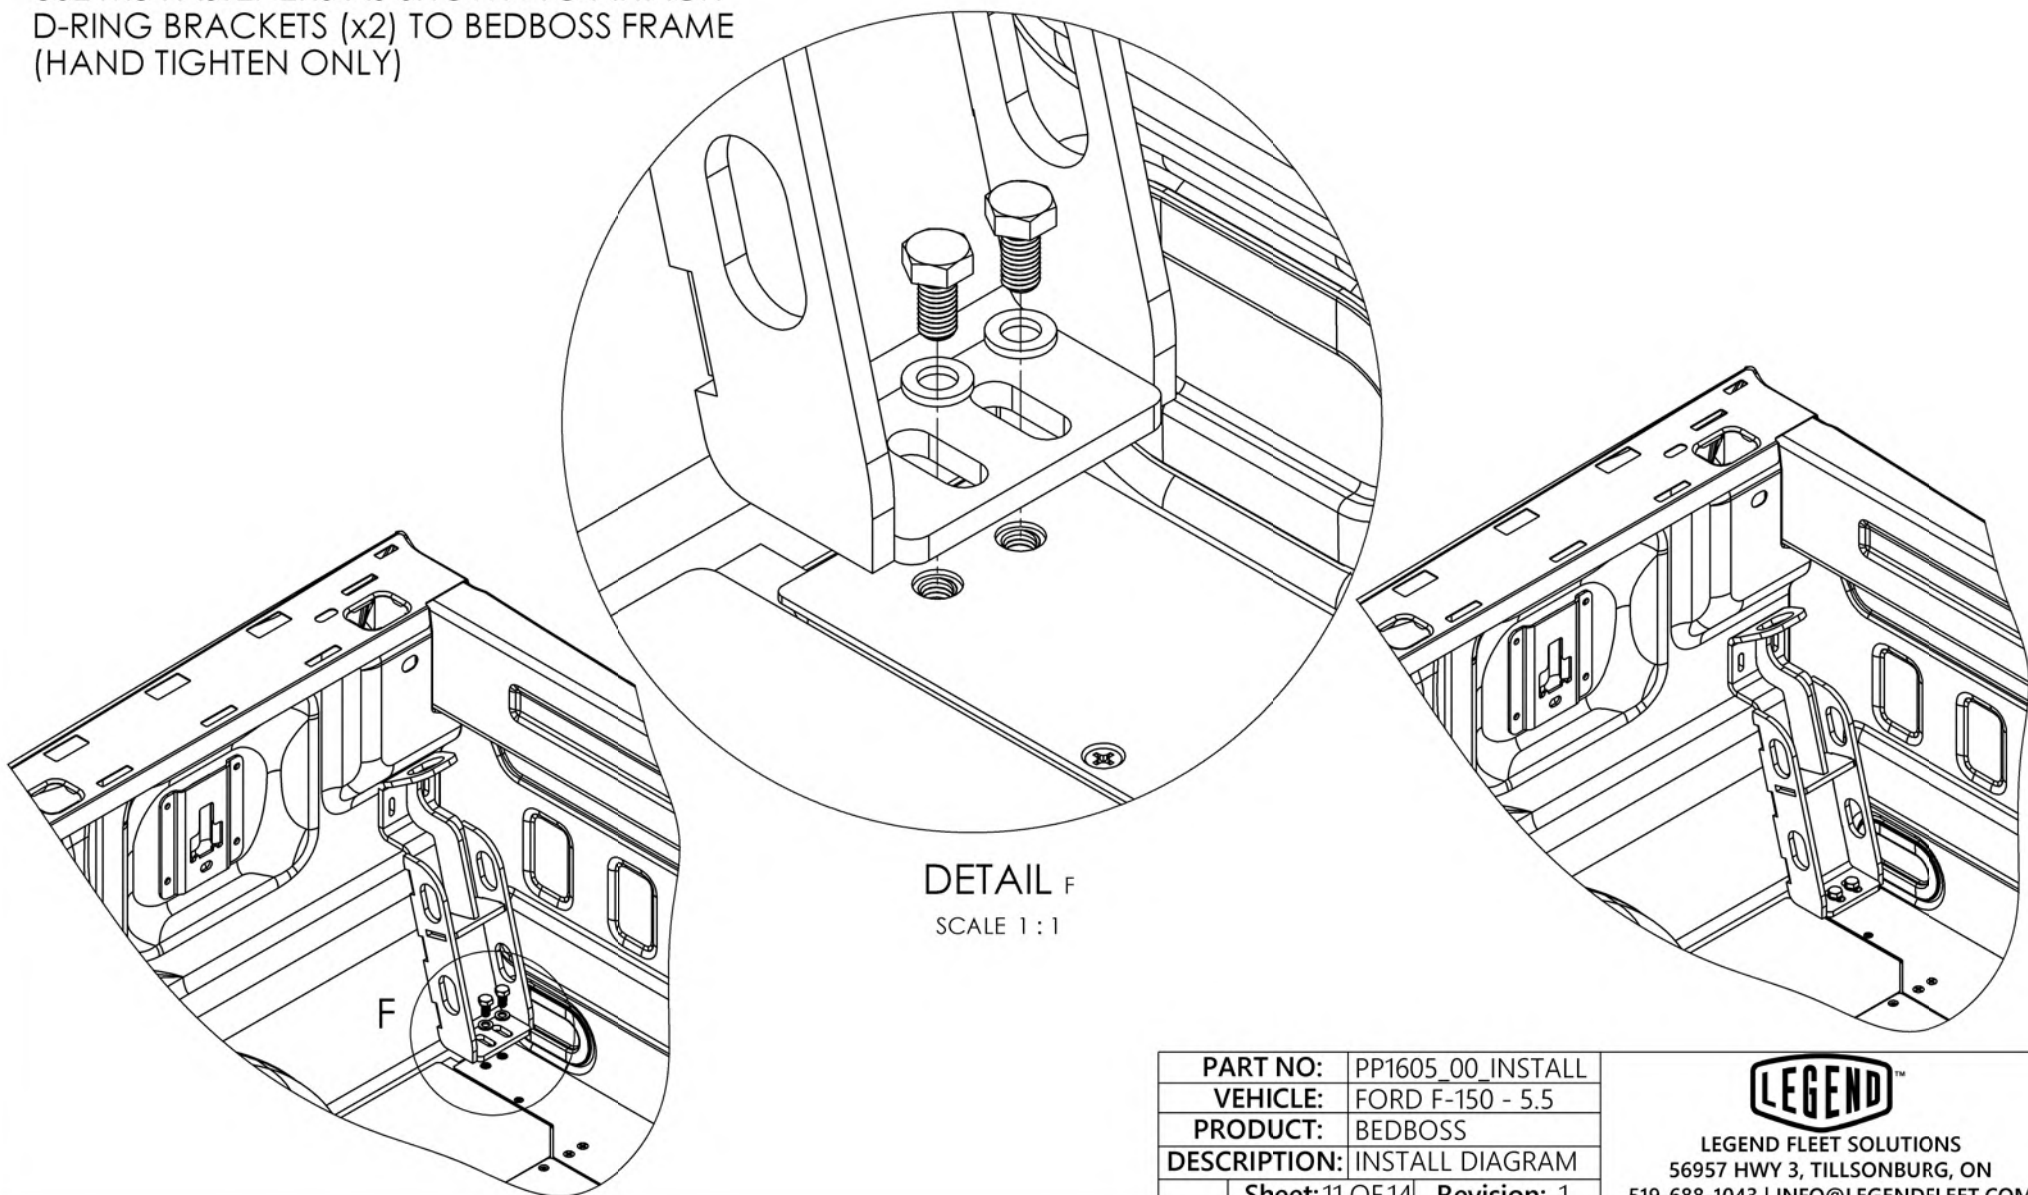


PART NO:	PP1605_00_INSTALL
VEHICLE:	FORD F-150 - 5.5
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 11 OF 14	Revision: 1





LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #8

-USE M6 FASTENERS AS SHOWN TO SECURE
D-RING BRACKETS (x2) TO TRUCK BED
(HAND TIGHTEN ONLY)

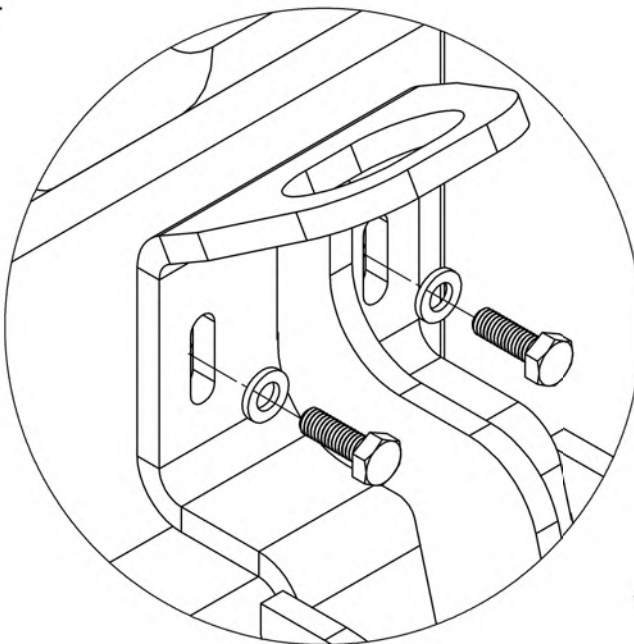

DETAIL N
SCALE 1:1

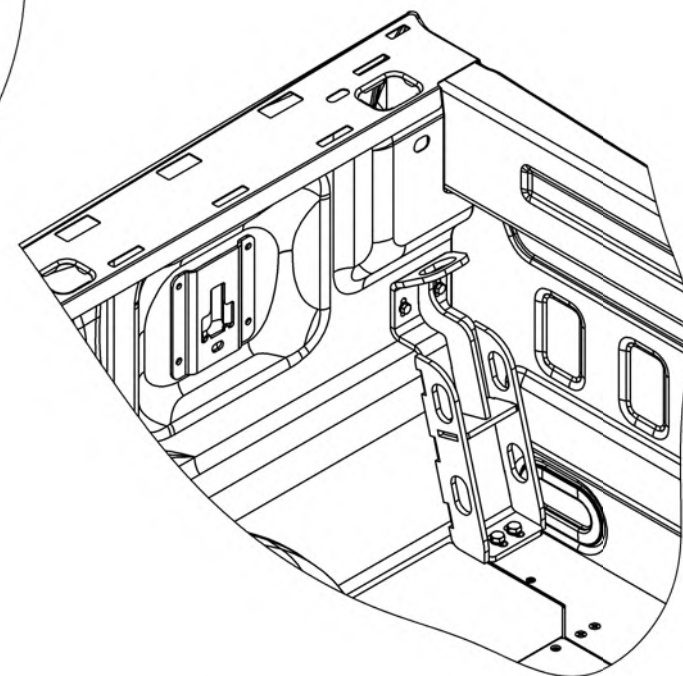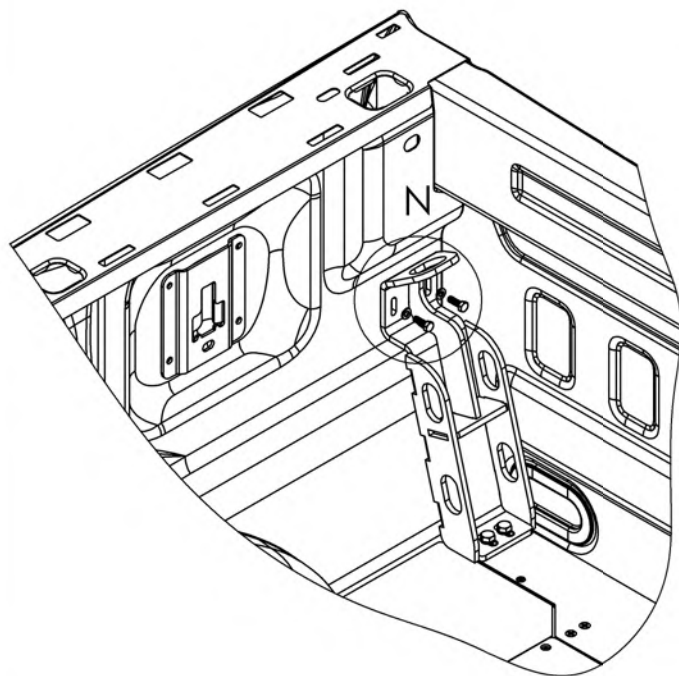


PART NO:	PP1605_00_INSTALL
VEHICLE:	FORD F-150 - 5.5
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet:	12 OF 14
Revision:	1





LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #9

-USE M8 FASTENERS AS SHOWN TO SECURE
D-RING BRACKETS (x2) TO BEDBOSS FRAME (BOTH SIDES)
(HAND TIGHTEN ONLY)

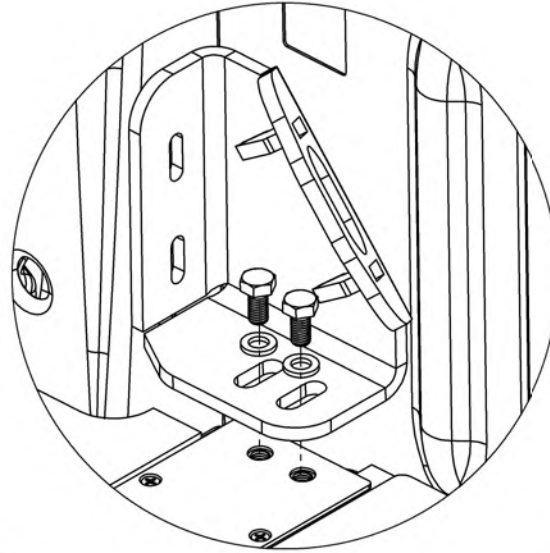

DETAIL ○
SCALE 1 : 2

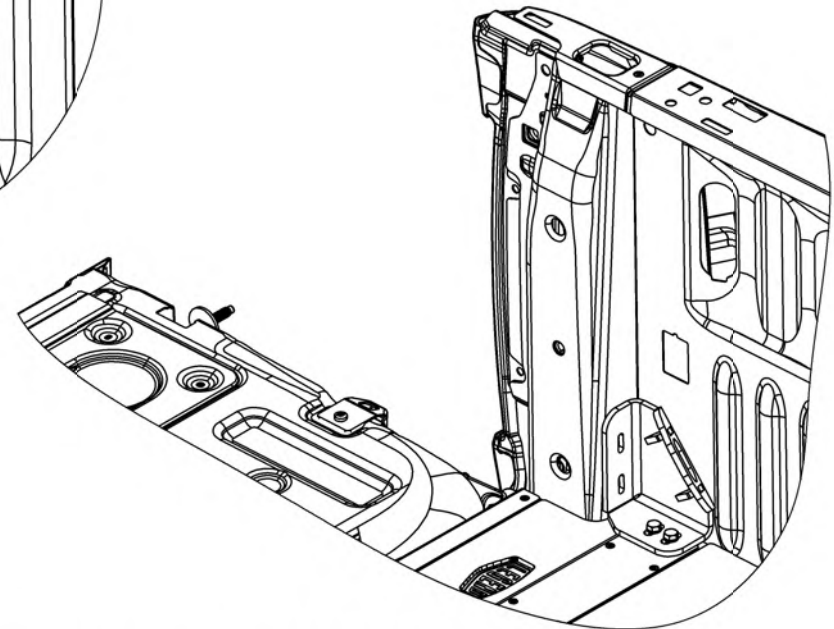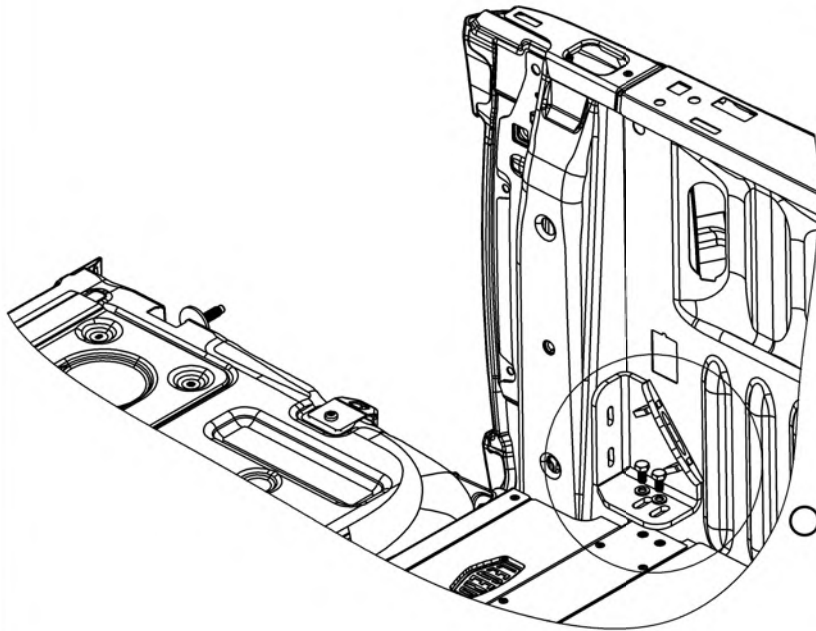


PART NO:	PP1605_00_INSTALL
VEHICLE:	FORD F-150 - 5.5
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet:	13 OF 14
Revision:	1



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM



INSTALL STEP #9

-USE M6 FASTENERS AS SHOWN TO SECURE
D-RING BRACKETS (x2) TO TRUCK BED (BOTH SIDES)
ONCE ALL D-RING BRACKETS ARE BOLTED
HAND TIGHT, PROCEED TO TIGHTEN ALL
FOUR D-RING'S HARDWARE SECURE

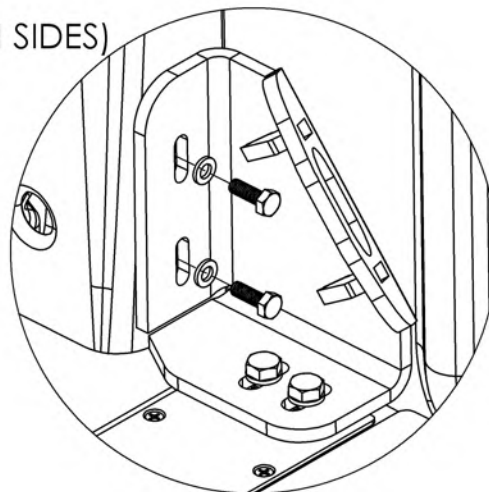

DETAIL P

SCALE 1 : 2

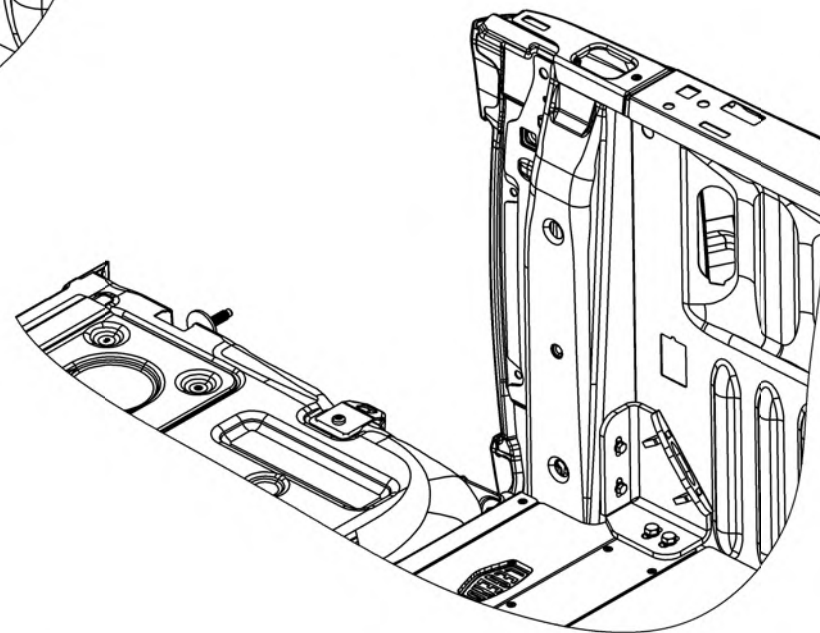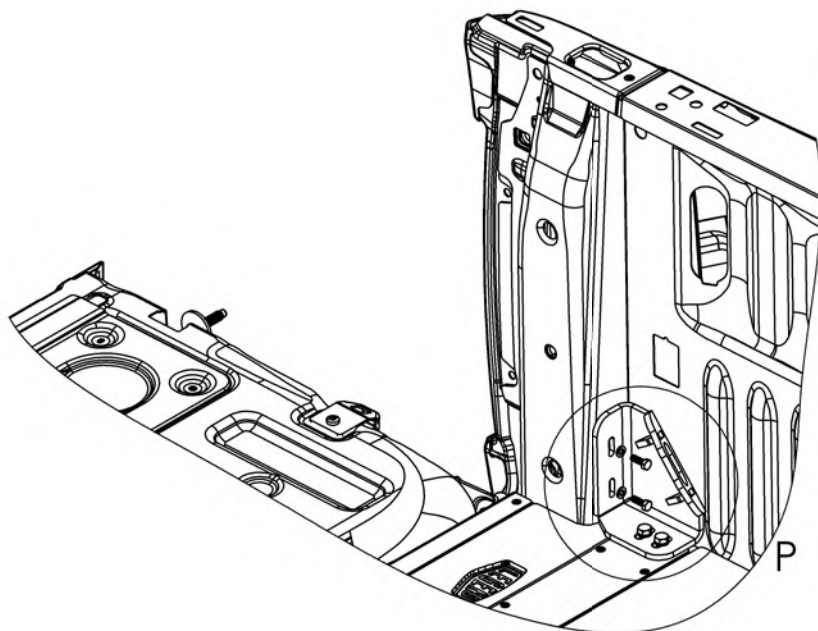

PART NO:	PP1605_00_INSTALL
VEHICLE:	FORD F-150 - 5.5
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet:	14 OF 14
Revision:	1



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM