


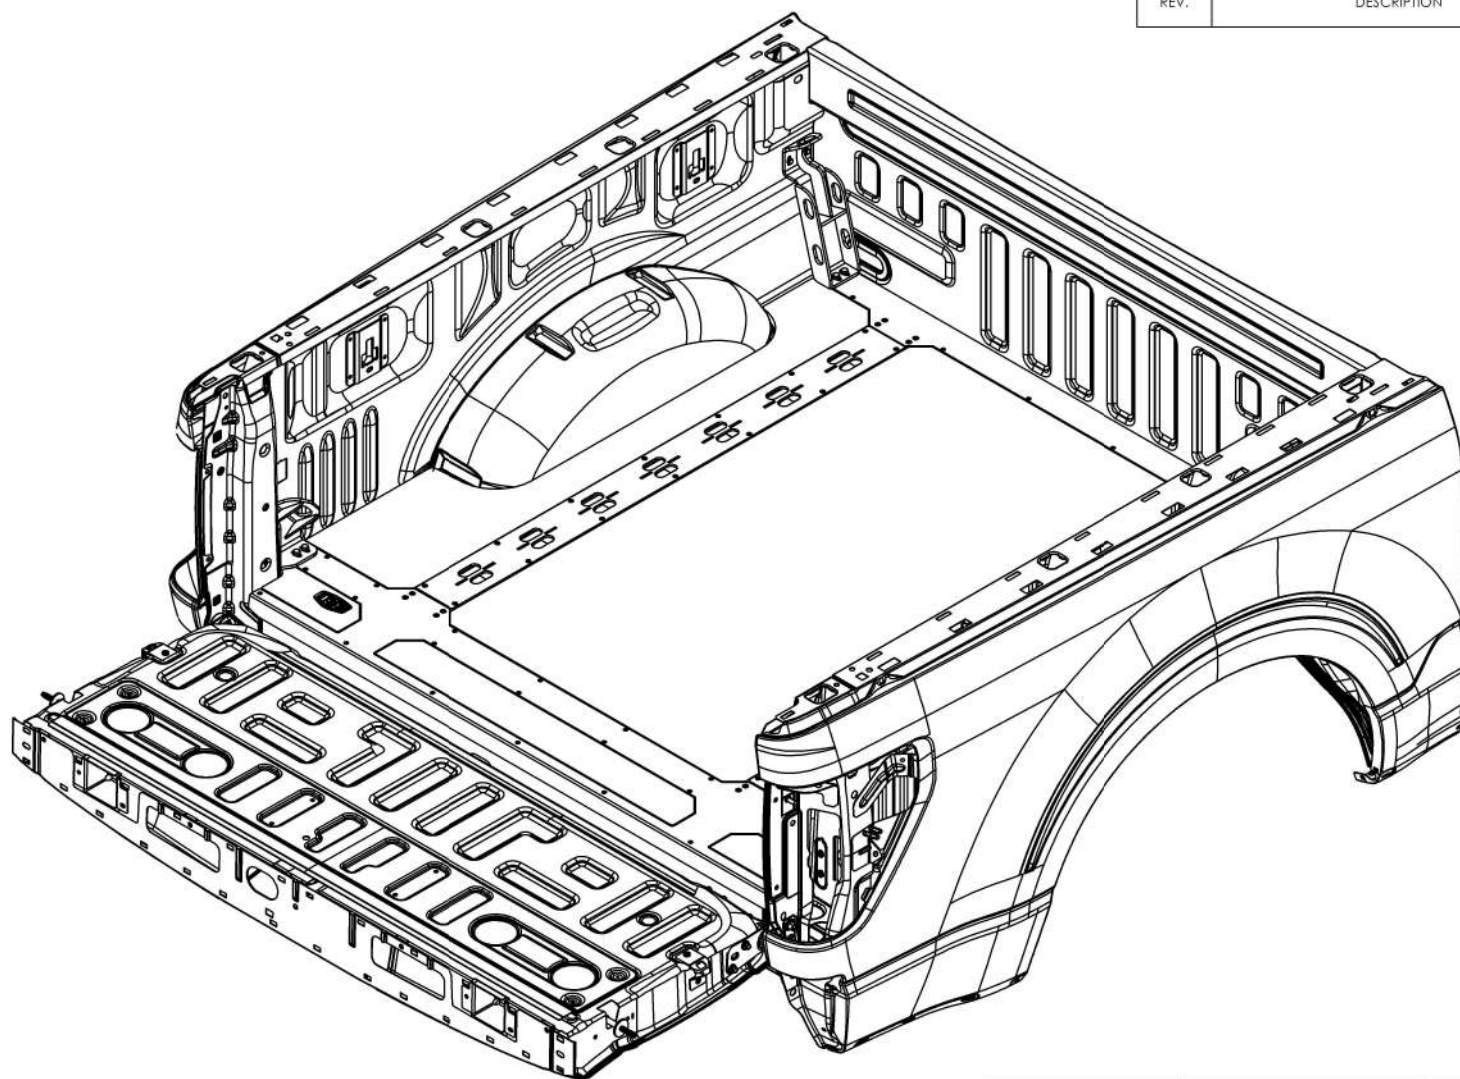


REVISIONS			
REV.	DESCRIPTION	DATE	APPROVED

PART NO:	PP1605_00_INSTALL
VEHICLE:	FORD F-150 - 5.5
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet:1 OF 13	Revision: -



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

HARDWARE PARTS LIST



8x M8 x 1.25 - 20mm - HHCS




8x M8 - LOCK WASHER




8x M6 x 1.0 - 18mm - HHCS




8x M6 - LOCK WASHER




16x M6 x 1.0 - 30mm - FHS

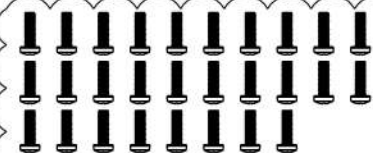


28x M4 x 0.7 - 14mm BHCS



28x M4 - LOCK WASHER

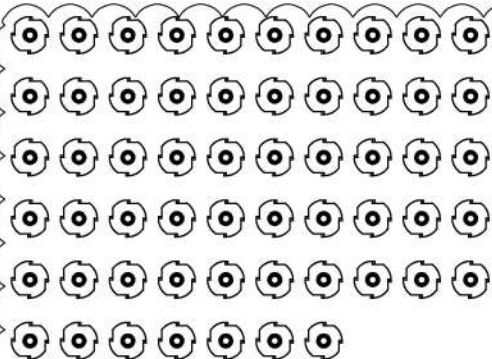

57x M4 x 0.7 - TEE NUT

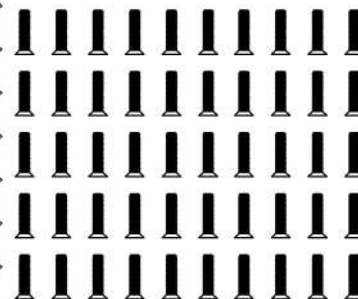

50x M4 x 0.7 - 18mm FHS



30" - 0.75" x 0.06" PEEL AND STICK PAD





112" - 1.5" x 0.06" PEEL AND STICK PAD

PART NO:	PP1605_00_INSTALL
VEHICLE:	FORD F-150 - 5.5
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 1 OF 13	Revision: -



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

PARTS LIST

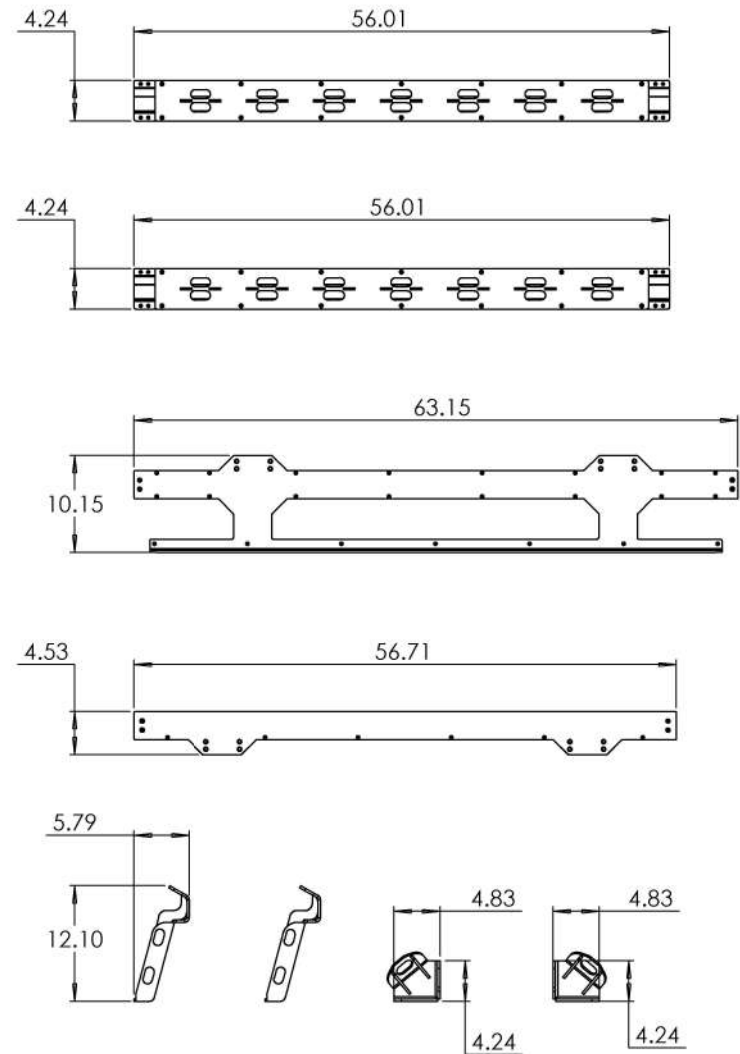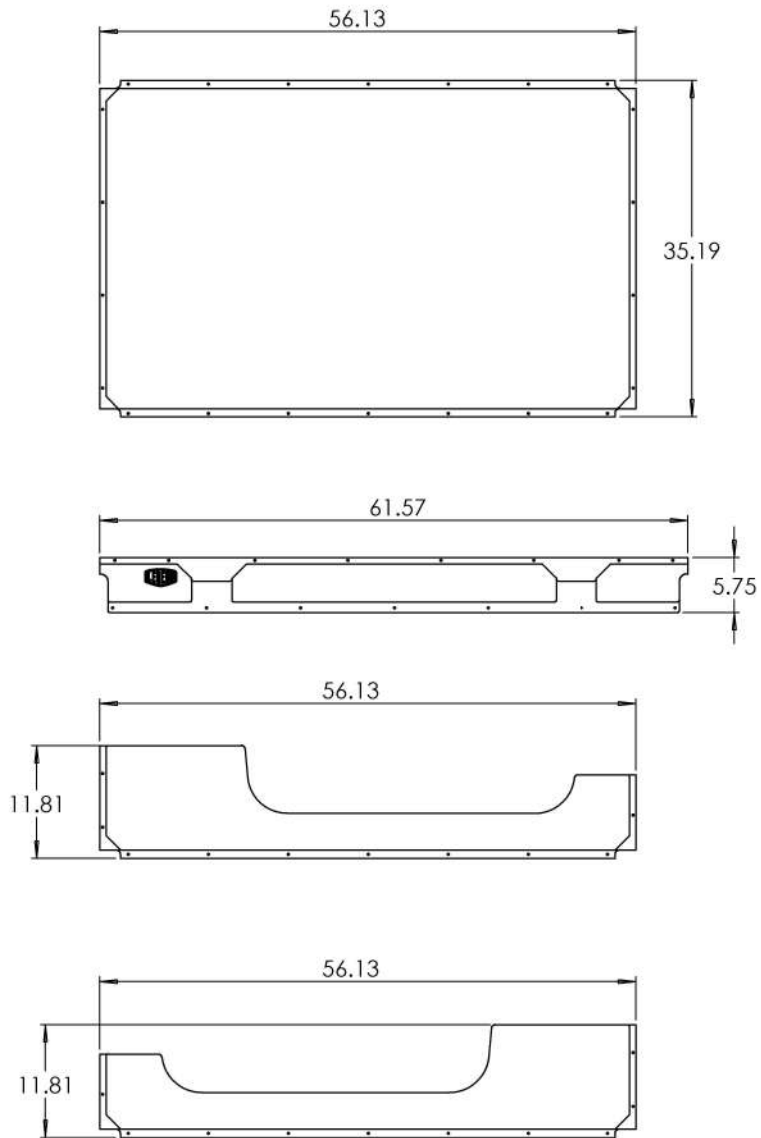



PART NO:	PP1605_00_INSTALL
VEHICLE:	FORD F-150 - 5.5
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet:	1 OF 13
Revision:	-



LEGEND FLEET SOLUTIONS
 56957 HWY 3, TILLSONBURG, ON
 519-688-1043 | INFO@LEGENDFLEET.COM


INSTALL STEP #1

- USE A HAMMER TO INSERT M4 TEE NUTS INTO UNDER SIDE OF EACH BED SURFACE AS SHOWN

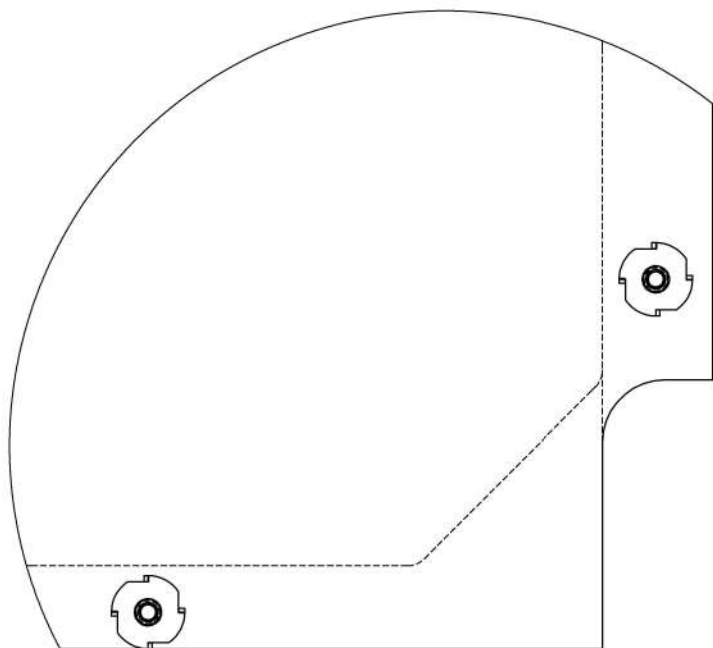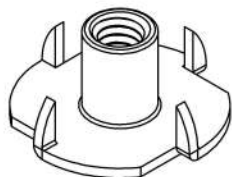

DETAIL A

SCALE 1:1

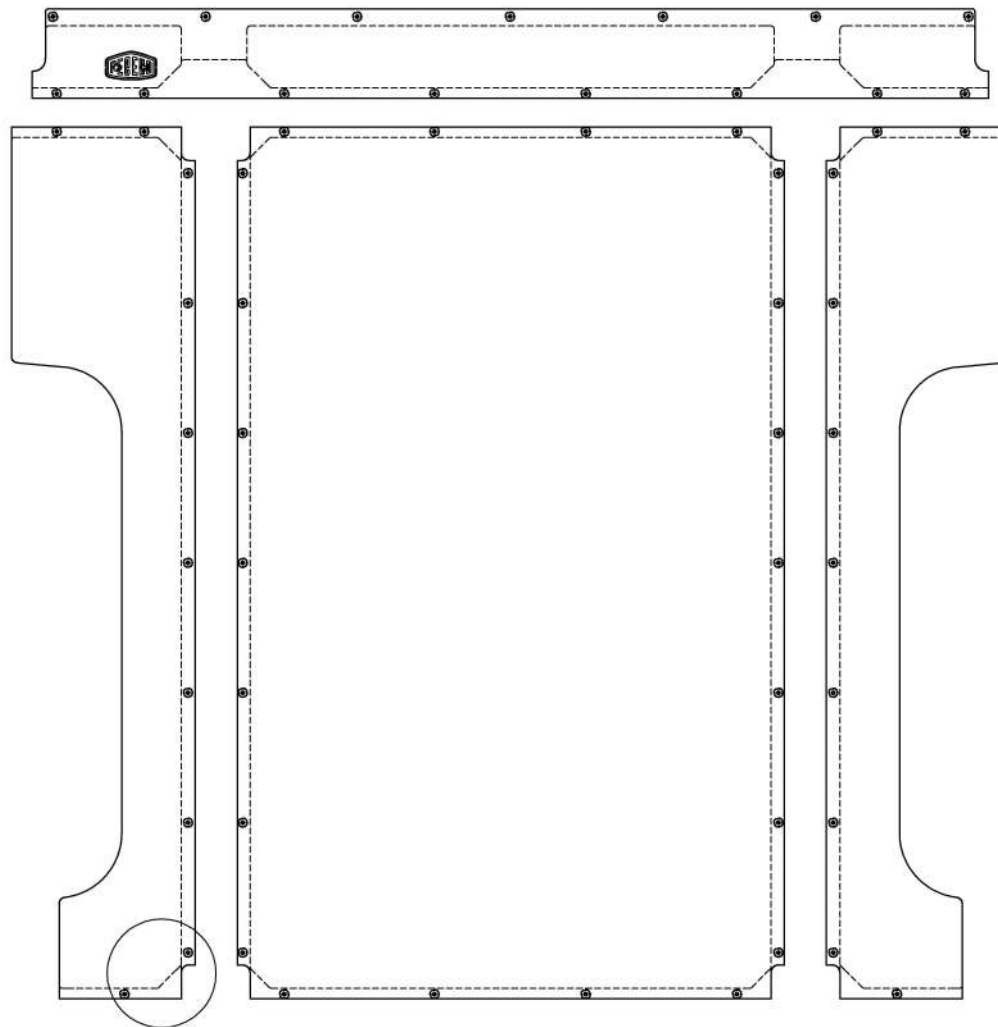

A


PART NO:	PP1605_00_INSTALL
VEHICLE:	FORD F-150 - 5.5
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet:1 OF 13	Revision: -



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #2

- PLACE THE PEEL AND STICK NEOPRENE TO THE UNDER SIDE OF RAILS (x2) AS SHOWN

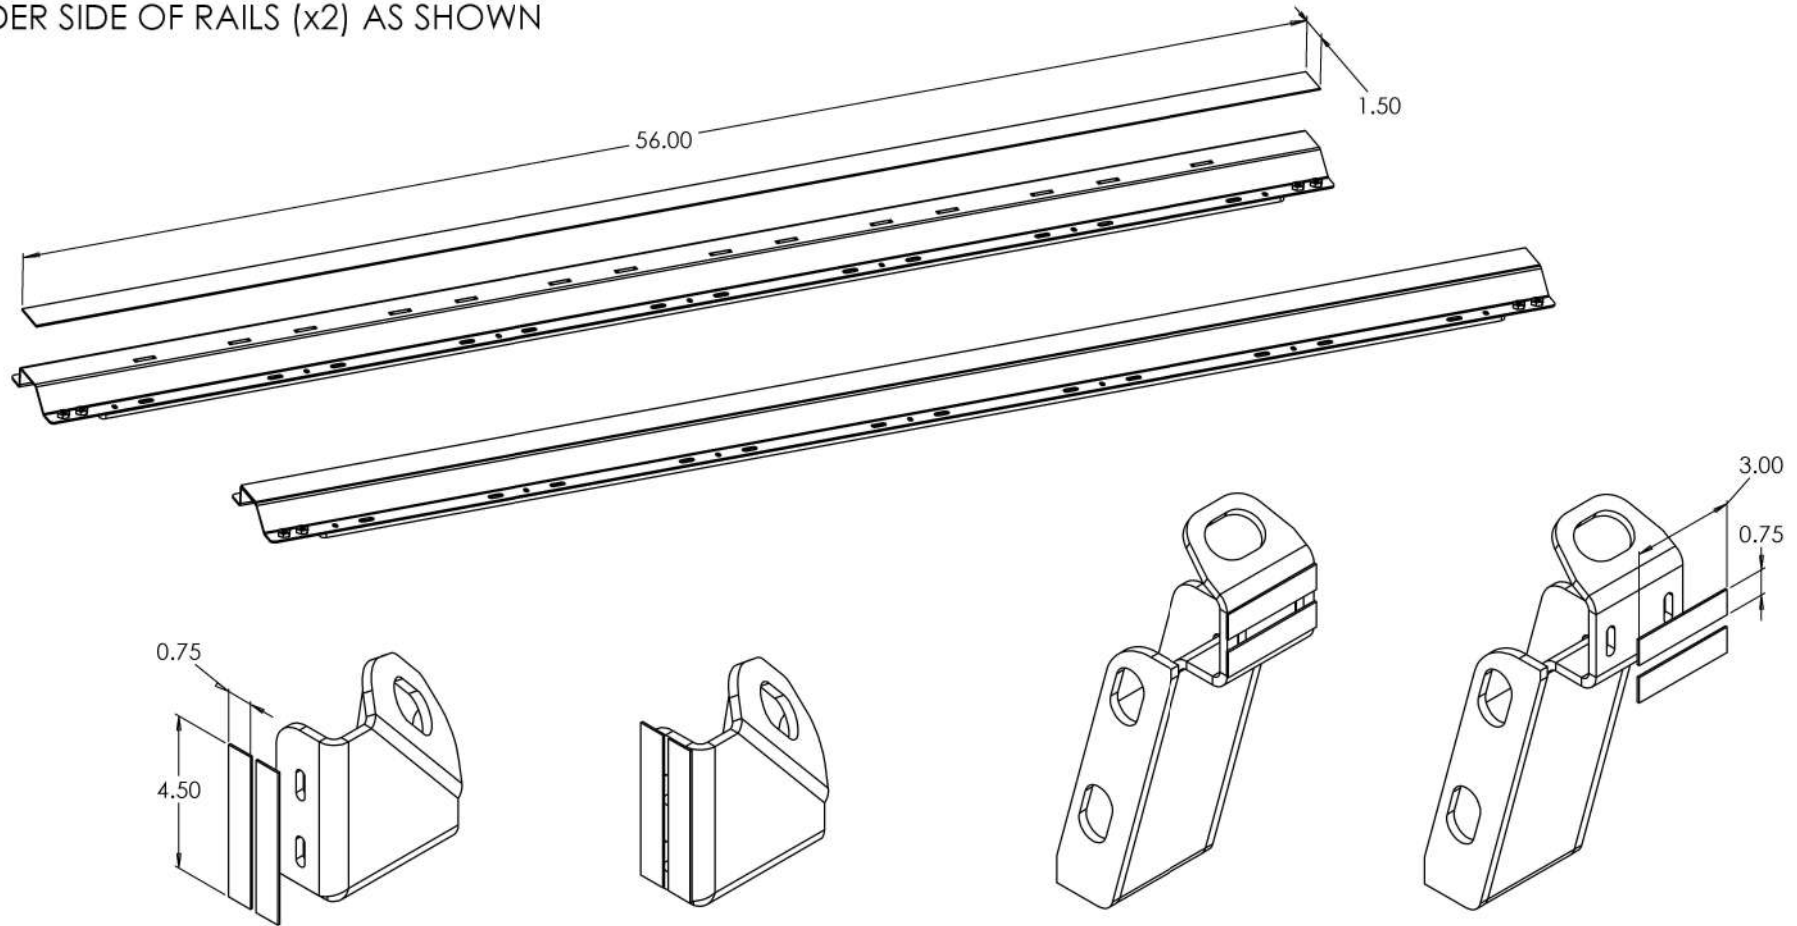

- PLACE THE PEEL AND STICK NEOPRENE TO THE D-RING BRACKETS (x2 & x2) AS SHOWN

PART NO:	PP1605_00_INSTALL
VEHICLE:	FORD F-150 - 5.5
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 1 OF 13	Revision: -




LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM



INSTALL STEP #3

- FASTEN THE FOUR FRAME SECTIONS TOGETHER AS SHOWN USING THE 16x M6 x 1.0 - 30mm FHS


NOTE PROFILE ORIENTATION

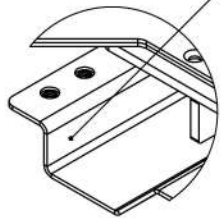

DETAIL I
SCALE 1:2

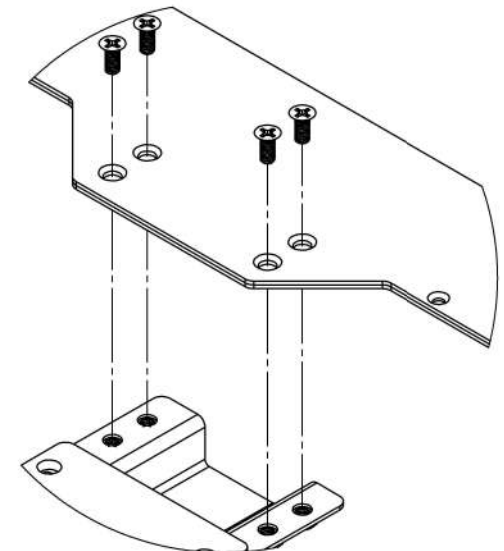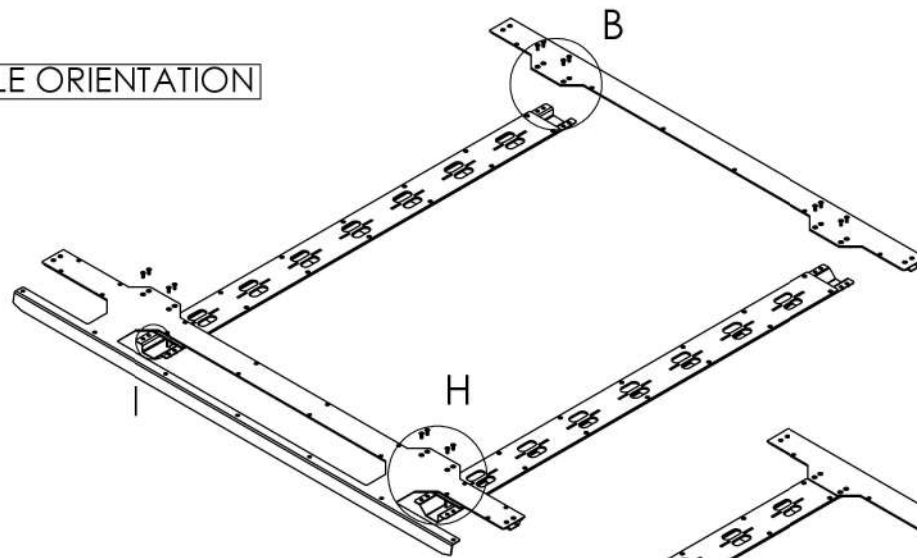

DETAIL B
SCALE 1:2

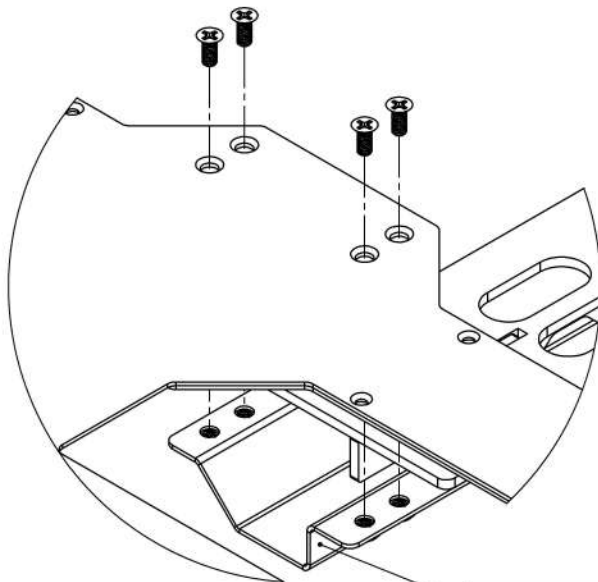

DETAIL H
SCALE 1:2

NOTE PROFILE ORIENTATION




PART NO:	PP1605_00_INSTALL
VEHICLE:	FORD F-150 - 5.5
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet:1 OF 13	Revision: -



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #4

- USE M4 FASTENERS AS SHOWN TO SECURE MIDDLE BED SURFACE TO THE FRAME

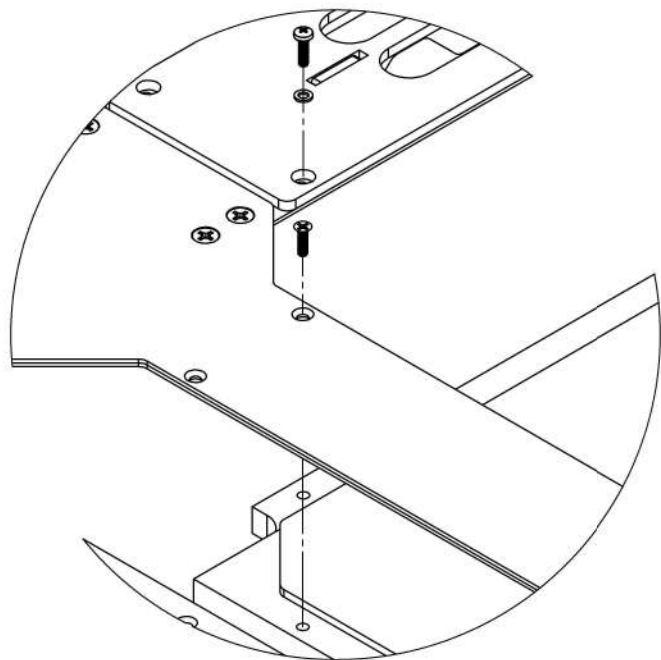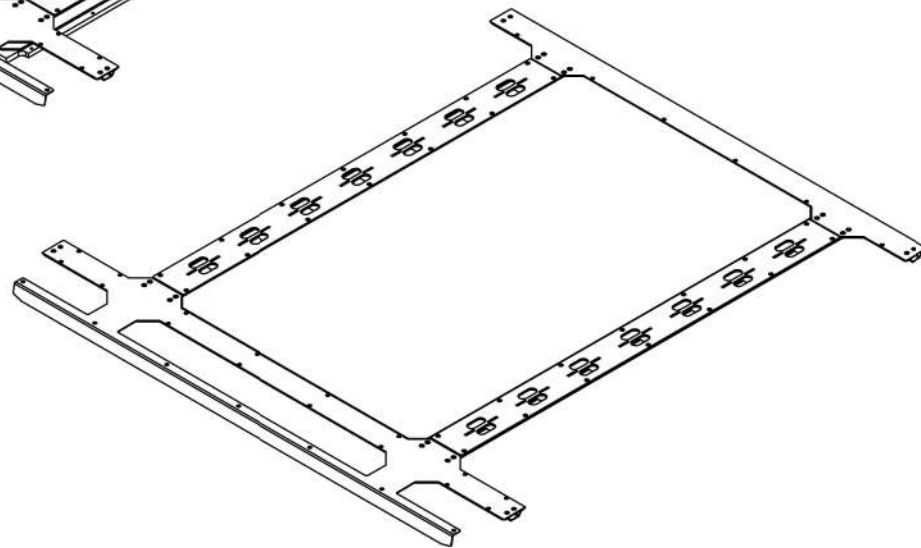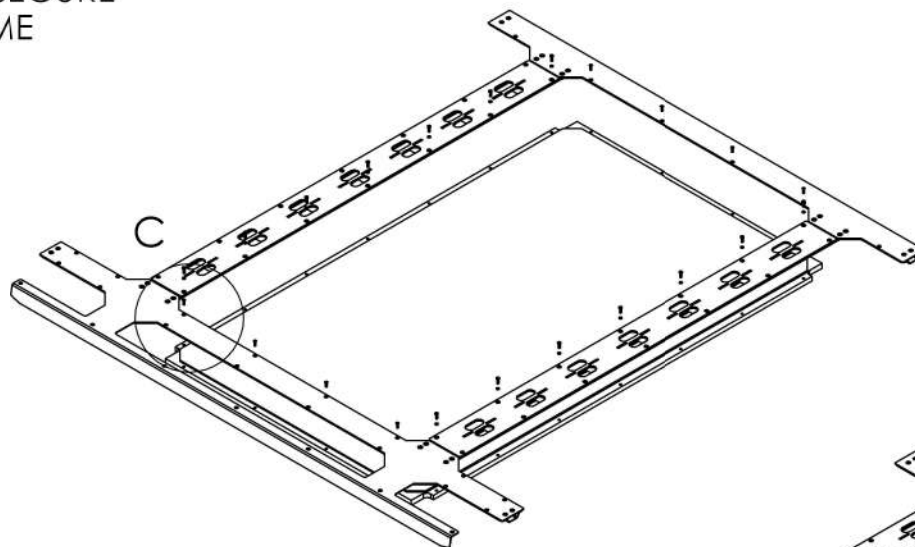

DETAIL C

SCALE 1 : 2


PART NO:	PP1605_00_INSTALL
VEHICLE:	FORD F-150 - 5.5
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet:1 OF 13	Revision: -



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #5


- USE M4 FASTENERS AS SHOWN TO SECURE OUTER BED SURFACES TO THE FRAME

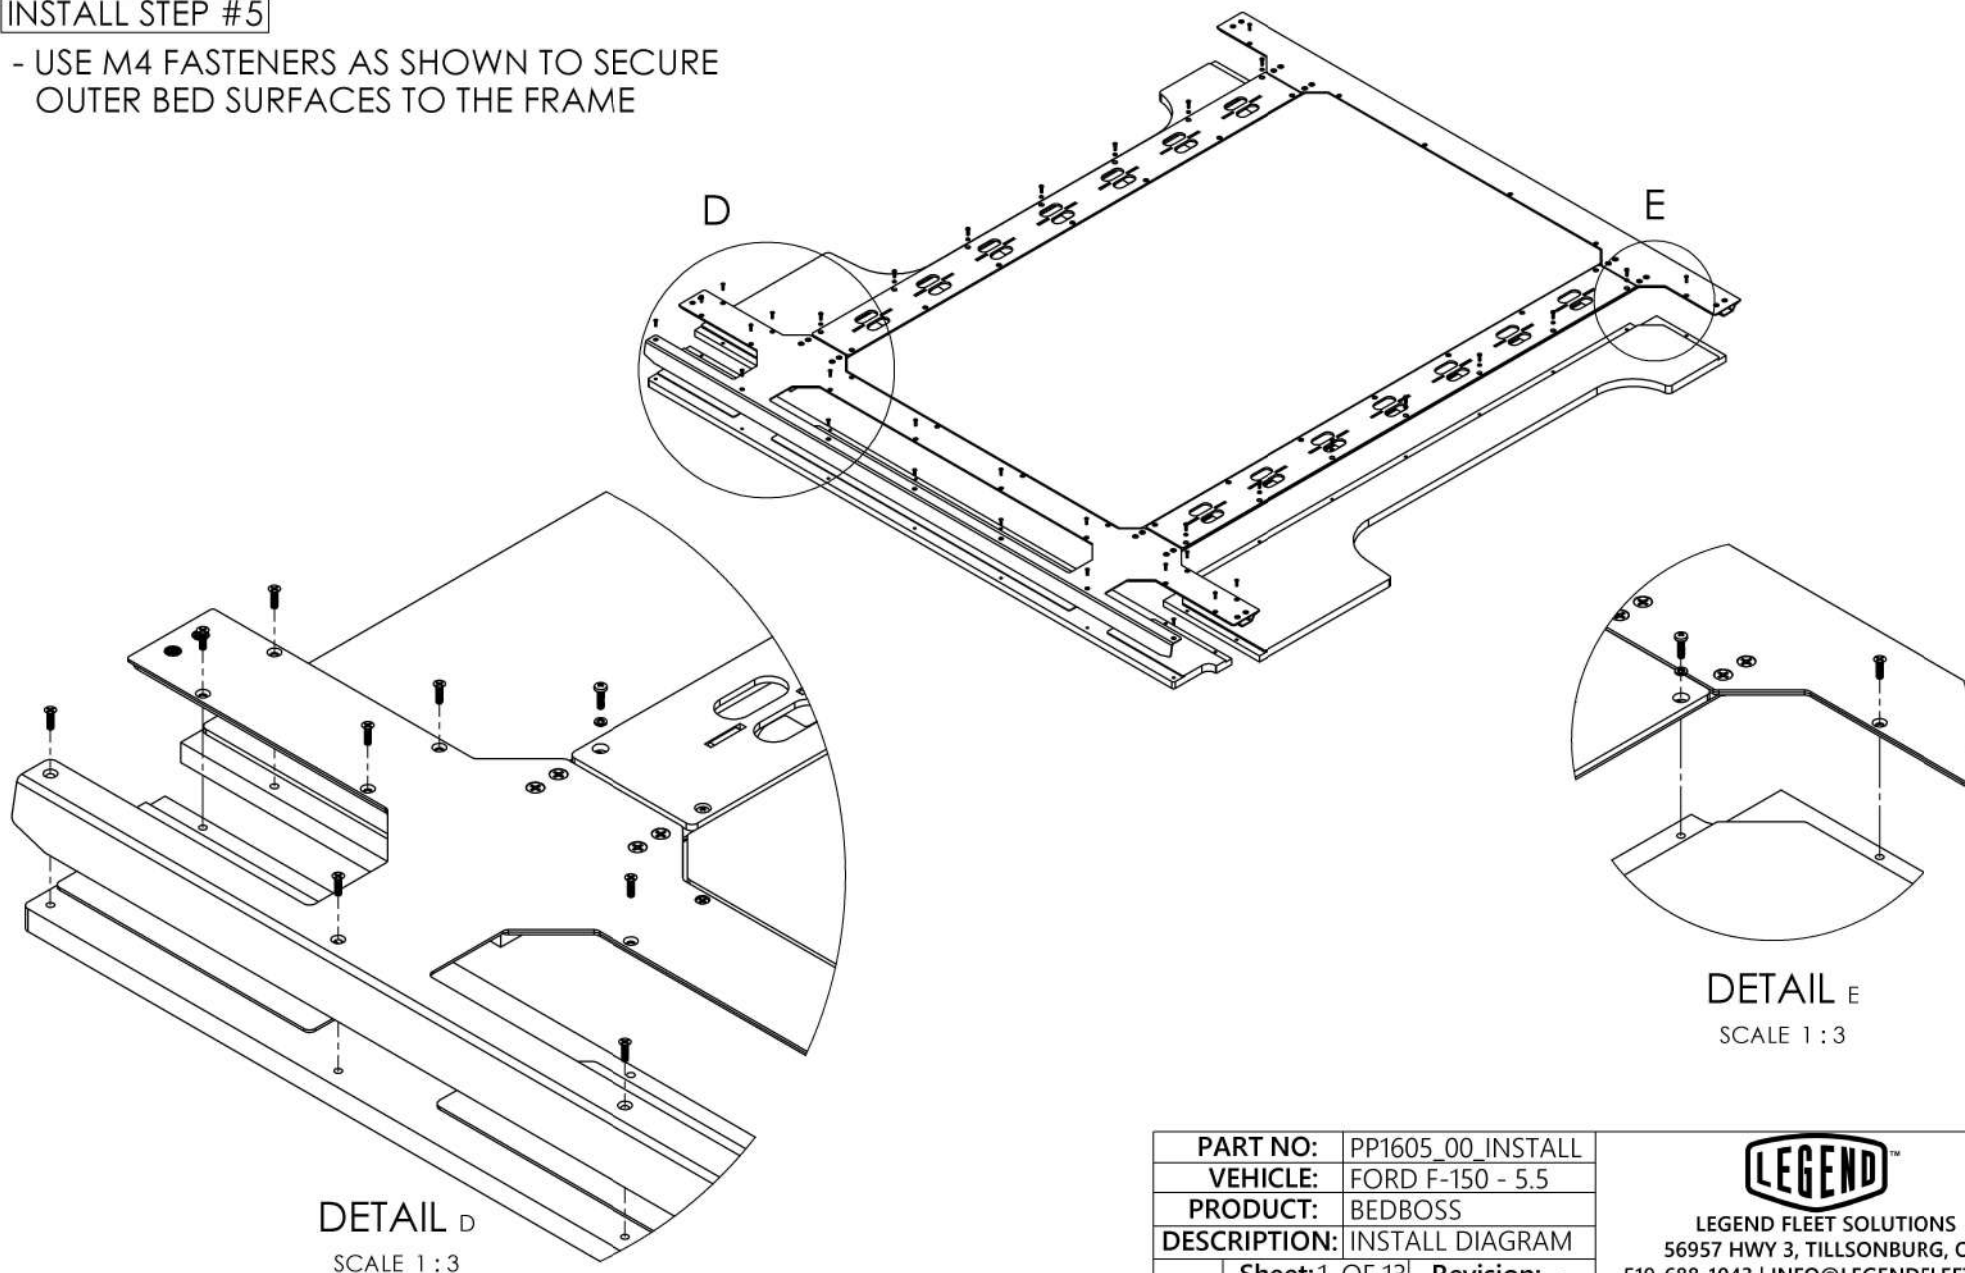

PART NO:	PP1605_00_INSTALL
VEHICLE:	FORD F-150 - 5.5
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet:1 OF 13	Revision: -



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

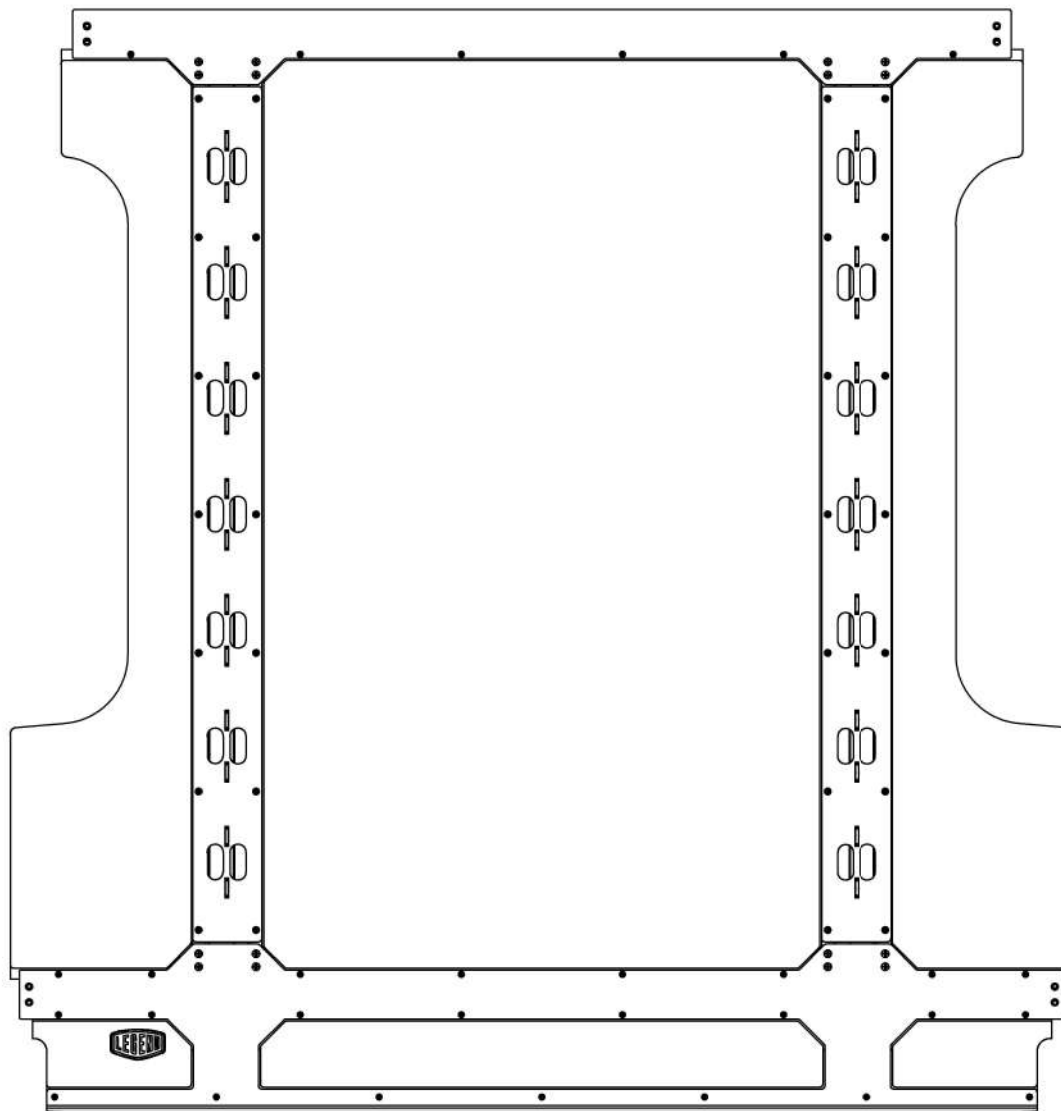


PART NO:	PP1605_00_INSTALL
VEHICLE:	FORD F-150 - 5.5
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 1 OF 13	Revision: -



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #6

- REMOVE OEM D-RING BRACKETS FROM TRUCK
- USE M8 FASTENERS AS SHOWN TO SECURE D-RING BRACKETS (x2) TO BEDBOSS FRAME

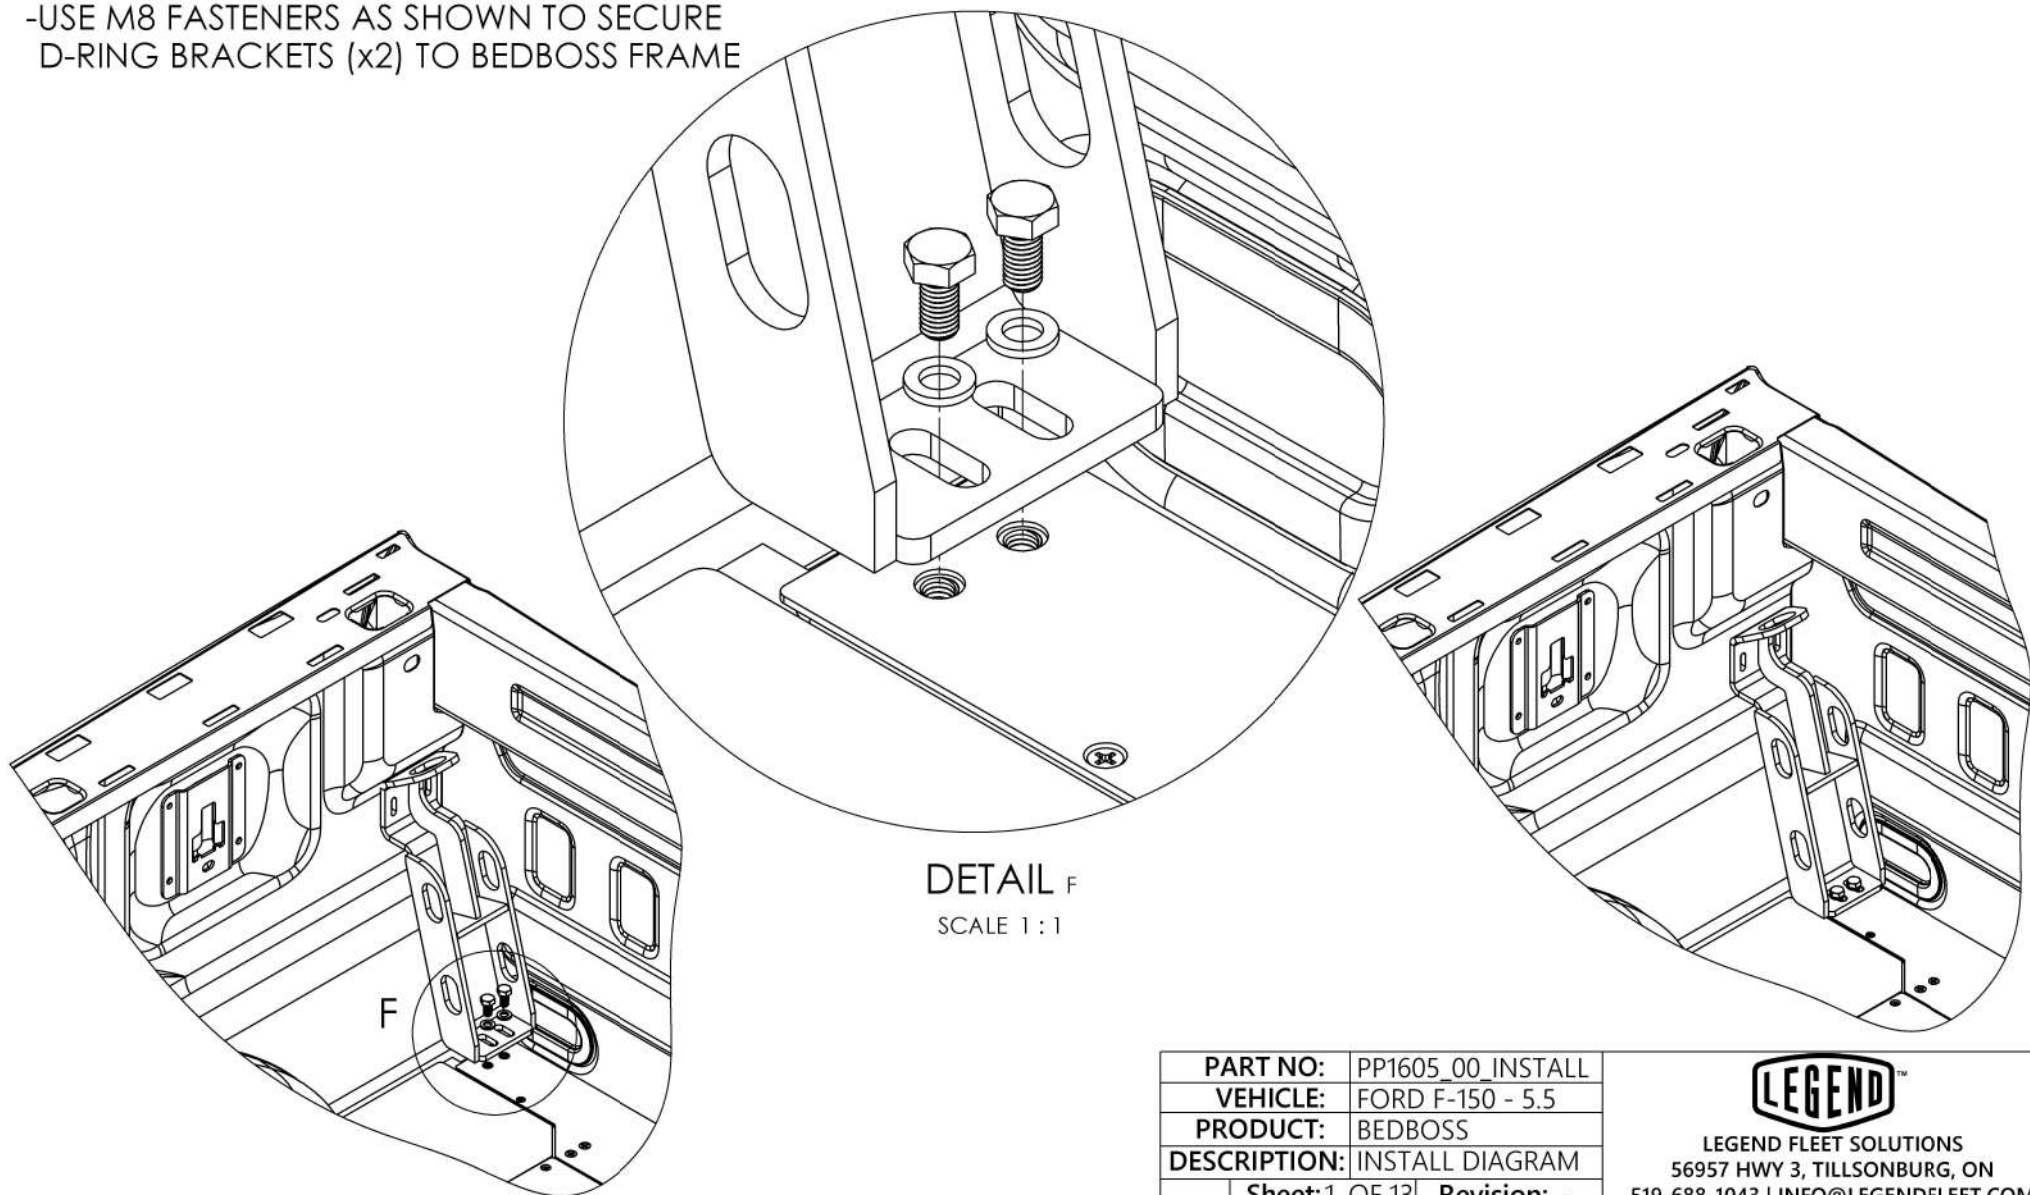

DETAIL F
SCALE 1 : 1


PART NO:	PP1605_00_INSTALL
VEHICLE:	FORD F-150 - 5.5
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet:1 OF 13	Revision: -





LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #7

-USE M6 FASTENERS AS SHOWN TO SECURE
D-RING BRACKETS (x2) TO TRUCK BED

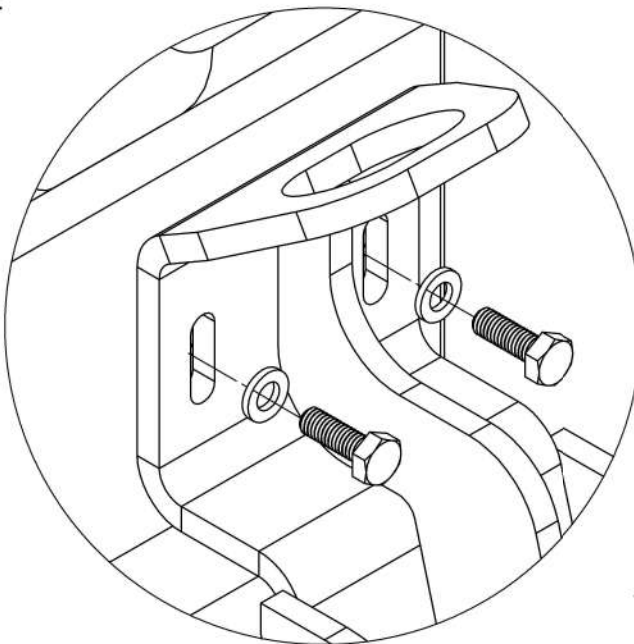

DETAIL N
SCALE 1:1

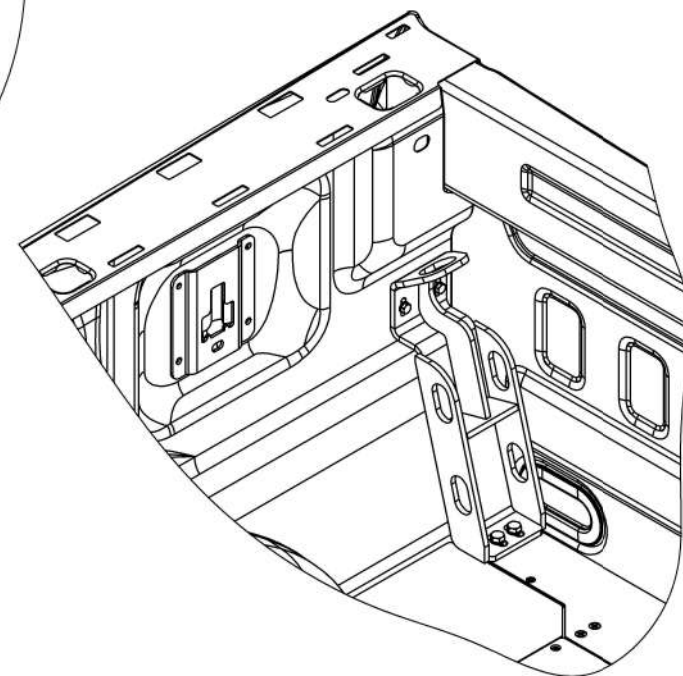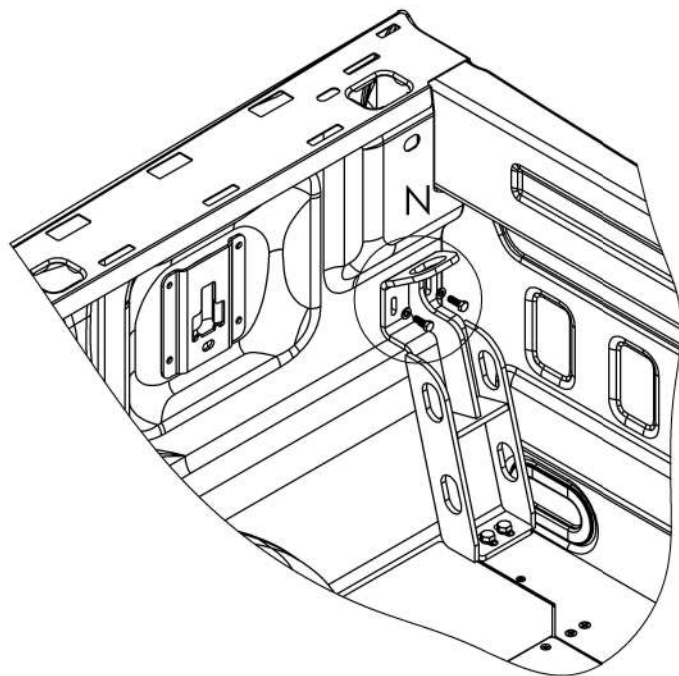


PART NO:	PP1605_00_INSTALL
VEHICLE:	FORD F-150 - 5.5
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet:1 OF 13	Revision: -





LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #8

- REMOVE OEM D-RING BRACKETS FROM TRUCK
- USE M8 FASTENERS AS SHOWN TO SECURE D-RING BRACKETS (x2) TO BEDBOSS FRAME

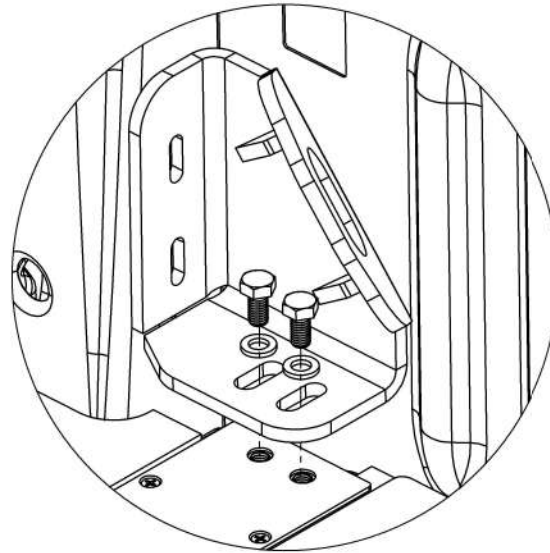

DETAIL ○
SCALE 1 : 2

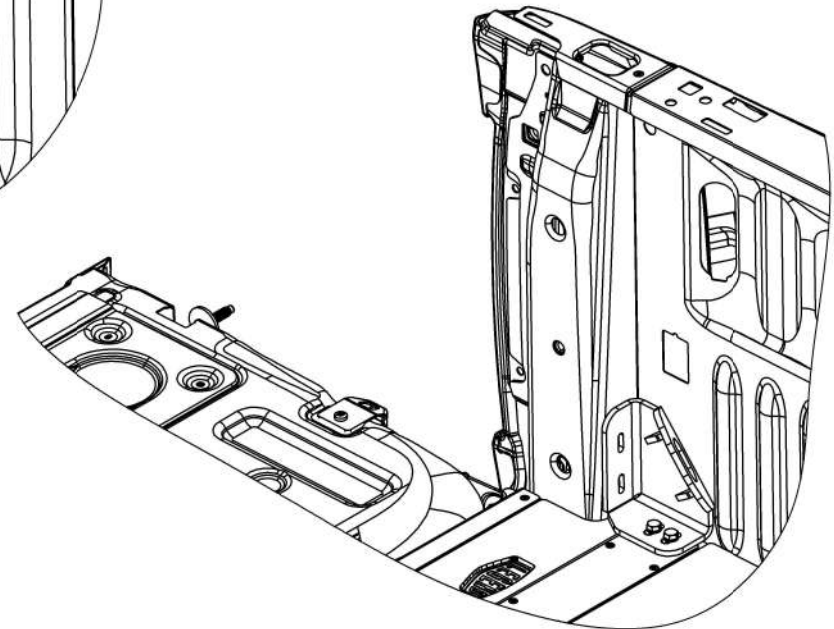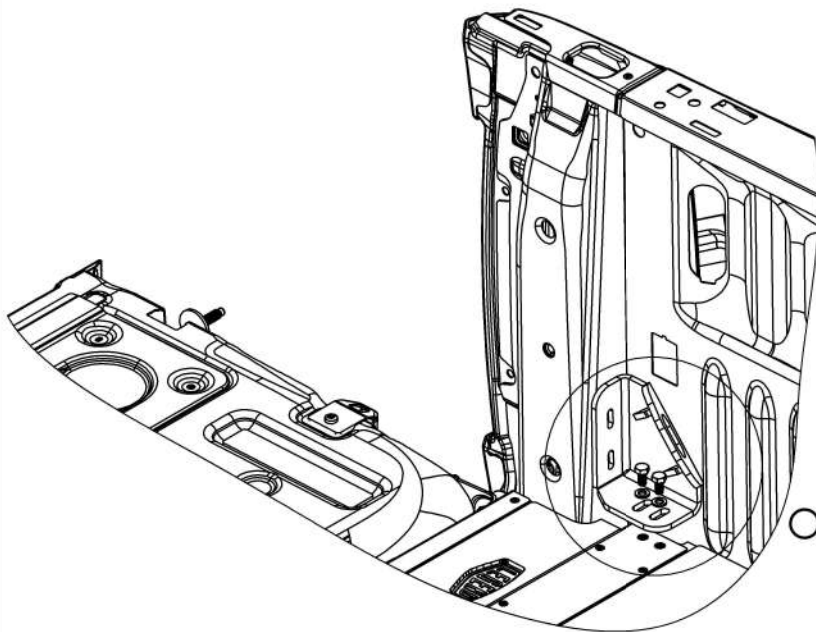


PART NO:	PP1605_00_INSTALL
VEHICLE:	FORD F-150 - 5.5
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet:1 OF 13	Revision: -





LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #9

-USE M6 FASTENERS AS SHOWN TO SECURE
D-RING BRACKETS (x2) TO TRUCK BED

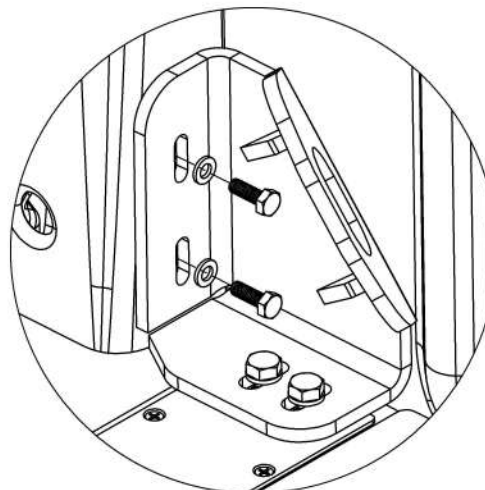

DETAIL P
SCALE 1:2

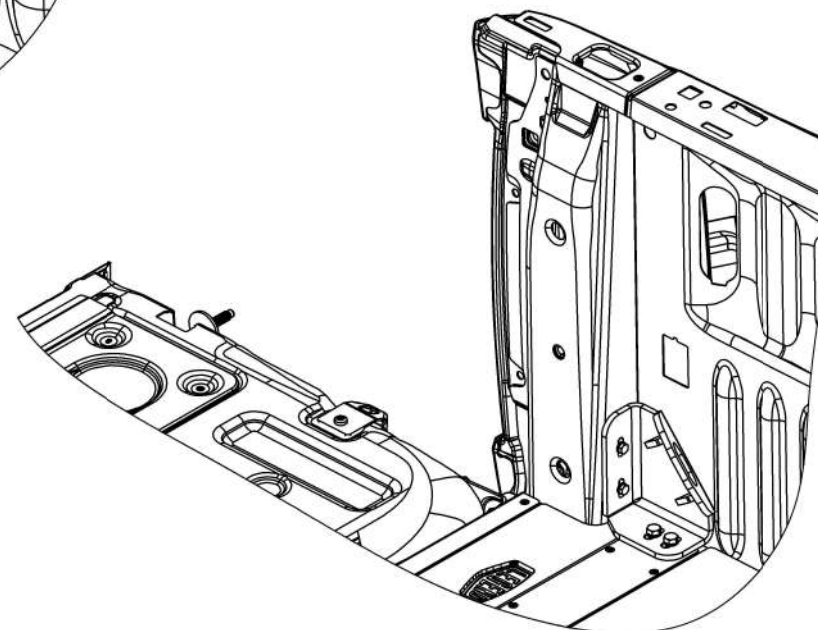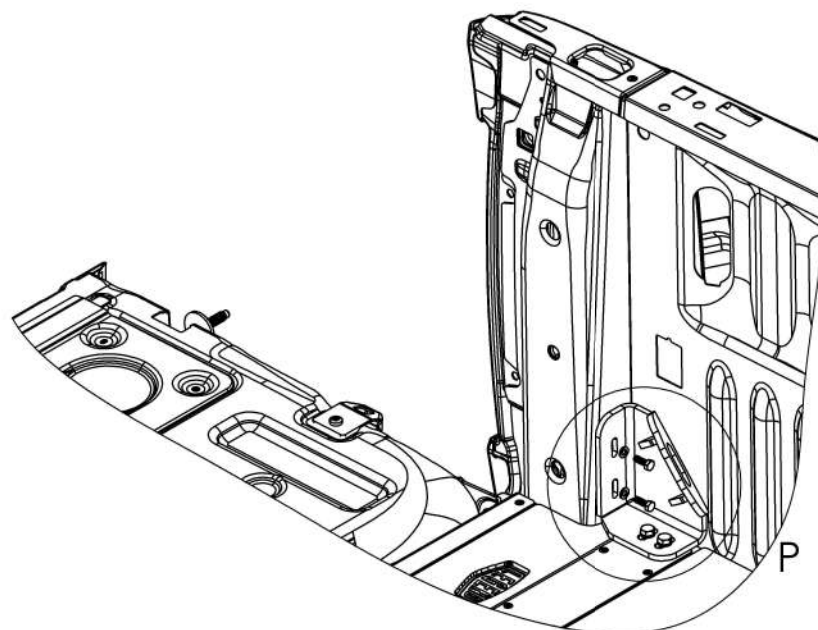

PART NO:	PP1605_00_INSTALL
VEHICLE:	FORD F-150 - 5.5
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 1 OF 13	Revision: -



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM