


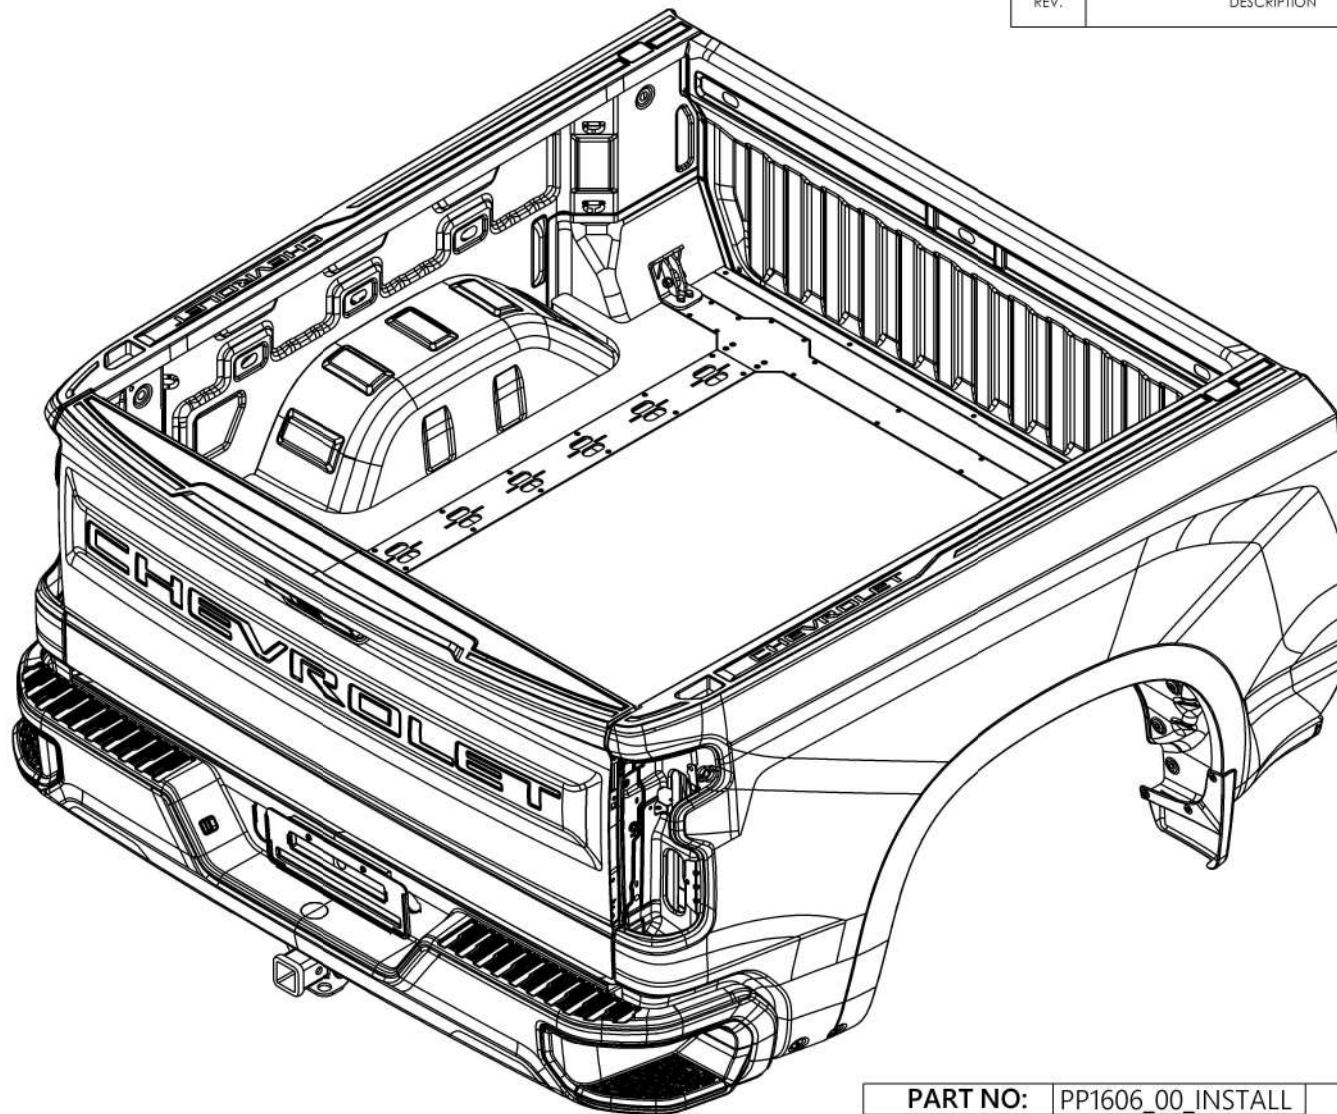


REVISIONS			
REV.	DESCRIPTION	DATE	APPROVED

PART NO:	PP1606_00_INSTALL
VEHICLE:	CHEV - 5.5'
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 1 OF 15	Revision: -



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

HARDWARE PARTS LIST

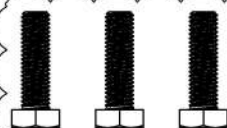

3x M10 x 1.5 - 35mm - HHCS



1x M10 x 1.5 - 45mm - HHCS



1x M10 x 1.5 LOCK NUT



1x M10 - WASHER




3x M10 - LOCK WASHER




8x M8 x 1.25 - 20mm - HHCS




3x M8 - LOCK WASHER

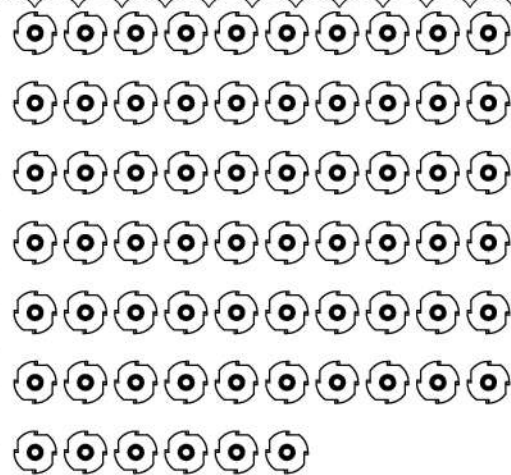


76x M4 - TEE NUT




8x M6 x 1.0 - 14mm - FHS

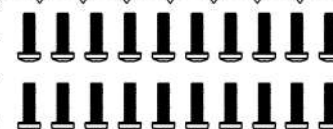

28x M4 x 0.7 - 14mm - BHS

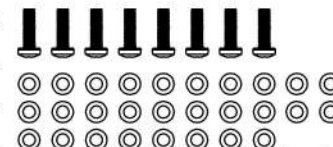


28x M4 - LOCK WASHER

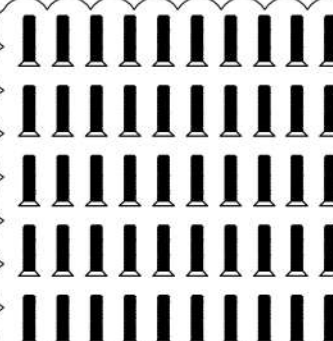

50x M4 x 0.7 - 18mm - FHS



107" - 1.5" X 0.06" - PEEL AND STICK PAD












12" - 0.75" X 0.06" - PEEL AND STICK PAD

PART NO:	PP1606_00_INSTALL
VEHICLE:	CHEV - 5.5'
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 2 OF 15	Revision: -



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

PARTS LIST

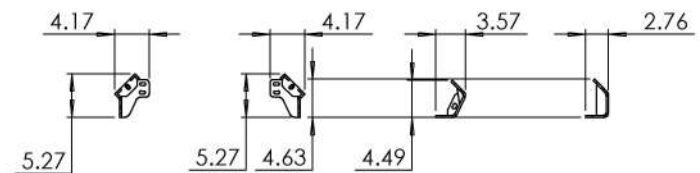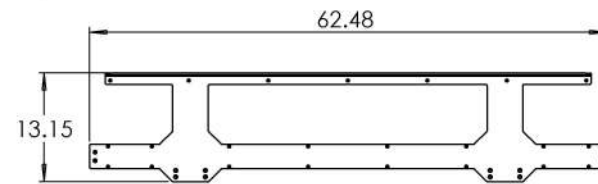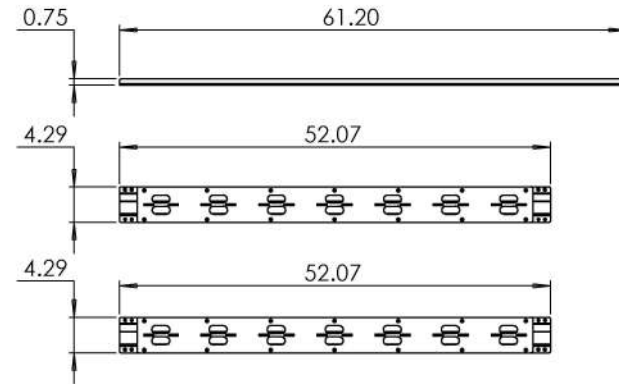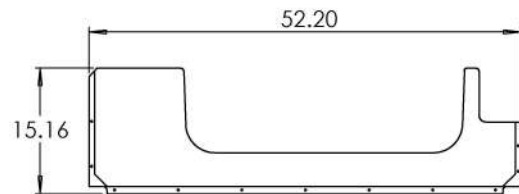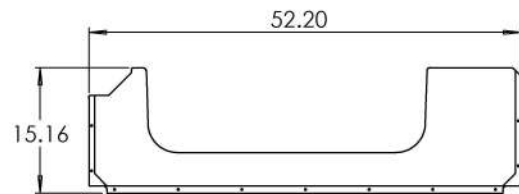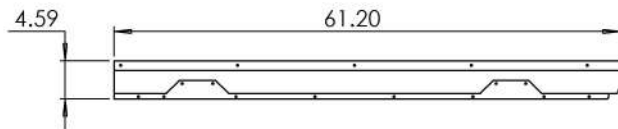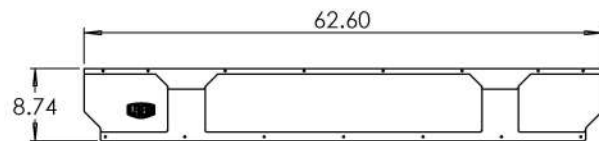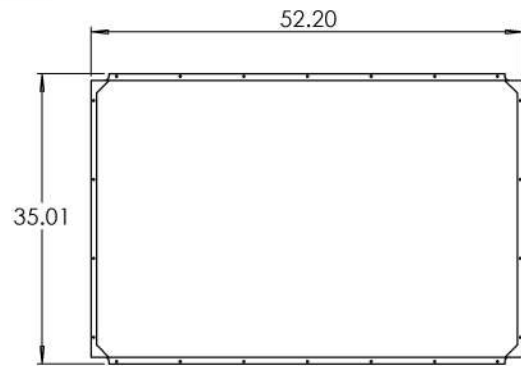



PART NO:	PP1606_00_INSTALL
VEHICLE:	CHEV - 5.5'
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 1 OF 15	Revision: -



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM


INSTALL STEP #1

- USE HAMMER TO INSERT M4 TEE NUTS INTO UNDER SIDE OF EACH BED SURFACE AS SHOWN

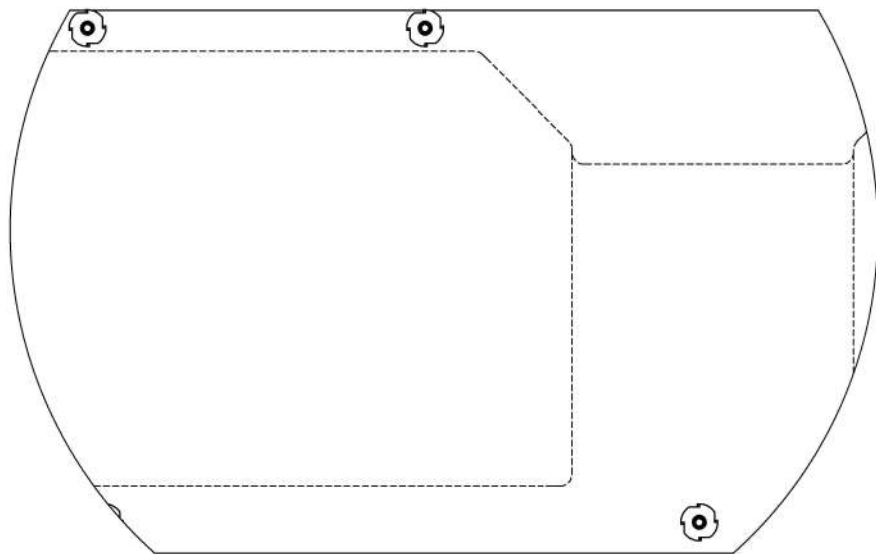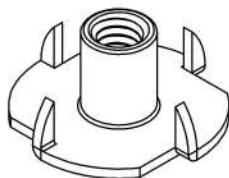

DETAIL A

SCALE 1 : 2

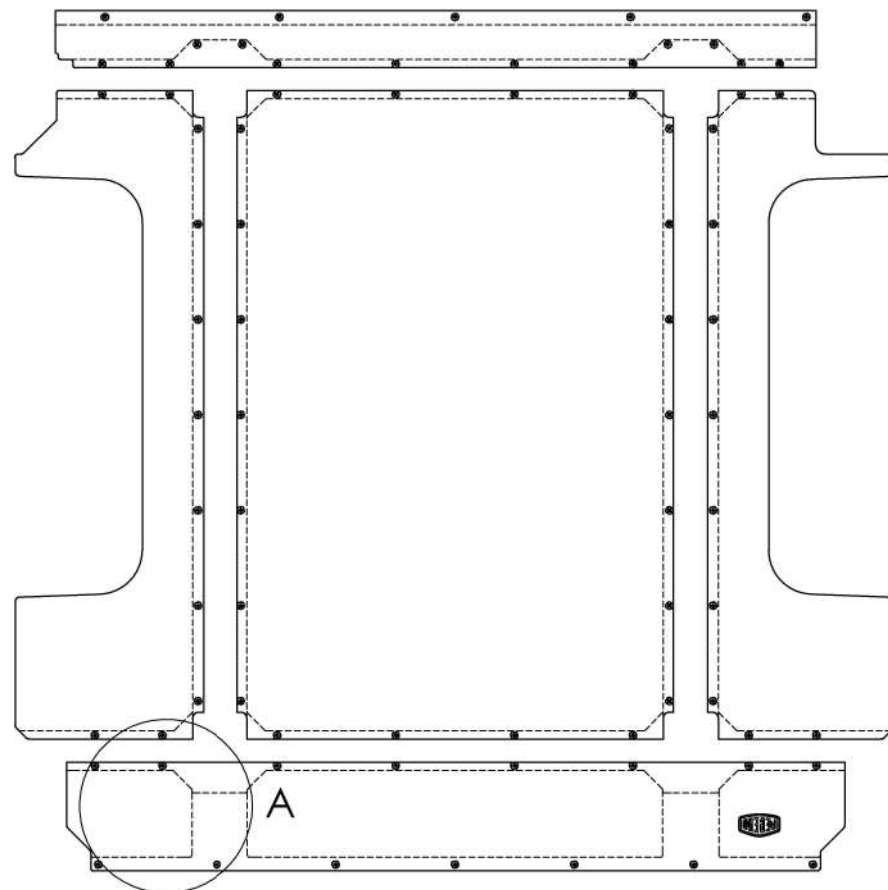







PART NO:	PP1606_00_INSTALL
VEHICLE:	CHEV - 5.5'
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 1 OF 15	Revision: -



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #2

- PLACE THE PEEL AND STICK NEOPRENE TO THE UNDER SIDE OF RAILS (x2) AS SHOWN

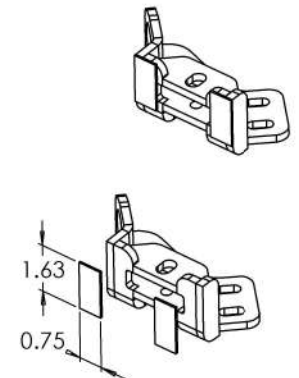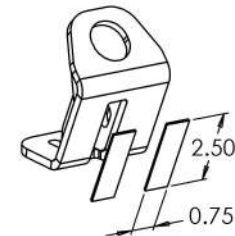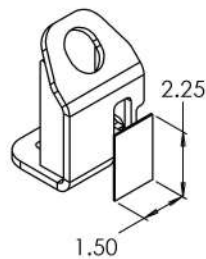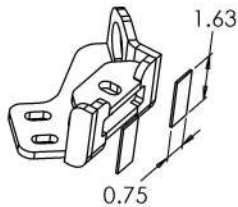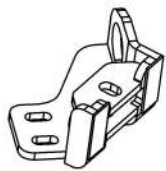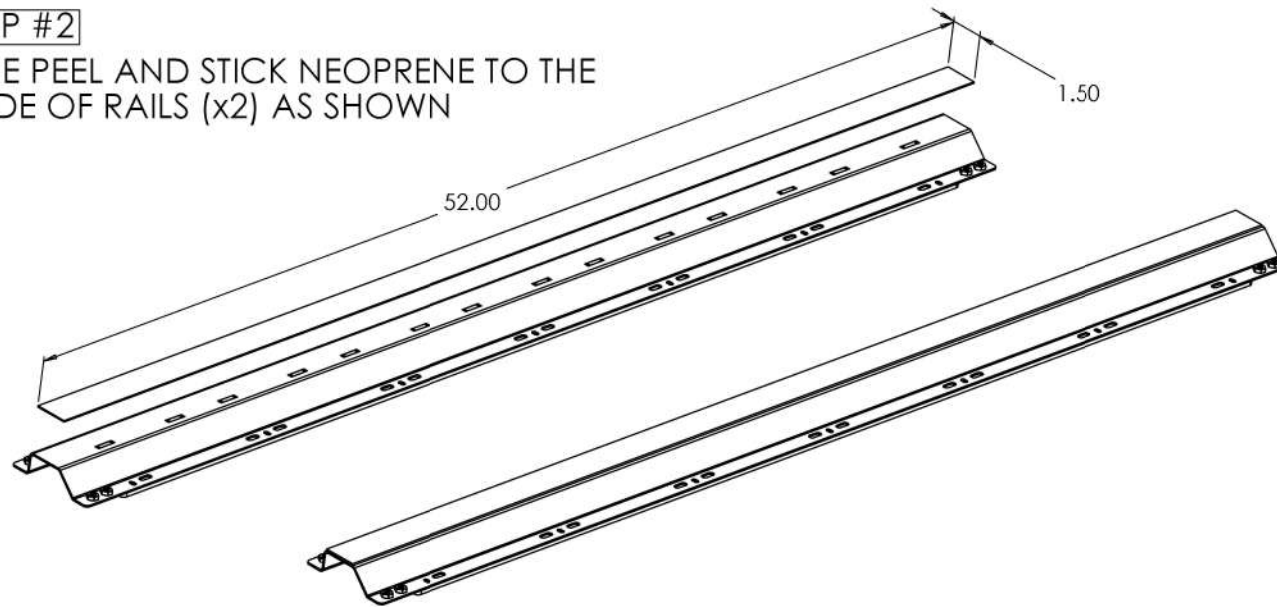

- PLACE THE PEEL AND STICK NEOPRENE TO THE D-RING BRACKETS AS SHOWN

PART NO:	PP1606_00_INSTALL
VEHICLE:	CHEV - 5.5'
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 1 OF 15	Revision: -




LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #3


- FASTEN THE FOUR FRAME SECTIONS TOGETHER AS SHOWN USING THE 16x M6 x 1.0 - 14mm FHS

NOTE COMPONENT ORIENTATION

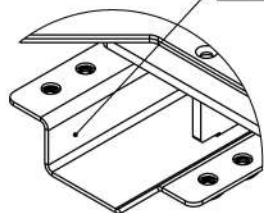

DETAIL I



SCALE 1:2

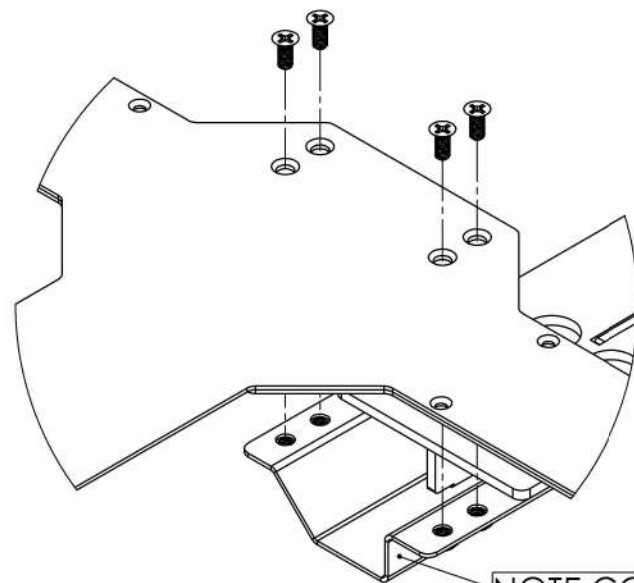

DETAIL H

SCALE 1:2

NOTE COMPONENT ORIENTATION

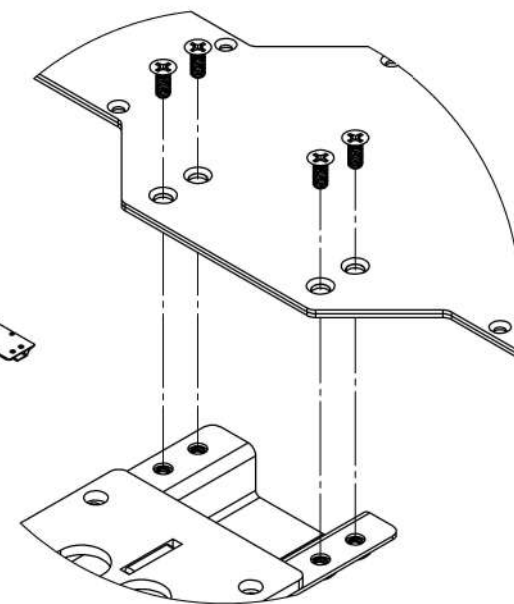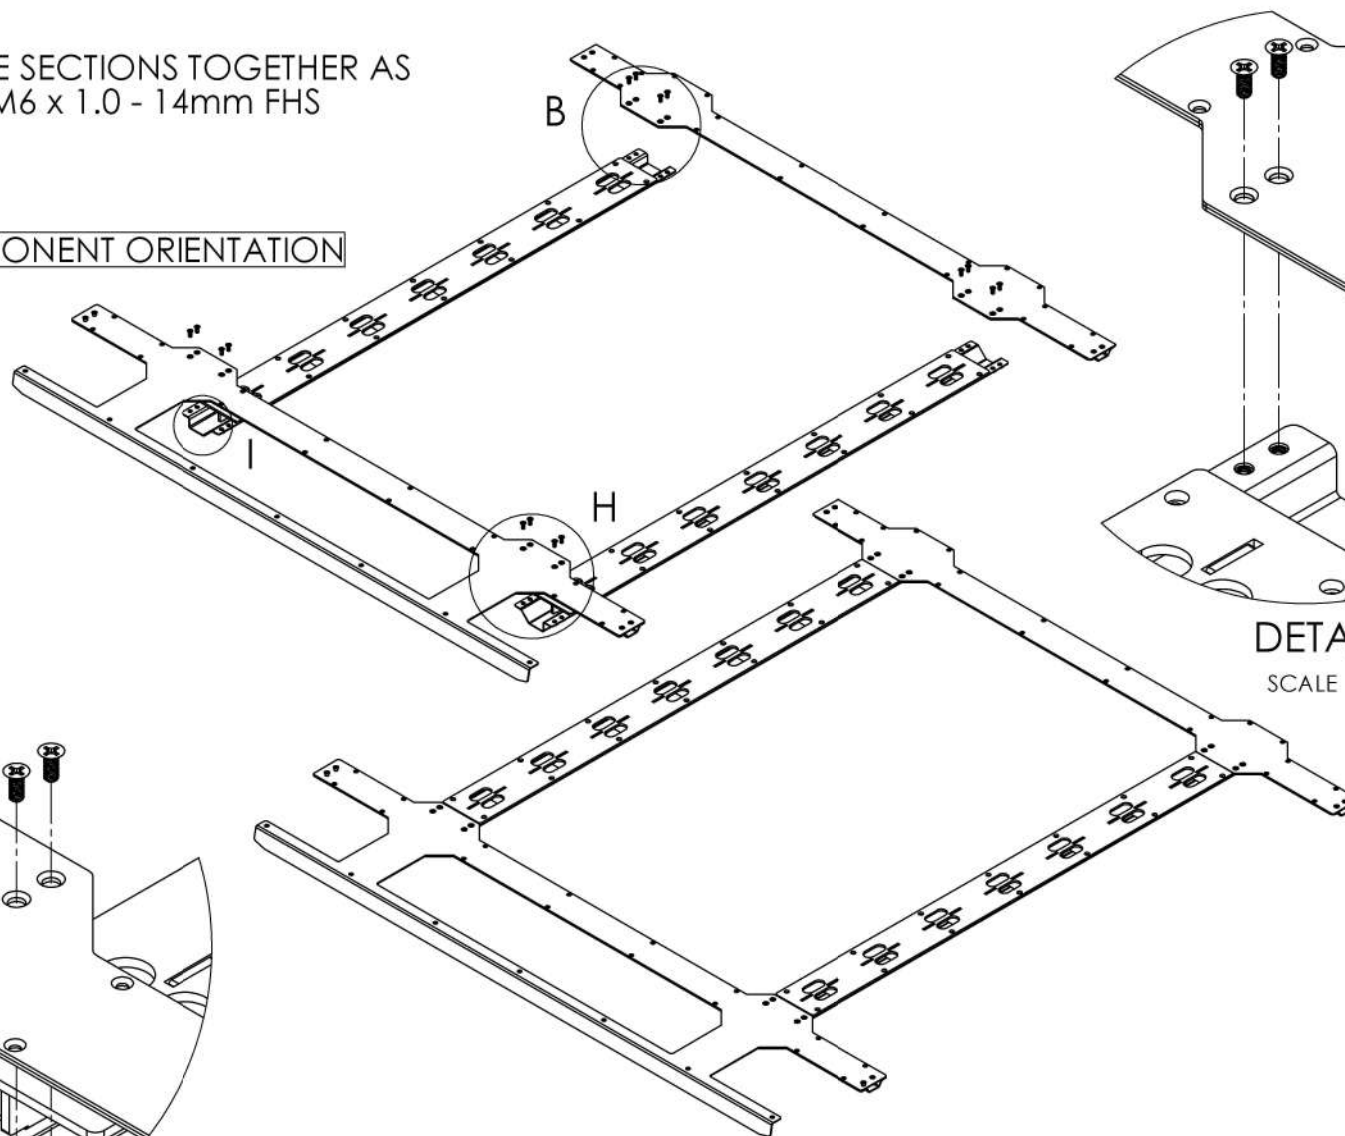

DETAIL B

SCALE 1:2



PART NO:	PP1606_00_INSTALL
VEHICLE:	CHEV - 5.5'
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 1 OF 15	Revision: -



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #4

- USE M4 FASTNERS AS SHOWN TO SECURE MIDDLE BED SURFACE TO THE FRAME

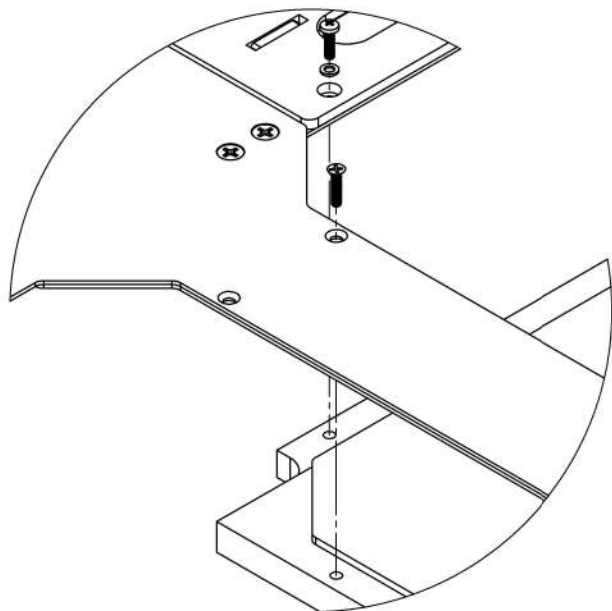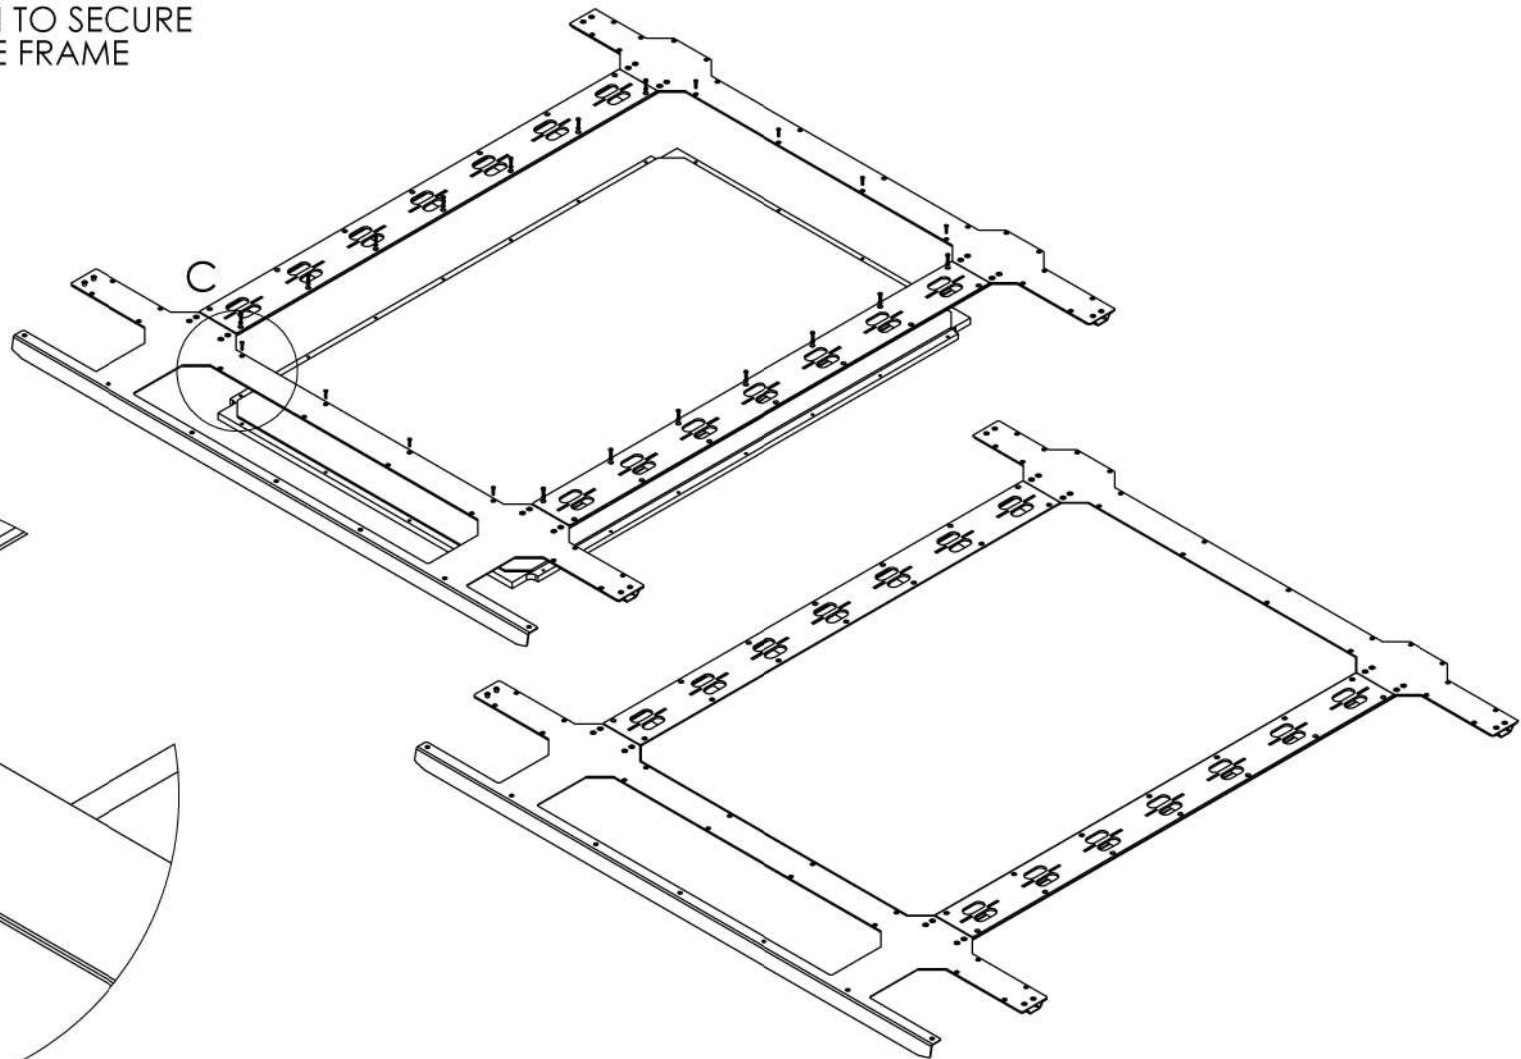

DETAIL C
SCALE 1 : 2


PART NO:	PP1606_00_INSTALL
VEHICLE:	CHEV - 5.5'
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 1 OF 15	Revision: -



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM


INSTALL STEP #5

- USE M4 FASTNERS AS SHOWN TO SECURE OUTER BED SURFACES TO THE FRAME

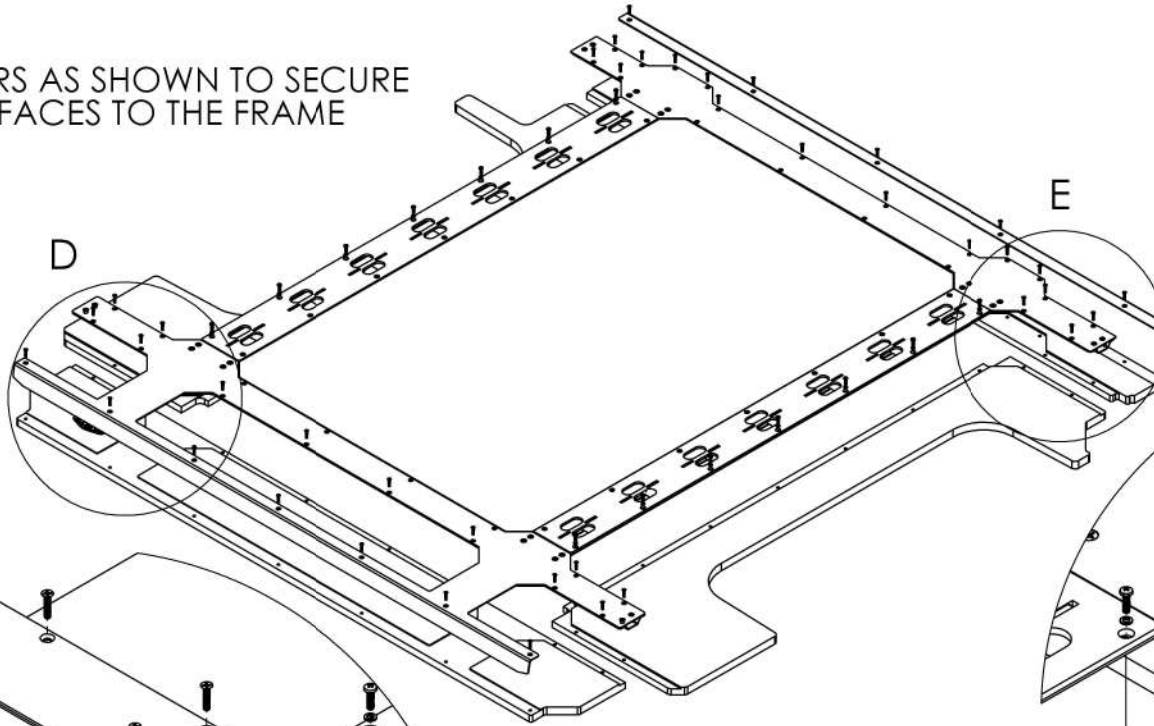

DETAIL D

SCALE 1 : 3

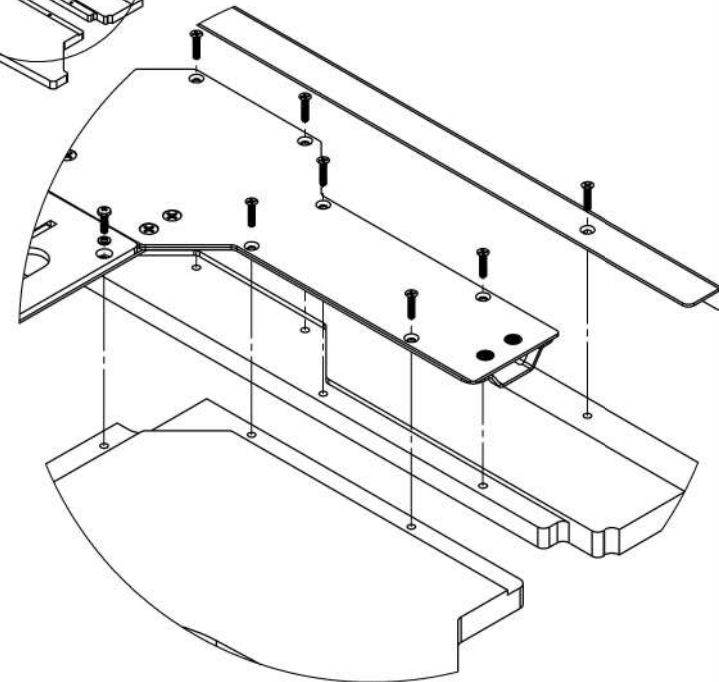


DETAIL E

SCALE 1 : 3

PART NO:	PP1606_00_INSTALL
VEHICLE:	CHEV - 5.5'
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 1 OF 15	Revision: -



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

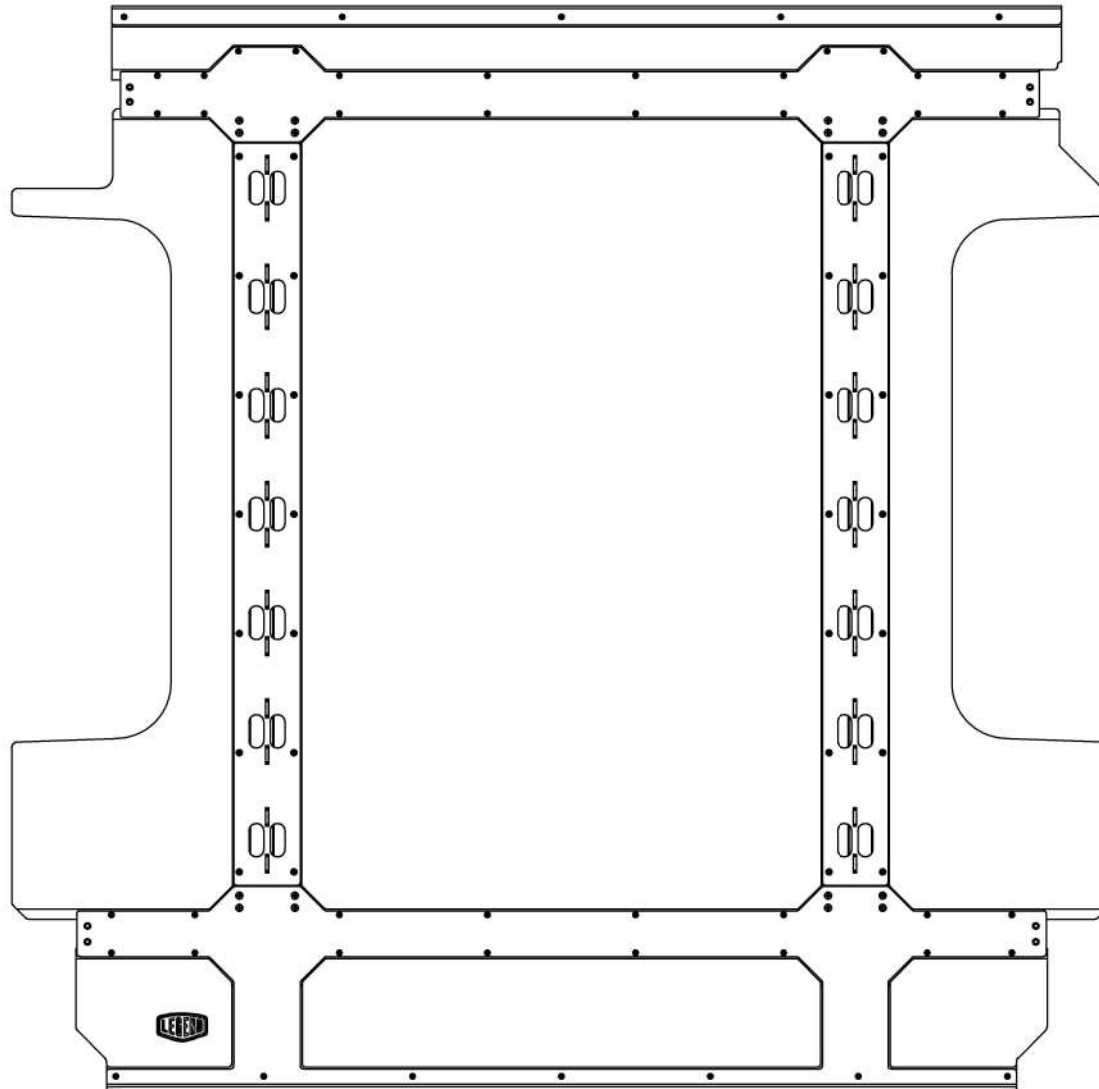


PART NO:	PP1606_00_INSTALL
VEHICLE:	CHEV - 5.5'
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 1 OF 15	Revision: -





LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #6

- USE M8 FASTENERS AS SHOWN TO SECURE REAR D-RING BRACKETS TO BEDBOSS FRAME (TYP. DRIVERS AND PASSENGERS SIDE REAR)

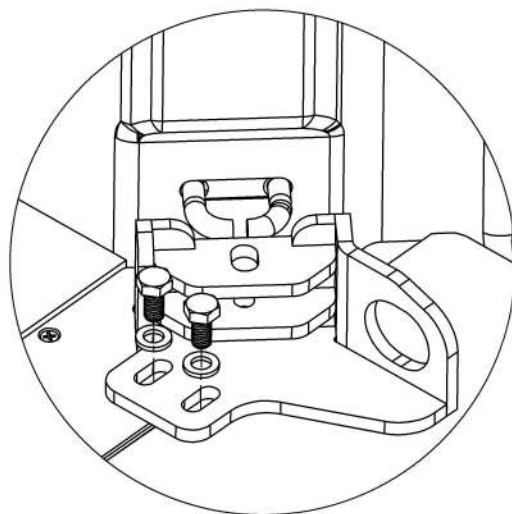

DETAIL F
SCALE 1 : 2

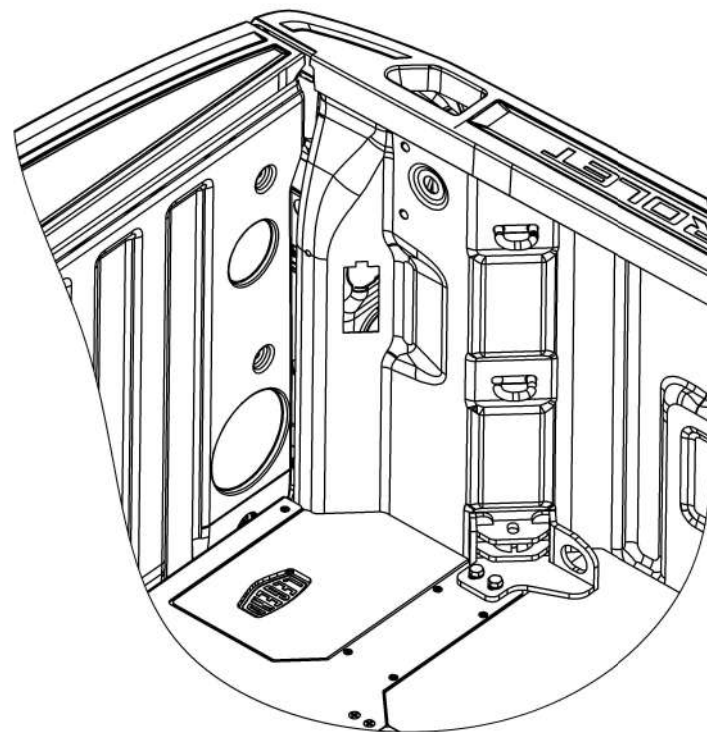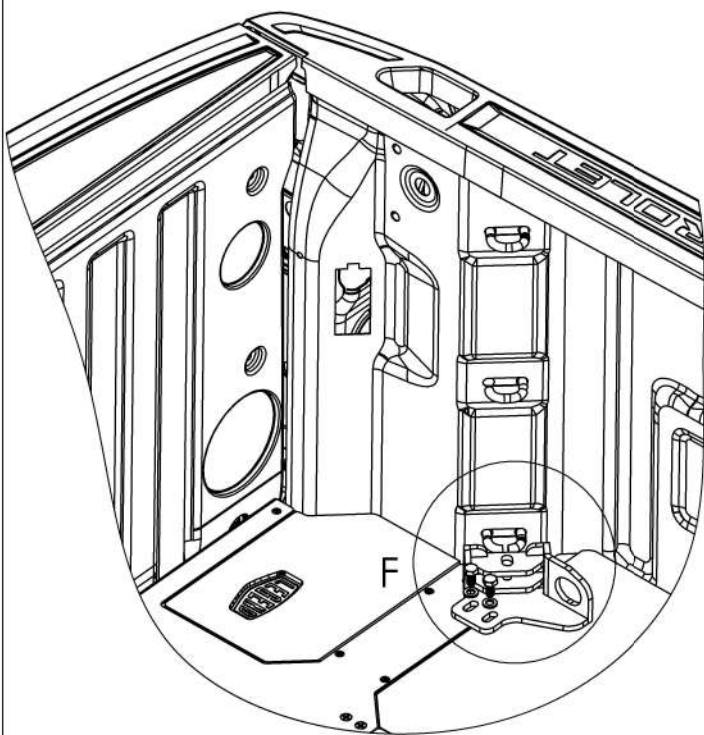



PART NO:	PP1606_00_INSTALL
VEHICLE:	CHEV - 5.5'
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 1 OF 15	Revision: -




LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #7

- USE M10 FASTENERS AS SHOWN TO SECURE REAR D-RING BRACKETS TO TRUCK D-RING (TYP. DRIVERS AND PASSENGERS SIDE REAR)

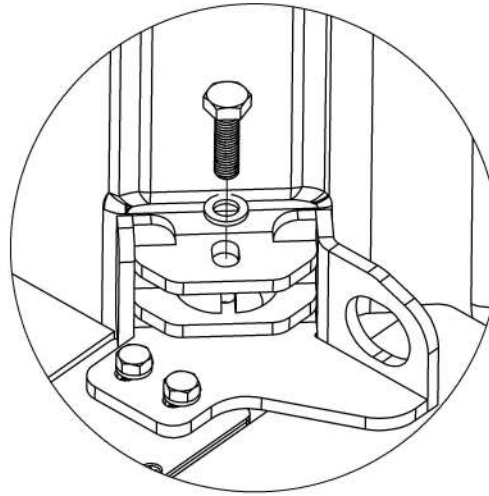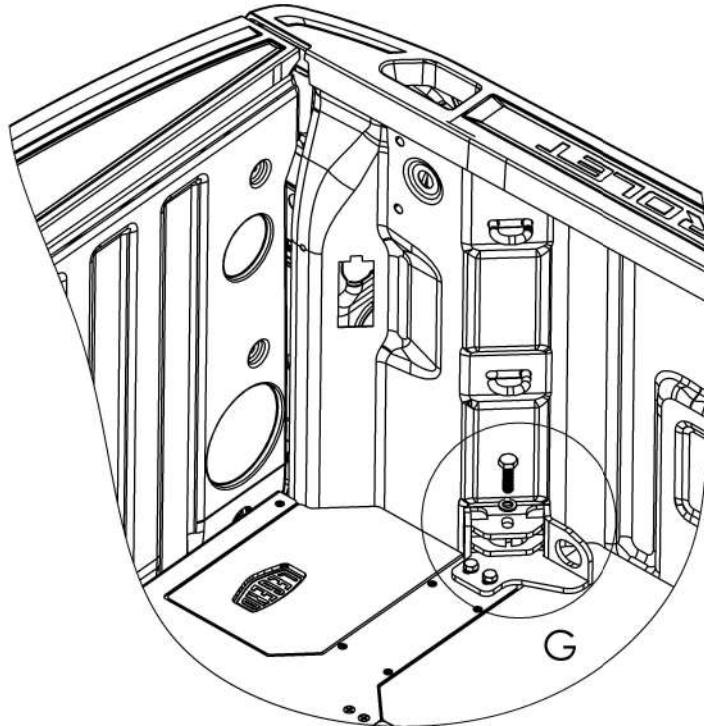

DETAIL G
SCALE 1:2

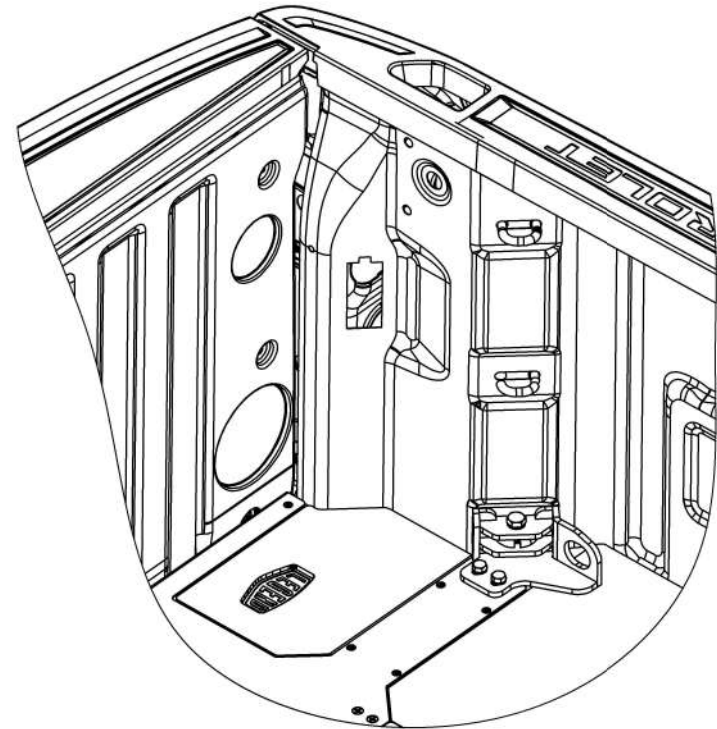


PART NO:	PP1606_00_INSTALL
VEHICLE:	CHEV - 5.5'
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 1 OF 15	Revision: -





LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #8

- USE M8 FASTENERS AS SHOWN TO SECURE REAR D-RING BRACKETS TO BEDBOSS FRAME

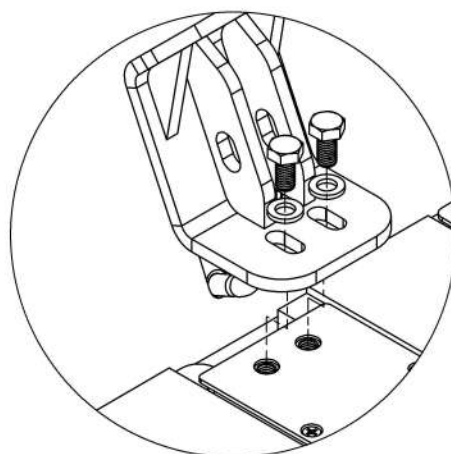

DETAIL G
SCALE 1:2

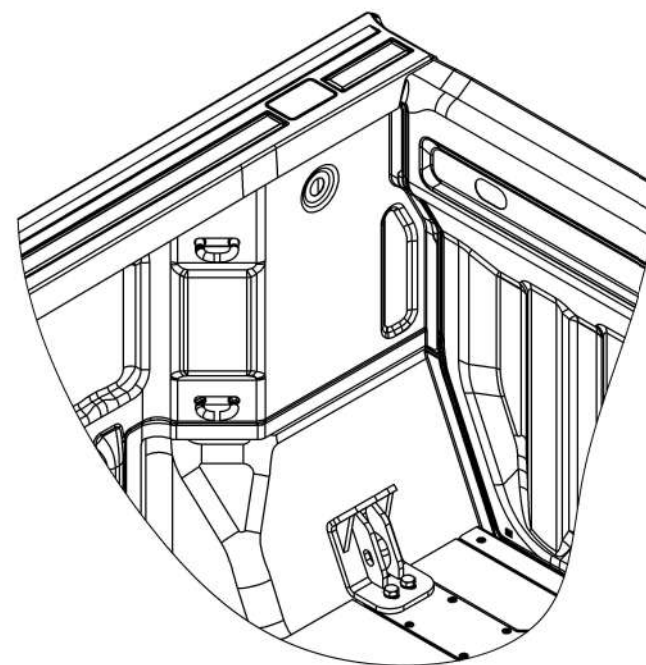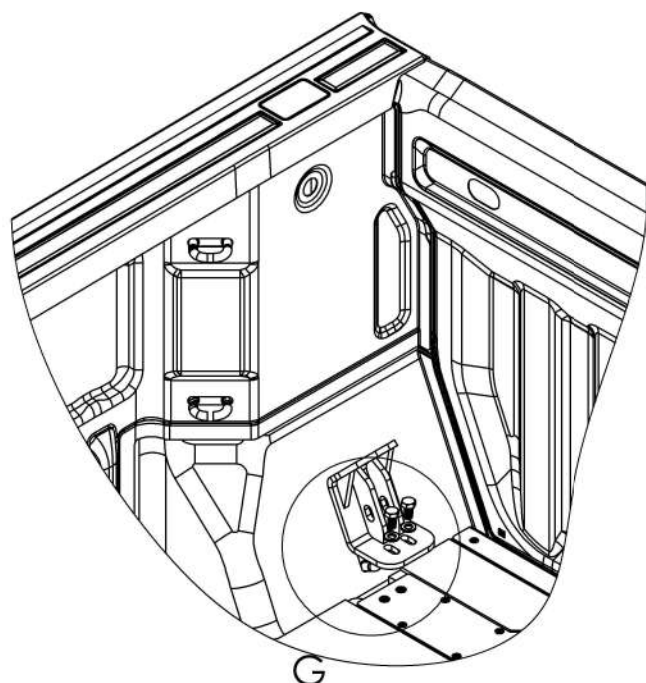


PART NO:	PP1606_00_INSTALL
VEHICLE:	CHEV - 5.5'
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 1 OF 15	Revision: -



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM



INSTALL STEP #9

- USE M10 FASTENERS AS SHOWN TO SECURE REAR D-RING BRACKETS TO TRUCK D-RING

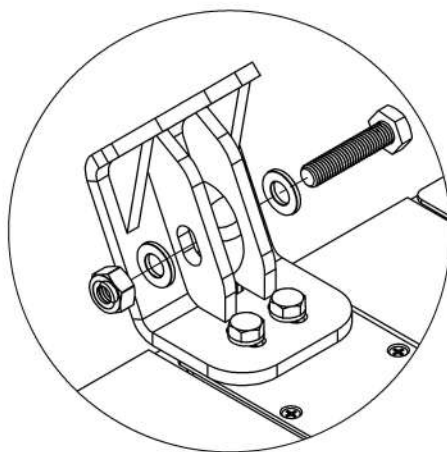

DETAIL Q

SCALE 1 : 2

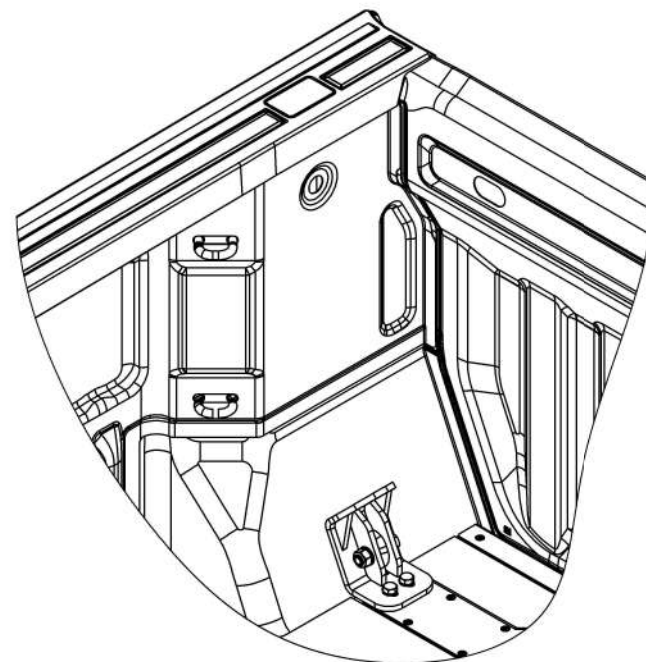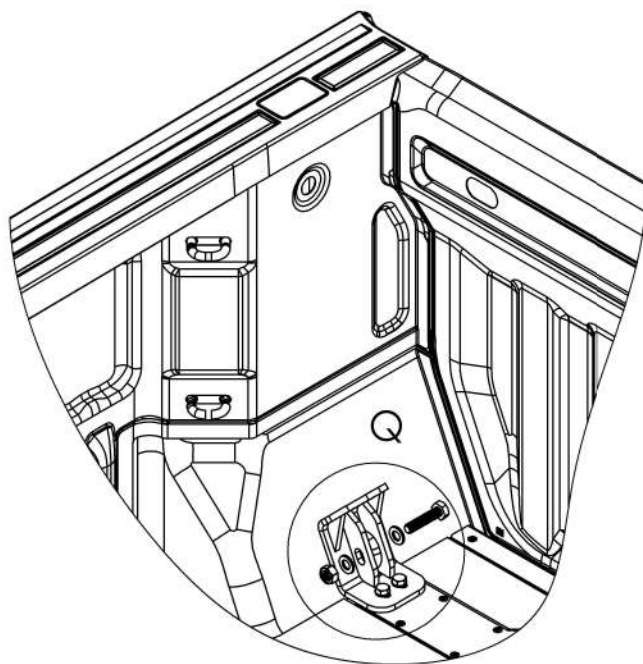



PART NO:	PP1606_00_INSTALL
VEHICLE:	CHEV - 5.5'
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 1 OF 15	Revision: -




LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #10

- USE M8 FASTENERS AS SHOWN TO SECURE REAR D-RING BRACKETS TO BEDBOSS FRAME

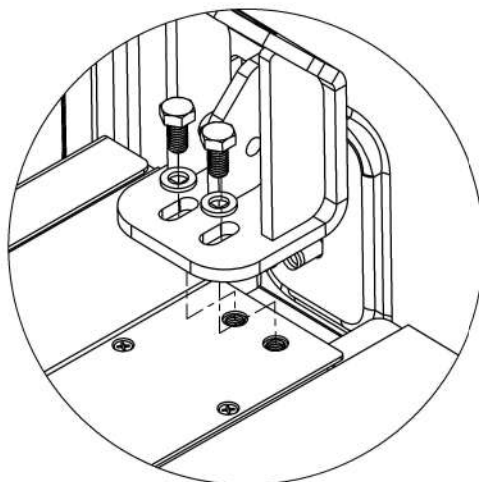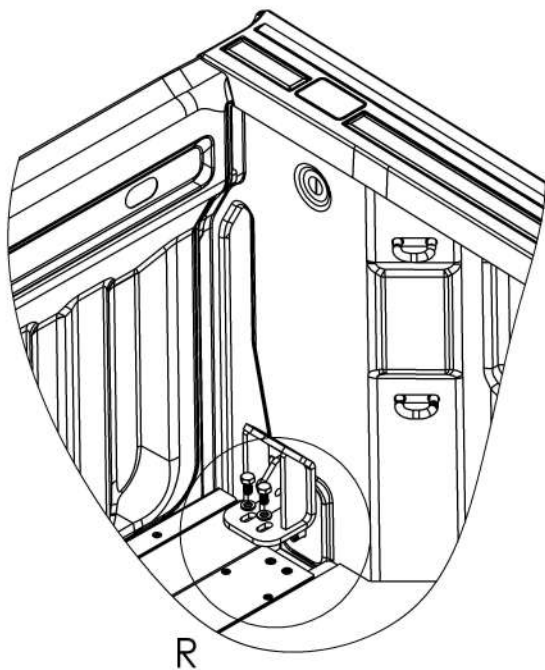

DETAIL R
SCALE 1:2

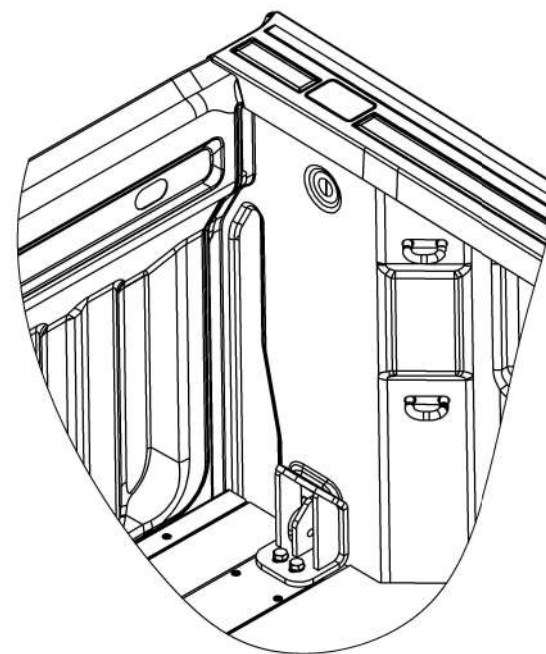


PART NO:	PP1606_00_INSTALL
VEHICLE:	CHEV - 5.5'
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 1 OF 15	Revision: -





LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #11

- USE M10 FASTENERS AS SHOWN TO SECURE REAR D-RING BRACKETS TO TRUCK D-RING

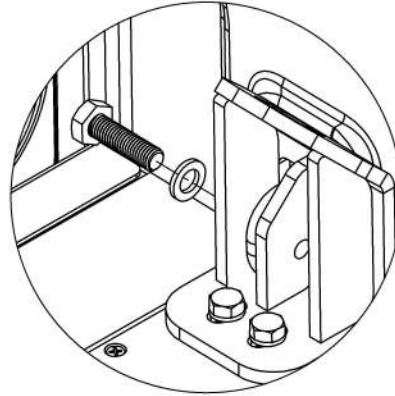

DETAIL S
SCALE 1 : 2

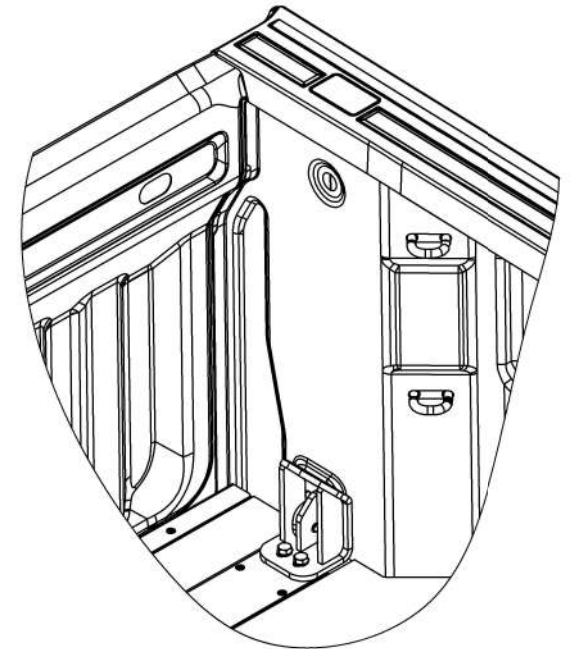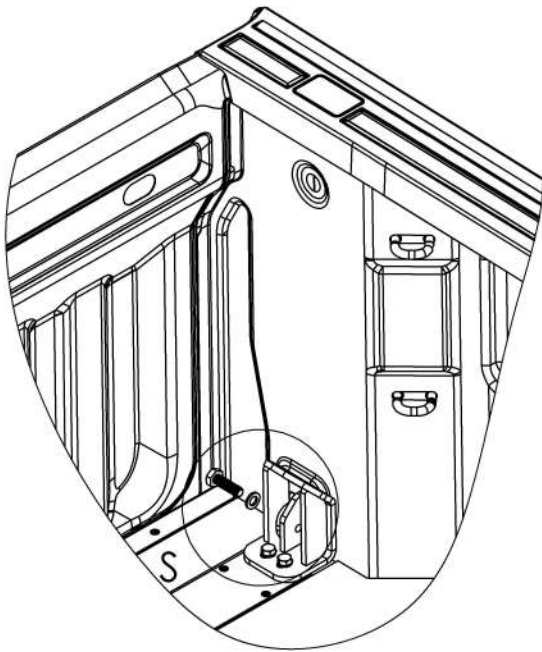

PART NO:	PP1606_00_INSTALL
VEHICLE:	CHEV - 5.5'
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 1 OF 15	Revision: -



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM