


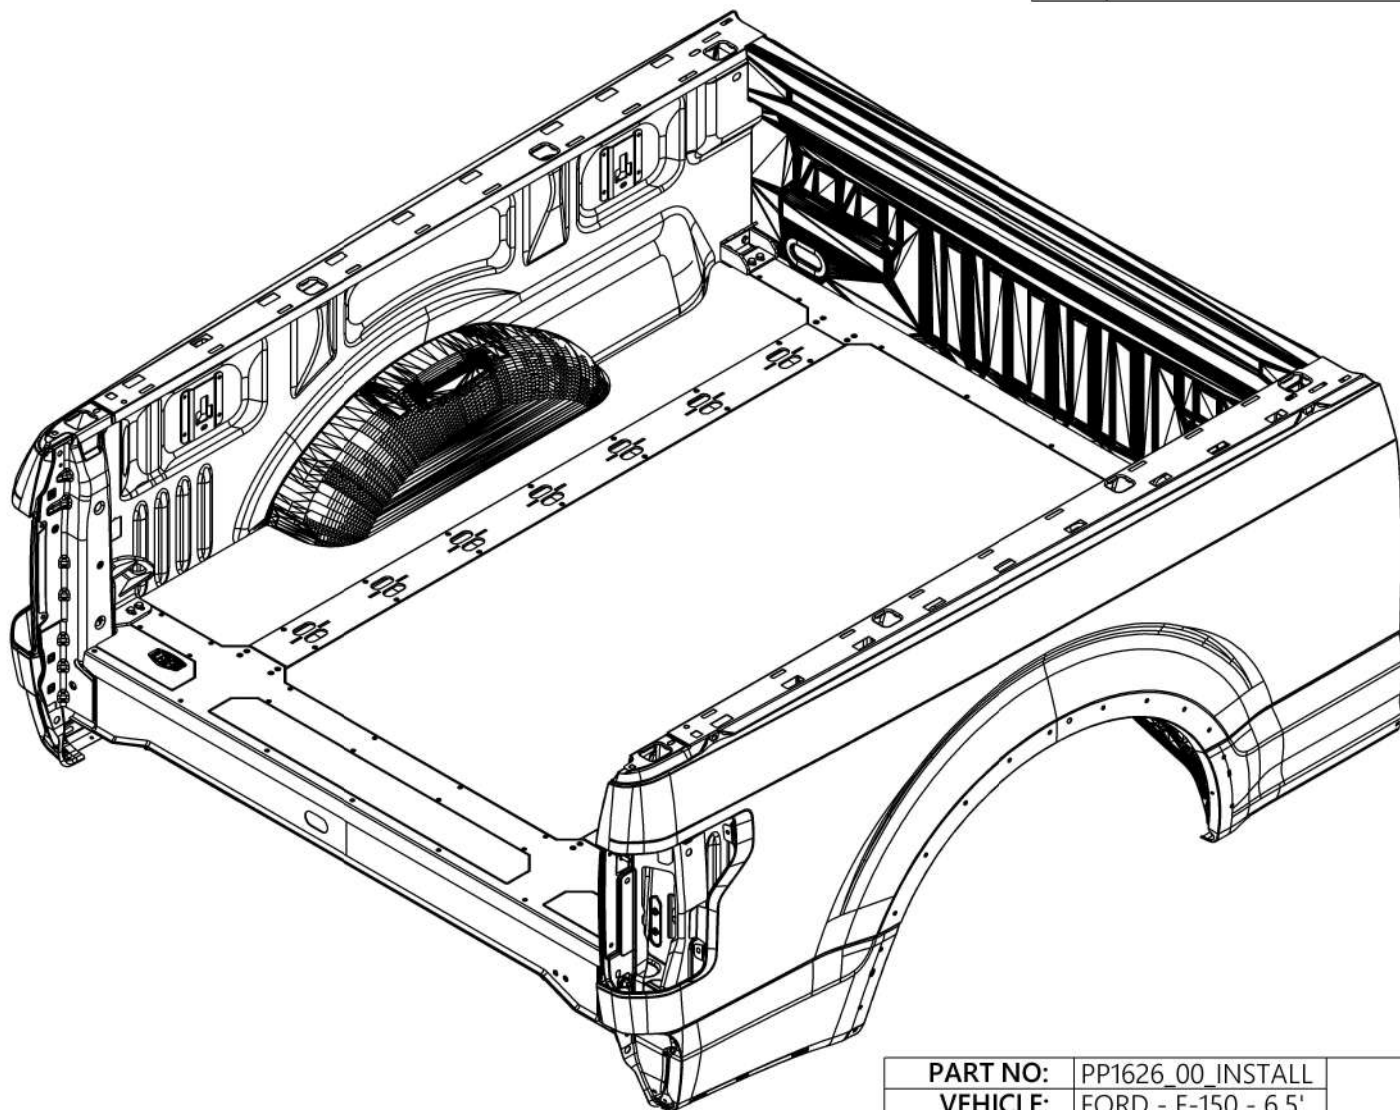


REVISIONS			
REV.	DESCRIPTION	DATE	APPROVED

PART NO:	PP1626_00_INSTALL
VEHICLE:	FORD - F-150 - 6.5'
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 1 OF 13	Revision: -




LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM


HARDWARE PARTS LIST



12x M8 x 1.25 - 20mm - HHCS




12x M8 - LOCK WASHER

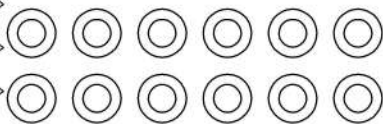


4x M6 x 1.0 - 18mm - HHCS



6x M6 - LOCK WASHER

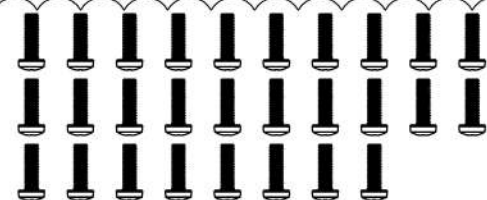


28x M4 x 0.7 - 14mm BHCS




28x M4 - LOCK WASHER




136" - 1.5" x 0.06" PEEL AND STICK PAD

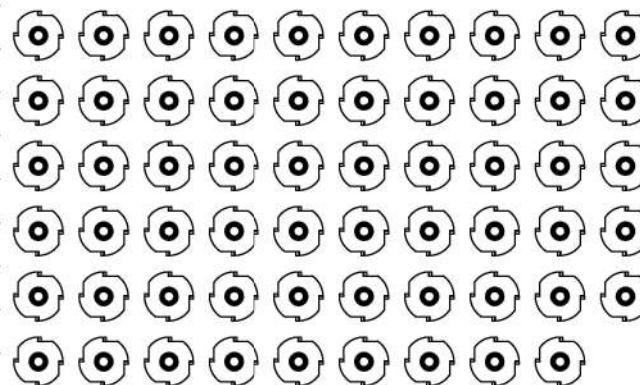

59x M4 x 0.7 - TEE NUT

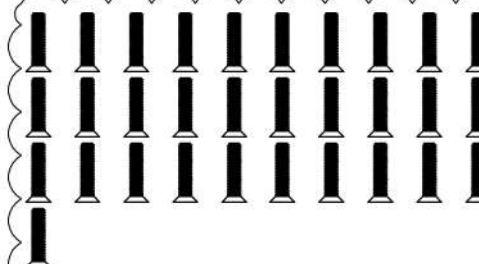

31x M4 x 0.7 - 18mm FHS











30" - 0.75" x 0.06" PEEL AND STICK PAD

PART NO:	PP1626_00_INSTALL
VEHICLE:	FORD - F-150 - 6.5'
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 2 OF 13	Revision: -



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

PARTS LIST

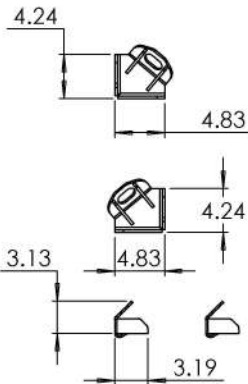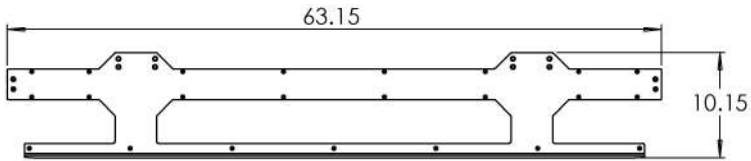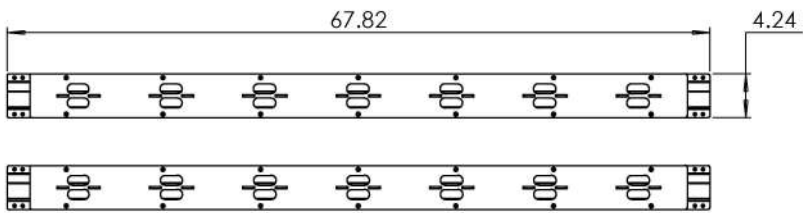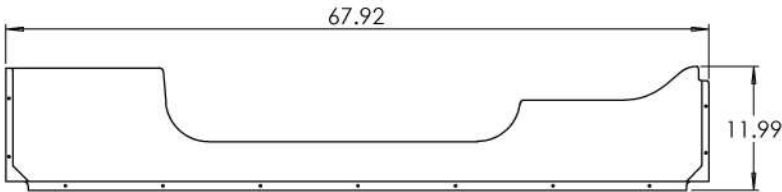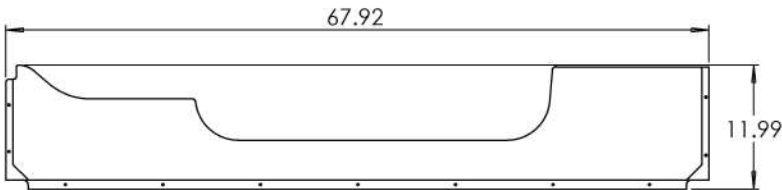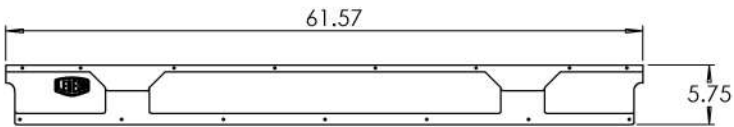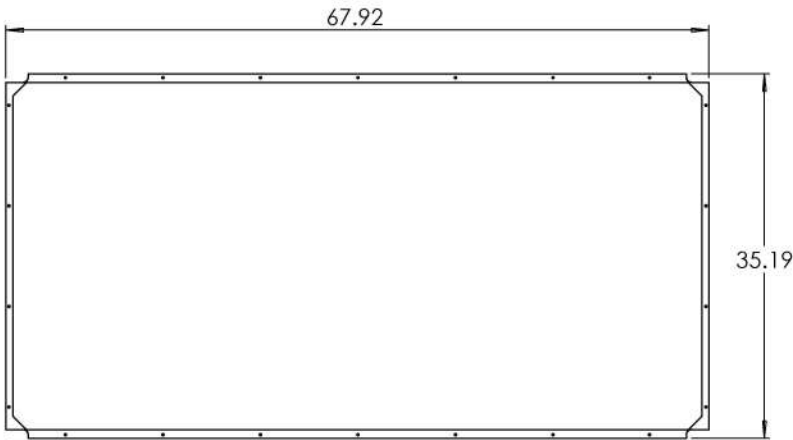



PART NO:	PP1626_00_INSTALL
VEHICLE:	FORD - F-150 - 6.5'
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 3 OF 13	Revision: -




LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #1

- USE A HAMMER TO INSERT M4 TEE NUTS INTO UNDER SIDE OF EACH BED SURFACE AS SHOWN

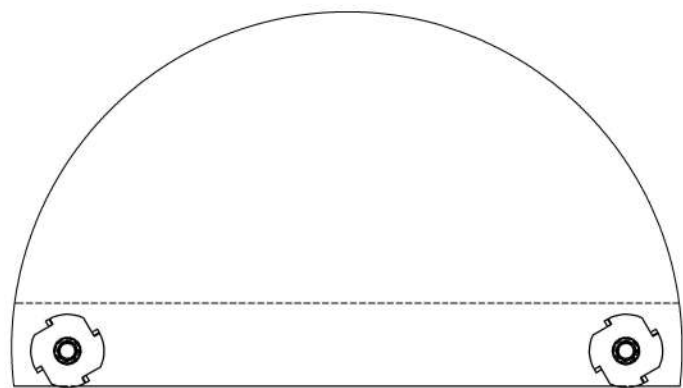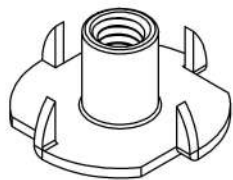

DETAIL A
SCALE 1 : 1

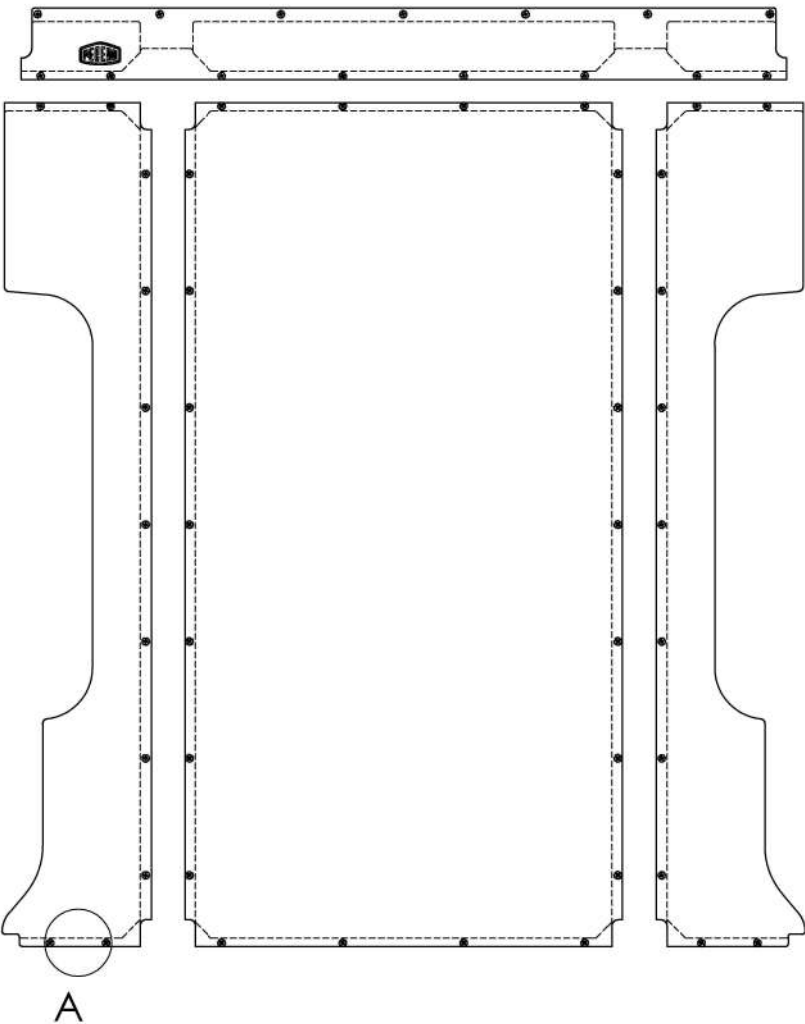


PART NO:	PP1626_00_INSTALL
VEHICLE:	FORD - F-150 - 6.5'
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 4 OF 13	Revision: -



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #2

- PLACE THE PEEL AND STICK NEOPRENE TO THE UNDER SIDE OF RAILS (x2) AS SHOWN

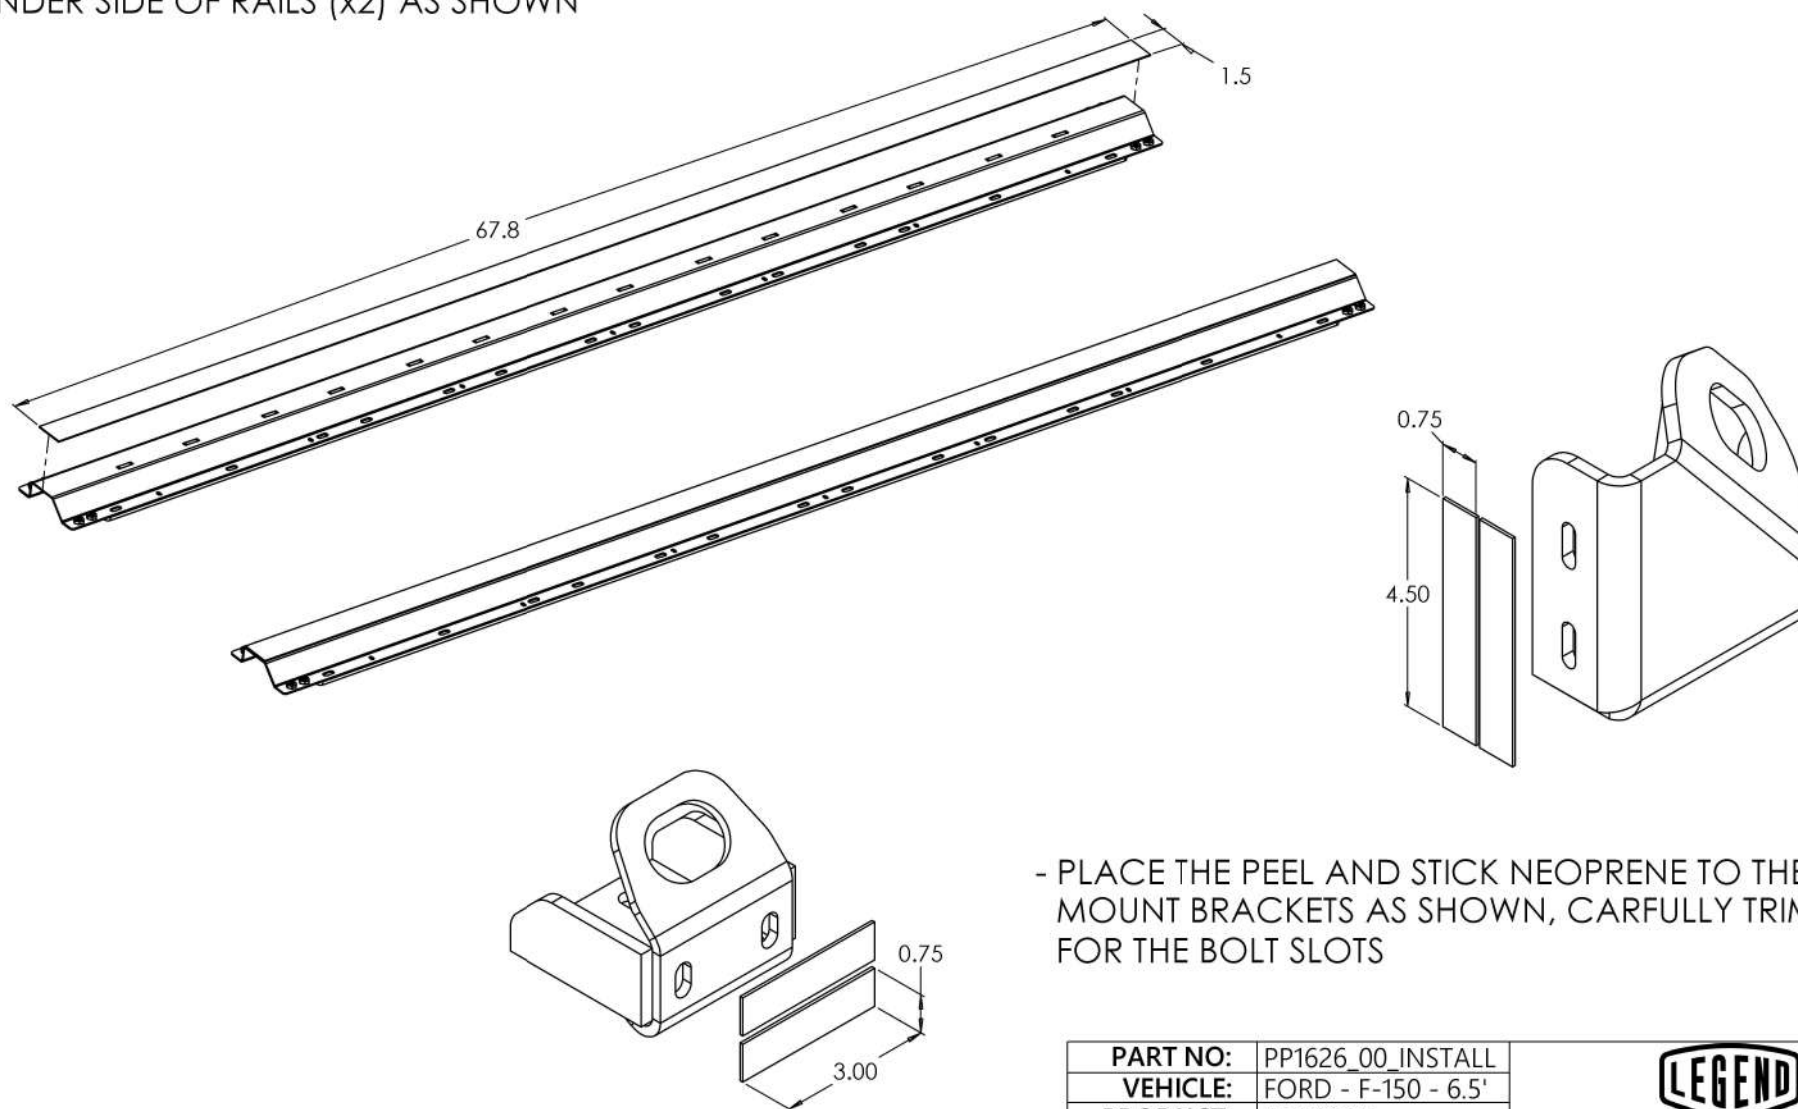

- PLACE THE PEEL AND STICK NEOPRENE TO THE MOUNT BRACKETS AS SHOWN, CAREFULLY TRIM FOR THE BOLT SLOTS

PART NO:	PP1626_00_INSTALL
VEHICLE:	FORD - F-150 - 6.5'
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 5 OF 13	Revision: -




LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM


INSTALL STEP #3

- FASTEN THE FOUR FRAME SECTIONS TOGETHER AS SHOWN USING THE 16x M6 x 1.0 - 30mm FHS


NOTE PROFILE ORIENTATION

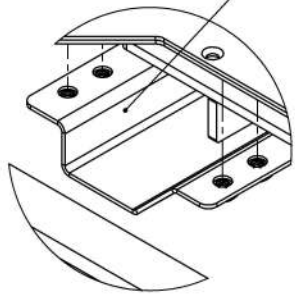


DETAIL I
SCALE 1:2

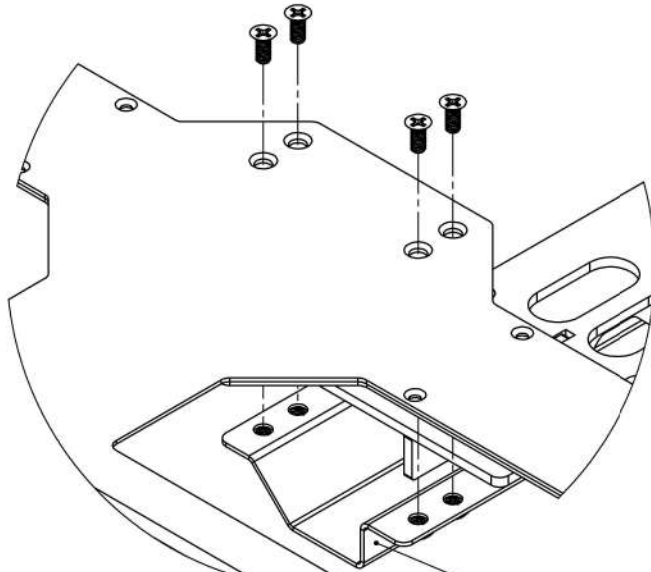

DETAIL H
SCALE 1:2

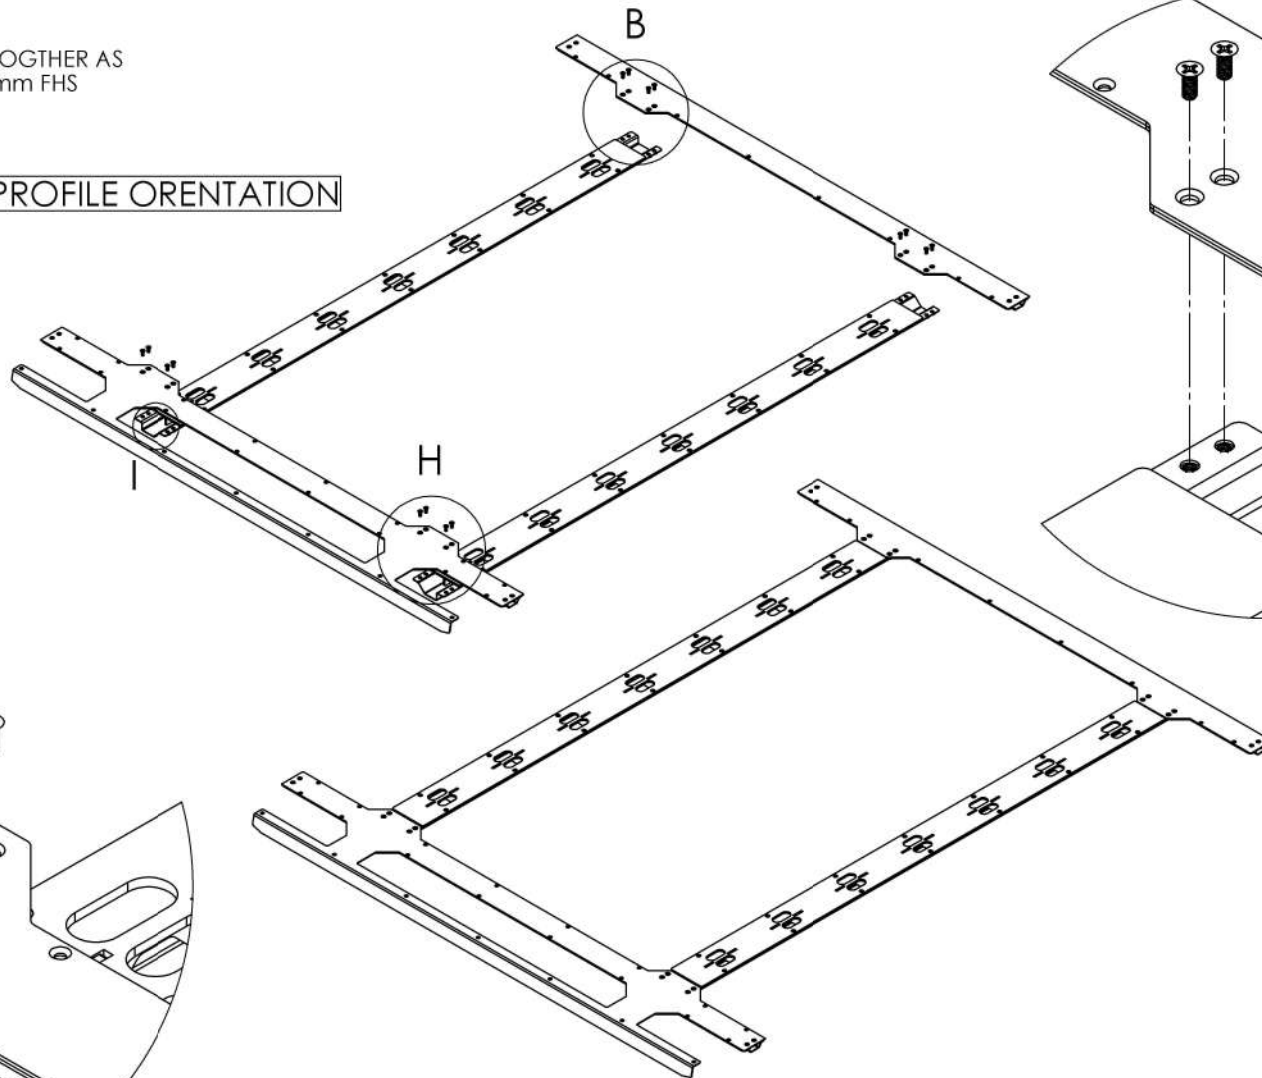

DETAIL B
SCALE 1:2

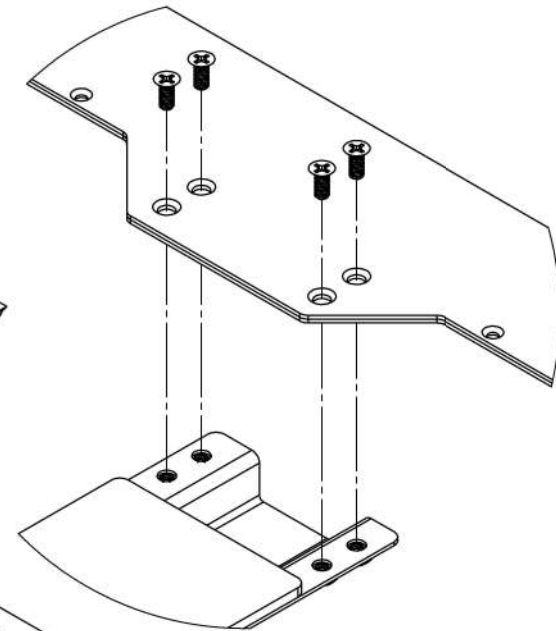


PART NO:	PP1626_00_INSTALL
VEHICLE:	FORD - F-150 - 6.5'
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 6 OF 13	Revision: -



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #4

- USE M4 FASTENERS AS SHOWN TO SECURE MIDDLE BED SECTION TO THE FRAME

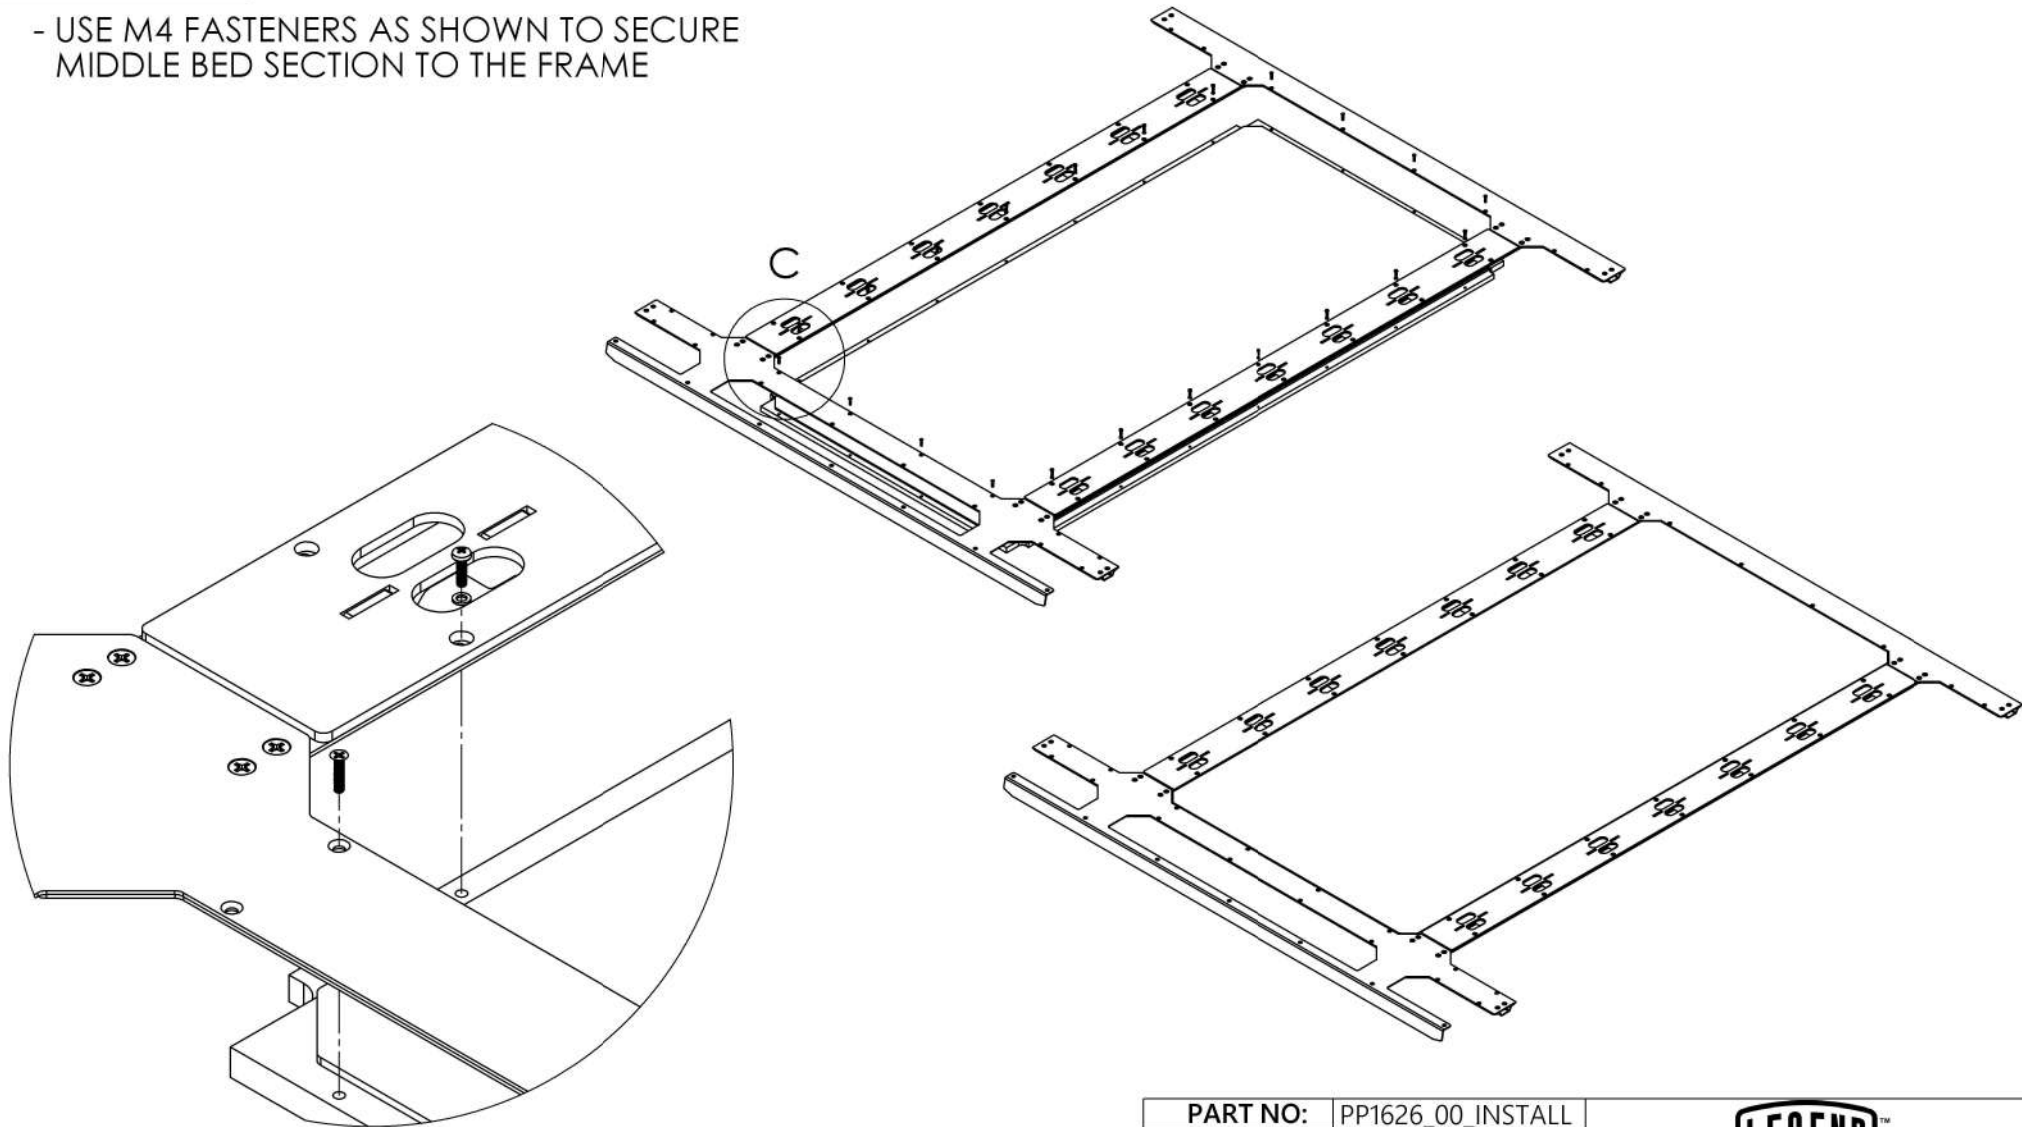

DETAIL C
SCALE 1 : 2



PART NO:	PP1626_00_INSTALL
VEHICLE:	FORD - F-150 - 6.5'
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 7 OF 13	Revision: -




LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #5

- USE M4 FASTENERS AS SHOWN TO SECURE OUTER BED SURFACES TO THE FRAME AS WELL AS THE FRONT TRIM BRACKET

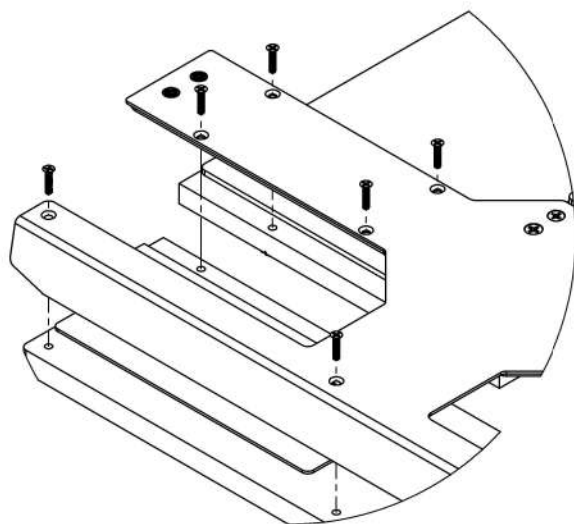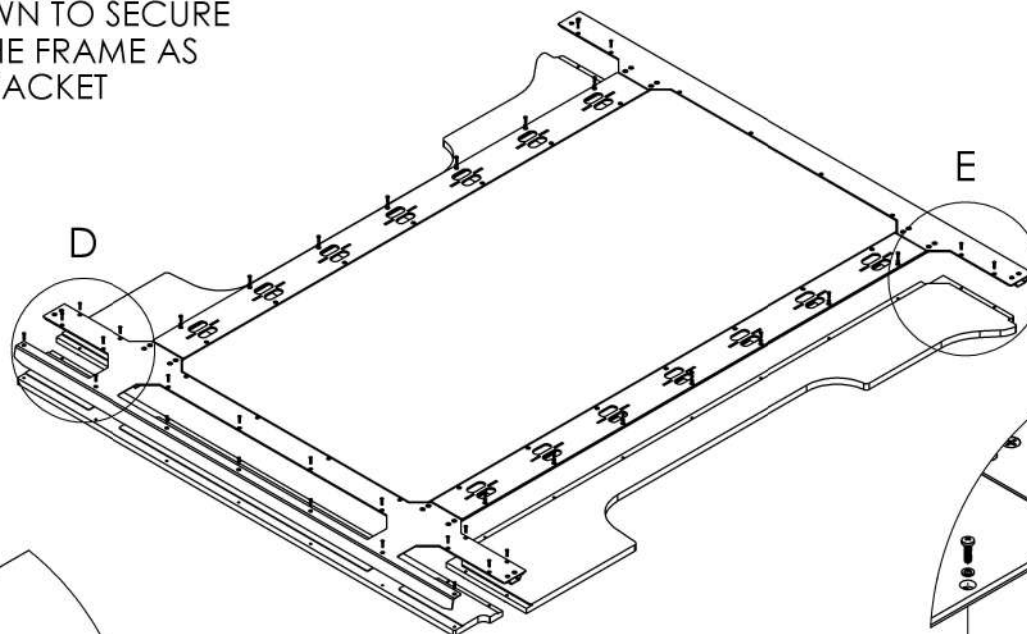

DETAIL D
SCALE 1 : 3

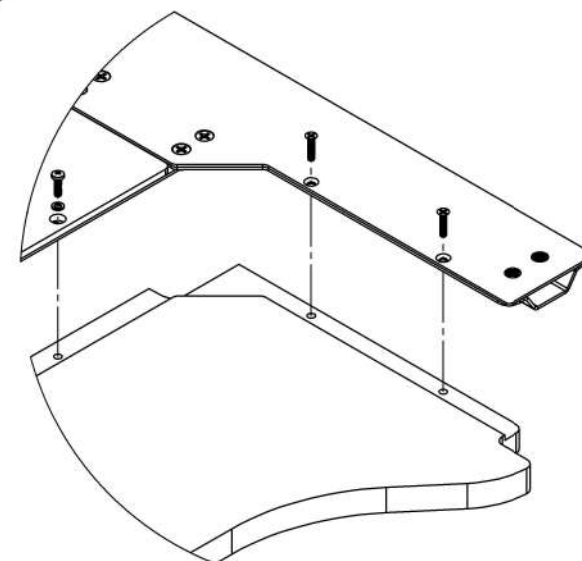


DETAIL E
SCALE 1 : 3

PART NO:	PP1626_00_INSTALL
VEHICLE:	FORD - F-150 - 6.5'
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 8 OF 13	Revision: -



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

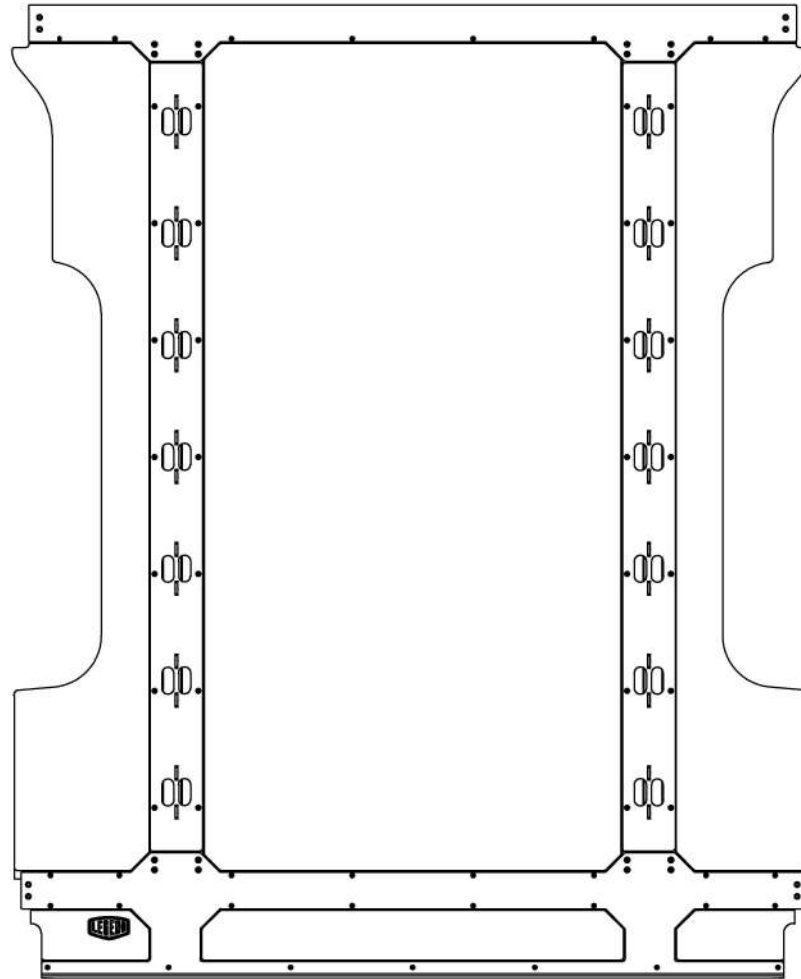


PART NO:	PP1626_00_INSTALL
VEHICLE:	FORD - F-150 - 6.5'
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 9 OF 13	Revision: -





LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #6

- REMOVE OEM D-RING BRACKET FIRST
- USE M8 FASTENERS AS SHOWN TO SECURE FRONT D-RING BRACKETS (x2) TO BEDBOSS FRAME

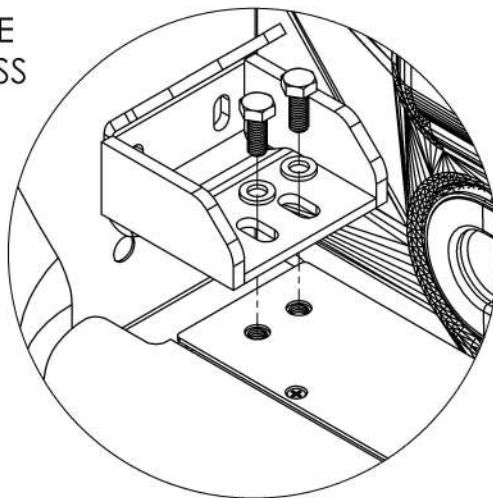

DETAIL F
SCALE 1 : 2

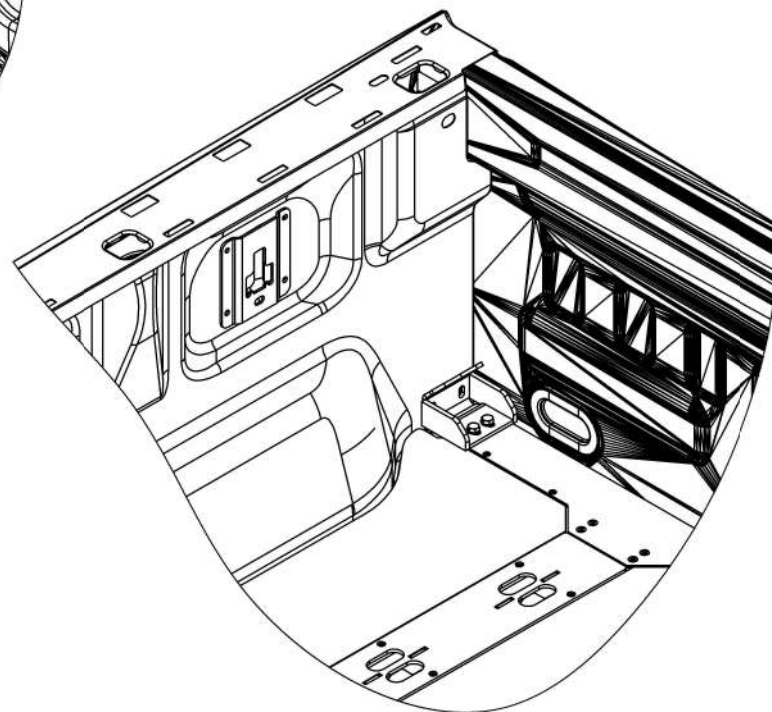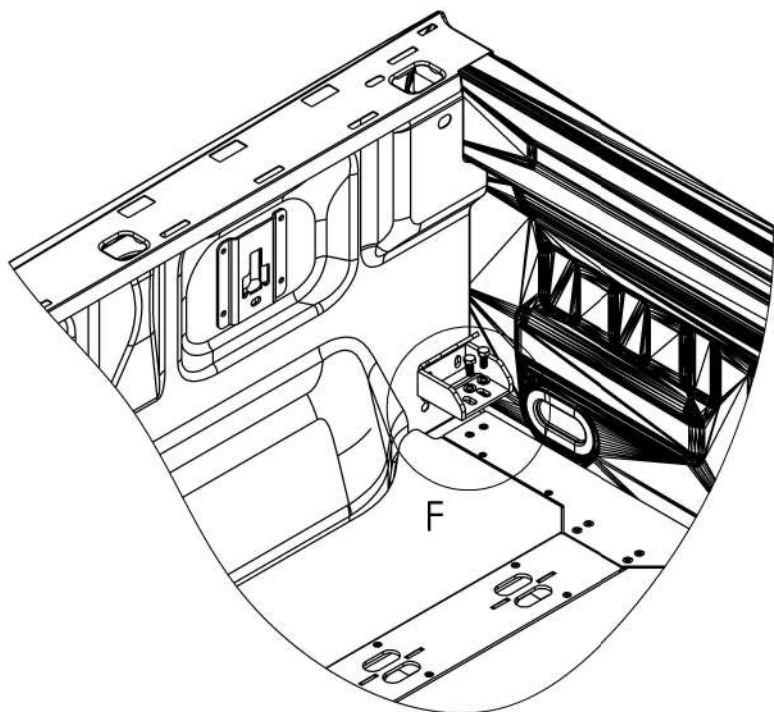



PART NO:	PP1626_00_INSTALL
VEHICLE:	FORD - F-150 - 6.5'
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet:	10 OF 13
Revision:	-



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #7

- USE M6 FASTENERS AS SHOWN TO SECURE FRONT D-RING BRACKETS (x2) TO TRUCK

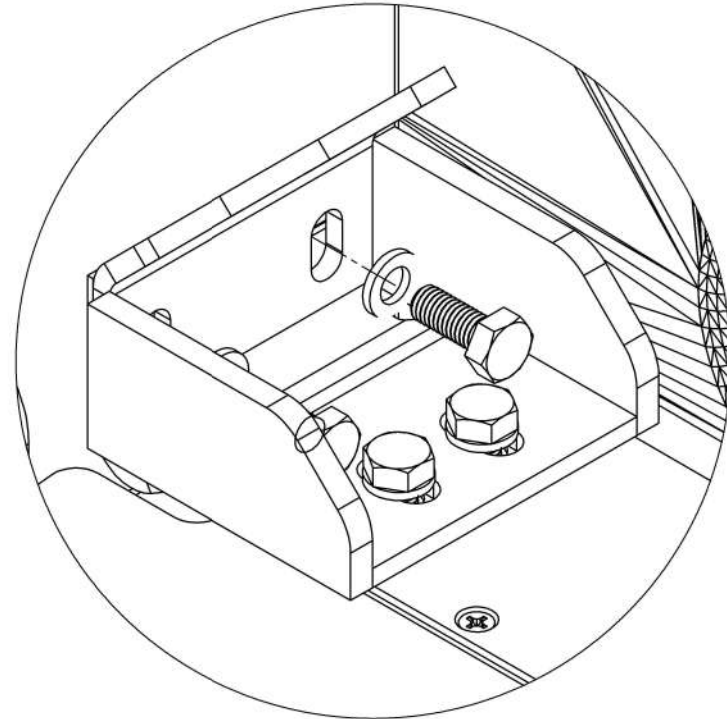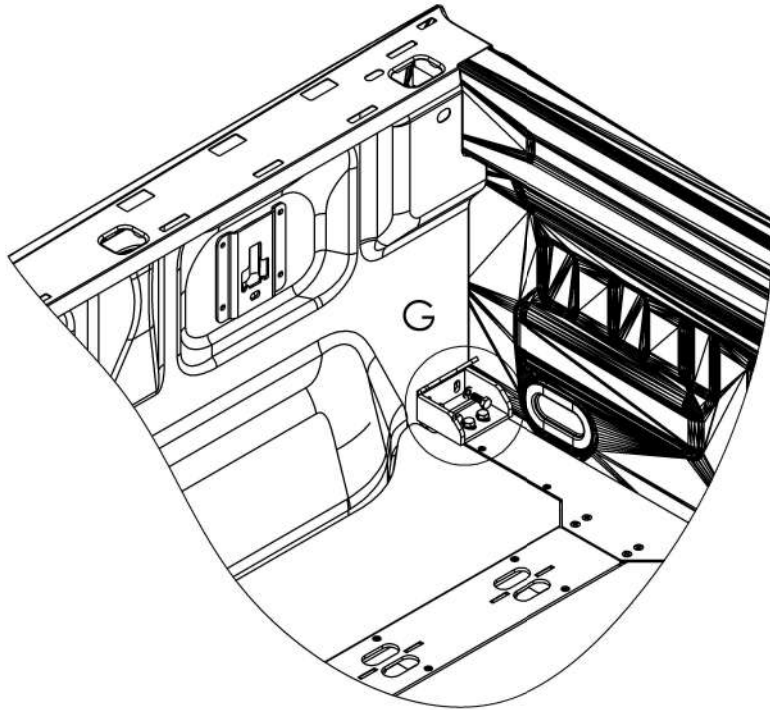

DETAIL G
SCALE 1 : 1



PART NO:	PP1626_00_INSTALL
VEHICLE:	FORD - F-150 - 6.5'
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet:	11 OF 13
Revision:	-



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #8

- REMOVE OEM D-RING BRACKETS FIRST
- USE M8 FASTENERS AS SHOWN TO SECURE REAR D-RING BRACKETS (x2) TO BEDBOSS FRAME

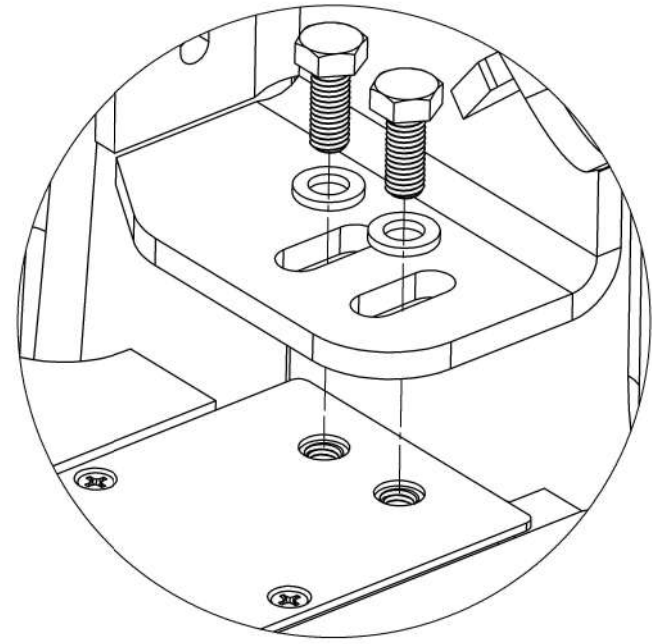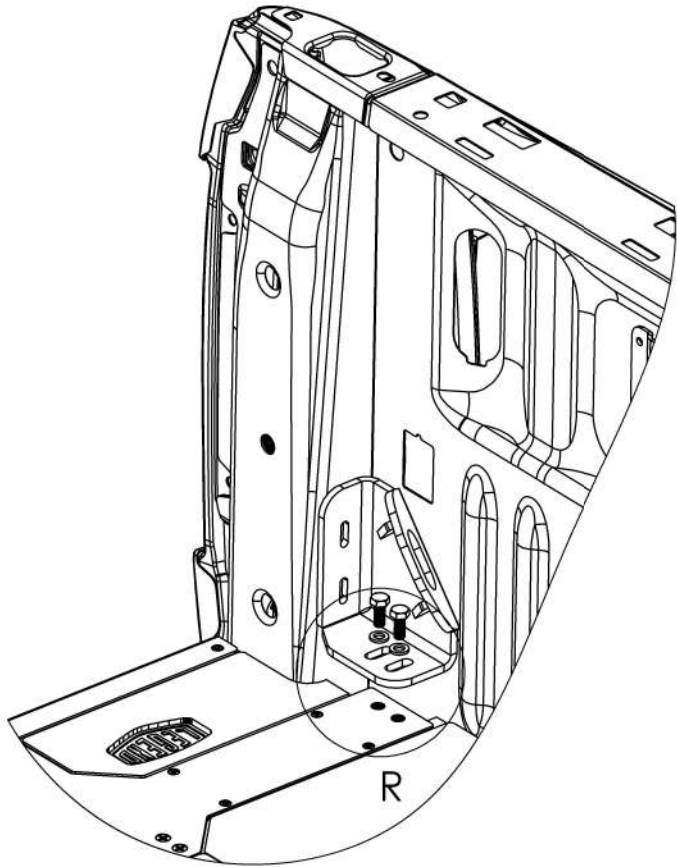

DETAIL R

SCALE 1 : 1



PART NO:	PP1626_00_INSTALL
VEHICLE:	FORD - F-150 - 6.5'
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet:	12 OF 13
Revision:	-



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #9

- USE M6 FASTENERS AS SHOWN TO SECURE FRONT D-RING BRACKETS (x2) TO TRUCK

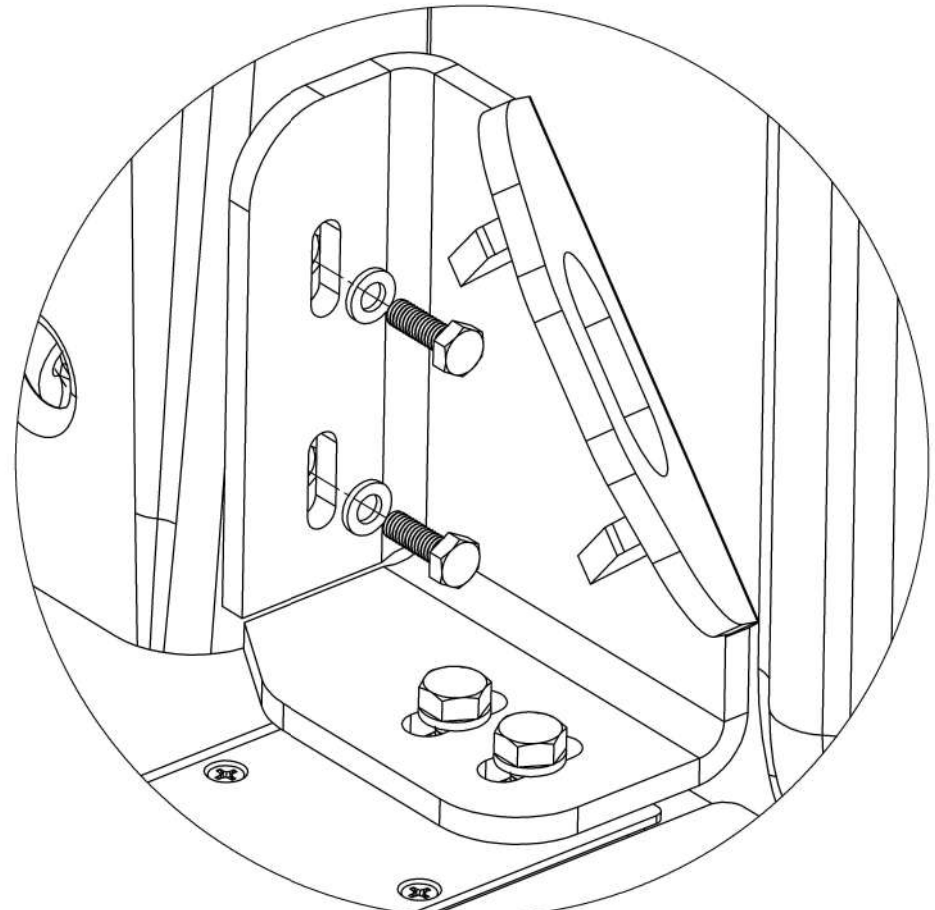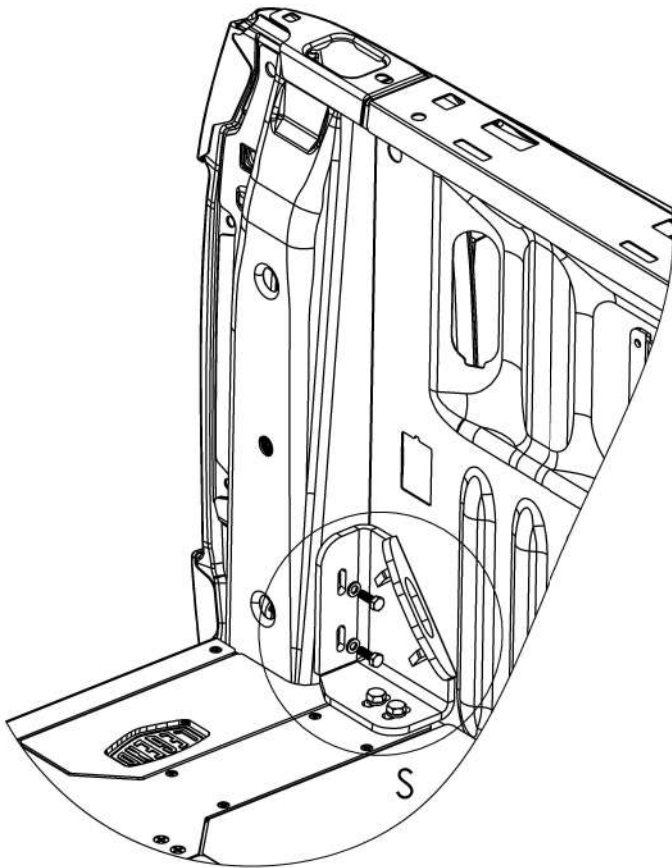

DETAIL S

SCALE 1 : 1

PART NO:	PP1626_00_INSTALL
VEHICLE:	FORD - F-150 - 6.5'
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet:	13 OF 13
Revision:	-



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM