


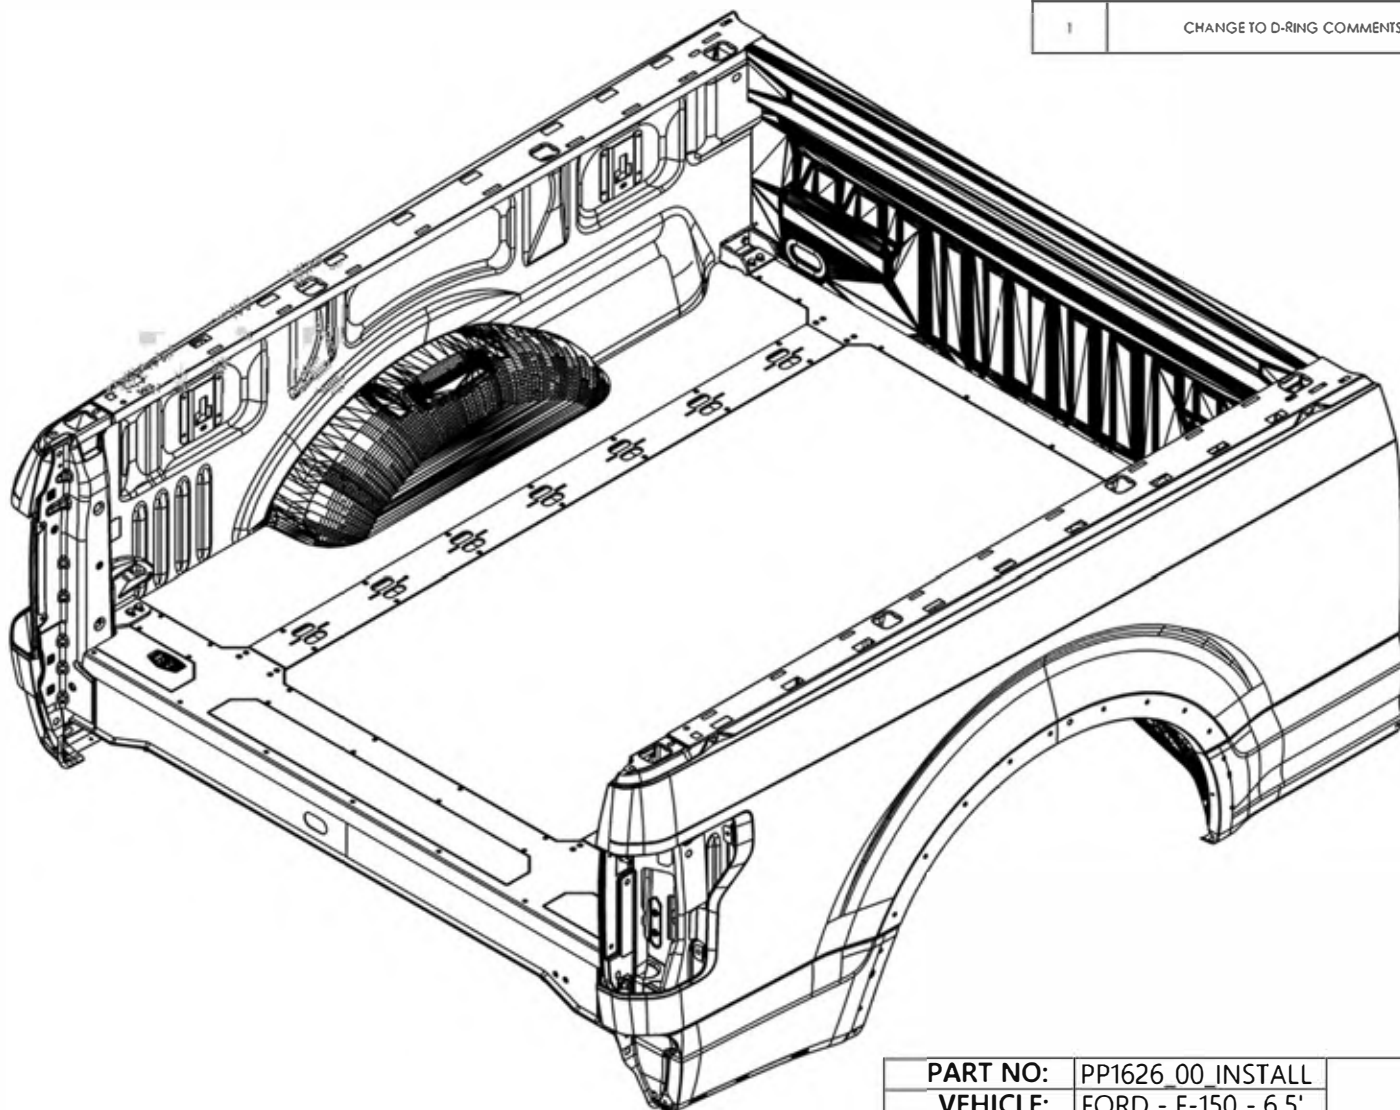


REVISIONS			
REV.	DESCRIPTION	DATE	APPROVED
1	CHANGE TO D-RING COMMENTS	30/MAY/2025	SMM

PART NO:	PP1626_00_INSTALL
VEHICLE:	FORD - F-150 - 6.5'
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 1 OF 14	Revision: 1




LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

HARDWARE PARTS LIST



12x M8 x 1.25 - 20mm - HHCS




12x M8 - LOCK WASHER



4x M6 x 1.0 - 18mm - HHCS




6x M6 - LOCK WASHER

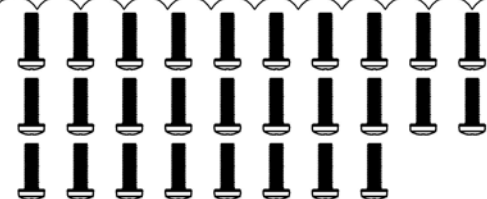

28x M4 x 0.7 - 14mm BHCS



28x M4 - LOCK WASHER

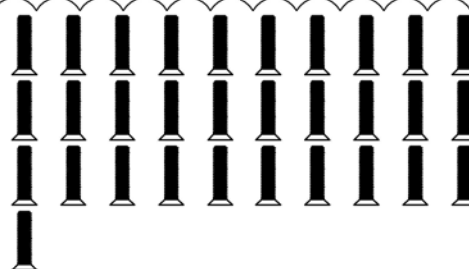

31x M4 x 0.7 - 18mm FHS



30" - 0.75" x 0.06" PEEL AND STICK PAD











136" - 1.5" x 0.06" PEEL AND STICK PAD

PART NO:	PP1626_00_INSTALL
VEHICLE:	FORD - F-150 - 6.5'
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 2 OF 14	Revision: 1



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

PARTS LIST

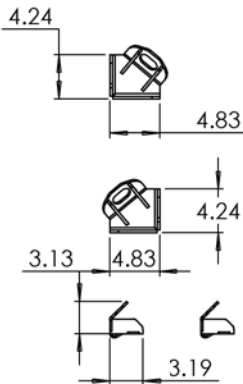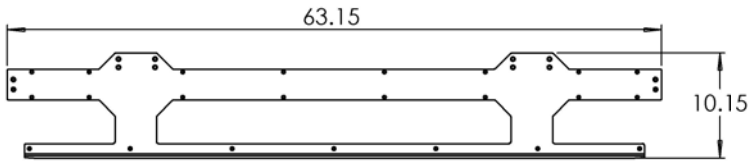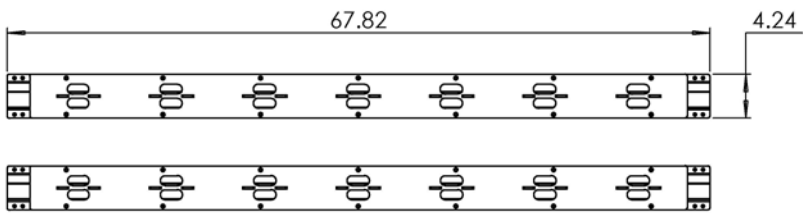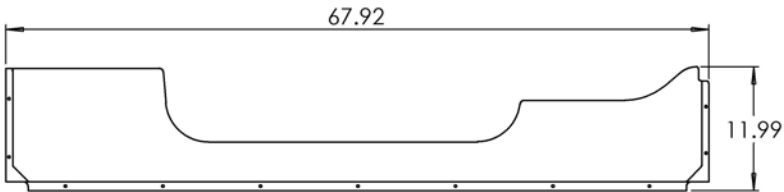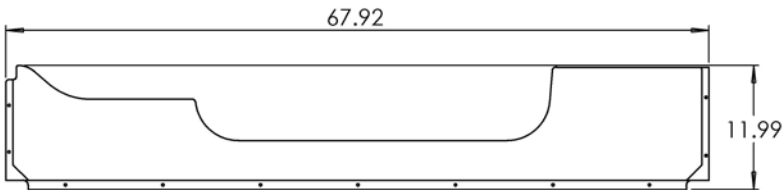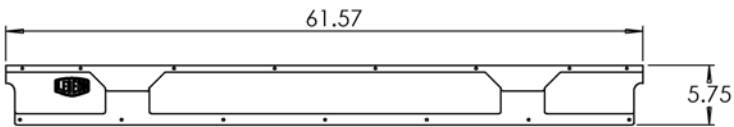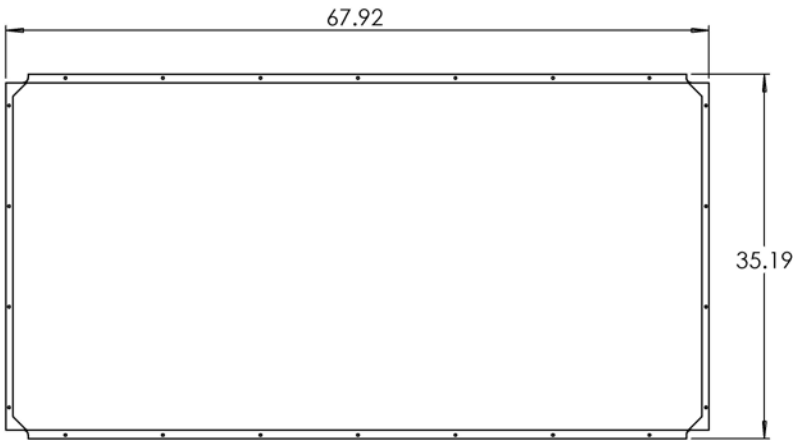


PART NO:	PP1626_00_INSTALL
VEHICLE:	FORD - F-150 - 6.5'
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 3 OF 14	Revision: 1



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #1

- PLACE THE PEEL AND STICK NEOPRENE TO THE UNDER SIDE OF RAILS (x2) AS SHOWN

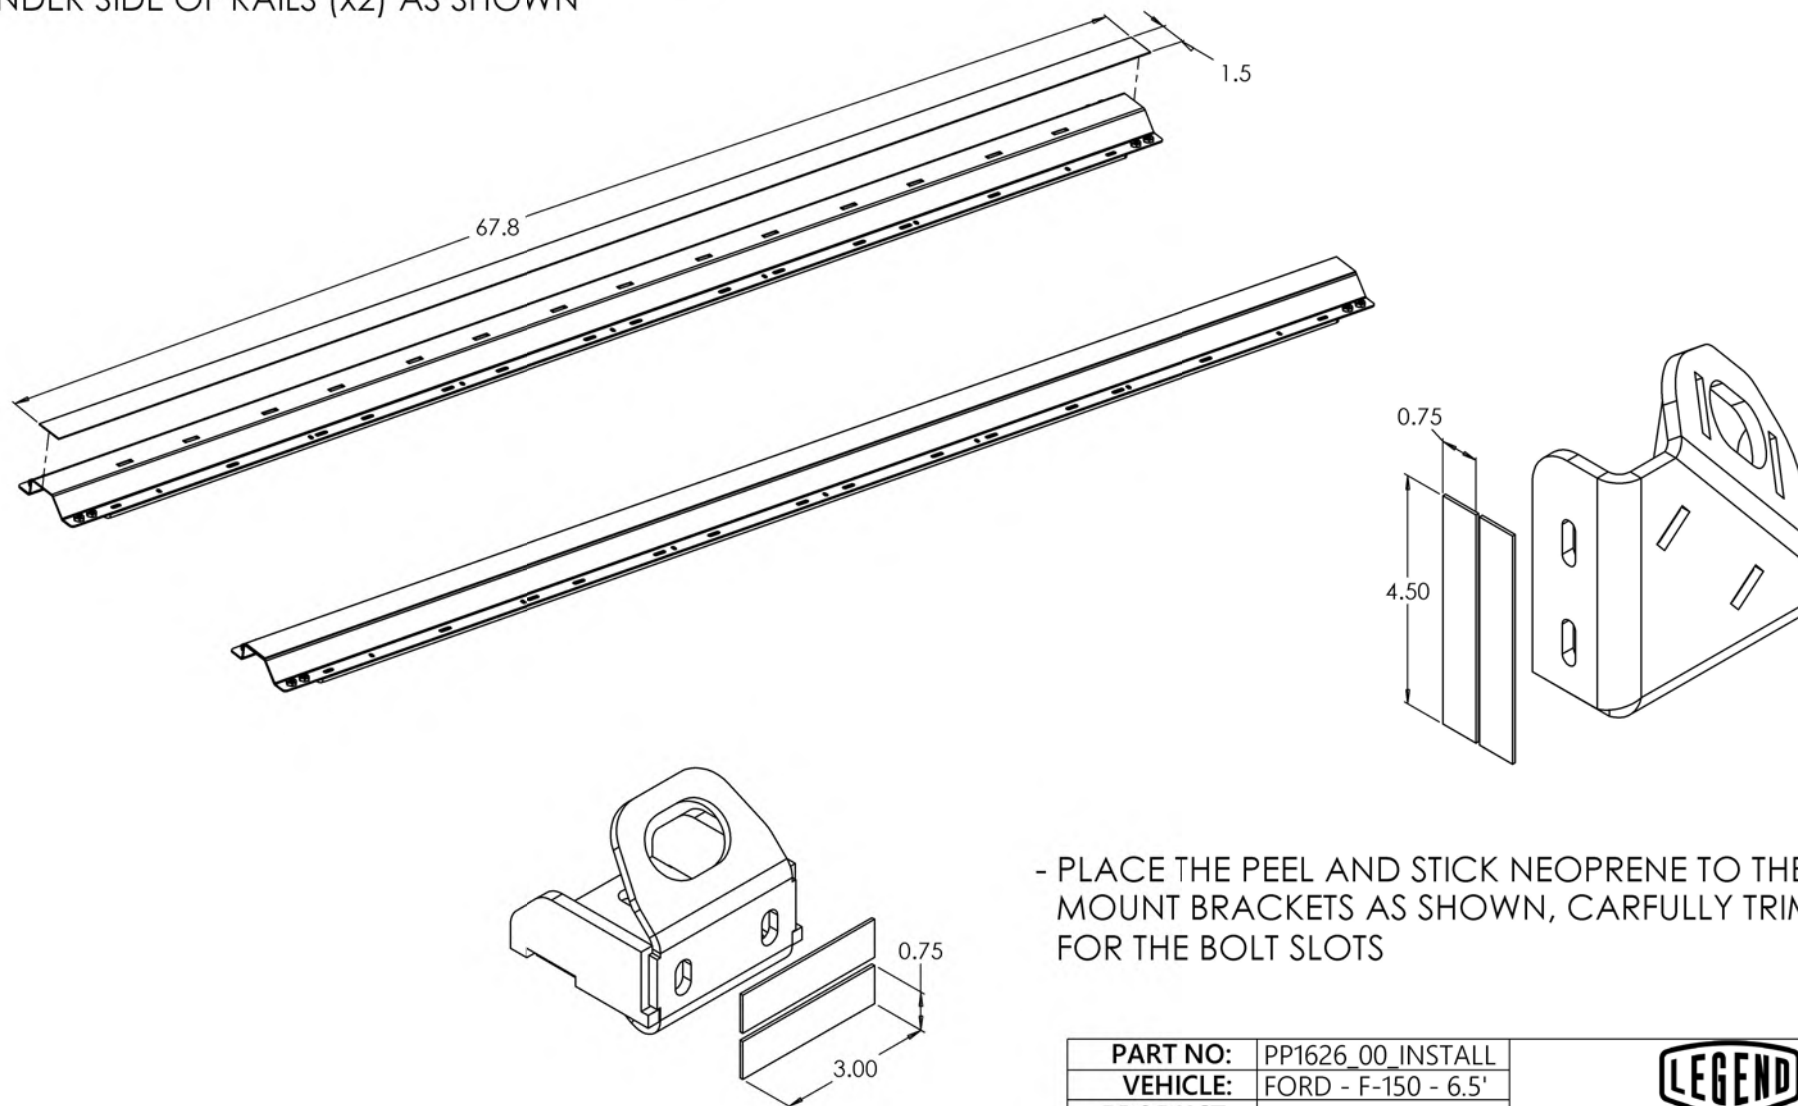

- PLACE THE PEEL AND STICK NEOPRENE TO THE MOUNT BRACKETS AS SHOWN, CAREFULLY TRIM FOR THE BOLT SLOTS

PART NO:	PP1626_00_INSTALL
VEHICLE:	FORD - F-150 - 6.5'
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 4 OF 14	Revision: 1




LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #2


- FASTEN THE FOUR FRAME SECTIONS TOGETHER AS SHOWN USING THE 16x M6 x 1.0 - 30mm FHS

NOTE PROFILE ORIENTATION

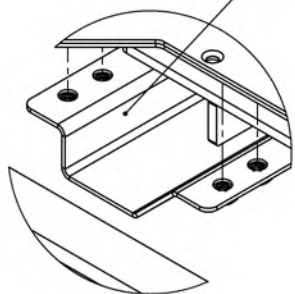


DETAIL I

SCALE 1:2

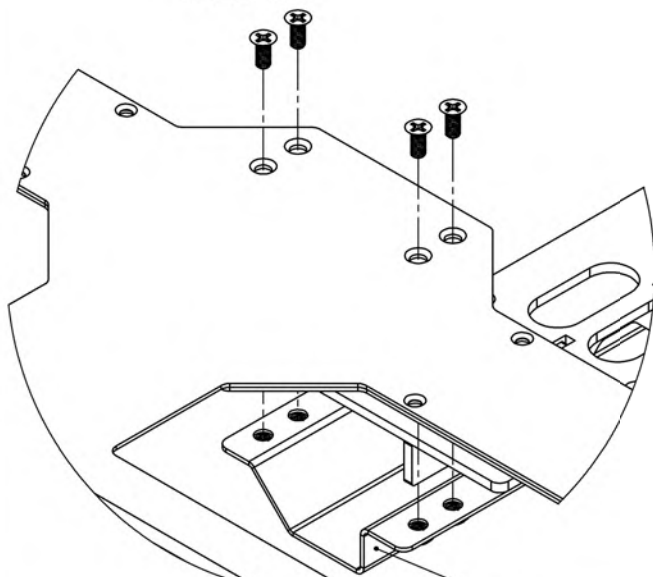


DETAIL H

SCALE 1:2

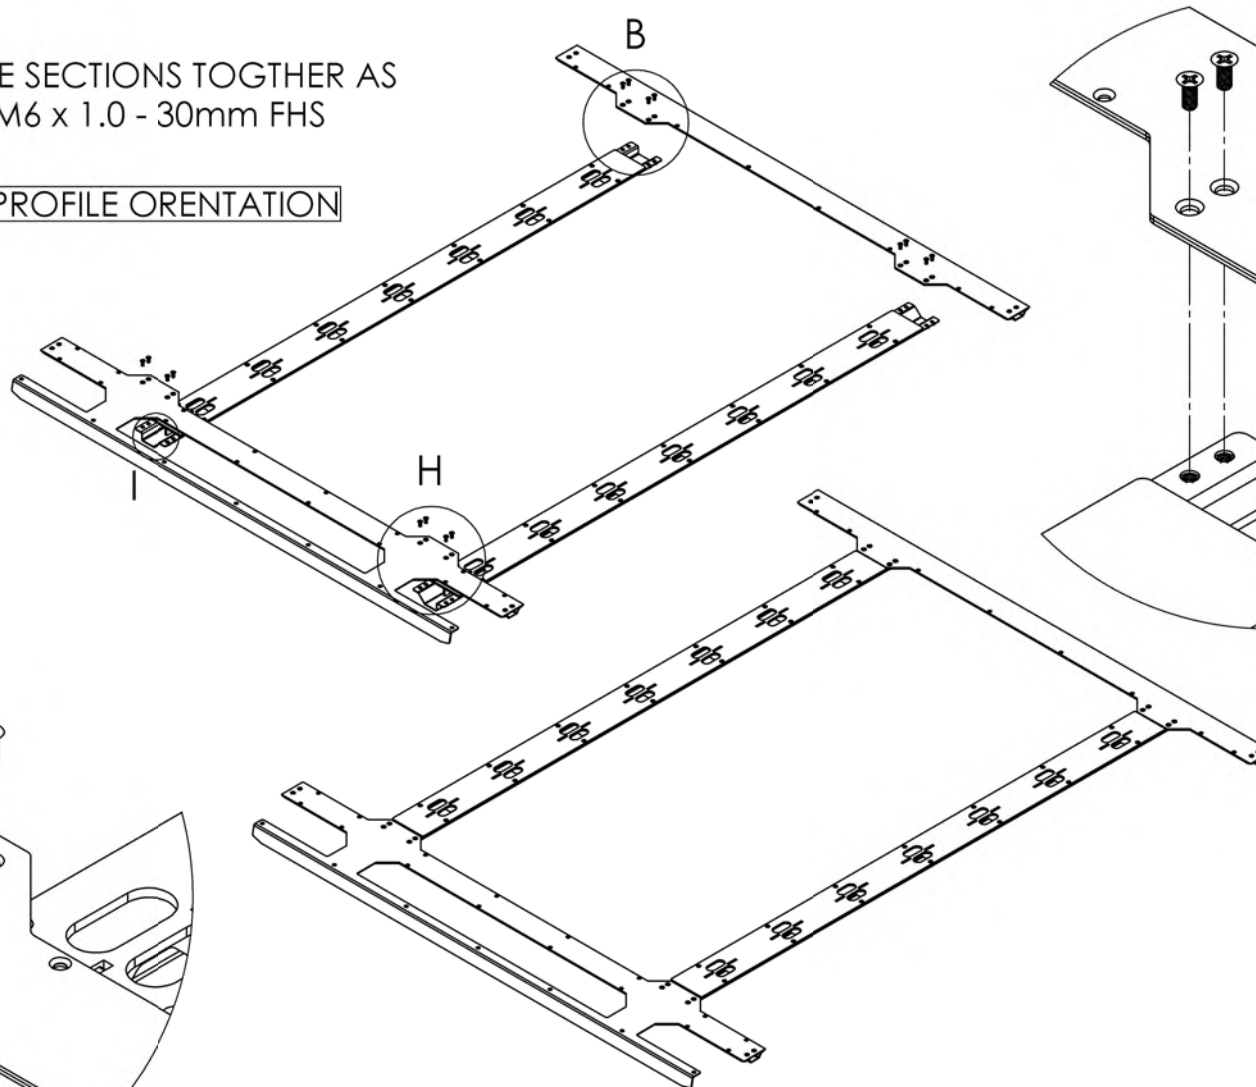

DETAIL B

SCALE 1:2

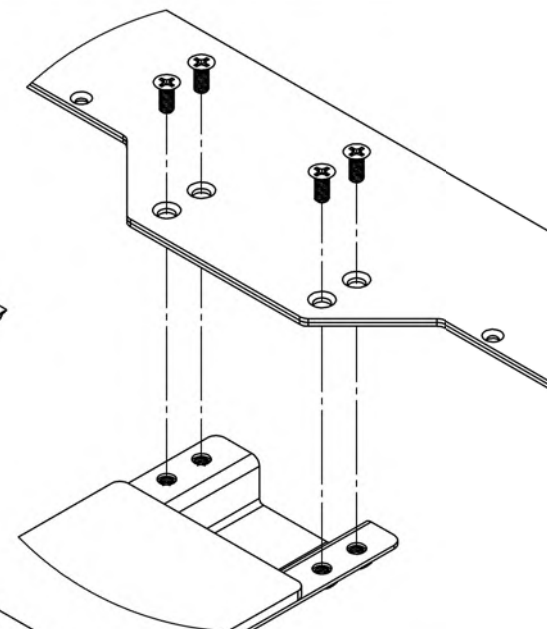


PART NO:	PP1626_00_INSTALL
VEHICLE:	FORD - F-150 - 6.5'
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 5 OF 14	Revision: 1



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #3

- USE M4 FASTENERS AS SHOWN TO SECURE MIDDLE BED SECTION TO THE FRAME

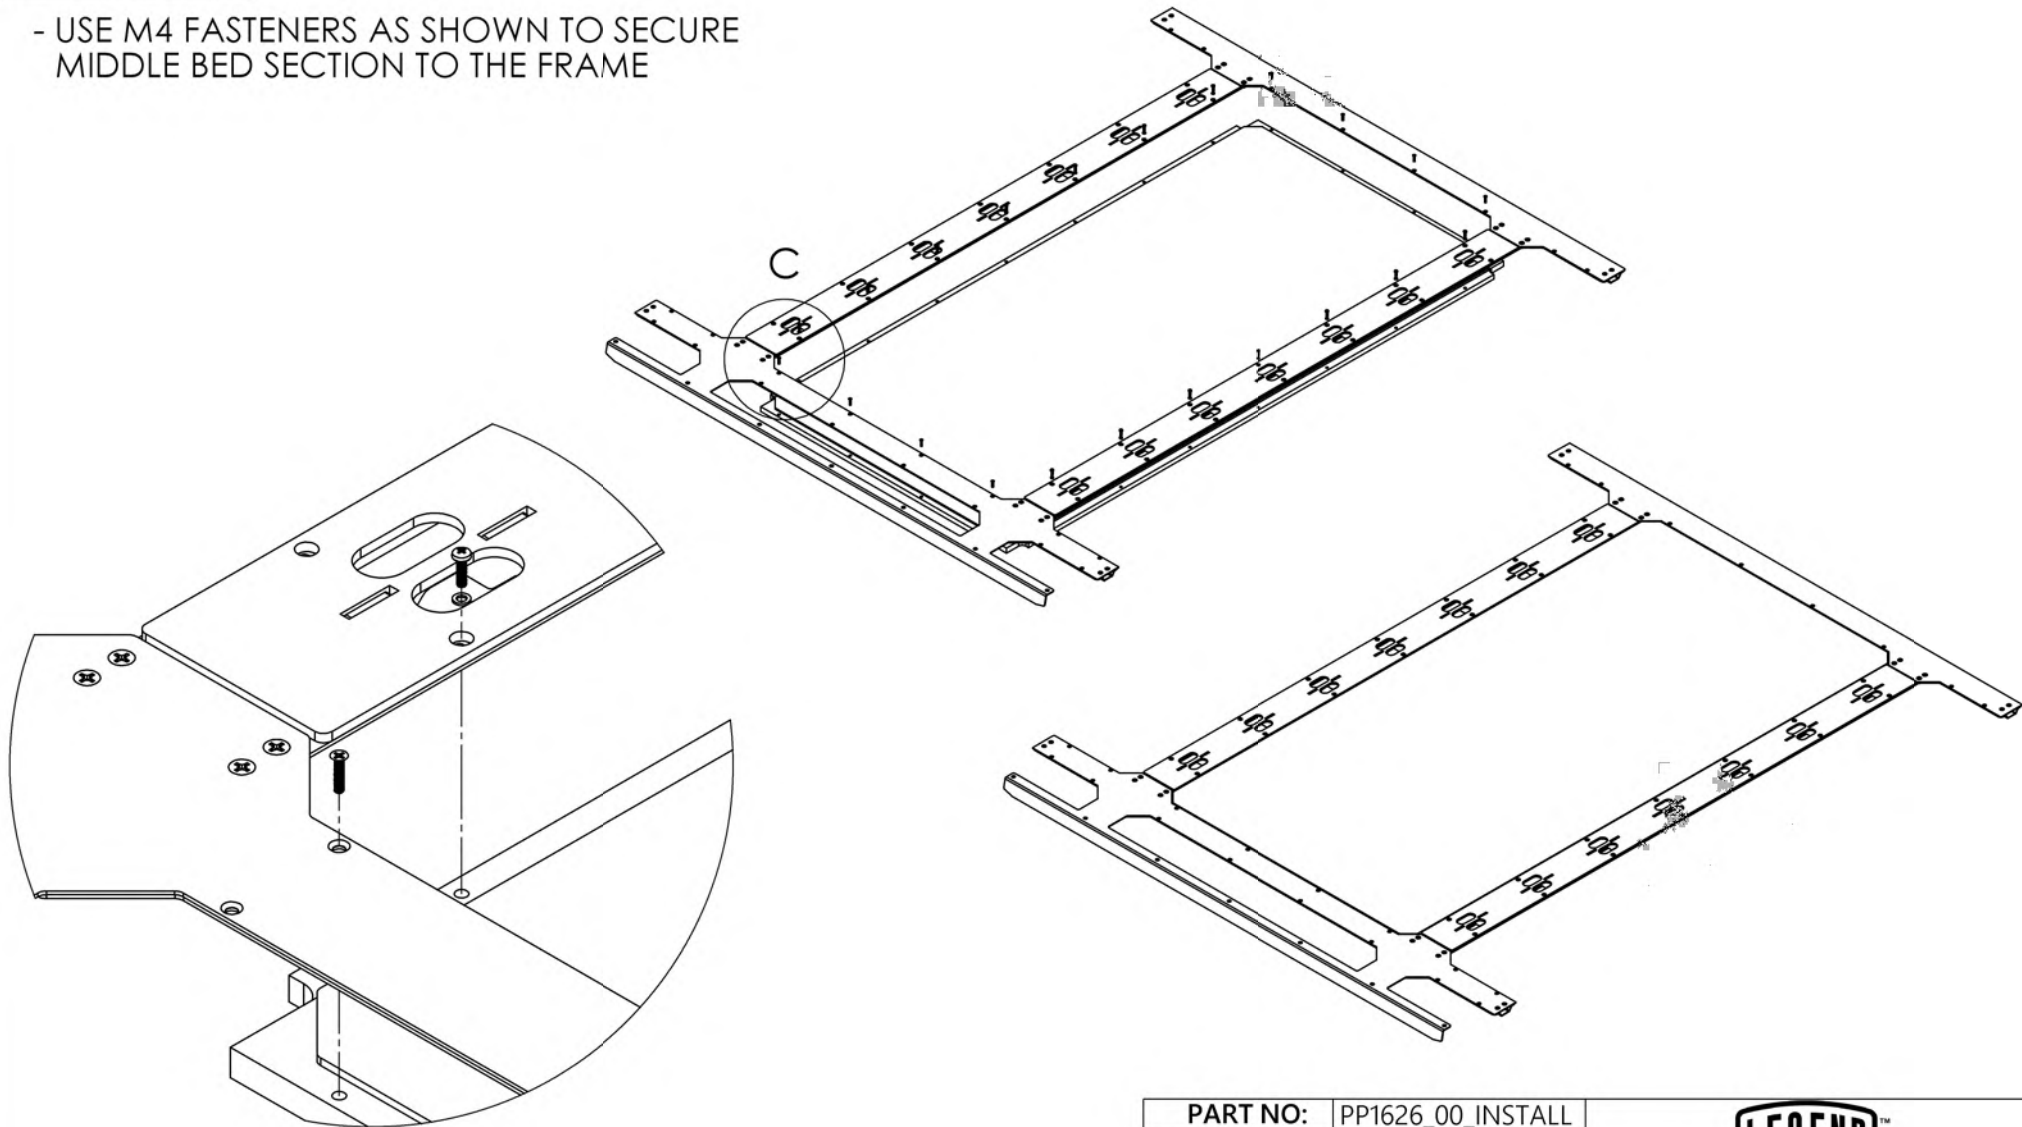

DETAIL C

SCALE 1:2



PART NO:	PP1626_00_INSTALL
VEHICLE:	FORD - F-150 - 6.5'
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 6 OF 14	Revision: 1




LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #4

- USE M4 FASTENERS AS SHOWN TO SECURE OUTER BED SURFACES TO THE FRAME AS

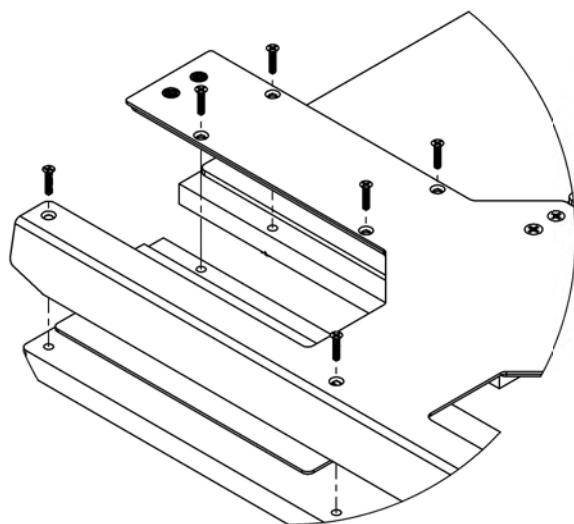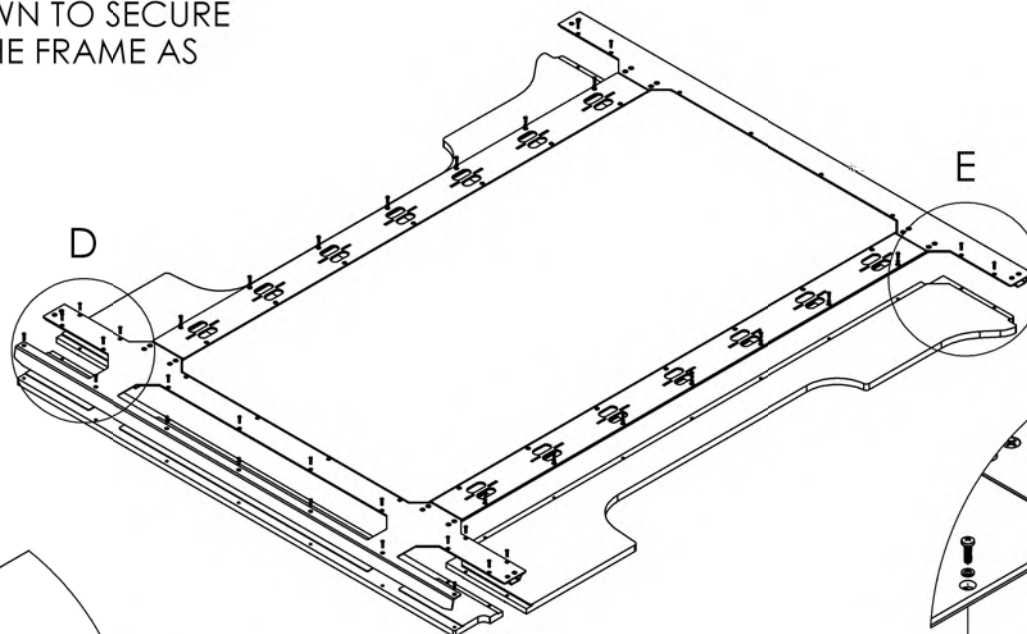

DETAIL D
SCALE 1 : 3

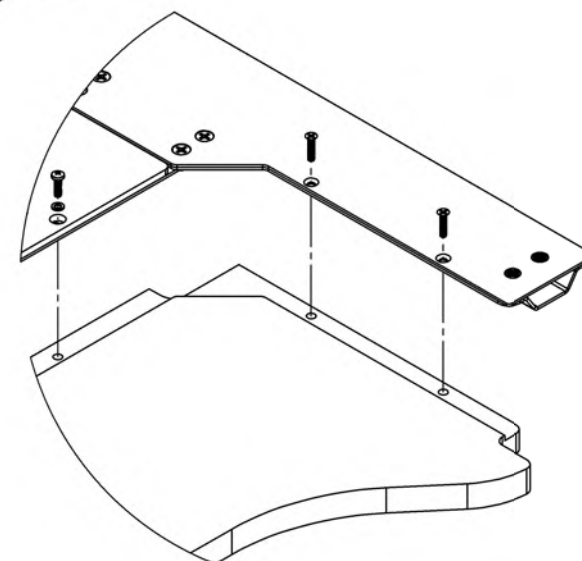


DETAIL E
SCALE 1 : 3

PART NO:	PP1626_00_INSTALL
VEHICLE:	FORD - F-150 - 6.5'
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 7 OF 14	Revision: 1



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

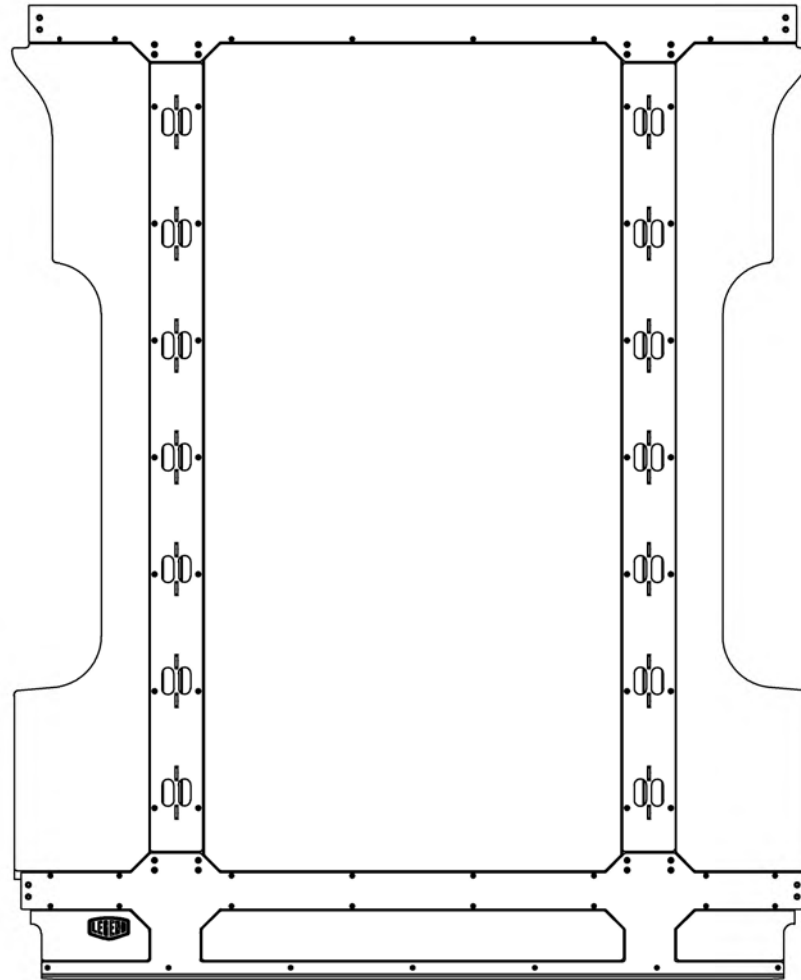


PART NO:	PP1626_00_INSTALL
VEHICLE:	FORD - F-150 - 6.5'
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 8 OF 14	Revision: 1



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #5

- REMOVE ALL FOUR OEM D-RINGS, KEEP IN A SAFE PLACE

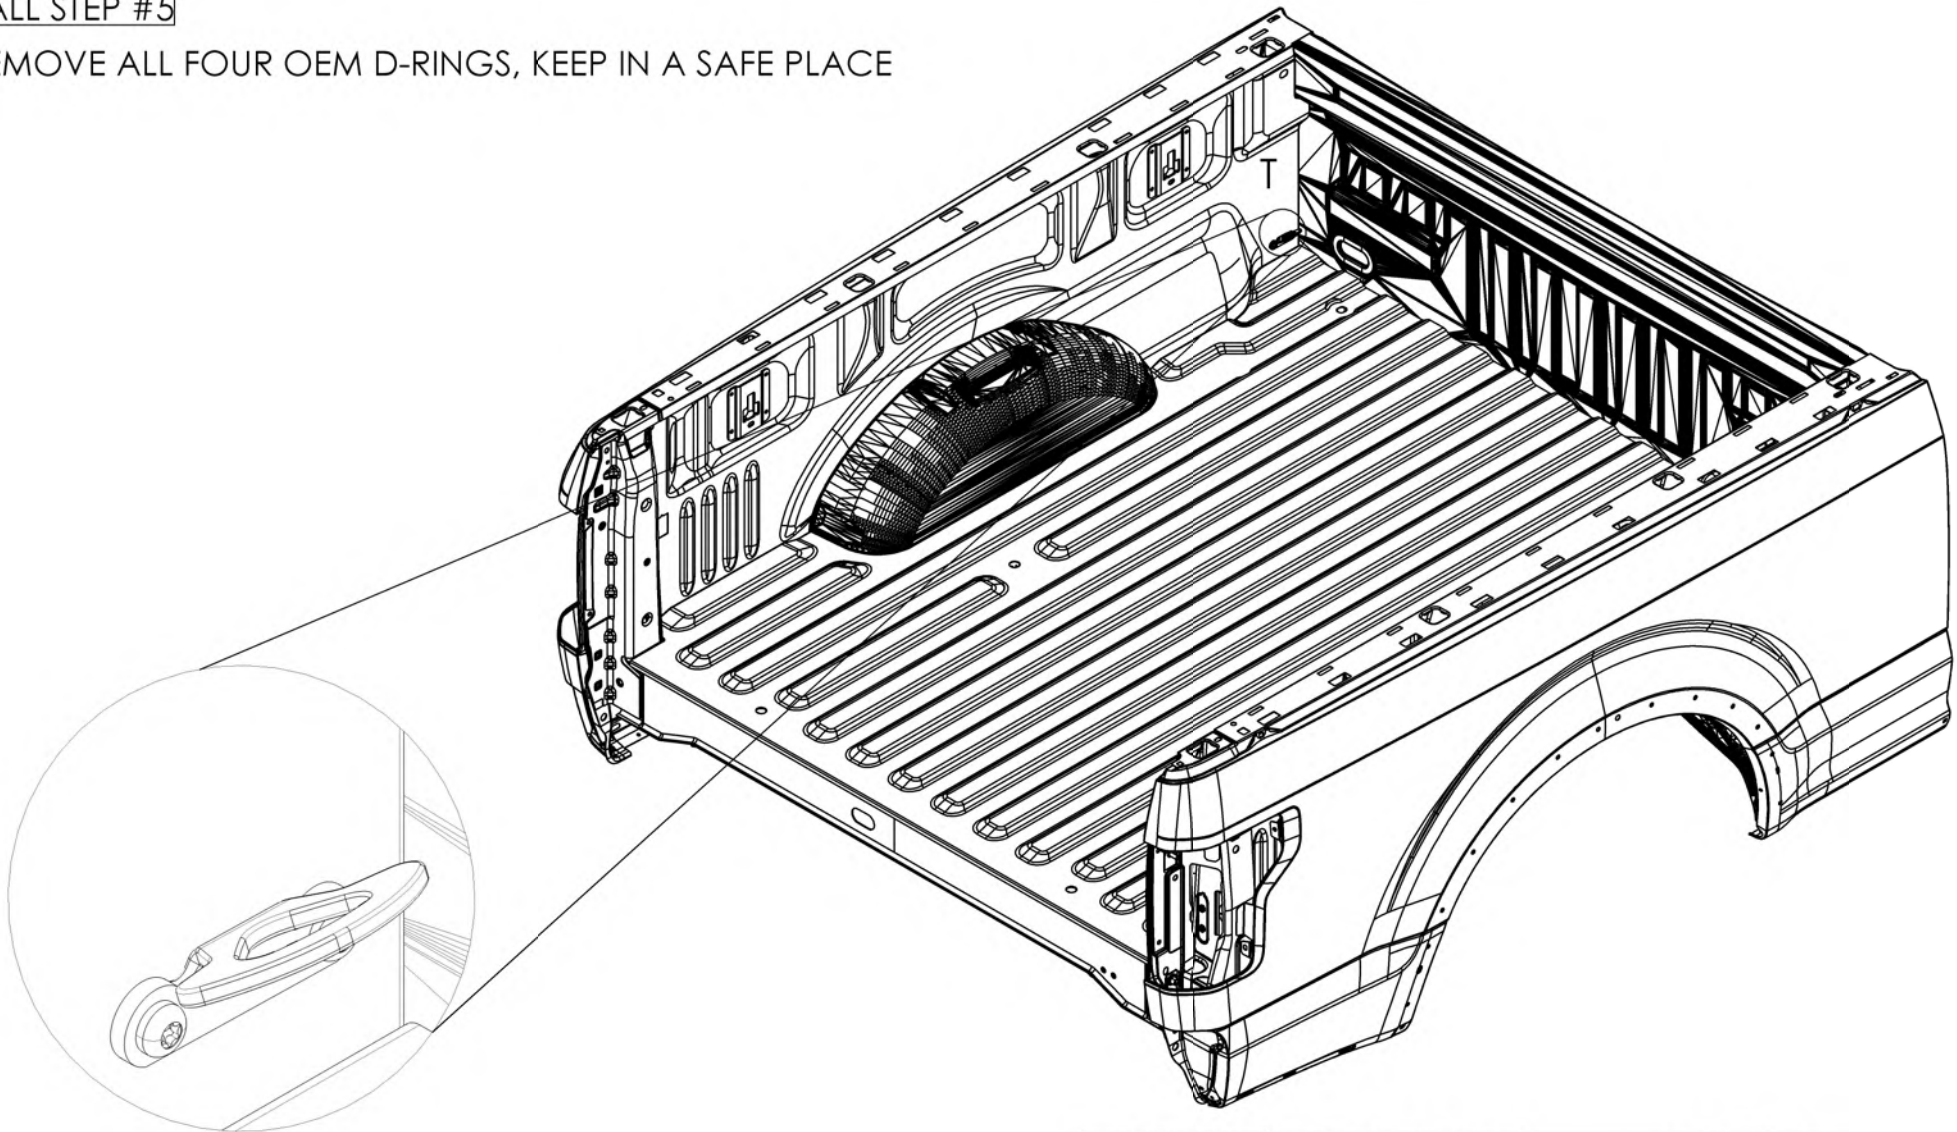

DETAIL T
SCALE 1:1


PART NO:	PP1626_00_INSTALL
VEHICLE:	FORD - F-150 - 6.5'
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 9 OF 14	Revision: 1



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #6

- GET A FEW FRIENDS TO HELP YOU LOAD YOUR BEDBOSS INTO YOUR TRUCK BED.

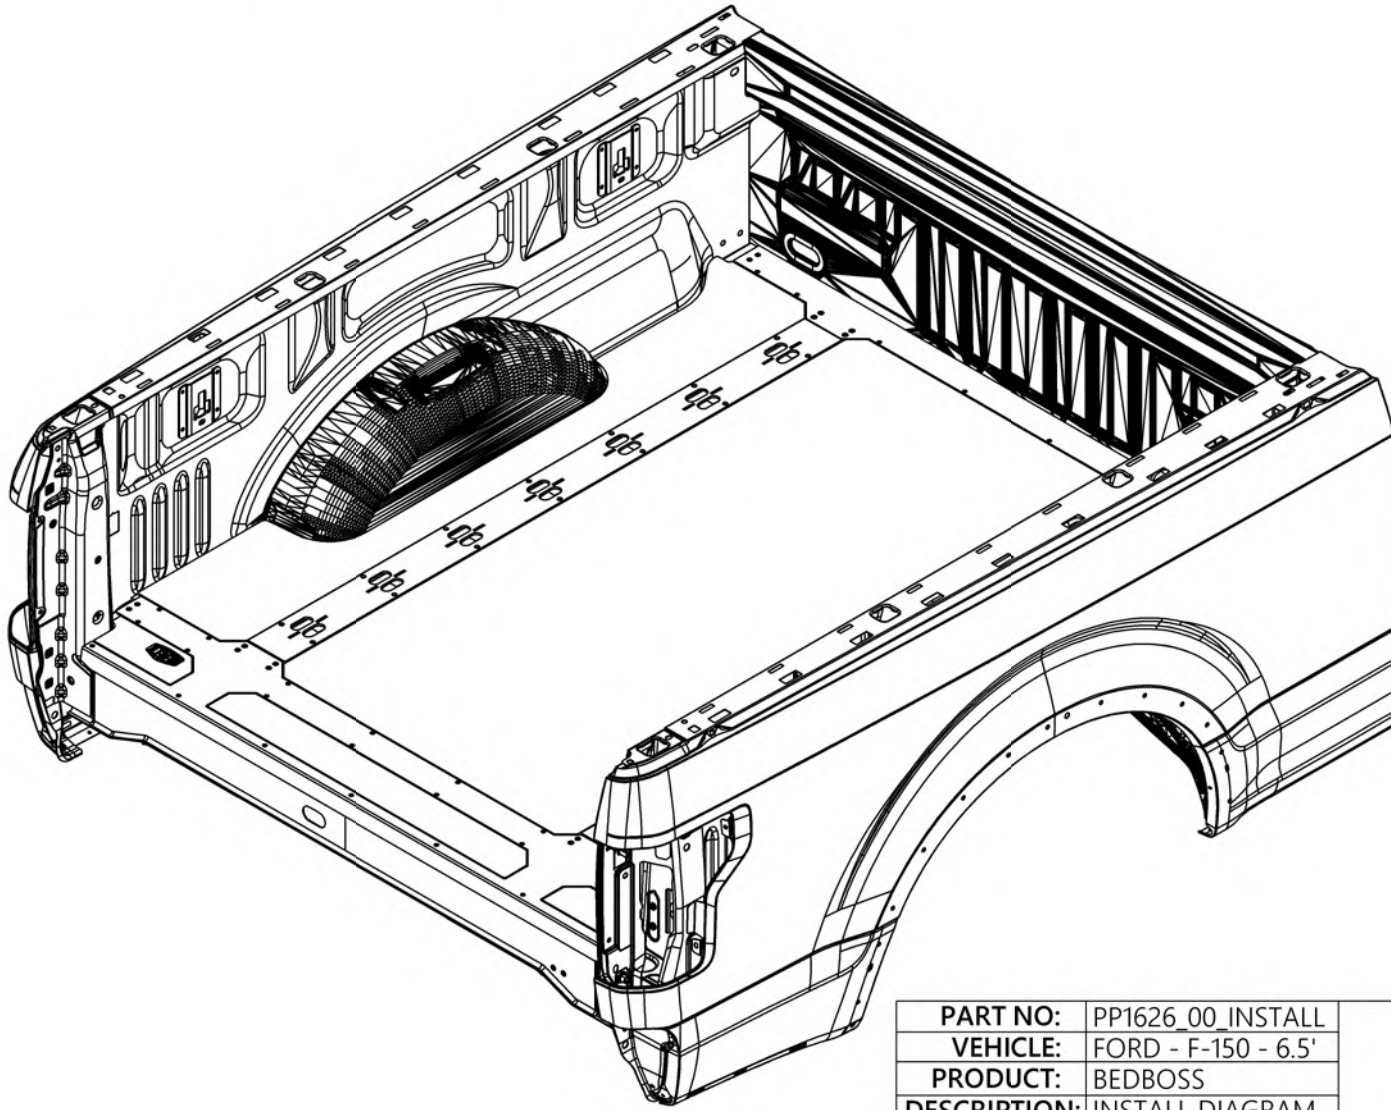


PART NO:	PP1626_00_INSTALL
VEHICLE:	FORD - F-150 - 6.5'
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet:	10 OF 14
Revision:	1





LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #7

- USE M8 FASTENERS AS SHOWN TO ATTACH FRONT D-RING BRACKETS (x2) TO BEDBOSS FRAME (HAND TIGHTEN ONLY)

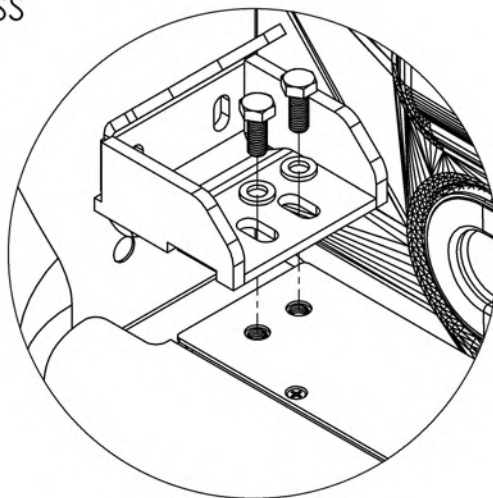

DETAIL F
SCALE 1:2

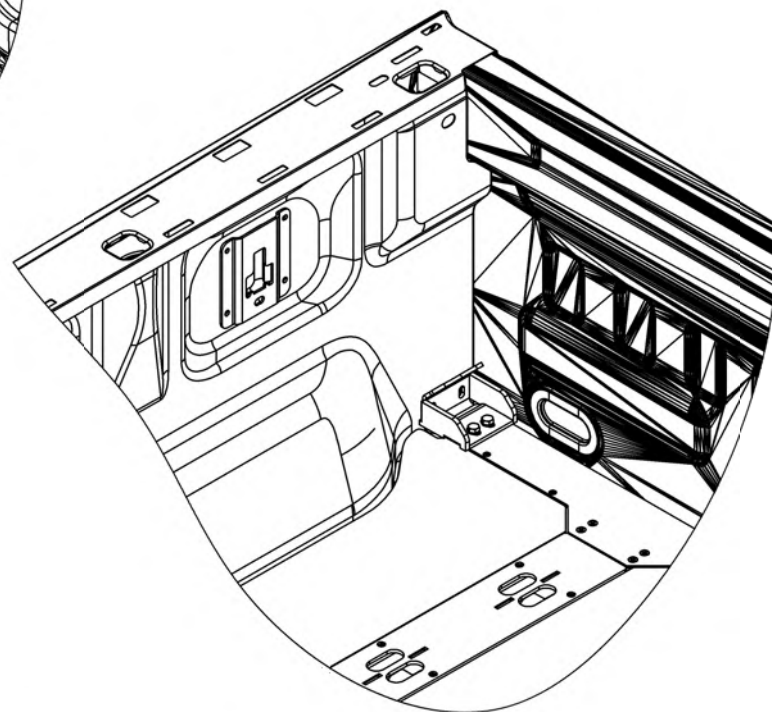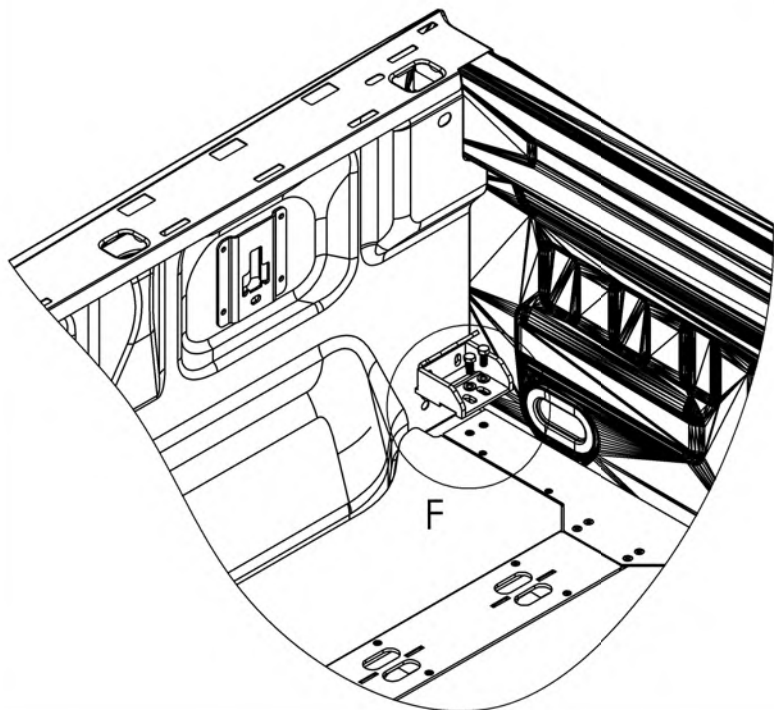



PART NO:	PP1626_00_INSTALL
VEHICLE:	FORD - F-150 - 6.5'
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet:	11 OF 14
Revision:	1



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #8

- USE M6 FASTENERS AS SHOWN TO ATTACH FRONT D-RING BRACKETS (x2) TO TRUCK (HAND TIGHTEN ONLY)

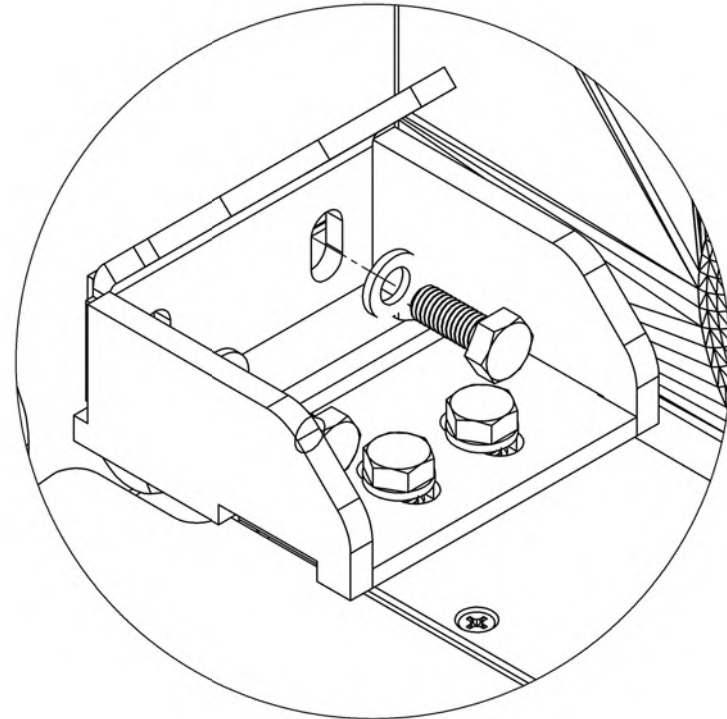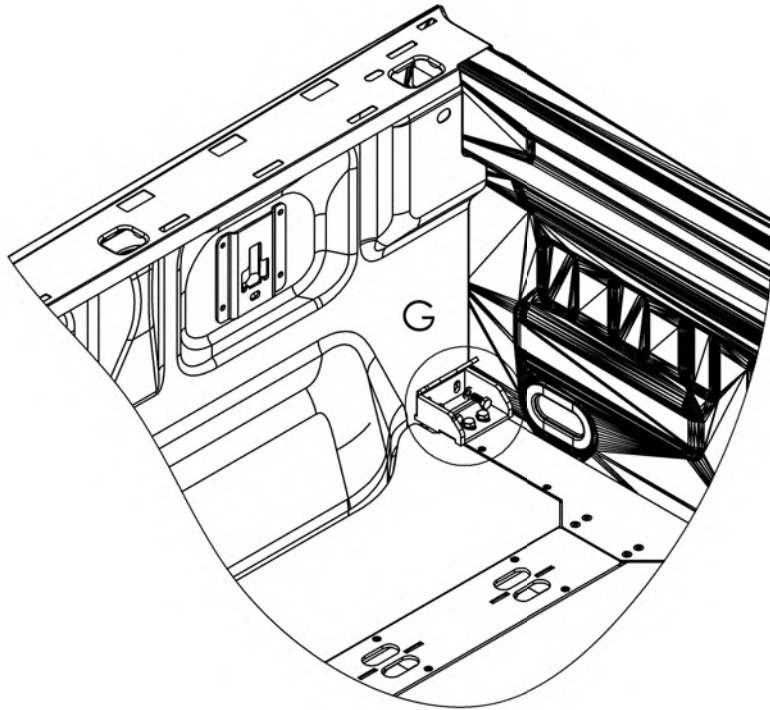

DETAIL G
SCALE 1 : 1



PART NO:	PP1626_00_INSTALL
VEHICLE:	FORD - F-150 - 6.5'
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet:	12 OF 14
Revision:	1



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #9

- USE M8 FASTENERS AS SHOWN TO ATTACH REAR D-RING BRACKETS (x2) TO BEDBOSS FRAME (HAND TIGHTEN ONLY)

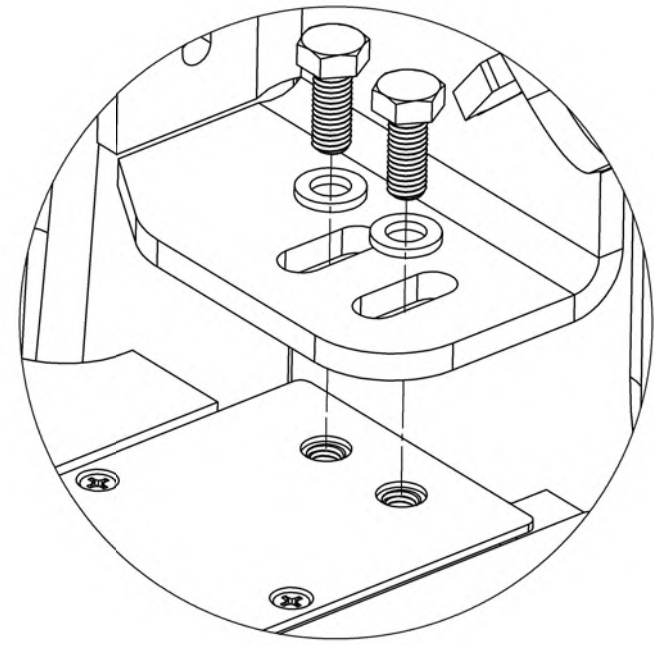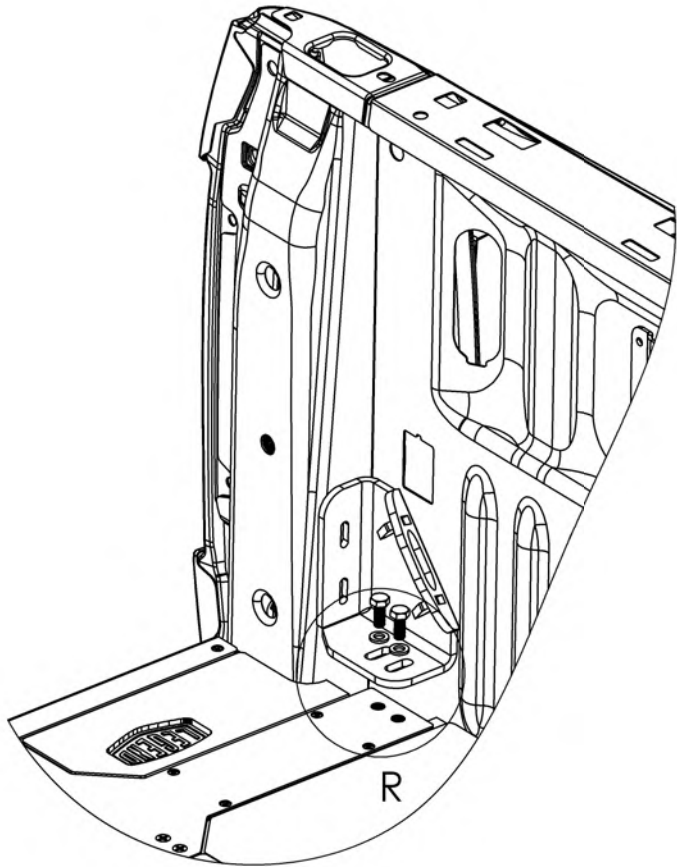

DETAIL R

SCALE 1 : 1



PART NO:	PP1626_00_INSTALL
VEHICLE:	FORD - F-150 - 6.5'
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet:	13 OF 14
Revision:	1



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #10

- USE M6 FASTENERS AS SHOWN TO ATTACH D-RING BRACKETS (x2) TO TRUCK BED (BOTH SIDES)
ONCE ALL D-RINGS BRACKETS ARE BOLTED HAND TIGHT,
PROCEED TO TIGHTEN ALL FOUR D-RINGS HARDWARE SECURE

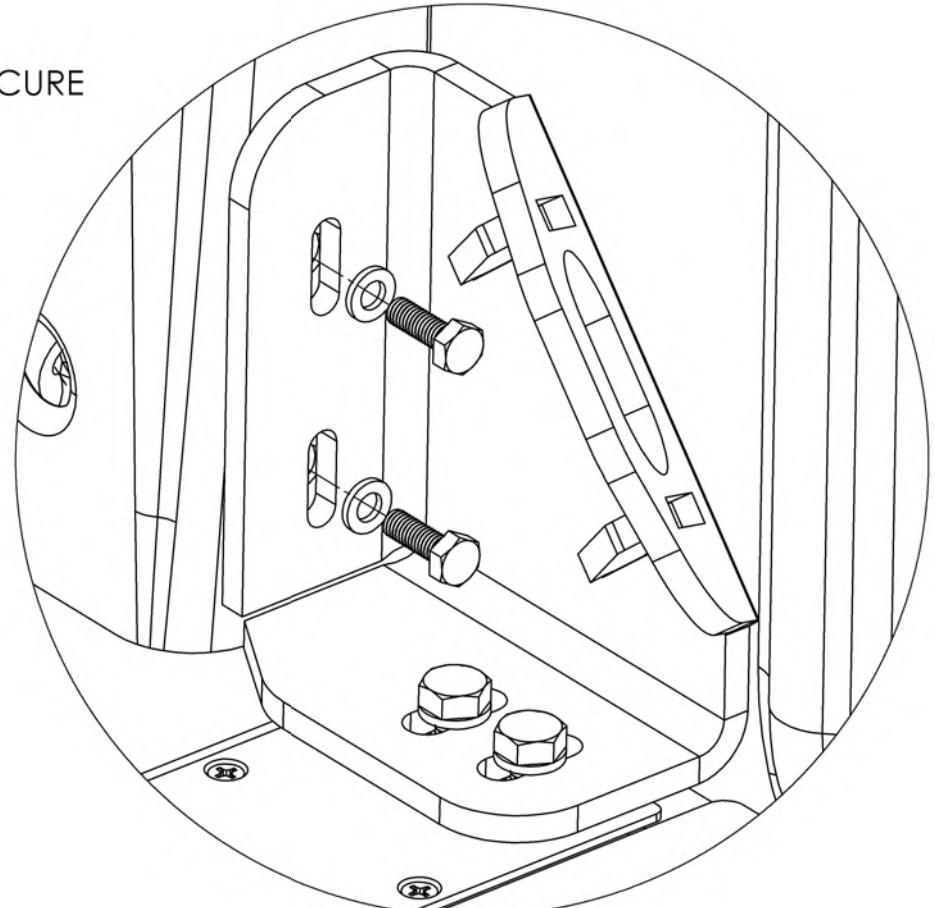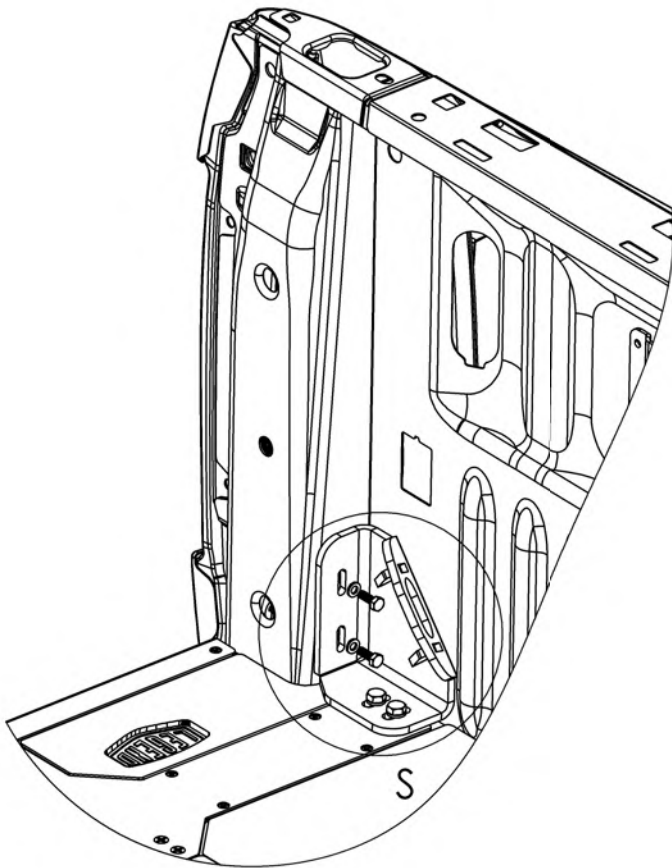

DETAIL S

SCALE 1 : 1

PART NO:	PP1626_00_INSTALL
VEHICLE:	FORD - F-150 - 6.5'
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet:	14 OF 14
Revision:	1



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM