


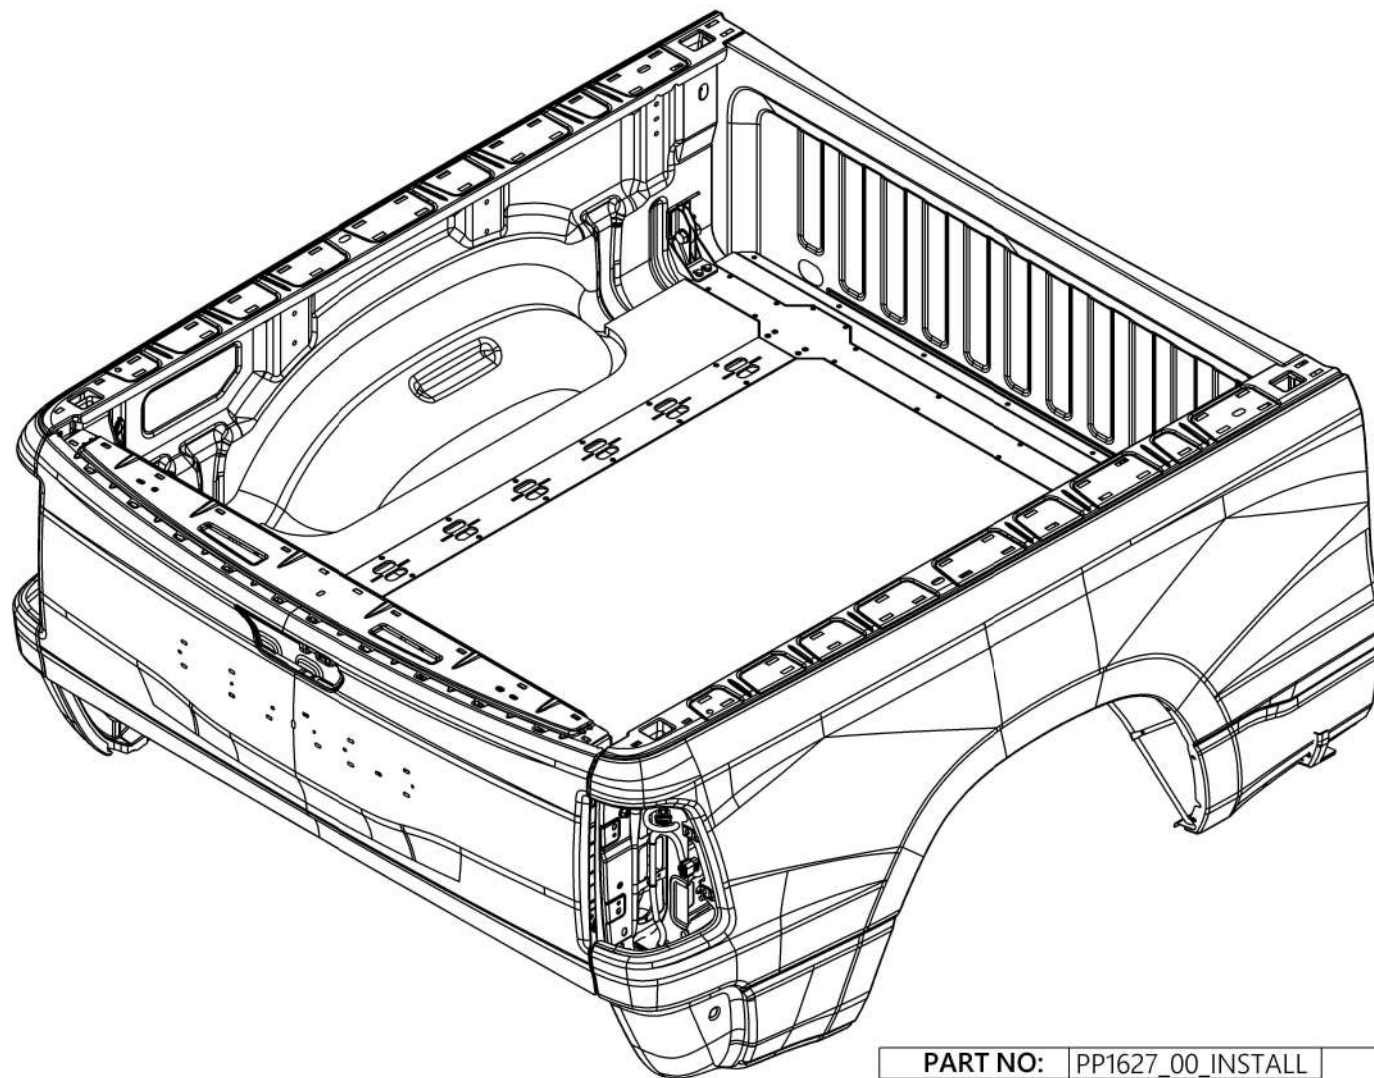


REVISIONS			
REV.	DESCRIPTION	DATE	APPROVED

PART NO:	PP1627_00_INSTALL
VEHICLE:	RAM - 6.5' - DT
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet:	1 OF 11
Revision:	-



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM


HARDWARE PARTS LIST

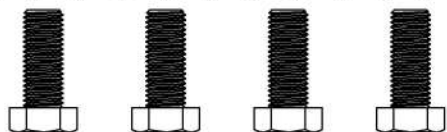

4x M16 x 2.0 - 40mm - HHCS



4x M16 x 2.0 - LOCK NUT

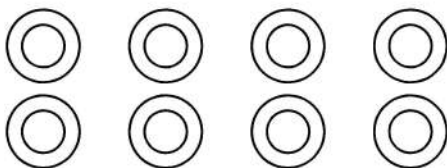


8x M16 - WASHER




8x M8 x 1.25 - 16mm - HHCS




8x M8 - LOCK WASHER




16x M6 x 1.0 - 30mm - FHS

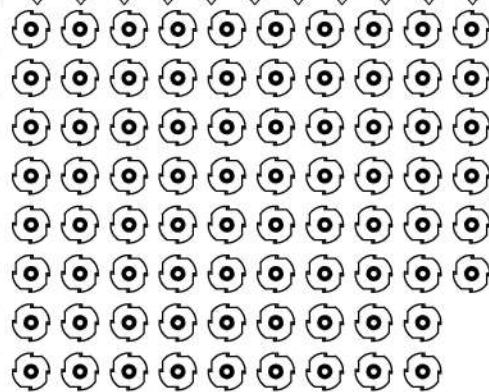

16x M4 x 0.7 - TEE NUT

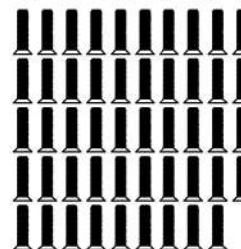

49x M4 x 0.7 - 18mm FHS

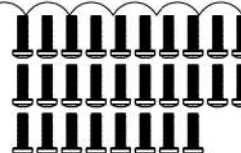

28x M4 x 0.7 - 18mm BHCS



28x M4 - LOCK WASHER



121" - 1.5" x 0.06" - PEEL AND STICK PAD













21" - 0.75" x 0.06" - PEEL AND STICK PAD

PART NO:	PP1627_00_INSTALL
VEHICLE:	RAM - 6.5' - DT
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 1 OF 11	Revision: -



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

PARTS LIST

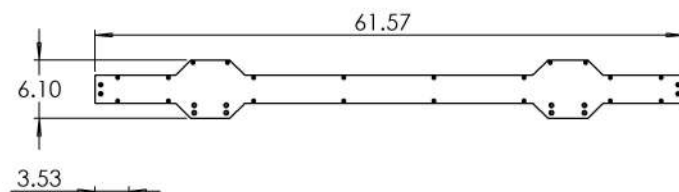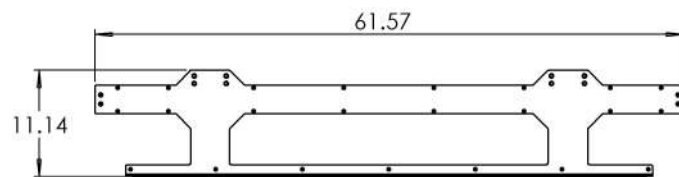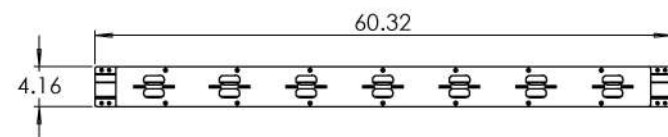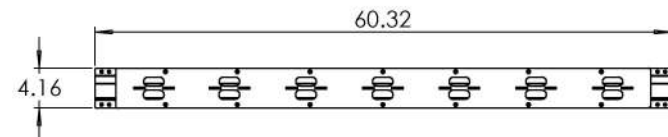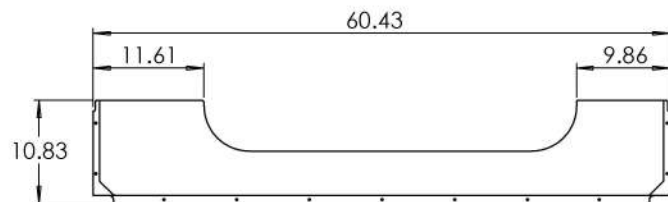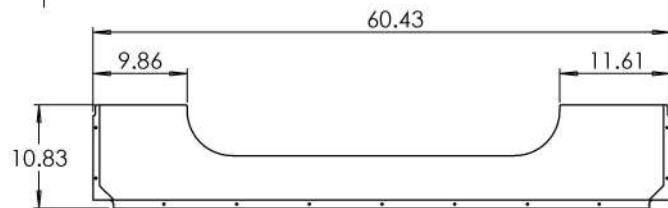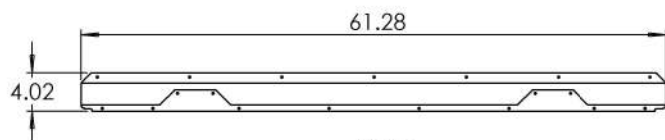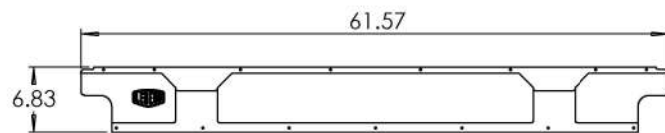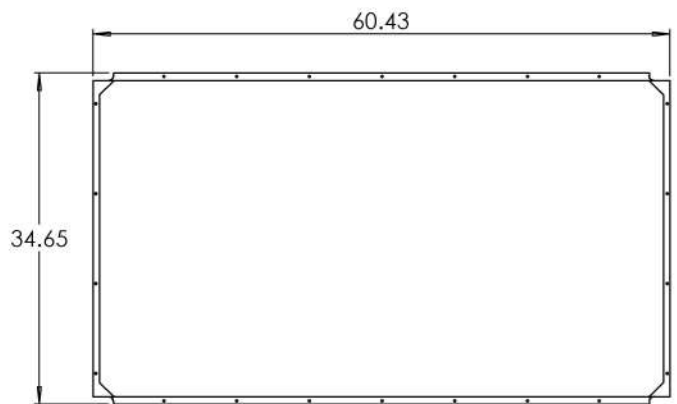



PART NO:	PP1627_00_INSTALL
VEHICLE:	RAM - 6.5' - DT
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 1 OF 11	Revision: -



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM


INSTALL STEP #1

- USE A HAMMER TO INSERT M4 TEE NUTS INTO UNDER SIDE OF EACH SURFACE AS SHOWN

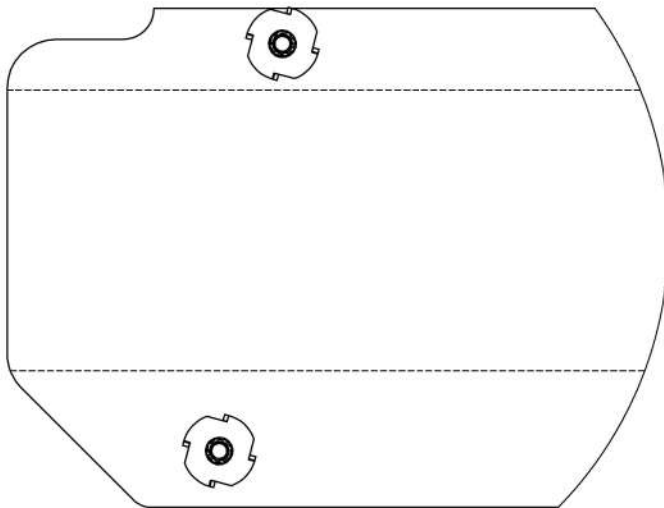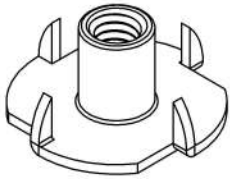

DETAIL A

SCALE 1:1

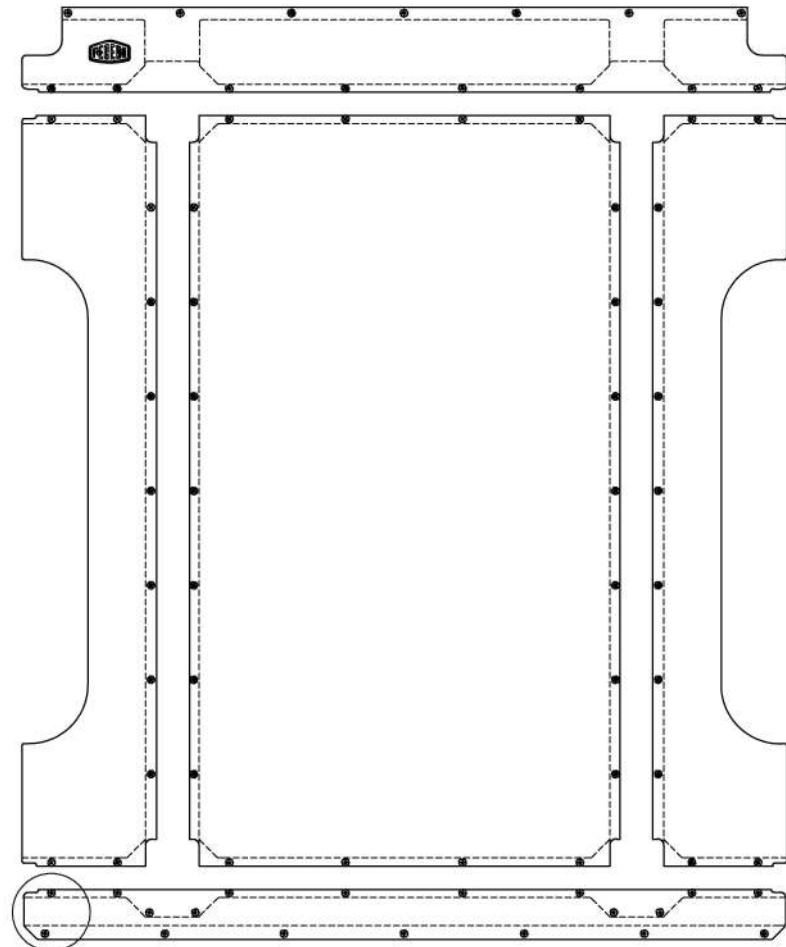

A


PART NO:	PP1627_00_INSTALL
VEHICLE:	RAM - 6.5' - DT
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet:	1 OF 11
Revision:	-



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #2

- PLACE THE PEEL & STICK NEOPRENE TO THE UNDER SIDE OF RAILS (x2) AS SHOWN

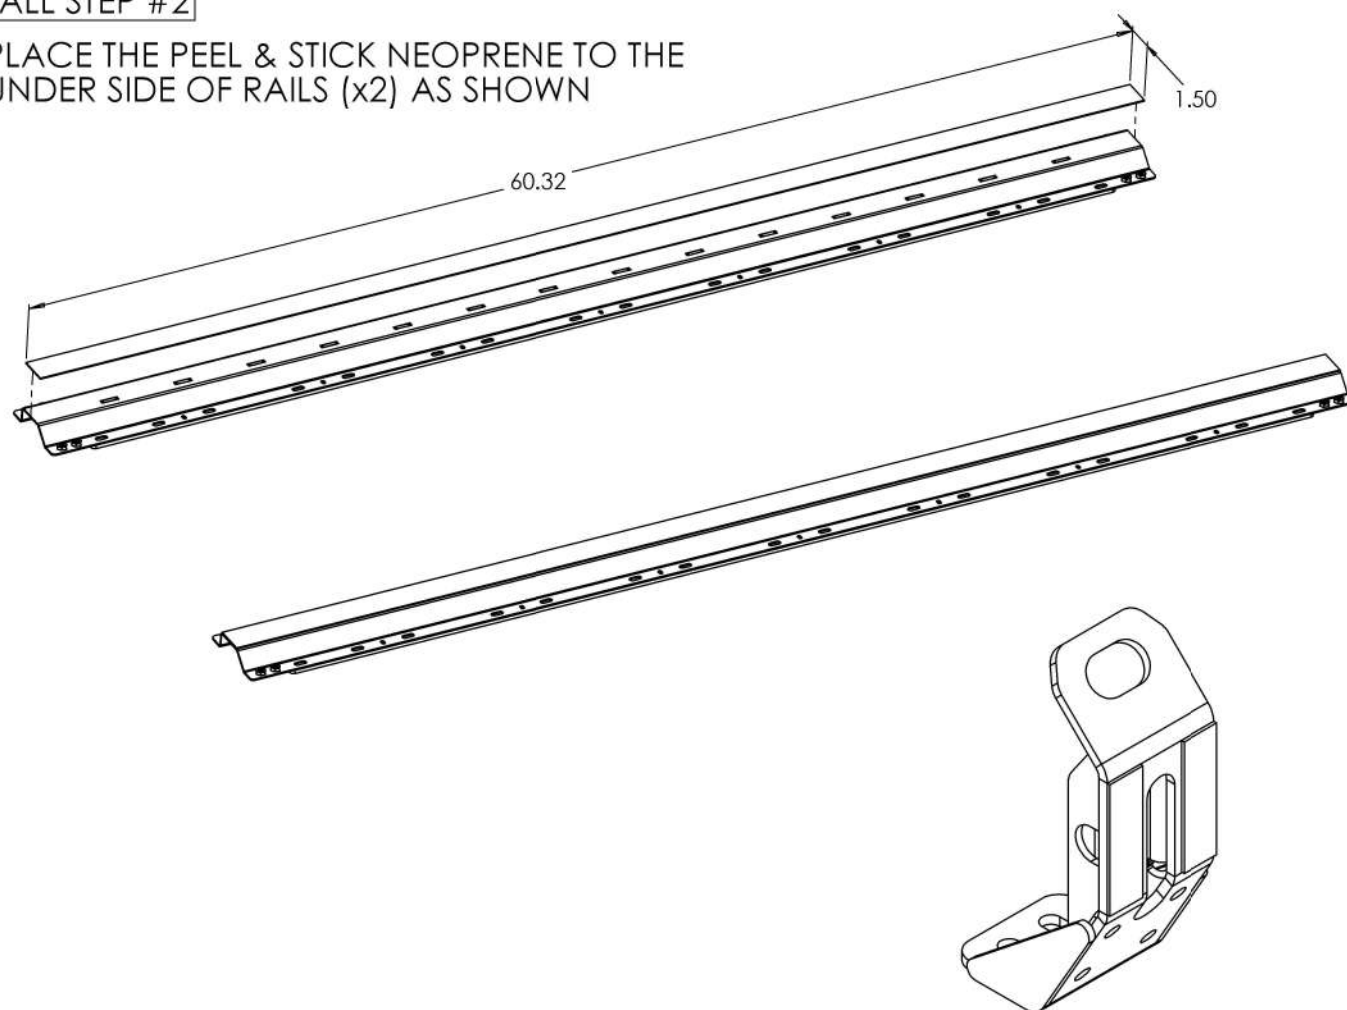

- PLACE THE PEEL & STICK NEOPRENE TO THE D-RING BRACKETS (x4) AS SHOWN

PART NO:	PP1627_00_INSTALL
VEHICLE:	RAM - 6.5' - DT
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet:	1 OF 11
Revision:	-




LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #3


- FASTEN THE FOUR FRAME SECTIONS TOGETHER AS SHOWN USING THE 16x M6 x 1.0 - 30mm FHS

NOTE PROFILE ORIENTATION

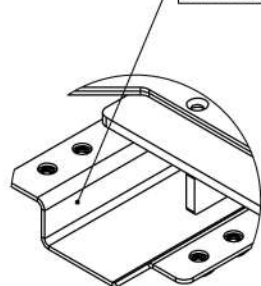

DETAIL I



SCALE 1:2

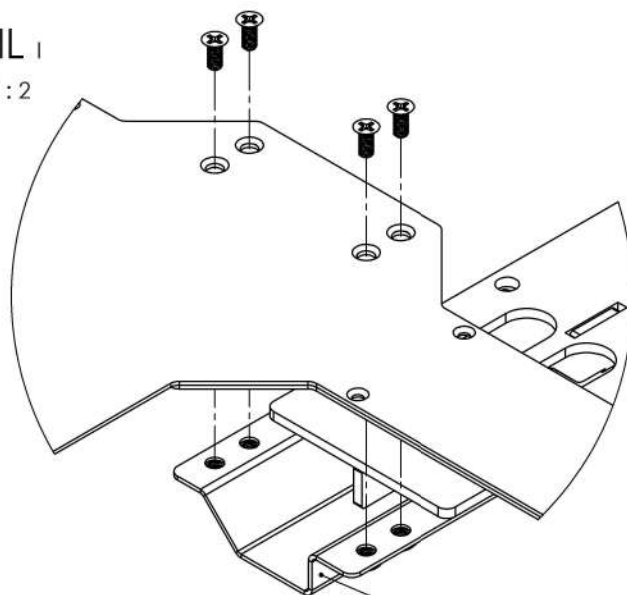

DETAIL H


SCALE 1:2

NOTE PROFILE ORIENTATION

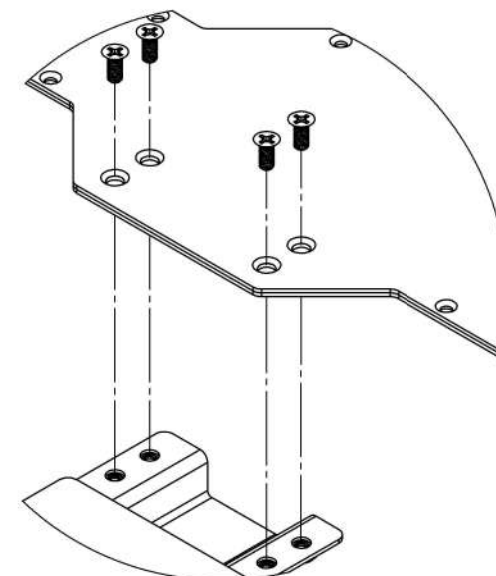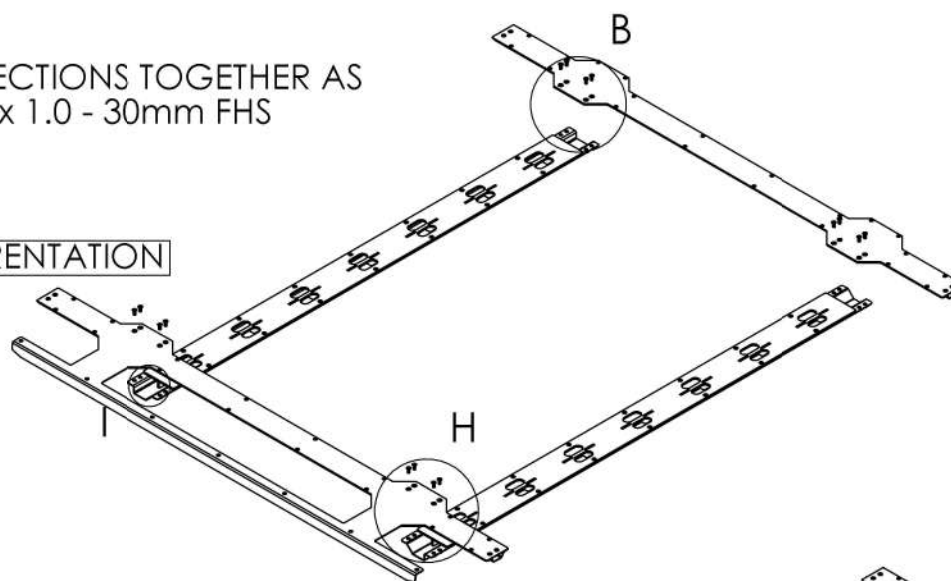

DETAIL B

SCALE 1:2

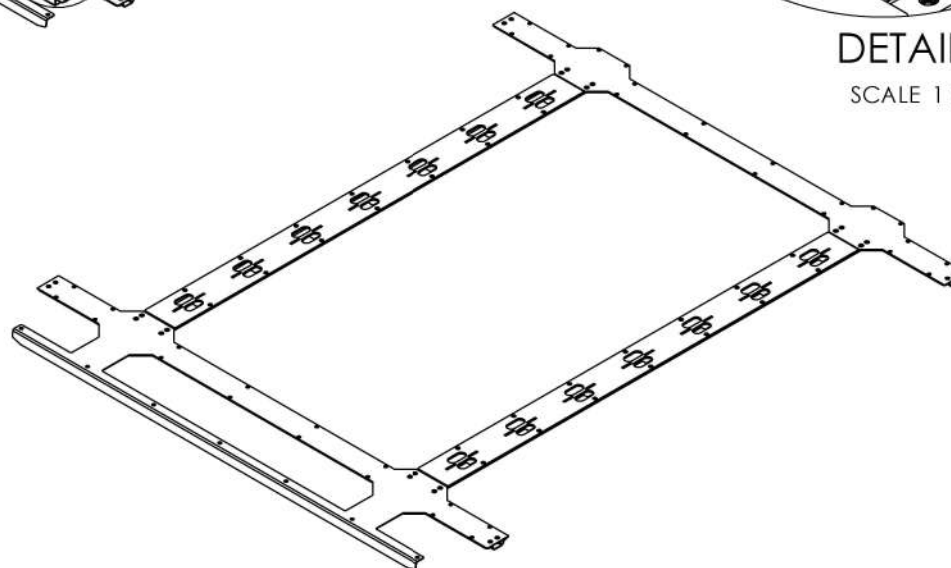


PART NO:	PP1627_00_INSTALL
VEHICLE:	RAM - 6.5' - DT
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet: 1 OF 11	Revision: -




LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #4

- USE M4 FASTENERS AS SHOWN TO SECURE MIDDLE BED SURFACE TO THE FRAME

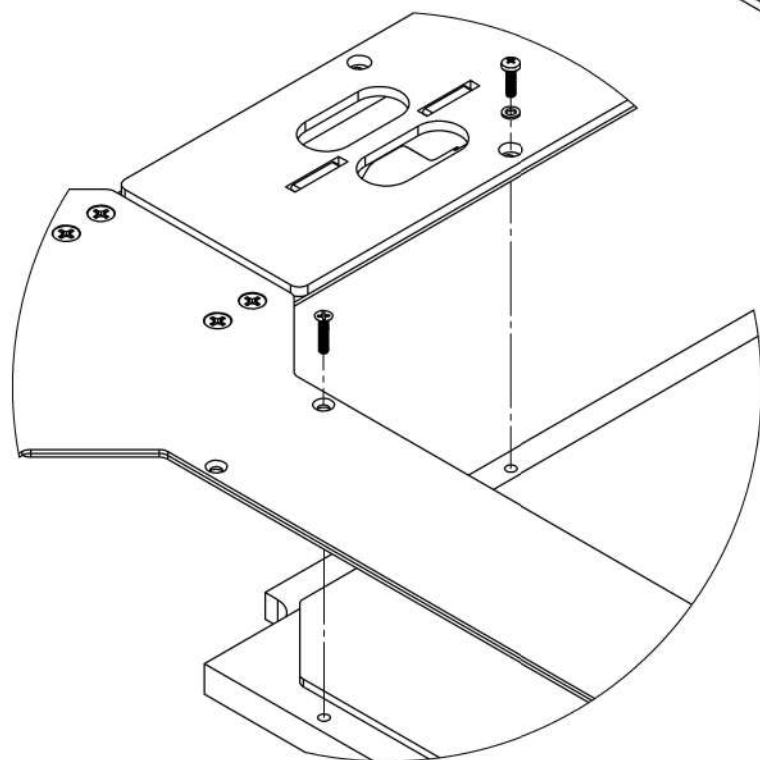

DETAIL C
SCALE 1:2

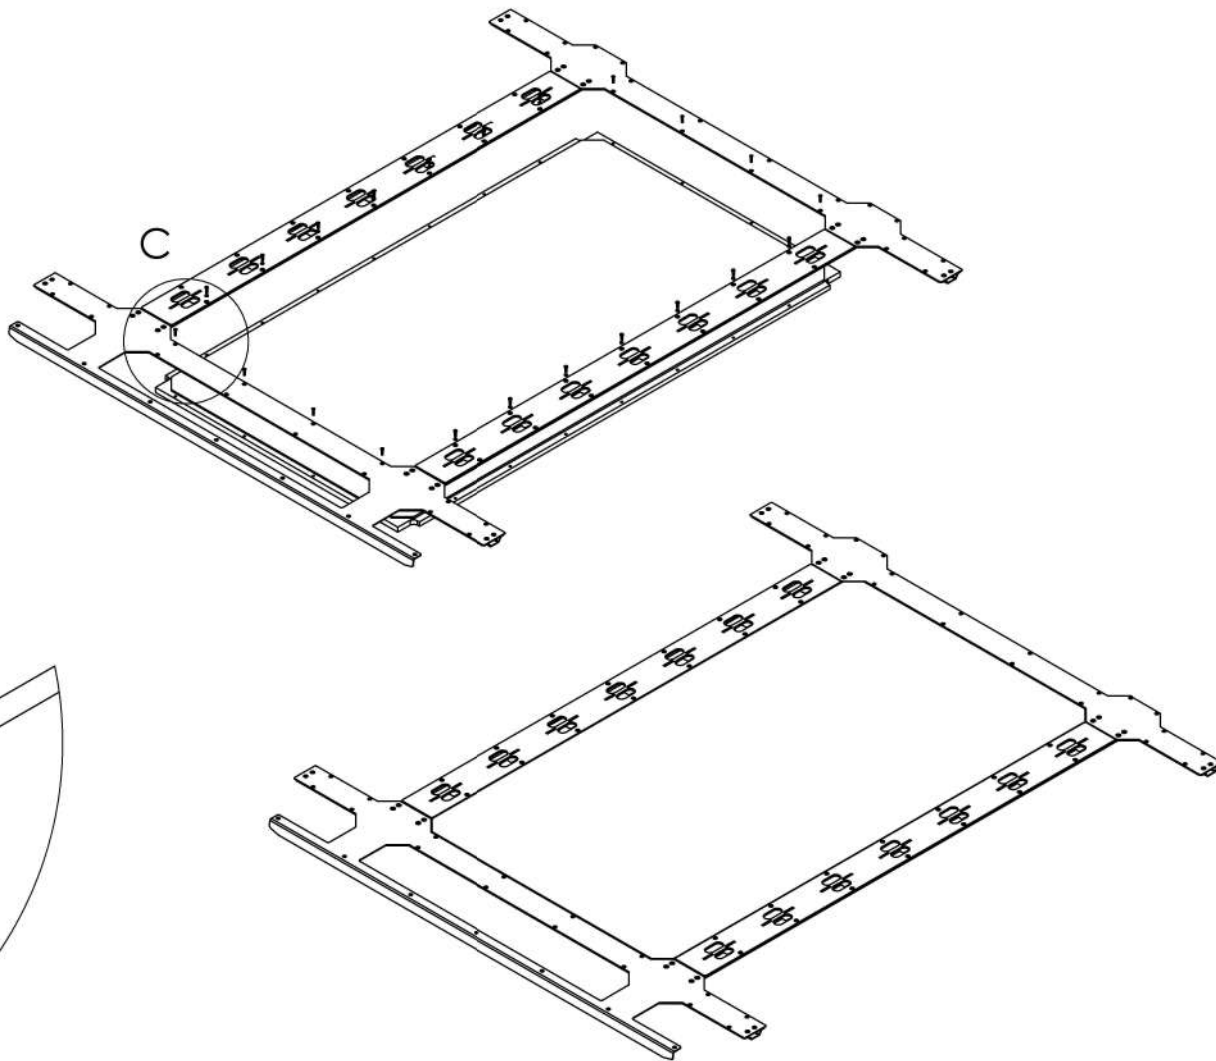

PART NO:	PP1627_00_INSTALL
VEHICLE:	RAM - 6.5' - DT
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet:	1 OF 11
Revision:	-




LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #5

- USE M4 FASTENERS AS SHOWN TO SECURE OUTER BED SURFACES TO THE FRAME AS WELL AS THE FRONT TRIM BRACKET

- NOTE SHORT EDGE

- NOTE SHORT EDGE

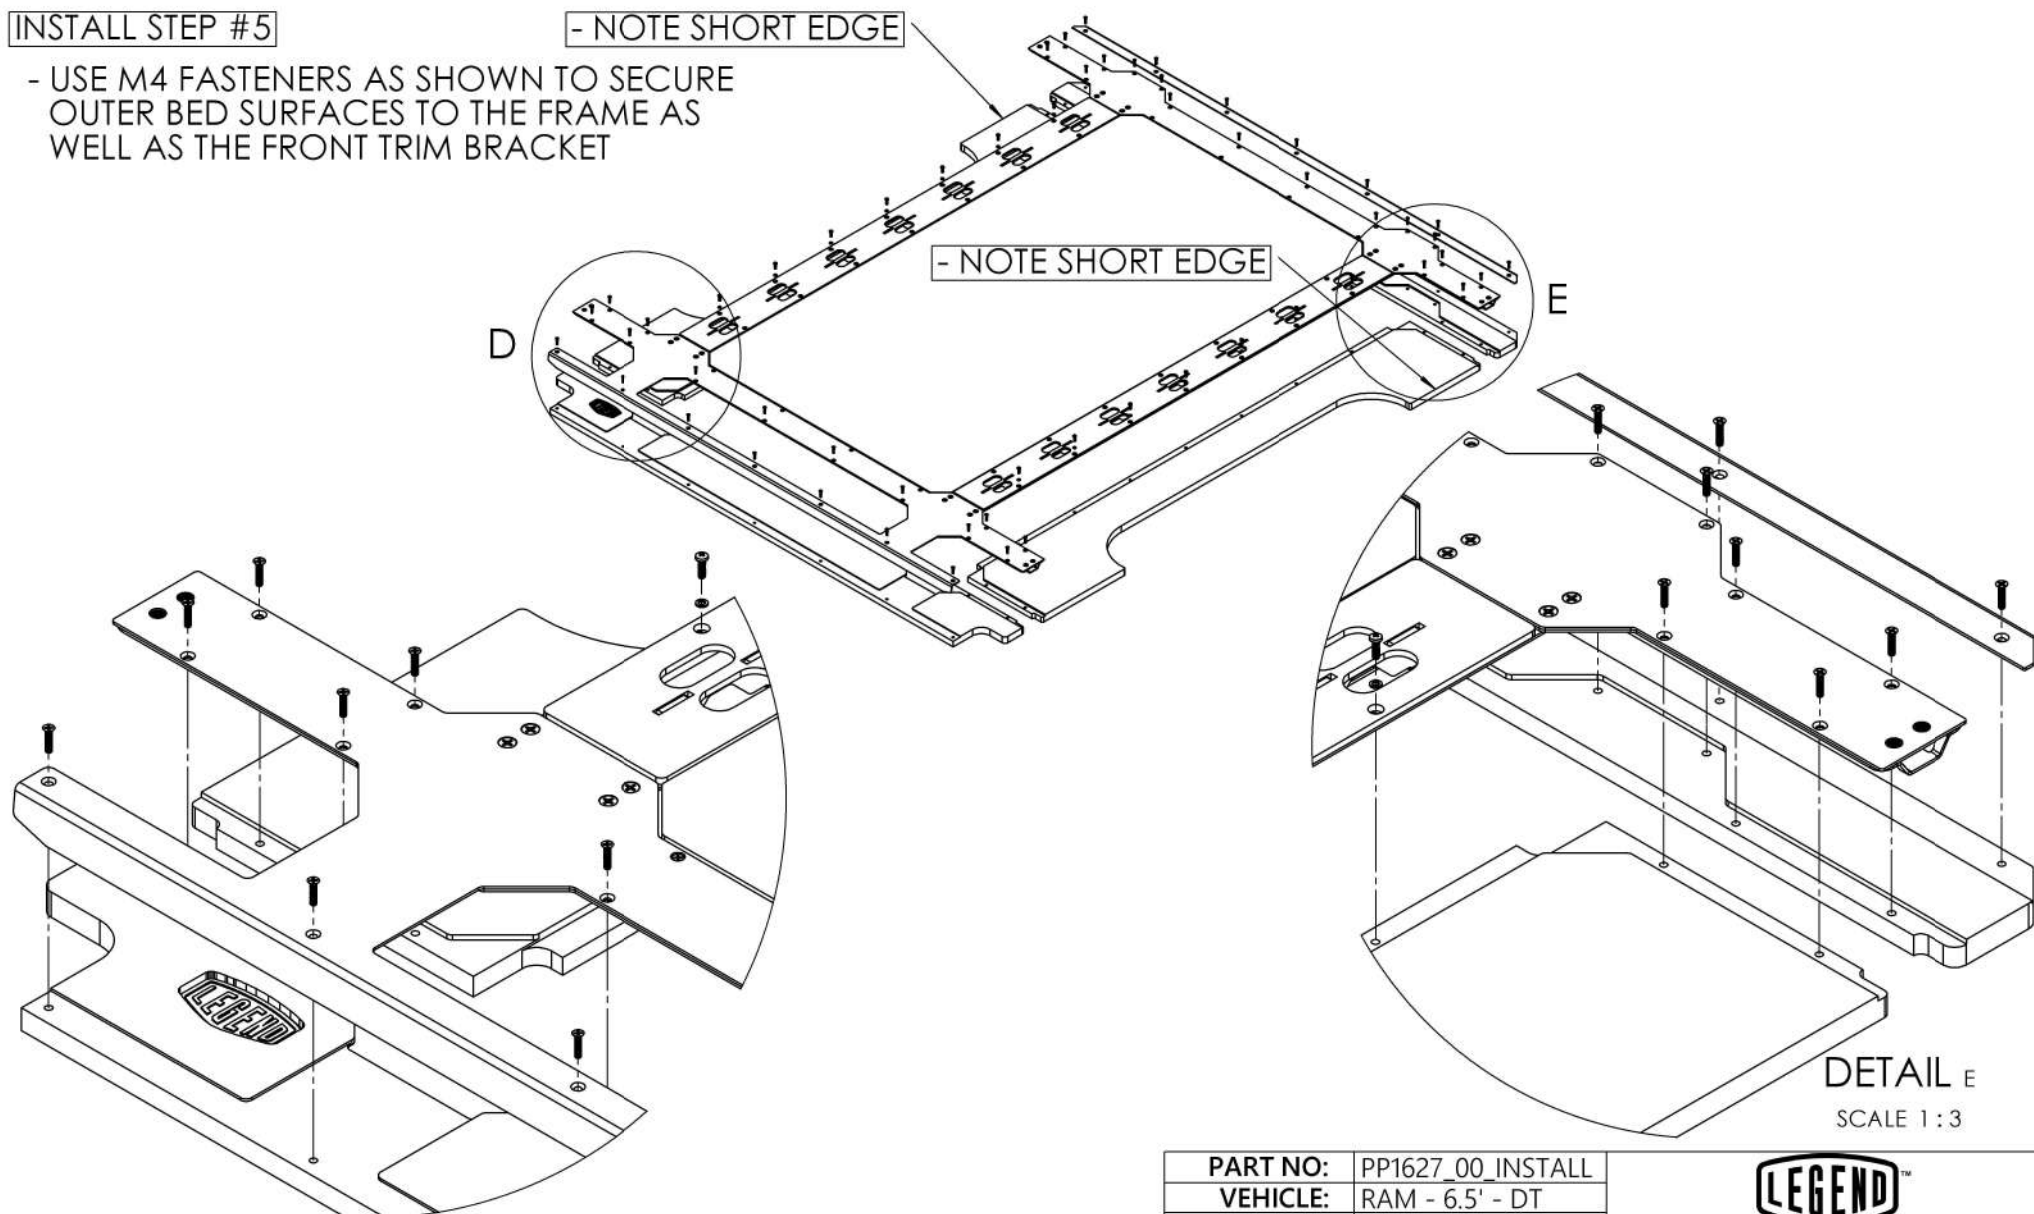

DETAIL D

SCALE 1 : 3


DETAIL E

SCALE 1 : 3

PART NO:	PP1627_00_INSTALL
VEHICLE:	RAM - 6.5' - DT
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet:	1 OF 11
Revision:	-



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

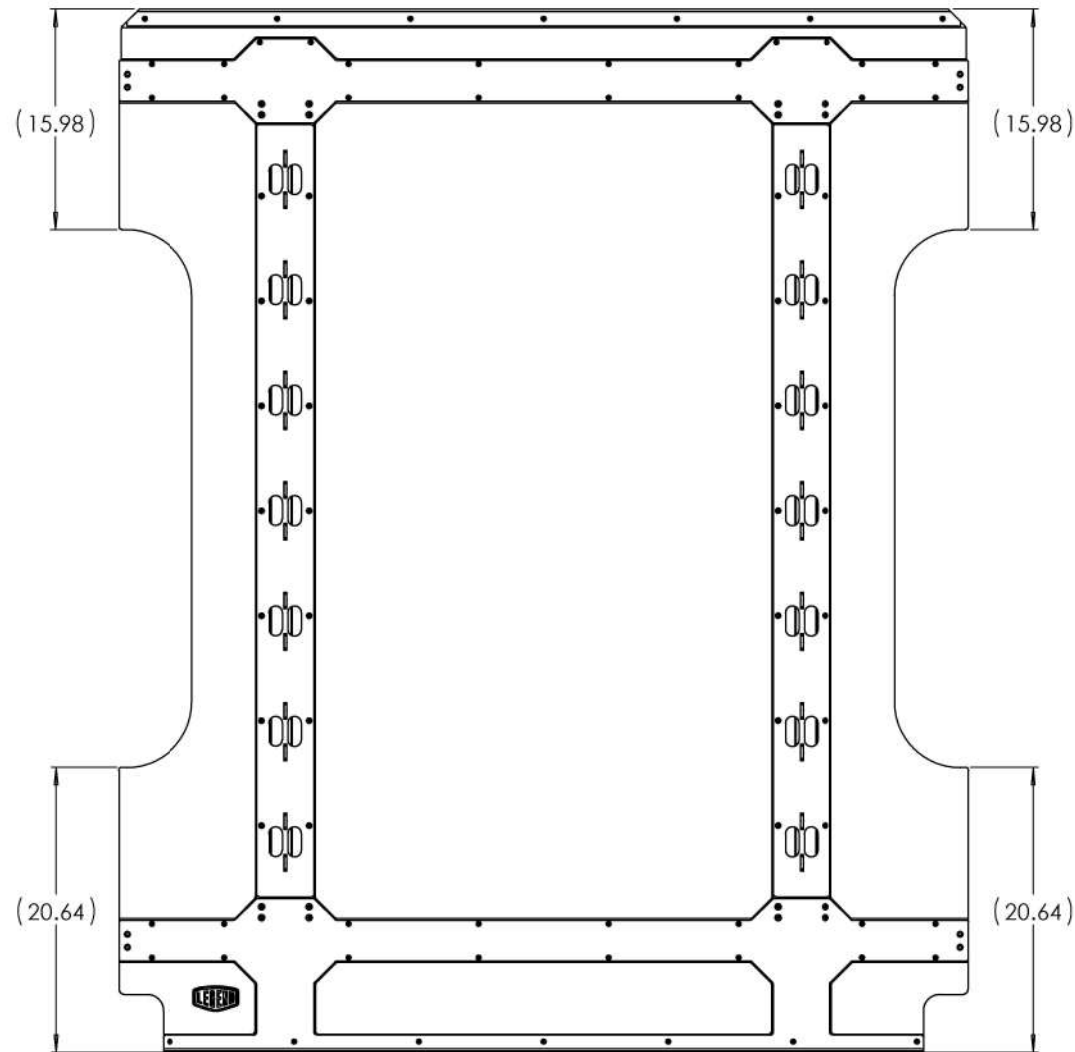


PART NO:	PP1627_00_INSTALL
VEHICLE:	RAM - 6.5' - DT
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet:	1 OF 11
Revision:	-





LEGEND FLEET SOLUTIONS
 56957 HWY 3, TILLSONBURG, ON
 519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #6

- USE M8 FASTENERS AS SHOWN TO SECURE D-RING BRACKETS (x4) TO BEDBOSS FRAME

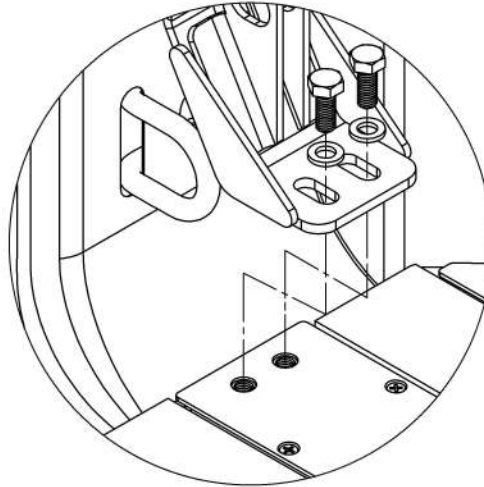

DETAIL F
SCALE 1 : 2

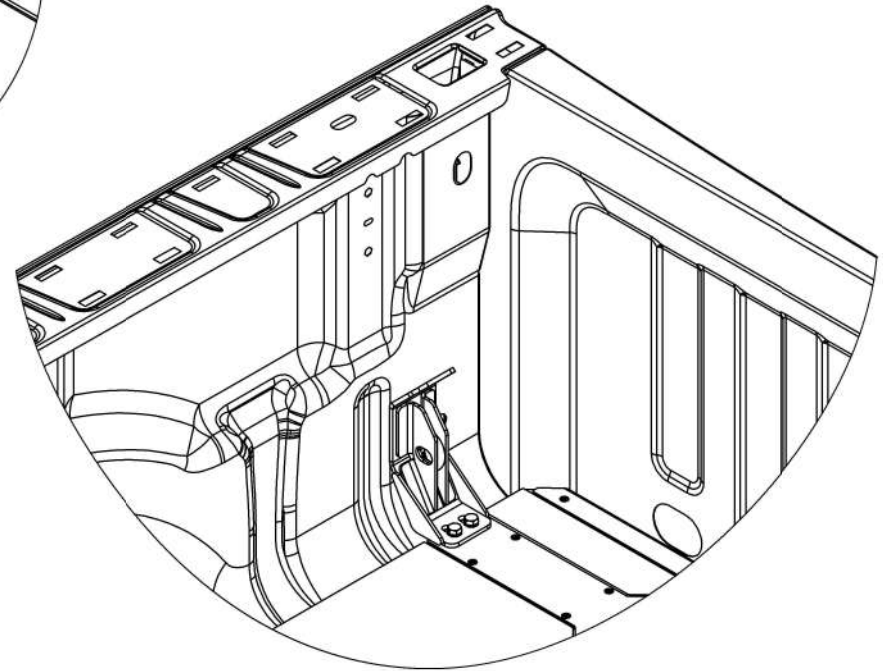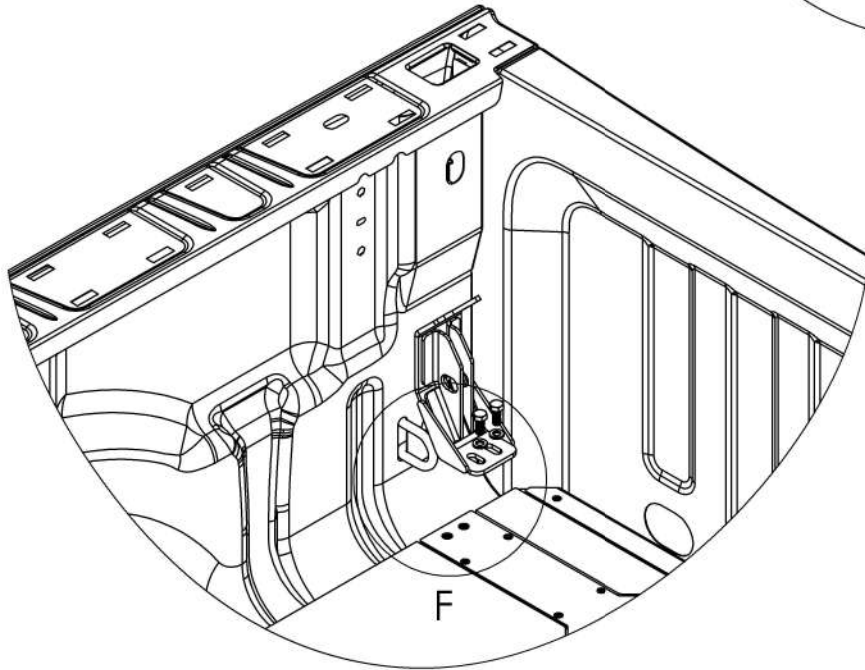



PART NO:	PP1627_00_INSTALL
VEHICLE:	RAM - 6.5' - DT
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet:	1 OF 11
Revision:	-



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM

INSTALL STEP #7

- USE M16 FASTENERS AS SHOWN TO SECURE D-RING BRACKETS (x4) TO TRUCK D-RINGS

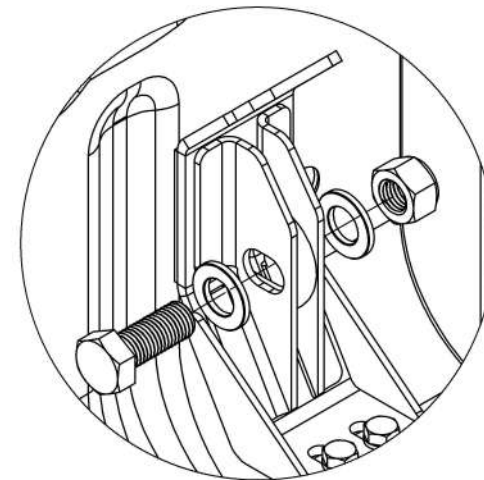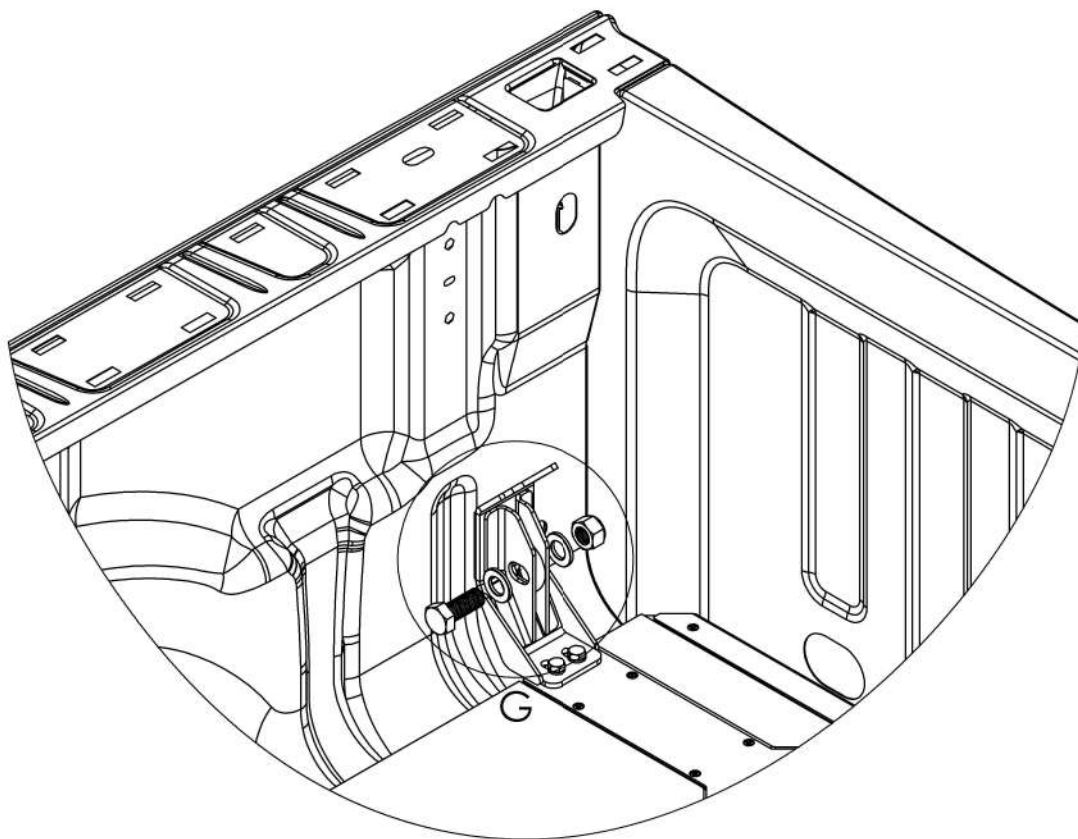

DETAIL G

SCALE 1:2

PART NO:	PP1627_00_INSTALL
VEHICLE:	RAM - 6.5' - DT
PRODUCT:	BEDBOSS
DESCRIPTION:	INSTALL DIAGRAM
Sheet:	1 OF 11
Revision:	-



LEGEND FLEET SOLUTIONS
56957 HWY 3, TILLSONBURG, ON
519-688-1043 | INFO@LEGENDFLEET.COM