

TEMPSHIELD ASSEMBLY INSTRUCTIONS

RAM PROMASTER 136" CARGO- HIGH ROOF

This document presents the detailed procedures for assembling Legend Fleet components and accessories.

Customers can make use these step-by-step procedures and easily assemble without major difficulty.



519 688 1043
customercare@legendfleet.com

56957 HWY 3 WEST,
TILLSONBURG,
ON N4G 4G8.

READ BEFORE INSTALLING YOUR TEMPShield KIT!

1. Ensure interior surfaces in van are clean, degreased and dry.
2. Install the Kit one sheet at a time by following instructions. This will reduce mess, keep things organized, and save you a lot of headache (seriously).
3. Always install Legend Insulated DuraTherm Wall Liners after TempShield. TempShield should never be installed and left bare.
4. Tip: Tape Printed Instructions to your Van Partition to easily refer to it.
5. Full instructions can be found here:
<https://www.legendsoftheroad.com/resources>



DISCLAIMER/DESCARGO DE RESPONSABILIDAD/CLAUDE DE NON-RESPONSABILITÉ



DISCLAIMER

Legend Fleet Solutions will not accept responsibility for damages resulting from improper installation. Please follow these instructions carefully. If you have any questions please contact Legend Fleet Solutions using the details below. By proceeding with the installation, you acknowledge and accept this disclaimer.



DESCARGO DE RESPONSABILIDAD

Legend Fleet Solutions no aceptará responsabilidad por los daños resultantes de una instalación incorrecta. Por favor, siga estas instrucciones cuidadosamente. Si tiene alguna pregunta, comuníquese con Legend Fleet Solutions utilizando los detalles a continuación. Al continuar con la instalación, usted reconoce y acepta este descargo de responsabilidad.



CLAUDE DE NON-RESPONSABILITÉ

Legend Fleet Solutions n'acceptera aucune responsabilité pour les dommages résultant d'une mauvaise installation. Veuillez suivre attentivement ces instructions. Si vous avez des questions, veuillez contacter Legend Fleet Solutions en utilisant les détails ci-dessous. En procédant à l'installation, vous reconnaissez et acceptez cette clause de non-responsabilité.

Legend Fleet Solutions

Email: customercare@legendfleet.com

Phone: 1-519-688-1043

WARNING/ADVERTENCIA/AVERTISSEMENT



- Edges of vehicle may be sharp. Wear gloves.
- Some materials may contain fiberglass. Wear appropriate PPE while handling.
- Take care when using power tools.



- Los bordes del vehículo pueden estar afilados. Usar guantes.
- Algunos materiales pueden contener fibra de vidrio. Utilice EPP adecuado durante la manipulación.
- Tenga cuidado al utilizar herramientas eléctricas.



- Les bords du véhicule peuvent être coupants. Porter des gants.
- Certains matériaux peuvent contenir de la fibre de verre. Portez un EPI approprié lors de la manipulation.
- Soyez prudent lorsque vous utilisez des outils électriques.



Table of Contents









- Sheet Layouts 1 5
- Sheet Layouts 2 6
- Sheet Layouts 3 7
- Walls 8
 - Parts List - Driver Side 8
 - Parts List - Passenger Side 8
 - Assembly Instructions..... 9
- Ceiling 10
 - Parts List – Ceiling..... 10
 - Assembly Instructions..... 10
- Doors 11
 - Parts List – Sliding Side Door 11
 - Parts List – Rear Door 11
 - Assembly Instructions..... 12

Sheet Layouts 1

FULL SHEET

SECTIONS REQUIRED

SECTIONS **NOT** REQUIRED

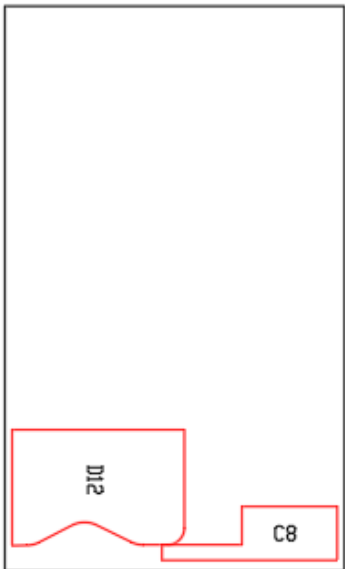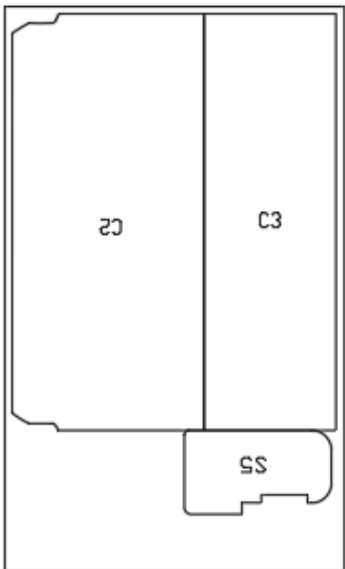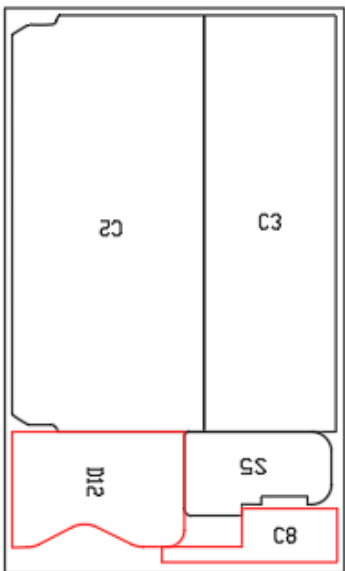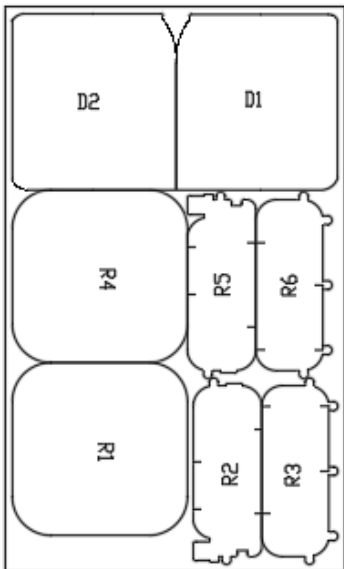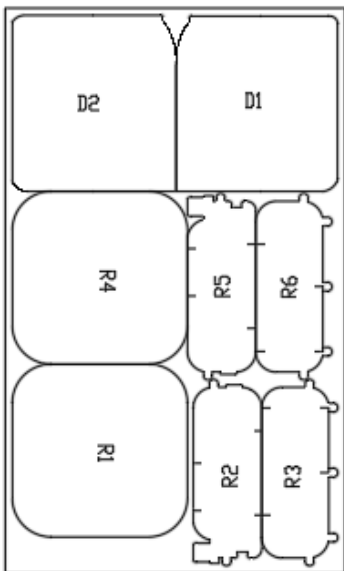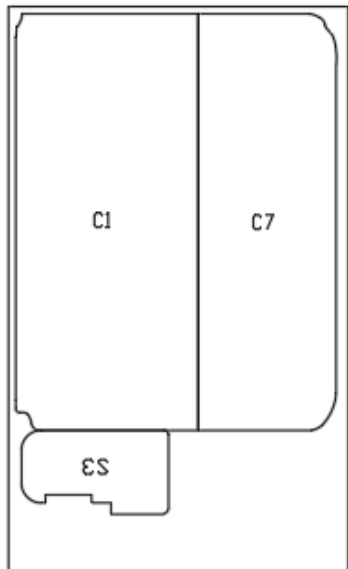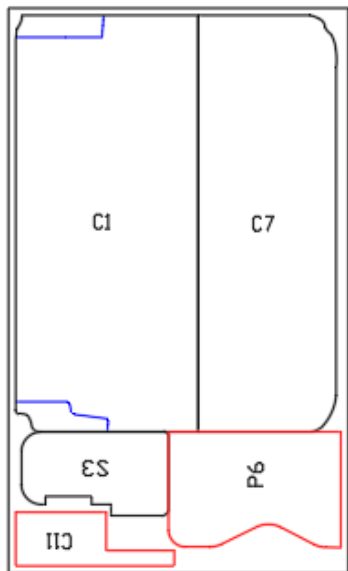


Panel Legend

D – Driver Side Wall	R – Rear Door
P – Passenger Side Wall	S – Sliding Door
W – Applicable to D/P/C	C – Ceiling


Please note that the sheet layouts are designed to accommodate all vehicle lengths and heights. Therefore, some sections will not be required for certain vehicles. Please refer to the sheet layout found above.

Sheet Layouts 2








FULL SHEET

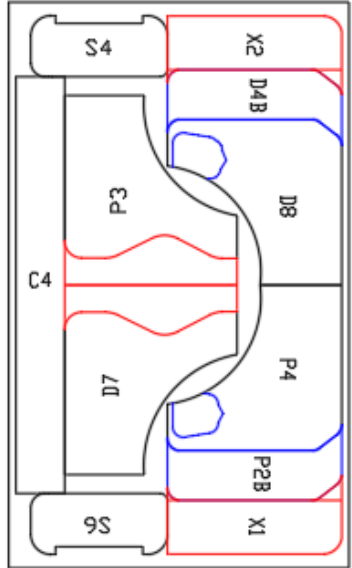

SECTIONS REQUIRED

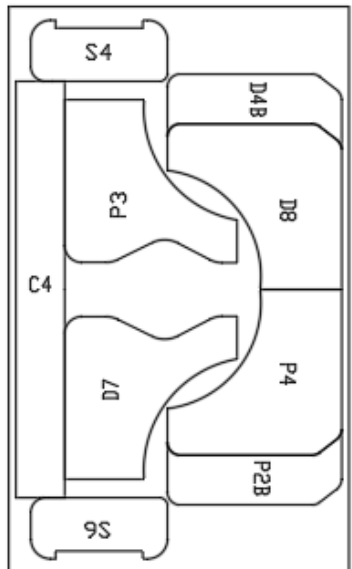

SECTIONS NOT REQUIRED

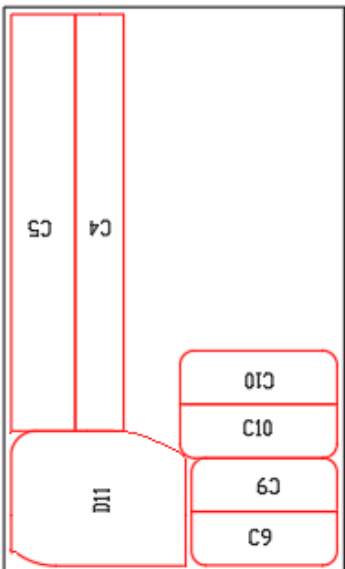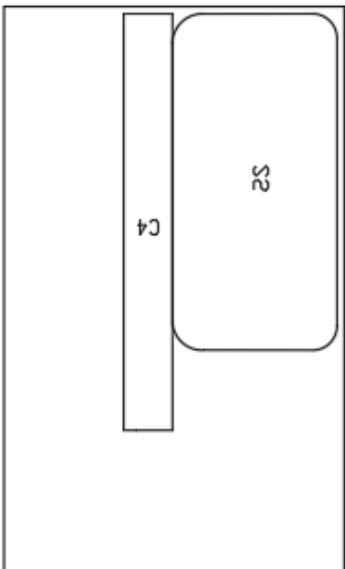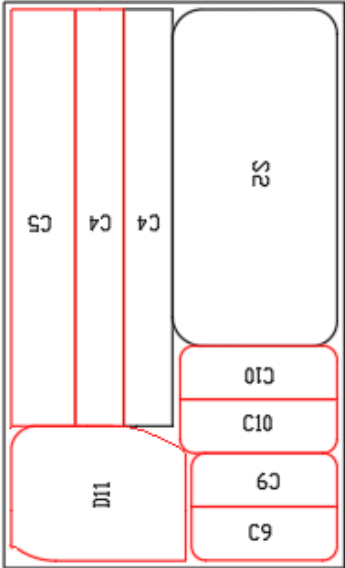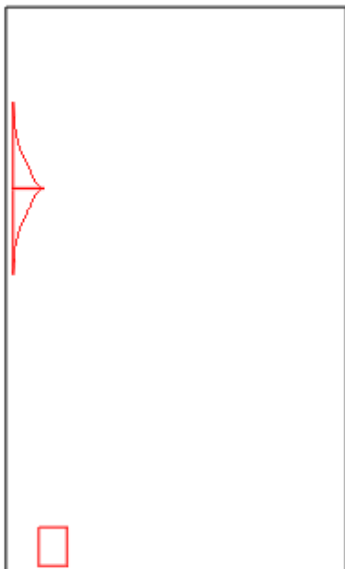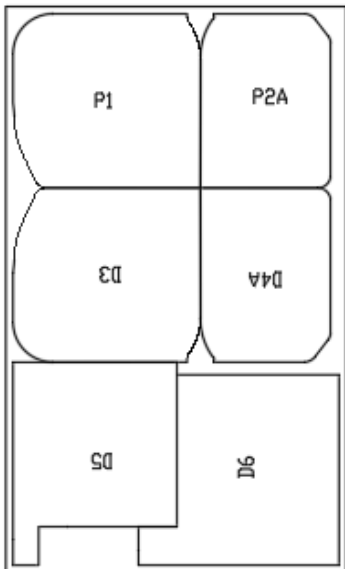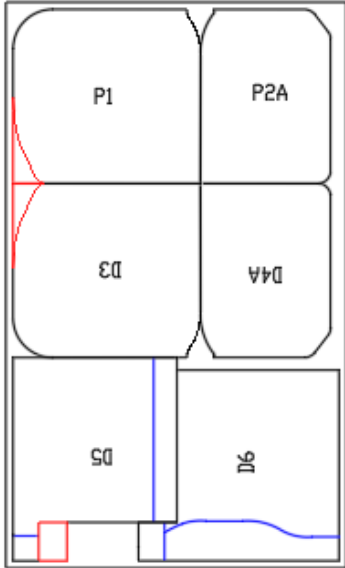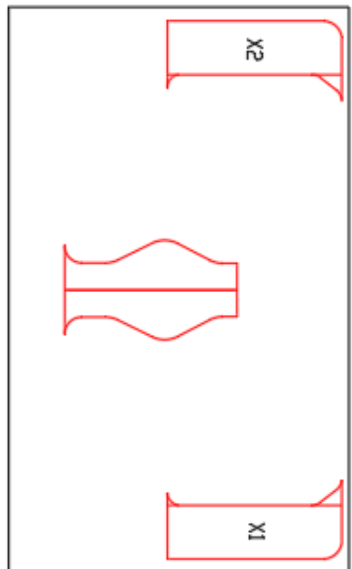


Panel Legend

D – Driver Side Wall	R – Rear Door
P – Passenger Side Wall	S – Sliding Door
W – Applicable to D/P/C	C – Ceiling


Please note that the sheet layouts are designed to accommodate all vehicle lengths and heights. Therefore, some sections will not be required for certain vehicles. Please refer to the sheet layout found above.

Sheet Layouts 3


FULL SHEET

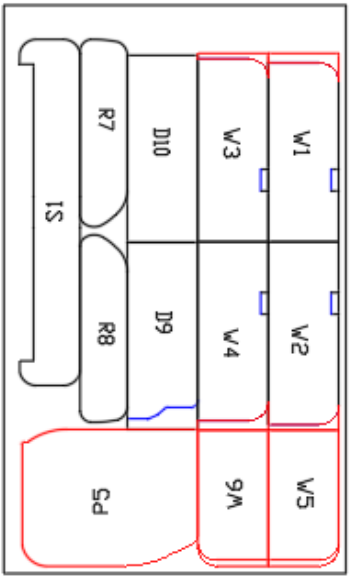

SECTIONS REQUIRED

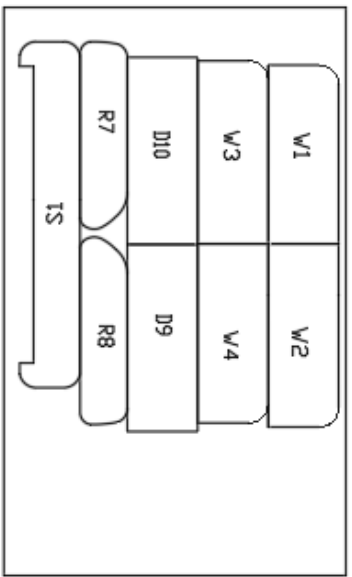

SECTIONS **NOT** REQUIRED

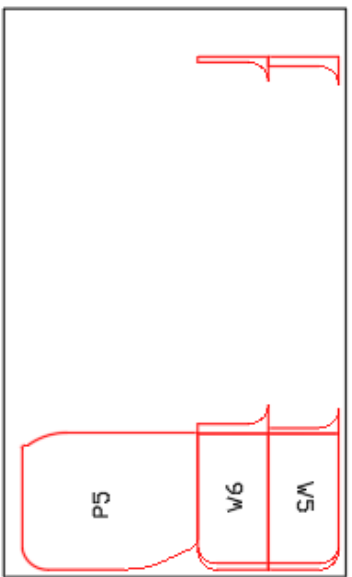


Panel Legend

Panel Legend	
D – Driver Side Wall	R – Rear Door
P – Passenger Side Wall	S – Sliding Door
W – Applicable to D/P/C	C – Ceiling


Please note that the sheet layouts are designed to accommodate all vehicle lengths and heights. Therefore, some sections will not be required for certain vehicles. Please refer to the sheet layout found above.

Walls

Parts List - Driver Side

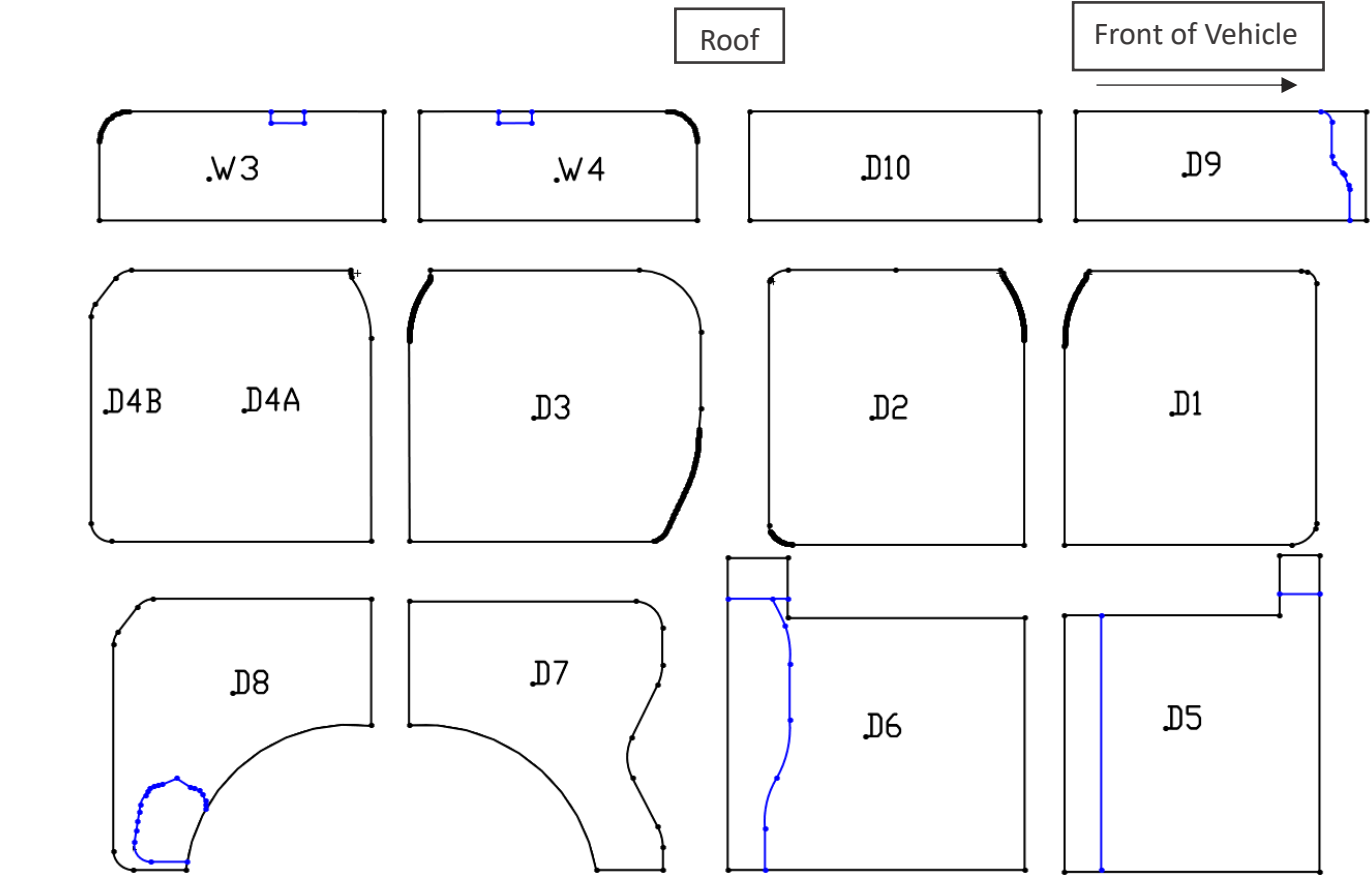

Parts List - Passenger Side

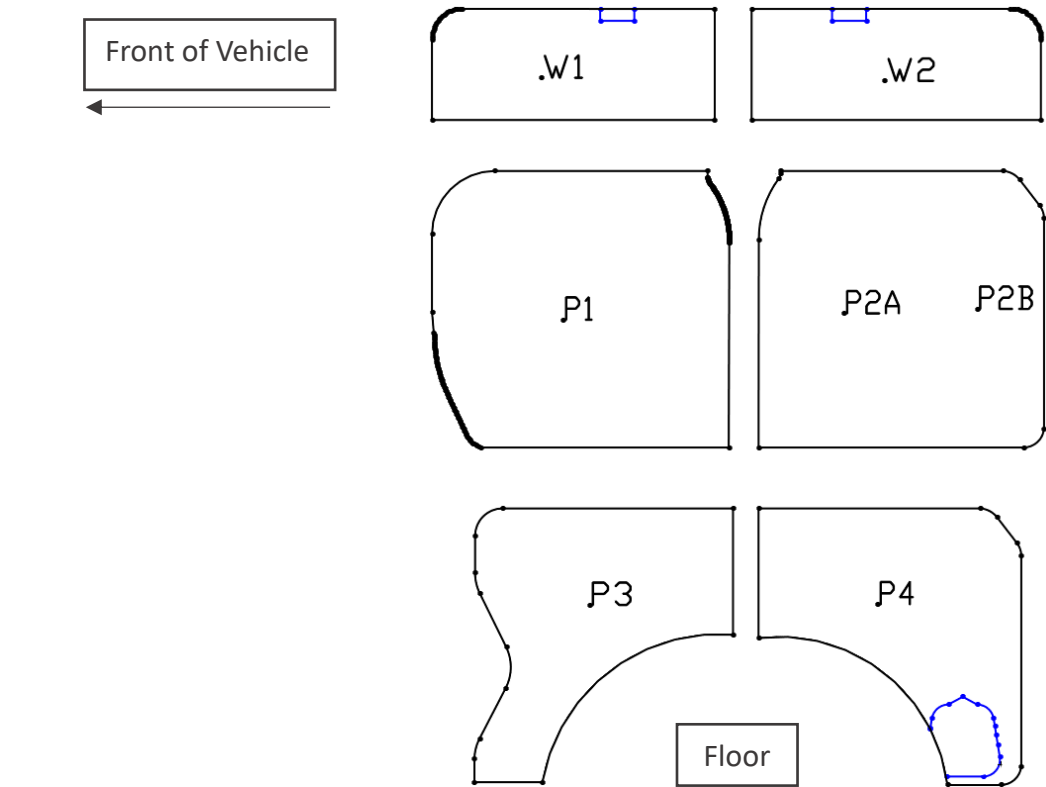

Assembly Instructions

Step 1: Identify the TempShield Panels and its respective vehicle surface as shown below. For additional guidance, please refer to the sheet layouts found in Page 5, 6, and 7 of this document.

Step 2: Wipe the identified surfaces of the vehicle clean, dry, free of dust, debris, or any foreign materials before adhering the TempShield panels.

Step 3: Peel off the protective layer of the TempShield and place its adhesive side to the Van body.



Figure 1: "Driver side TempShield Installed" This view is from Inside of Van-Viewing from Passenger side


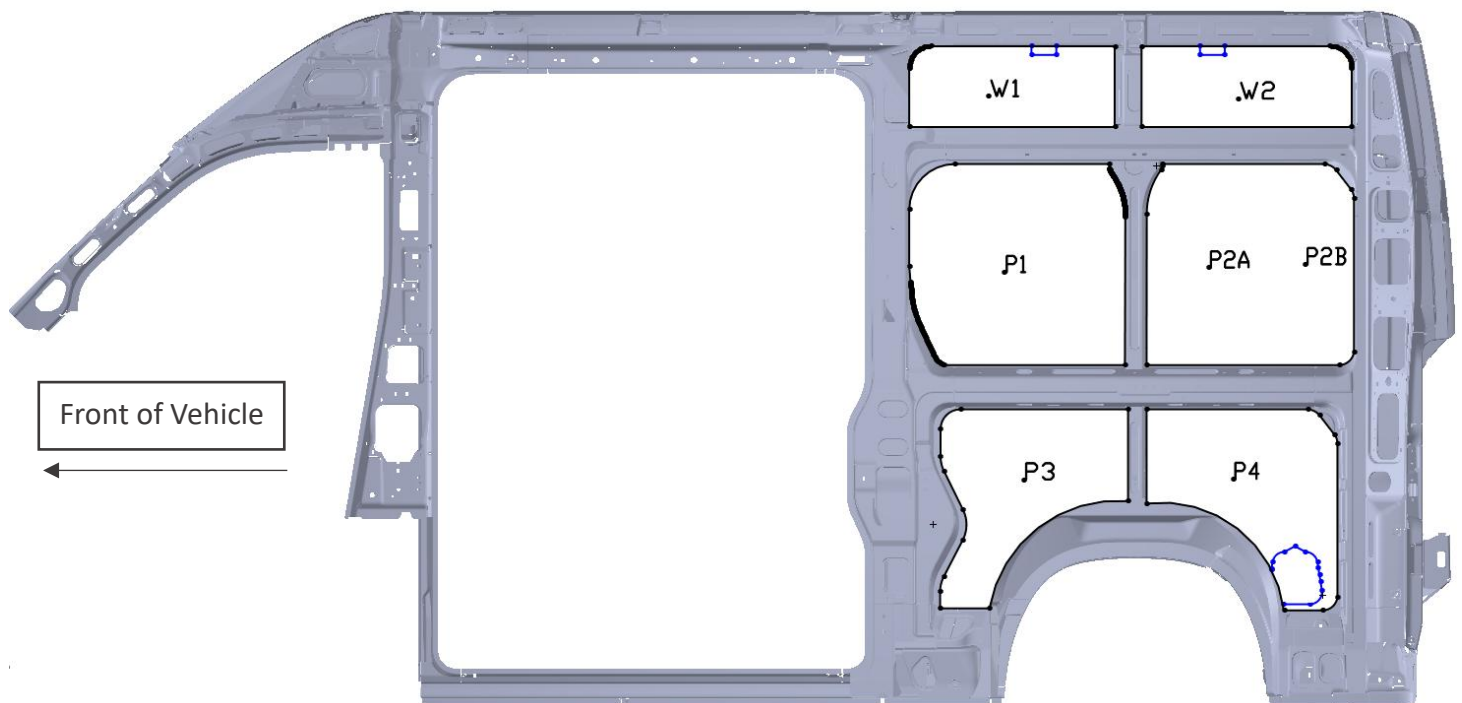


Figure 2: "Passenger Side TempShield Installed" This view is from Inside of Van-Viewing from Driver side

Ceiling

Parts List – Ceiling

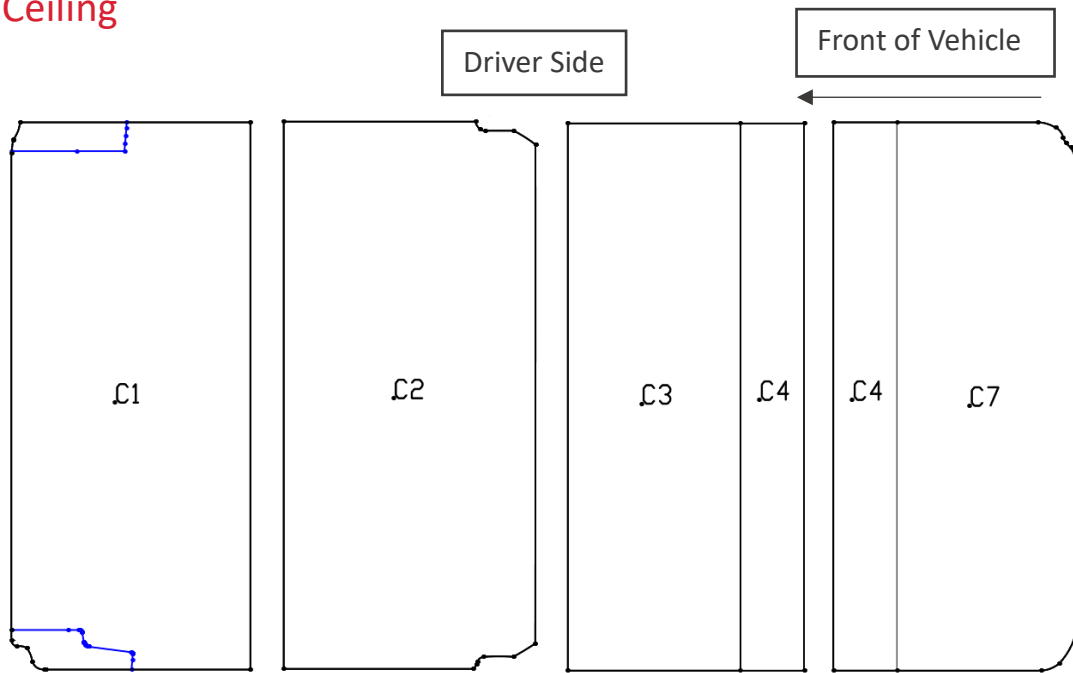

Assembly Instructions

Step 1: Identify the TempShield Panels and its respective vehicle surface as shown below. For additional guidance, please refer to the sheet layouts found in Page 5, 6, and 7 of this document.

Step 2: Wipe the identified surfaces of the vehicle clean, dry, free of dust, debris, or any foreign materials before adhering the TempShield panels.

Step 3: Peel off the protective layer of the TempShield and place its adhesive side to the Van body.


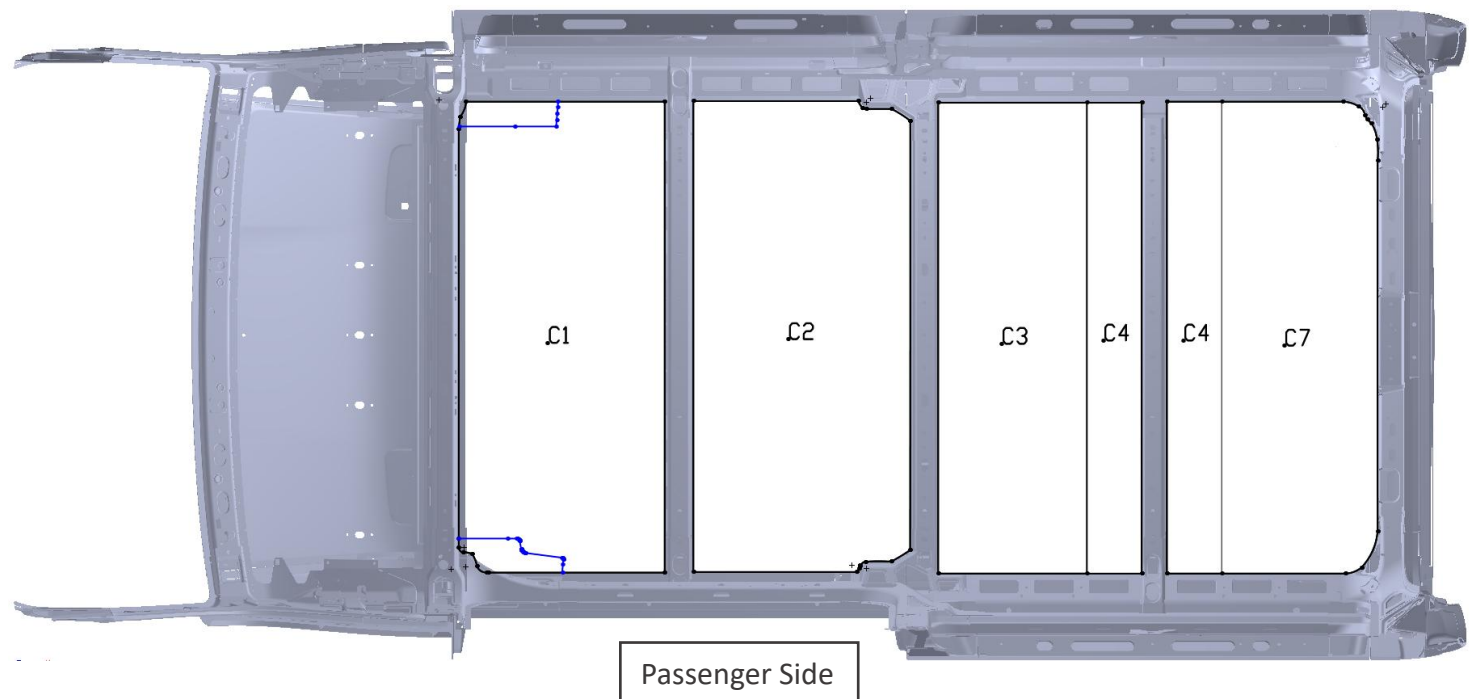



Figure 3: "Ceiling TempShield Installed" This view is from Inside of Van

Doors

Parts List – Sliding Side Door

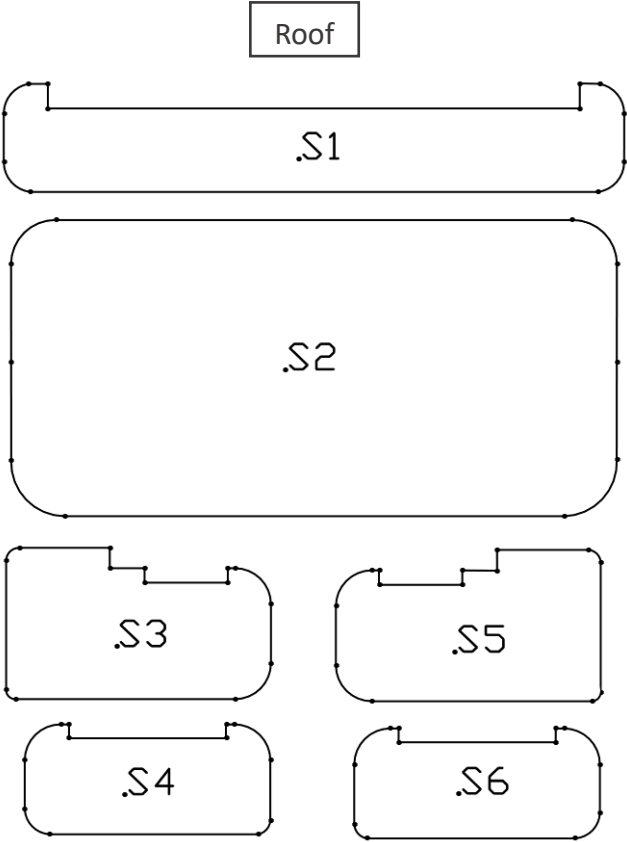

Parts List – Rear Door

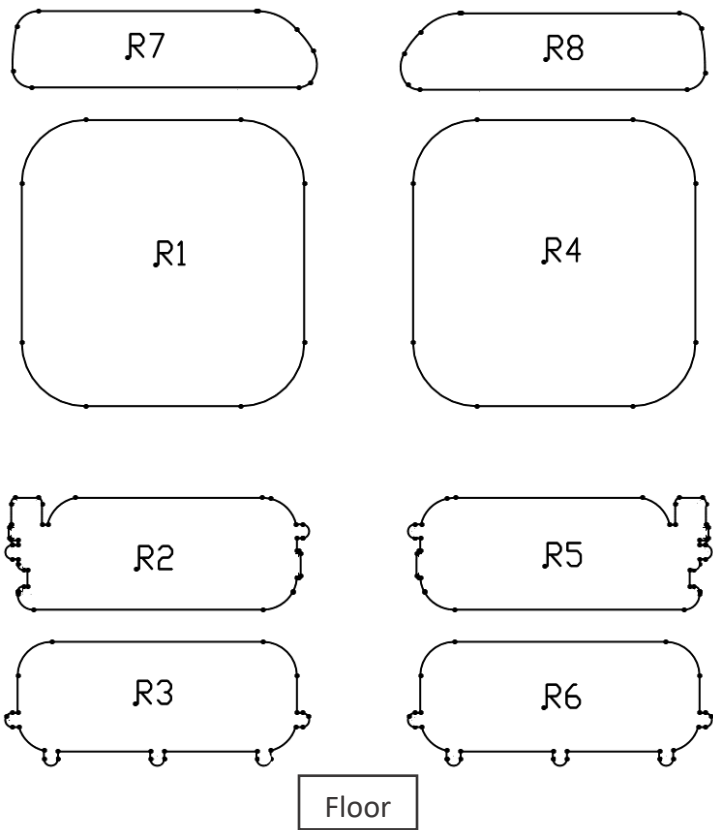


Assembly Instructions


Step 1: Identify the TempShield Panels and its respective vehicle surface as shown below. For additional guidance, please refer to the sheet layouts found in Page 5, 6, and 7 of this document.

Step 2: Wipe the identified surfaces of the vehicle clean, dry, free of dust, debris, or any foreign materials before adhering the TempShield panels.

Step 3: Peel off the protective layer of the TempShield and place its adhesive side to the Van body.

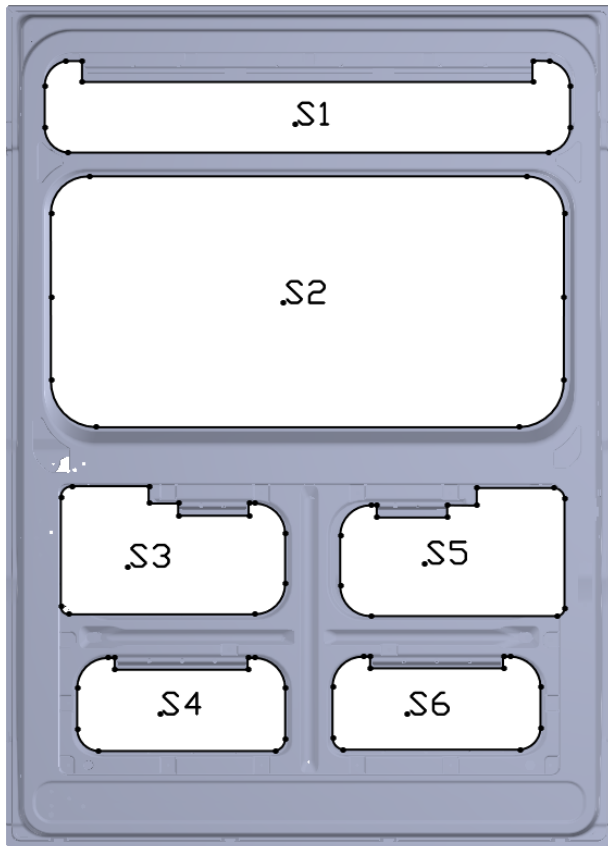

Passenger Side Sliding Door TempShield

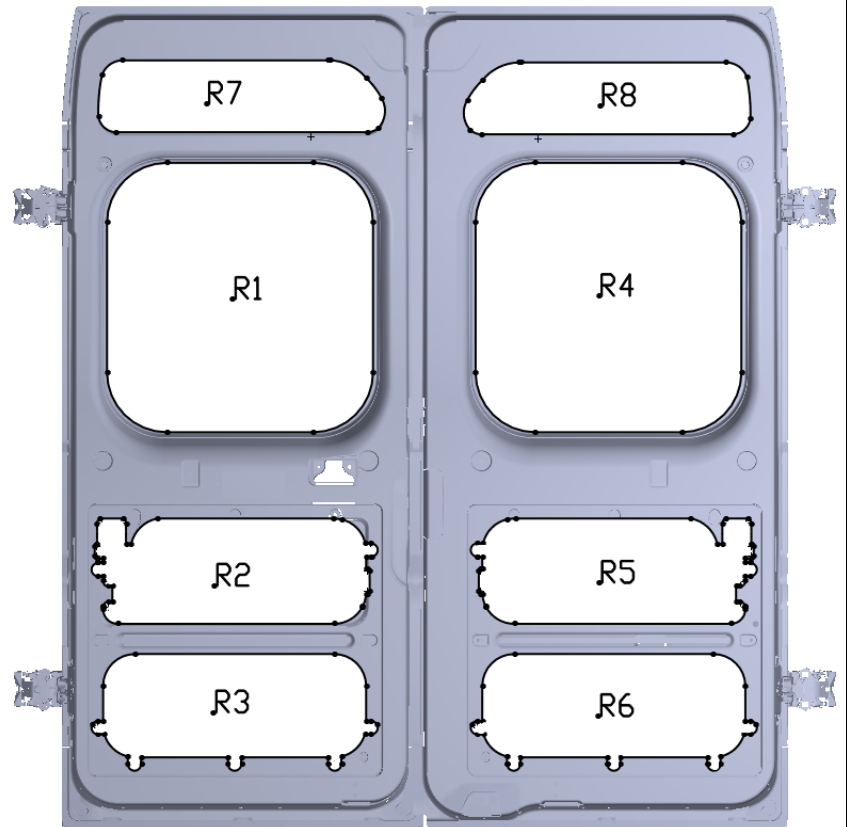

Rear Door TempShield